# **CANVAS**

# **30" PRE-LIT NORFOLK FIR WREATH**

#### PRODUCT NO. 051-5655-0

#### **OPERATING INSTRUCTIONS**

TOLL FREE:
IMPORTANT: PI

**TOLL FREE:** 1-888-670-6684

IMPORTANT: Please read this manual carefully before beginning assembly of this product. Keep this manual for future reference.

# **MARNING**

INGESTION HAZARD • DEATH

or serious injury can occur

• A swallowed button cell or coin battery can cause INTERNAL CHEMICAL BURNS in as little as 2 hours • KEEP new and used batteries OUT OF REACH OF CHILDREN • Seek immediate medical attention if a battery is suspected to be swallowed or inserted inside any part of the body.



# IMPORTANT INFORMATION

#### **IMPORTANT**

- For indoor and covered outdoor use.
- Please remove the 'Try me' wire from the product before use.
- · Install new batteries before use.
- Do not place near gas or electric heaters, radiators, fireplaces, candles or other similar sources of heat.
- Do not use candles on the wreath.
- Do not install near fountains, bathtubs, sinks, or other wet areas.
- Do not place in uncovered areas where there is prolonged exposure to sunlight or where rain/snow accumulates.
- Please dispose of or recycle the batteries according to municipal requirements. Do not dispose of batteries in fire or other similar sources of heat. Batteries may explode or leak. Do not ingest batteries.
- Do not mix old and new batteries. Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries, or equivalent.
- Do not ingest batteries.
- Batteries must be recycled or disposed of properly. Dispose of as per the requirements of your local municipality.
- This is a holiday decoration. This is not a toy. Keep out of the hands of small children.
- For festive use only. Not intended for prolonged use over 90 days each season.

#### **GETTING STARTED**

Please do not throw away any packing material until all parts are verified as present.

## **INSTALLATION AND OPERATION**

# **INSTRUCTIONS**

- I. Straighten the branches. Shape the branches by pointing them in a clockwise direction.
- 2. After shaping the wreath, step back and take an overall look. Shift branches to fill any gaps.
- 3. Open the lid of the battery box by releasing the locks. Insert four AA batteries\* into the compartment, making sure that the batteries are in the correct orientation. Close the lid and engage the locks.
- 4. Press the button on the battery box once for timer mode, twice to turn the lights constantly on, and a third time to turn the lights off or reset the timer. The built-in timer mode causes the lights to turn on and off in a cycle: on for 6 hours then off for 18 hours. The user should initially turn on the lights at a specific time of their choice, and then the lights will turn on every day at approximately the same time. The lights on this product can only twinkle, and there is no control for the twinkle mode.
- 5. Replace batteries when the lights become dim. Remove batteries from unit when it is not used

\* Use 1.5 V AA batteries or equivalent. Batteries not included.

#### **TROUBLESHOOTING**

If the lights do not work:

1. Ensure the batteries are new and are inserted correctly into the battery box.

#### **WARRANTY**

## WARRANTY INFORMATION



#### 1-YEAR LIMITED WARRANTY

This CANVAS™ product carries a one (1) year warranty against defects in workmanship and materials. Trileaf Distribution agrees to replace the defective product free of charge within the stated warranty period, when returned by the original purchaser with proof of purchase. This product is not guaranteed against wear or breakage due to misuse and/or abuse.

PRODUCT NO. 051-5655-0

Made in China

Imported by Trileaf Distribution Trifeuil Toronto, Canada M4S 2B8