


MASTERCRAFT™/MC

DETAIL SANDER 054-7292-4

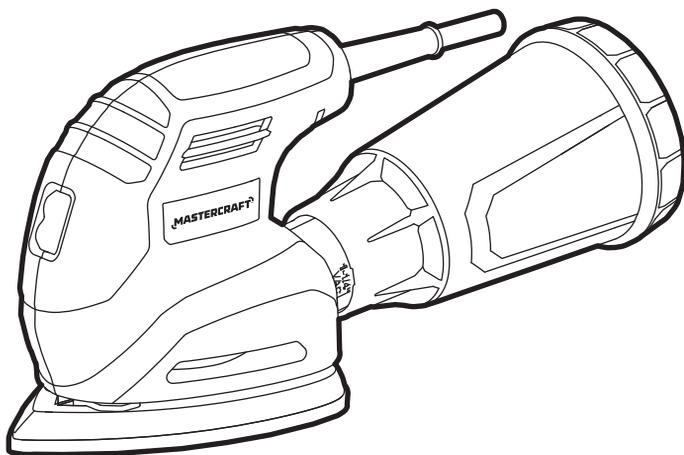

IMPORTANT:

Read and understand this instruction manual thoroughly before using the product.

INSTRUCTION MANUAL

TABLE OF CONTENTS

Technical Specifications	4
Safety Guidelines	5
Key Parts Diagram	9
Operating Instructions	10
Maintenance	13
Troubleshooting	14
Parts List	15
Warranty	17

NOTE:

If any parts are missing or damaged, or if you have any questions, please call our toll-free helpline at 1-800-689-9928.



SAVE THESE INSTRUCTIONS

- This manual contains important safety and operating instructions. Read all instructions and follow them with use of this product.

TECHNICAL SPECIFICATIONS

Rated Voltage	120 V~, 60 Hz
Rated Input	1.2 A
No-load Speed	13,500 OPM

SAFETY GUIDELINES:



WARNING!

Safety symbols in this Instruction Manual are used to flag possible dangers. The safety symbols and their explanations require your full understanding. The safety warnings do not, by themselves, eliminate any danger, nor are they substitutes for proper accident prevention measures.



WARNING!

This Safety Alert Symbol indicates caution, warning, or danger. Failure to obey a safety warning can result in serious injury to yourself or others. To reduce the risk of injury, fire, or electric shock, always follow the safety precautions.

KNOW YOUR TOOL

To operate this tool, carefully read this Instruction Manual and all labels affixed to the detail sander before using. Keep this instruction manual available for future reference.

IMPORTANT

This tool should only be serviced by a qualified service technician. For more information, call the toll-free helpline at 1-800-689-9928.

READ ALL INSTRUCTIONS THOROUGHLY.

SAVE THESE INSTRUCTIONS.

GENERAL POWER TOOL SAFETY WARNINGS



WARNING!

Read all safety warnings, instructions, illustrations and specifications provided with this power tool. Failure to follow all instructions listed below may result in electric shock, fire and/or serious injury.

SAVE ALL WARNINGS AND INSTRUCTIONS FOR FUTURE REFERENCE.

The term “power tool” in the warnings refers to your mains-operated (corded) power tool or battery-operated (cordless) power tool.

WORK AREA SAFETY

- **Keep work area clean and well lit.** Cluttered or dark areas invite accidents.
- **Do not operate power tools in explosive atmospheres, such as in the presence of flammable liquids, gases or dust.** Power tools create sparks which may ignite the dust or fumes.

- **Keep children and bystanders away while operating a power tool.** Distractions can cause you to lose control.

ELECTRICAL SAFETY

- **Power tool plugs must match the outlet. Never modify the plug in any way. Do not use any adaptor plugs with earthed (grounded) power tools.** Unmodified plugs and matching outlets will reduce risk of electric shock.
- **Avoid body contact with earthed or grounded surfaces, such as pipes, radiators, ranges and refrigerators.** There is an increased risk of electric shock if your body is earthed or grounded.
- **Do not expose power tools to rain or wet conditions.** Water entering a power tool will increase the risk of electric shock.
- **Do not abuse the cord. Never use the cord for carrying, pulling or unplugging the power tool. Keep cord away from heat, oil, sharp edges or moving parts.** Damaged or entangled cords increase the risk of electric shock.
- **When operating a power tool outdoors, use an extension cord suitable for outdoor use.** Use of a cord suitable for outdoor use reduces the risk of electric shock.
- **If operating a power tool in a damp location is unavoidable, use a ground fault circuit interrupter (GFCI) protected supply.** Use of an GFCI reduces the risk of electric shock.

PERSONAL SAFETY

- **Stay alert, watch what you are doing and use common sense when operating a power tool. Do not use a power tool while you are tired or under the influence of drugs, alcohol or medication.** A moment of inattention while operating power tools may result in serious personal injury.
- **Use personal protective equipment. Always wear eye protection.** Protective equipment such as a dust mask, non-skid safety shoes, hard hat or hearing protection used for appropriate conditions will reduce personal injuries.
- **Prevent unintentional starting. Ensure the switch is in the off-position before connecting to power source and/or battery pack, picking up or carrying the tool.** Carrying power tools with your finger on the switch or energising power tools that have the switch on invites accidents.
- **Remove any adjusting key or wrench before turning the power tool on.** A wrench or a key left attached to a rotating part of the power tool may result in personal injury.
- **Do not overreach. Keep proper footing and balance at all times.** This enables better control of the power tool in unexpected situations.
- **Dress properly. Do not wear loose clothing or jewellery. Keep your hair and clothing away from moving parts.** Loose clothes, jewellery or long hair can be caught in moving parts.
- **If devices are provided for the connection of dust extraction and collection facilities, ensure these are connected and properly used.** Use of dust collection can reduce dust-related hazards.

- **Do not let familiarity gained from frequent use of tools allow you to become complacent and ignore tool safety principles.** A careless action can cause severe injury within a fraction of a second.

POWER TOOL USE AND CARE

- **Do not force the power tool. Use the correct power tool for your application.** The correct power tool will do the job better and safer at the rate for which it was designed.
- **Do not use the power tool if the switch does not turn it on and off.** Any power tool that cannot be controlled with the switch is dangerous and must be repaired.
- **Disconnect the plug from the power source and/or remove the battery pack, if detachable, from the power tool before making any adjustments, changing accessories, or storing power tools.** Such preventive safety measures reduce the risk of starting the power tool accidentally.
- **Store idle power tools out of the reach of children and do not allow persons unfamiliar with the power tool or these instructions to operate the power tool.** Power tools are dangerous in the hands of untrained users.
- **Maintain power tools and accessories. Check for misalignment or binding of moving parts, breakage of parts and any other condition that may affect the power tool's operation. If damaged, have the power tool repaired before use.** Many accidents are caused by poorly maintained power tools.
- **Keep cutting tools sharp and clean.** Properly maintained cutting tools with sharp cutting edges are less likely to bind and are easier to control.
- **Use the power tool, accessories and tool bits etc. in accordance with these instructions, taking into account the working conditions and the work to be performed.** Use of the power tool for operations different from those intended could result in a hazardous situation.
- **Keep handles and grasping surfaces dry, clean and free from oil and grease.** Slippery handles and grasping surfaces do not allow for safe handling and control of the tool in unexpected situations.

SERVICE

- **Have your power tool serviced by a qualified repair person using only identical replacement parts.** This will ensure that the safety of the power tool is maintained.

ADDITIONAL SAFETY GUIDELINES FOR DETAIL SANDER

- **The label on your tool may include the following symbols. The symbols and their definitions are as follows:**

V Volts

A Amperes

Hz Hertz

W Watts

min Minutes

 Alternating current

n_0 No-load speed

 Class II Construction

.../min or min⁻¹ Revolutions or reciprocation per minute

OPM Oscillations per minute



..... WARNING – To reduce the risk of injury, user must read instruction manual.



..... WARNING –To reduce the risk of injury, always wear eye protection.




..... WARNING – To reduce the risk of injury, always wear ear protection.

- **A suitable breathing respirator must be worn while sanding lead paint, some woods and metal to avoid breathing the harmful/toxic dust or air.**
- **Always wear safety goggles and a dust mask when sanding, especially when sanding overhead.**
- **The machine is not suitable for wet sanding.**
- **Do not use sanding paper that is larger than needed.** Extra paper extending beyond the sanding pad can cause serious lacerations.
- **Secure the workpiece.** A workpiece clamped with clamping devices or in a vice is held more securely than by hand.
- **Attach the dust canister to the tool and empty it frequently.** Do not throw sanding dust on an open fire, because materials in fine particle form may be explosive.
- **Protect your hearing.** Wear appropriate personal hearing protection during use. Under some conditions and duration of use, noise from this product may contribute to hearing loss.

PACKAGE CONTENTS:

Detail sander, microfilter dust canister, sanding paper (80 grit) and instruction manual.

KEY PARTS DIAGRAM

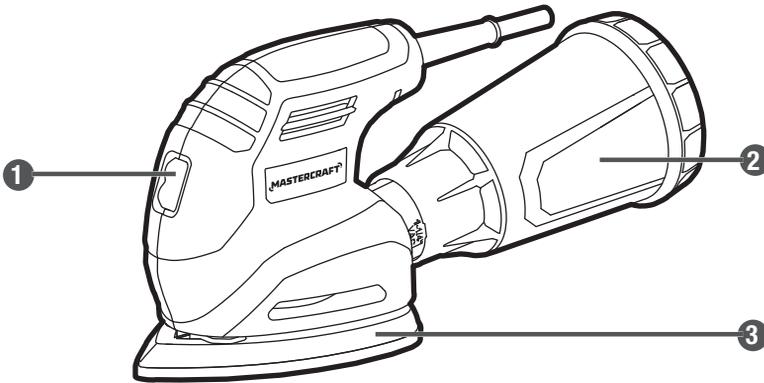

No.	Description
1	On/off switch
2	Microfilter dust canister

No.	Description
3	Sanding pad




WARNING!

- Remove the detail sander from the package and examine it carefully. Do not discard the carton or any packaging material until all parts have been examined.
- If any part of the detail sander is missing or damaged, do not attach the tool to a power source or use the tool until the part has been repaired or replaced. Failure to heed this warning could result in serious injury.
- Do not allow familiarity with the detail sander to cause a lack of alertness. A fraction of a second of carelessness is enough to cause severe injury.


OPERATING INSTRUCTIONS**INSTALL THE SANDING PAPER (fig 1)**

1. Disconnect the sander from the power source.
2. Align the holes in the sanding paper with the holes in the sanding pad to allow the dust-extraction system to function.
3. Press the sanding paper onto the sanding pad. Your sander uses hook-and-loop backed sanding paper, which firmly grips the sanding pad when applied with moderate pressure.
4. To change the sanding paper, merely peel off the old sanding paper, remove dust from the sanding pad if necessary, and press the new sanding paper in place as described above.

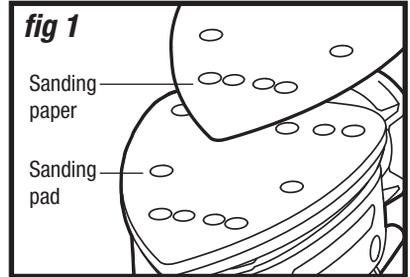**INSTALL THE MICROFILTER DUST CANISTER (fig 2)**

Your sander is supplied with a dust canister to help you keep the working area clean. The dust canister is ideal for smaller jobs. For maximum efficiency, the dust canister should be emptied frequently during operation.


1. Disconnect the sander from the power source.
2. Align the slot on the dust canister with the rib on the tool, and then push the dust canister onto the tool until it locks into place.

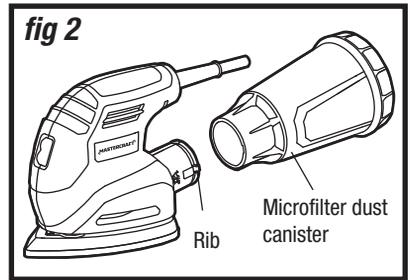**REMOVE THE MICROFILTER DUST CANISTER (fig 2)**

1. Disconnect the sander from the power source.
2. Simply pull the dust canister away from the tool.



ATTACH THE VACUUM HOSE (fig 3)

Directly attach the 1 1/4" (3.2 cm) vacuum hose to the dust port, and then connect the opposite end of the vacuum hose to a vacuum cleaner.

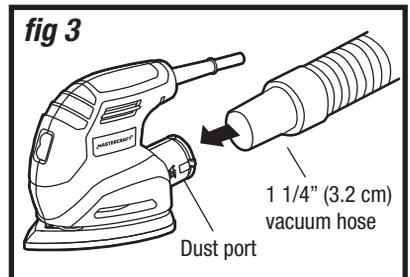

CLEAN AND EMPTY THE DUST CANISTER (fig 4)

1. Remove the dust canister from the tool.
2. Hold the dust-canister body and remove the microfilter by rotating it counter-clockwise.
3. Pour dust from the dust-canister body.
4. Knock excess dust out of the microfilter or remove dust with a soft brush. You may notice that all the dust may not come out of the microfilter. This will not affect sanding performance, but it will reduce dust-collection efficiency.

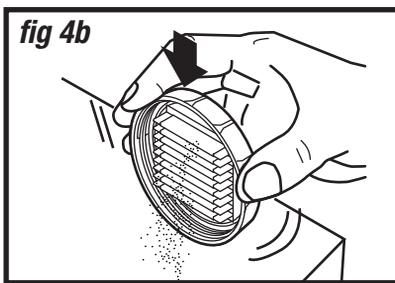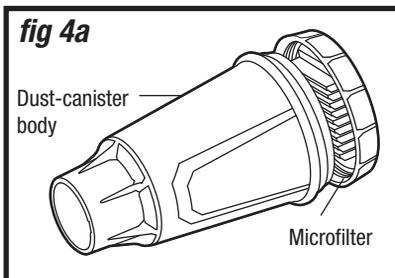

NOTICE: The microfilter should not be rinsed with water.



WARNING!

- Collected sanding dust from sanding surface coatings (polyurethane, linseed oil, etc.) can self-ignite in dust canister or elsewhere and cause fire. To reduce risk, empty dust canister frequently and strictly follow sander manual and coating manufacturer's instructions.

SELECT THE PROPER SANDING PAPER

Sanding paper	Recommended applications
Coarse grit (60–80)	Initial sanding of rougher surfaces. Fast removal of stock. Rough sanding and stripping of painted and rusted surfaces.
Medium grit (100–140)	Intermediate sanding. Removal of minor surface imperfections.
Fine grit (150–220)	Fine sanding. Sanding prior to staining, priming, or sealing.


TURN THE SANDER ON AND OFF (fig 5)

1. Connect the plug on the sander's power cord to a standard household outlet.
2. Start the sander by pushing the "on/off" switch to the "I" position.
3. Turn the sander off by pushing the "on/off" switch to the "O" position.

SANDING

This sander can be used for most sanding operations on materials such as wood, plastic, metal and painted surfaces. Do not use the sander for wet sanding.

1. Plug the sander into the power source.
2. Place the sander on the workpiece so that the sanding paper is flat and fully in contact with the workpiece.
3. Start the sander.
4. For best sanding results, apply light pressure on the sander, but do not force the tool.
5. Move the sander slowly over the workpiece, making successive passes in parallel lines, circles, or crosswise movements. The removal rate and the sanding pattern are determined by the choice of sanding paper and the work surface.
6. Do not allow the sander to stay on one spot for too long, as the sander's rapid action may remove too much material and make the surface uneven.
7. Upon completion of the sanding operation, remove the sander from the workpiece, turn the sander off, and wait until it comes to a complete stop before putting it down.

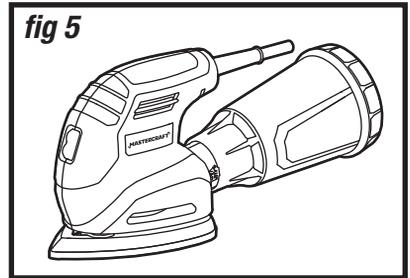

NOTICE: Do not switch from a coarse grit to a very fine grit in one step, because it may be difficult to remove the marks made by the coarse grit. Use the coarsest grits for the roughing operation, and finish by using successively finer grits.

MAINTENANCE

The tool may be cleaned most effectively with compressed dry air. Always wear safety goggles when cleaning tools with compressed air. Before each use:

- Inspect the tool, the trigger switch, and the cord for damage.
- Check for damaged, missing, or worn parts.

Check for loose screws, misalignment or binding of moving parts, or any other condition that may affect the operation.

If abnormal vibration or noise occurs, turn the tool off immediately, and have the problem corrected before further use.



WARNING!


- To avoid personal injury, always unplug the tool when cleaning or performing any maintenance.
- Do not let brake fluids, gasoline, petroleum-based products, penetrating oil, etc., come into contact with plastic parts. These substances contain chemicals that can damage, weaken, or destroy plastic.
- When servicing, use only identical replacement parts. The use of any other parts may create a hazard or cause damage to the product.
- Use only accessories that are recommended for this sander by the manufacturer. Accessories that may be suitable for one tool may become hazardous when used with another tool.
- To ensure safety and reliability, all repairs should be performed by a qualified service technician.
- If the supply cord is damaged, it must be replaced by a specially-prepared cord available through the service organization.

TROUBLESHOOTING

Problem	Possible Causes	Solution
The motor is overheating.	Be sure the cooling vents are free from dust and obstacles.	Clean and clear the vents. Do not cover the vents with your hand during operation.
The sander does not start.	Sander is not connected to power source.	Plug the sander into a power source.
Unsatisfactory sanding result.	The sanding paper is worn.	Replace with a new sanding paper.
	The sanding paper is not suitable for the workpiece.	Use the correct sanding paper.

If the problem remains unsolved after performing the checks described above, call the toll-free helpline at 1-800-689-9928.

EXPLODED VIEW

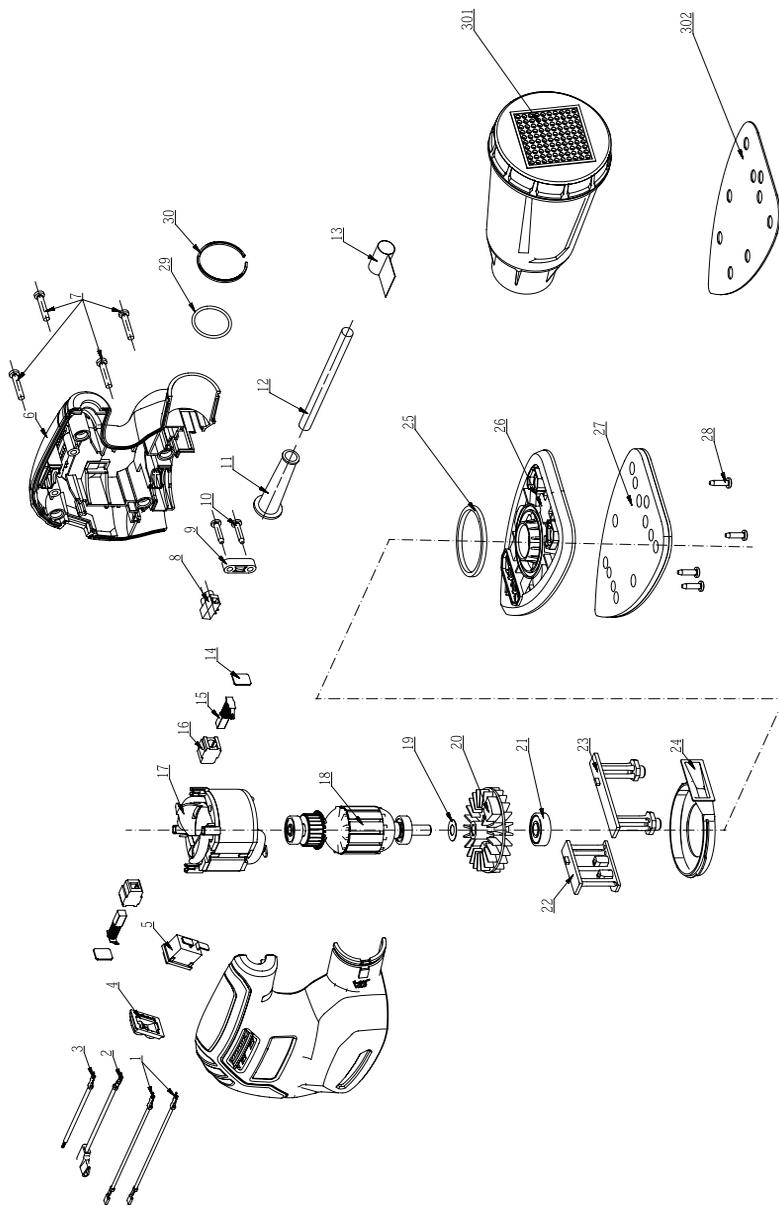

PARTS LIST

No.	Part No.	Description
1	2821987000	Internal Wire Assembly 1
2	2820856000	Internal Wire Assembly 5
3	2820844000	Internal Wire Assembly 1
4	3125792000	Switch Cover
5	4870385000	Rocker Switch
6	3900188000	L R Housing Set
7	5610106000	Tapping Screw
8	4930004000	Connector
9	3120234000	Cord Anchorage
10	5610024000	Tapping Screw
11	3121011000	Cord Guard
12	4810003000	Power Cord and Plug
13	2490136000	Nylon String
14	3700489000	Epoxy Board
15	4960013000	Carbon Brush
16	2800021000	Brush Holder

No.	Part No.	Description
17	2740126000	Stator
18	2823850000	Motor Assembly
19	5650702000	Plain Washer
20	3422282000	Dust Fan
21	5700008000	Ball Bearing
22	3127542000	Front Bracket
23	3127541000	Back Bracket
24	3124308000	Fan Baffle
25	3704013000	Felt Ring
26	3130235000	Base Plate
27	3706966000	Soft Pad
28	5610023000	Tapping Screw
29	5690268000	O-ring
30	5660187000	C-ring
301	2826581000	Dust Box Assembly
302	3810404000	Sanding Paper

If any parts are missing or damaged, or if you have any questions, please call the toll-free helpline at 1-800-689-9928.

This Mastercraft product is guaranteed for a period of **3 years from the date of original retail purchase** against defects in workmanship and materials, except for the following components:

- a) Component A: Batteries, chargers and carrying case, which are guaranteed for a period of 2 years from the date of original retail purchase against defects in workmanship and materials;
- b) Component B: Accessories, which are guaranteed for a period of 1 year from the date of original retail purchase against defects in workmanship and materials.

Subject to the conditions and limitations described below, this product, if returned to us with proof of purchase within the stated warranty period and if covered under this warranty, will be repaired or replaced (with the same model, or one of equal value or specification), at our option. We will bear the cost of any repair or replacement and any costs of labour relating thereto.

These warranties are subject to the following conditions and limitations:

- a) a bill of sale verifying the purchase and purchase date must be provided;
- b) this warranty will not apply to any product or part thereof which is worn or broken or which has become inoperative due to abuse, misuse, accidental damage, neglect or lack of proper installation, operation or maintenance (as outlined in the applicable owner's manual or operating instructions) or which is being used for industrial, professional, commercial or rental purposes;
- c) this warranty will not apply to normal wear and tear or to expendable parts or accessories that may be supplied with the product that are expected to become inoperative or unusable after a reasonable period of use;
- d) this warranty will not apply to routine maintenance and consumable items such as, but not limited to, fuel, lubricants, vacuum bags, blades, belts, sandpaper, bits, fluids, tune-ups or adjustments;
- e) this warranty will not apply where damage is caused by repairs made or attempted by others (i.e., persons not authorized by the manufacturer);
- f) this warranty will not apply to any product that was sold to the original purchaser as a reconditioned or refurbished product (unless otherwise specified in writing);
- g) this warranty will not apply to any product or part thereof if any part from another manufacturer is installed therein or any repairs or alterations have been made or attempted by unauthorized persons;
- h) this warranty will not apply to normal deterioration of the exterior finish, such as, but not limited to, scratches, dents, paint chips, or to any corrosion or discolouring by heat, abrasive and chemical cleaners; and
- i) this warranty will not apply to component parts sold by and identified as the product of another company,

which shall be covered under the product manufacturer's warranty, if any.

Additional Limitations

This warranty applies only to the original purchaser and may not be transferred. Neither the retailer nor the manufacturer shall be liable for any other expense, loss or damage, including, without limitation, any indirect, incidental, consequential or exemplary damages arising in connection with the sale, use or inability to use this product.

Notice to Consumer

This warranty gives you specific legal rights, and you may have other rights, which may vary from province to province. The provisions contained in this warranty are not intended to limit, modify, take away from, disclaim or exclude any statutory warranties set forth in any applicable provincial or federal legislation.

Made in China

Imported by

Mastercraft Canada Toronto, Canada M4S 2B8

