 




Solar Wind Spinner

Product No. 059-7303-0

Model No. JS-C140-4A

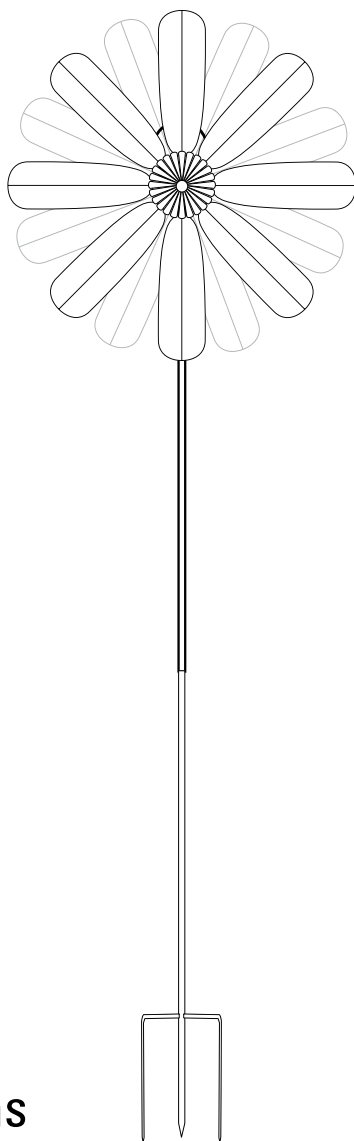

Assembly Instructions

Toll-free: 1-877-483-6759

IMPORTANT: Please read this manual carefully before beginning assembly of this product.
Keep this manual for future reference.

Table of Contents	3
Important Safety Instructions	3
Parts List	4
Assembly	4-6
Cleaning and Maintenance	7
Troubleshooting	7
Technical Data	7
Warranty	7

Caution! Always keep children under close supervision while they are using or around this product. Never leave children unattended.

 


Let us help you!
1-877-483-6759 (toll free)
If you have questions regarding your product, require warranty assistance, or have damaged or missing parts, please call our customer service toll-free helpline. Contact us for assistance, we're here to help.

IMPORTANT: Please read and understand this manual before any assembly. Before beginning assembly of product, make sure all parts are present. Compare parts with packaging contents list. If any part is missing, or if you have any questions, contact the service centre at 1-877-483-6759 (toll free).

Place all parts from the box in a cleared area and position them on the floor in front of you. Remove all packing materials and place them back into the box. Do not dispose of the packing materials until assembly is complete. Read each step carefully before beginning any assembly and make sure you understand each step. If you are missing a part, please call our toll-free number for assistance 1-877-483-6759.

IMPORTANT: RETAIN FOR FUTURE REFERENCE, AND READ CAREFULLY

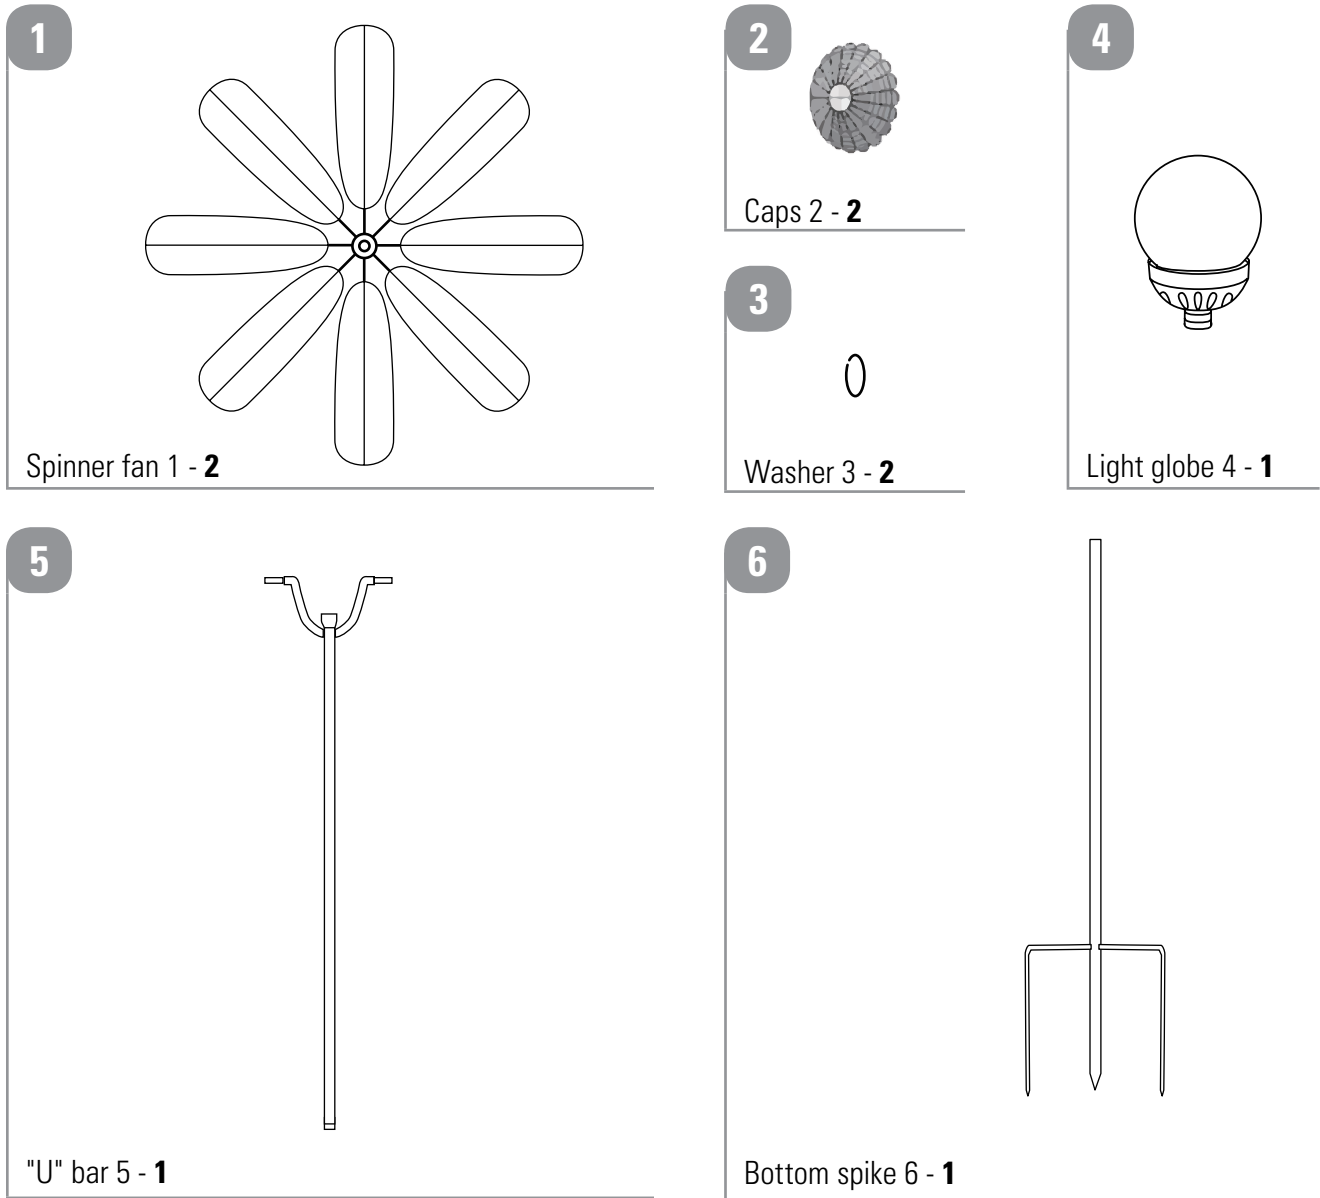

Assembly and Operating Instructions (see figures 1 and 2 on next pages)

1. Gently take all parts out of the package.
2. Mount the wind spinner fans to each side of the stake as shown.
3. Put on the lock washer then screw the cap to the threaded post--tighten by hand.
4. Locate light globe (part 4). Ensure switch is in the "on" position and then push directly into the top of the U post.
5. Assemble pole by screwing parts 5 and 6 together as shown.
6. Put the stake in the ground.
7. Place the light in direct sunlight to allow the rechargeable battery to reach its maximum capacity (leave in full sunlight for 8 hours).
8. When battery is fully charged, unit will light up when dark.

Figure 1

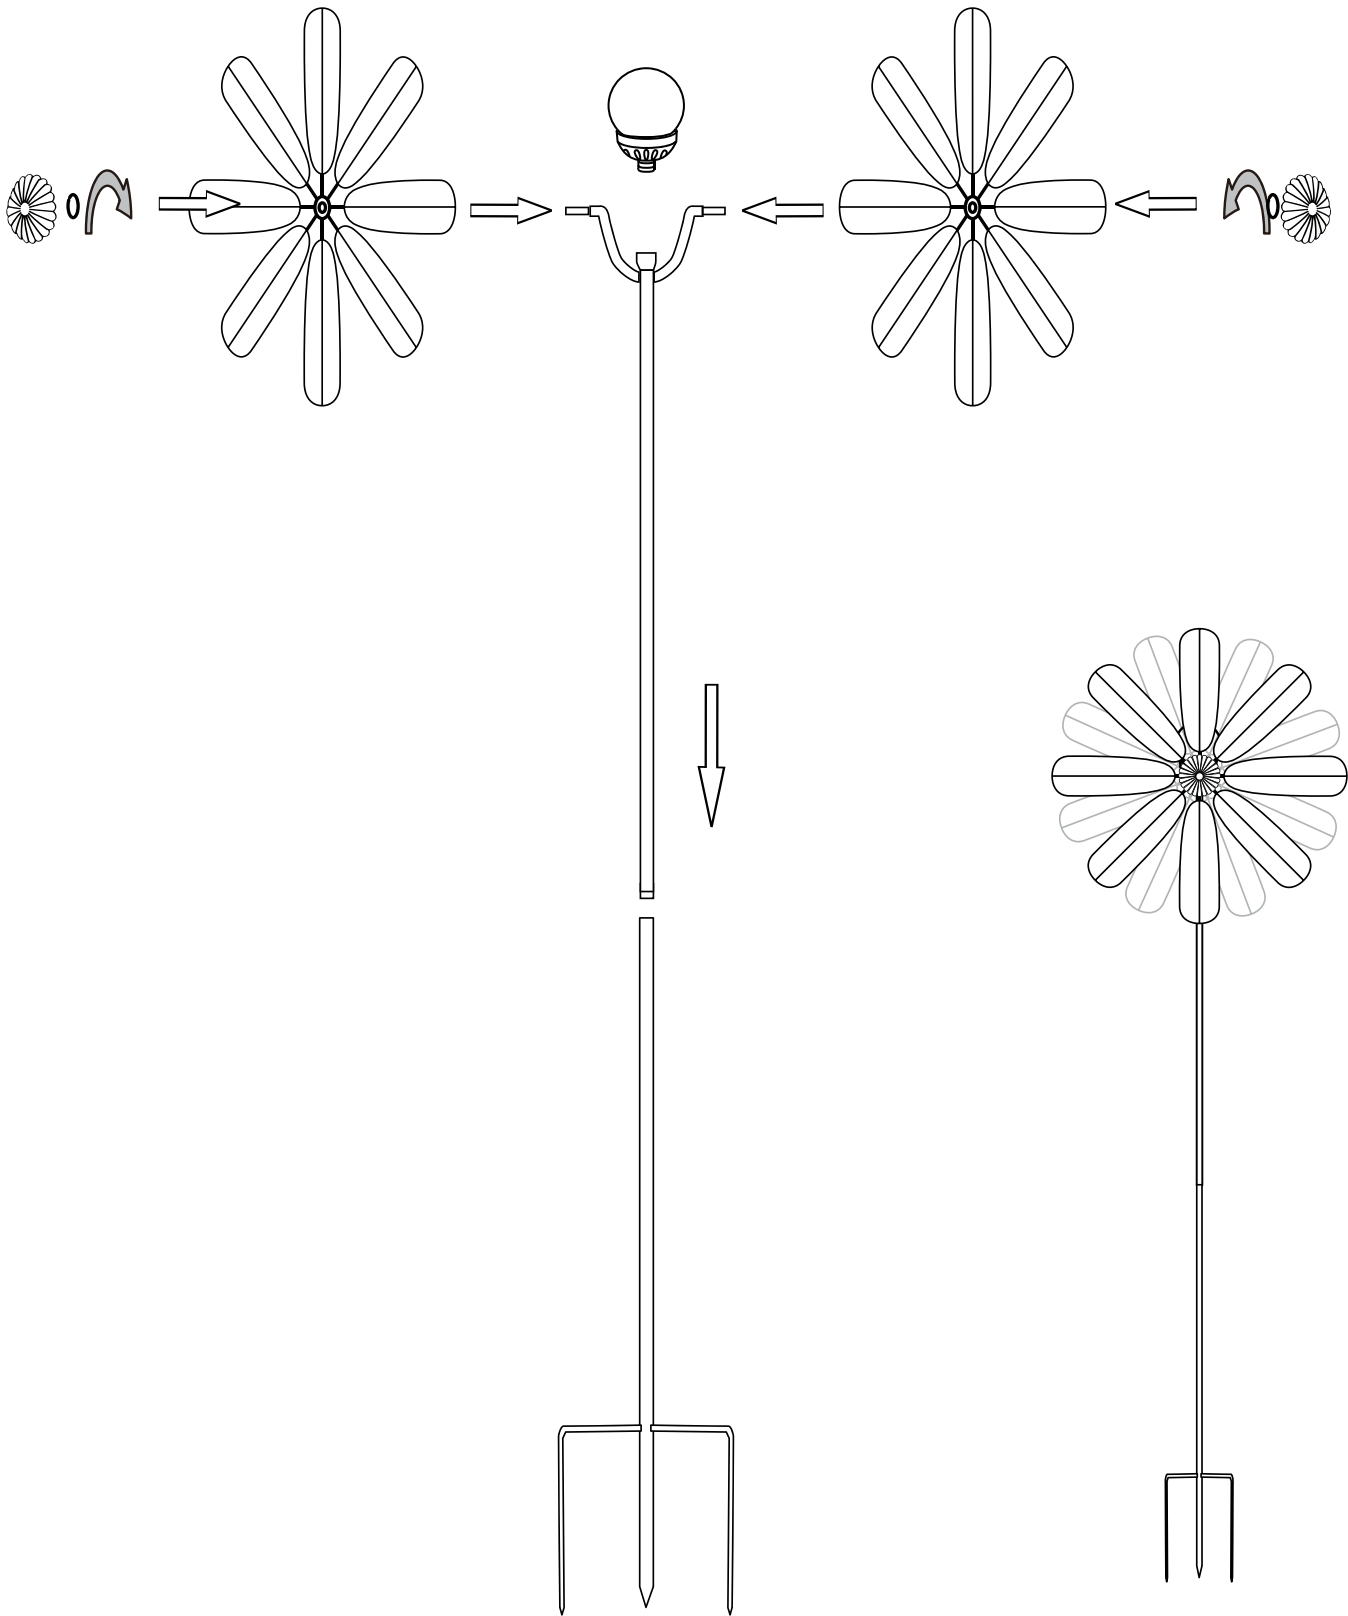


Figure 2



Changing Batteries

1. Pull out the light globe from the wind spinner and ensure the switch is in the off position.
2. To open the glass part of the light globe, use a Phillips screwdriver to remove the 2 screws in the metal cover.
3. Remove the metal cover; then unscrew 2 screws on the plastic enclosure.
4. Remove depleted battery. Clean the contacts on the new battery and in the product before installing battery.
5. Always purchase the correct size and grade of battery.
Insert the new battery correctly with regard to polarity (+ and -).
6. Failure to insert batteries in the correct polarity, as indicated in the battery compartment, may shorten the life of the batteries and may leak.
7. Do not mix old and new batteries.
8. Remove batteries when not using product for extended period of time.
Remove used batteries promptly.
9. Reassemble by inserting the two screws back into the plastic enclosure and tighten gently, then re-insert the other two screws back into the metal cover and tighten gently.
Do not over-tighten as this may break the glass.

Rechargeable battery:

This product contains one rechargeable battery. When battery expires, it must be recycled or disposed of properly. Please contact your local waste disposal authority for correct procedure. Do not incinerate the battery or put it into fire.

1 x 1.2V AAA Ni-MH Rechargeable Battery (incl.)



Always ensure that the solar light is only used with the specified rated rechargeable battery.



FUNCTION:

- During day time, the solar panel converts solar power into electricity and recharges the battery; at night, powered by the electricity stored inside the battery, the solar light turns on automatically.
- The lighting hours of the solar light depends on the geographical location and weather condition.

LOCATION:

- It is important to select an outdoor location with full, direct sunshine where the solar panel can receive at least 8 hours of sunlight each day. Shady areas will not enable batteries to be fully charged, which will reduce the lighting hours at night.
- It is also important to select an outdoor location not near night light sources, such as street lights, which may cause the solar light to turn off automatically.
- The solar light is designated for outdoor usage, it is ideal for night lighting of garden, lawn, etc.

CLEANING:

- When the solar panel is covered with dust, please clean it by using a soft moistened cloth (do not use any chemical or abrasive cleaner).
- It is important to ensure that no moisture enters into the solar light.

Troubleshooting

Solar light does not light-up in dark places:

- a. Check the position of the switch and make sure it is not at the “off” position.
- b. Check the rechargeable battery and make sure that it is well connected to the metal plate.

Check the location of the solar light; keep it away from night light sources, such as exterior lights.

Lighting hours are short:

Check the location of the solar light, make sure it is in a sunny area, so the batteries can be fully charged during day time.

Dimensions (L x W x H)	37 x 17 x 183 cm
	15 x 6 3/4 x 72"
Product weight	1.85 kg
	4 lb 1 oz


This For Living™ product has three (3) months Warranty. This warranty is limited to the replacement of defective parts only. Labour charges and/or damage incurred during installation, repair, replacement as well as incidental and consequential damages connected with the above are excluded. Any damage to this product as a result of neglect, misuse, accident, improper installation or use other than the purpose SHALL VOID THIS WARRANTY.



Solar Wind Spinner

Product No. 059-7303-0

Model No. JS-C140-4A

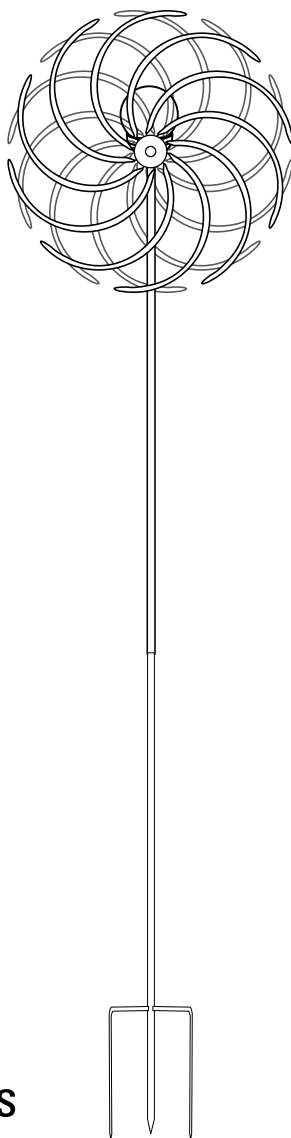

Assembly Instructions

Toll-free: 1-877-483-6759

IMPORTANT: Please read this manual carefully before beginning assembly of this product.
Keep this manual for future reference.

Table of Contents	3
Important Safety Instructions	3
Parts List	4
Assembly	4-6
Cleaning and Maintenance	7
Troubleshooting	7
Technical Data	7
Warranty	7

Caution! Always keep children under close supervision while they are using or around this product. Never leave children unattended.



Let us help you!

1-877-483-6759 (toll free)

 
If you have questions regarding your product, require warranty assistance, or have damaged or missing parts, please call our customer service toll-free helpline. Contact us for assistance, we're here to help.

IMPORTANT: Please read and understand this manual before any assembly. Before beginning assembly of product, make sure all parts are present. Compare parts with packaging contents list. If any part is missing, or if you have any questions, contact the service centre at 1-877-483-6759 (toll free).

Place all parts from the box in a cleared area and position them on the floor in front of you. Remove all packing materials and place them back into the box. Do not dispose of the packing materials until assembly is complete. Read each step carefully before beginning any assembly and make sure you understand each step. If you are missing a part, please call our toll-free number for assistance 1-877-483-6759.

IMPORTANT: RETAIN FOR FUTURE REFERENCE, AND READ CAREFULLY

1

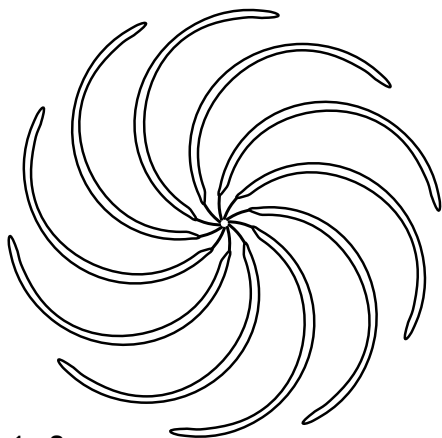

Spinner fan 1 - 2

2



Nuts 2 - 2

3



Light globe 3 - 1

4




Washers 4 - 2

5




Wrench 5 - 1

 6

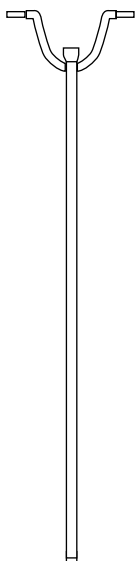

"U" bar 6 - 1

 7

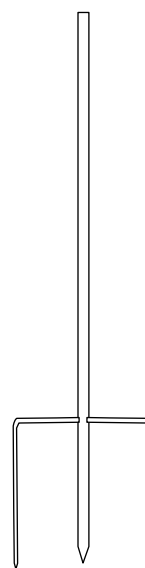

Bottom spike 7 - 1

Assembly and Operating Instructions (see figures 1 and 2 on next pages)

1. Gently take all parts out of the package.
2. Mount the wind spinner fans to each side of the stake as shown.
3. Put on the lock washer then screw the cap to the threaded post--tighten by hand.
4. Locate light globe (part 4). Ensure switch is in the "on" position and then push directly into the top of the U post.
5. Assemble pole by screwing parts 5 and 6 together as shown.
6. Put the stake in the ground.
7. Place the light in direct sunlight to allow the rechargeable battery to reach its maximum capacity (leave in full sunlight for 8 hours).
8. When battery is fully charged, unit will light up when dark.

Figure 1

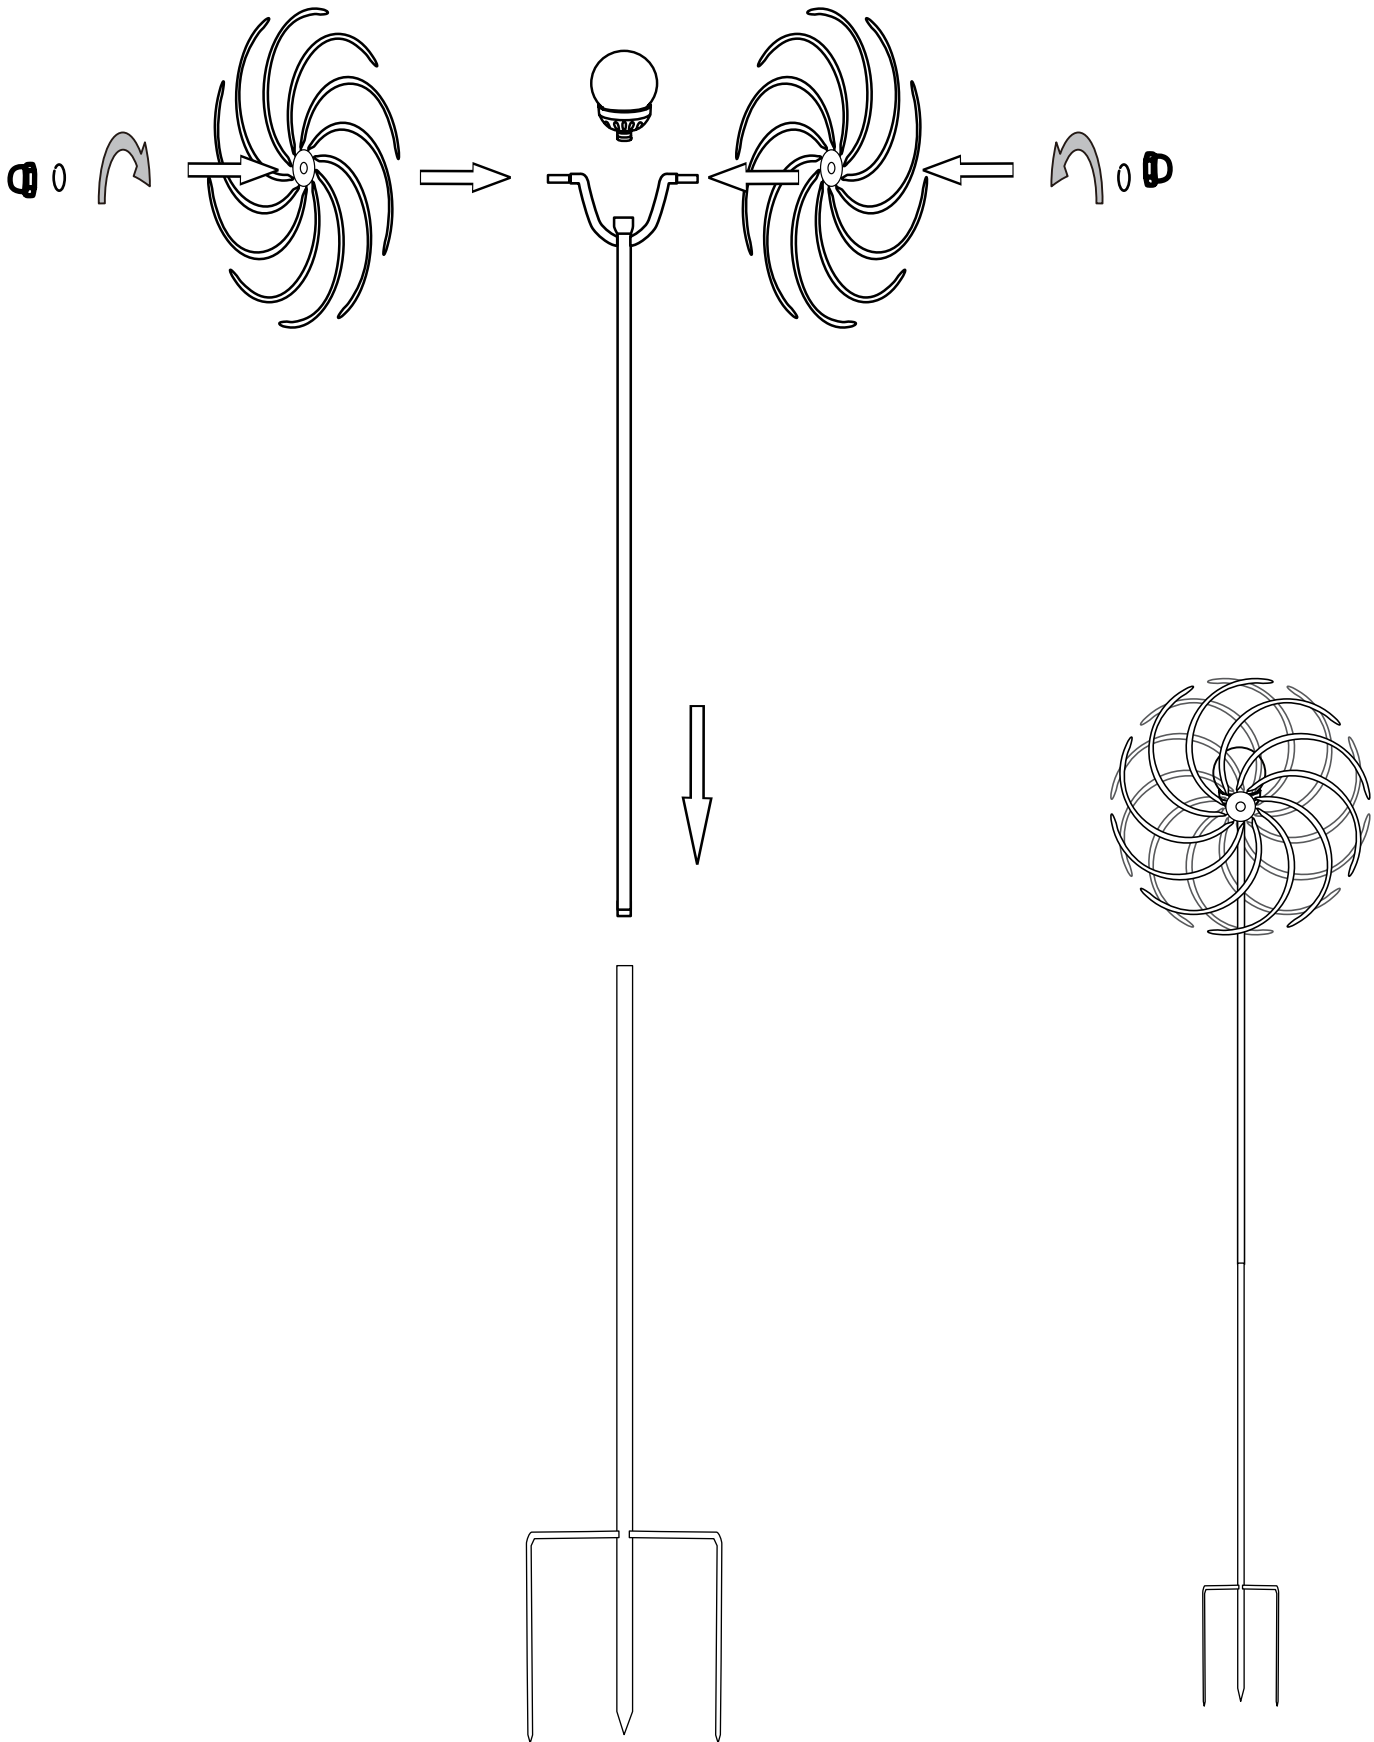 


Figure 2**Changing Batteries**

1. Pull out the light globe from the wind spinner and ensure the switch is in the off position.
2. To open the glass part of the light globe, use a Phillips screwdriver to remove the 2 screws in the metal cover.
3. Remove the metal cover; then unscrew 2 screws on the plastic enclosure.
4. Remove depleted battery. Clean the contacts on the new battery and in the product before installing battery.
5. Always purchase the correct size and grade of battery.
Insert the new battery correctly with regard to polarity (+ and -).
6. Failure to insert batteries in the correct polarity, as indicated in the battery compartment, may shorten the life of the batteries and may leak.
7. Do not mix old and new batteries.
8. Remove batteries when not using product for extended period of time.
Remove used batteries promptly.
9. Reassemble by inserting the two screws back into the plastic enclosure and tighten gently, then re-insert the other two screws back into the metal cover and tighten gently.
Do not over-tighten as this may break the glass.

Rechargeable battery:

This product contains one rechargeable battery. When battery expires, it must be recycled or disposed of properly. Please contact your local waste disposal authority for correct procedure. Do not incinerate the battery or put it into fire.

1 x 1.2V AAA Ni-MH Rechargeable Battery (incl.)



Always ensure that the solar light is only used with the specified rated rechargeable battery.


FUNCTION:

- During day time, the solar panel converts solar power into electricity and recharges the battery; at night, powered by the electricity stored inside the battery, the solar light turns on automatically.
- The lighting hours of the solar light depends on the geographical location and weather condition.

LOCATION:

- It is important to select an outdoor location with full, direct sunshine where the solar panel can receive at least 8 hours of sunlight each day. Shady areas will not enable batteries to be fully charged, which will reduce the lighting hours at night.
- It is also important to select an outdoor location not near night light sources, such as street lights, which may cause the solar light to turn off automatically.
- The solar light is designated for outdoor usage, it is ideal for night lighting of garden, lawn, etc.

CLEANING:

- When the solar panel is covered with dust, please clean it by using a soft moistened cloth (do not use any chemical or abrasive cleaner).
- It is important to ensure that no moisture enters into the solar light.

Troubleshooting

Solar light does not light-up in dark places:

- Check the position of the switch and make sure it is not at the "off" position.
- Check the rechargeable battery and make sure that it is well connected to the metal plate.

Check the location of the solar light; keep it away from night light sources, such as exterior lights.

Lighting hours are short:

Check the location of the solar light, make sure it is in a sunny area, so the batteries can be fully charged during day time.

Dimensions (L x W x H)	37 x 17 x 183 cm
	15 x 6 3/4 x 72"
Product weight	1.85 kg
	4 lb 1 oz

 
This For Living™ product has three (3) months Warranty. This warranty is limited to the replacement of defective parts only. Labour charges and/or damage incurred during installation, repair, replacement as well as incidental and consequential damages connected with the above are excluded. Any damage to this product as a result of neglect, misuse, accident, improper installation or use other than the purpose SHALL VOID THIS WARRANTY.



Solar Wind Spinner

Product No. 059-7303-0

Model No. JS-C140-4A

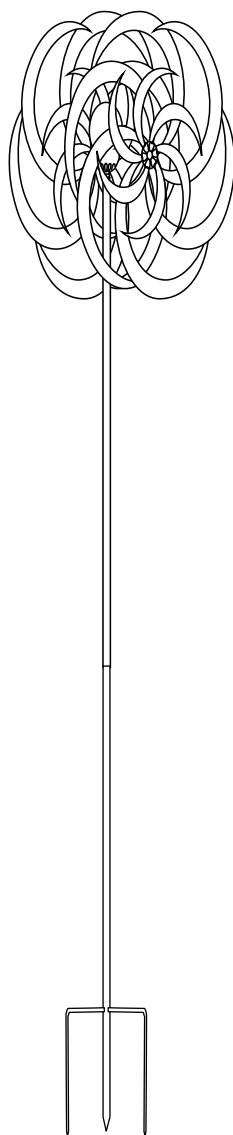

Assembly Instructions

Toll-free: 1-877-483-6759

IMPORTANT: Please read this manual carefully before beginning assembly of this product.
Keep this manual for future reference.

Table of Contents	3
Important Safety Instructions	3
Parts List	4
Assembly	4-6
Cleaning and Maintenance	7
Troubleshooting	7
Technical Data	7
Warranty	7

Caution! Always keep children under close supervision while they are using or around this product. Never leave children unattended.



Let us help you!

1-877-483-6759 (toll free)

 
If you have questions regarding your product, require warranty assistance, or have damaged or missing parts, please call our customer service toll-free helpline. Contact us for assistance, we're here to help.

IMPORTANT: Please read and understand this manual before any assembly. Before beginning assembly of product, make sure all parts are present. Compare parts with packaging contents list. If any part is missing, or if you have any questions, contact the service centre at 1-877-483-6759 (toll free).

Place all parts from the box in a cleared area and position them on the floor in front of you. Remove all packing materials and place them back into the box. Do not dispose of the packing materials until assembly is complete. Read each step carefully before beginning any assembly and make sure you understand each step. If you are missing a part, please call our toll-free number for assistance 1-877-483-6759.

IMPORTANT: RETAIN FOR FUTURE REFERENCE, AND READ CAREFULLY

1

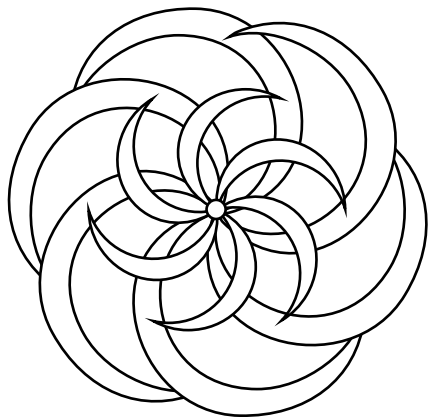

Wind spinners 1 - 2

2




Caps 2 - 2

3




Washer 3 - 2

 4

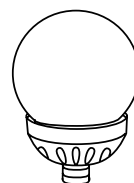


Light globe 4 - 1

 5

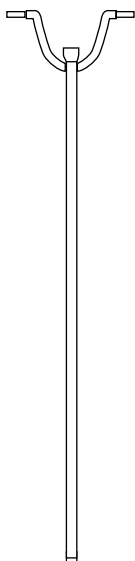

"U" bar 5 - 1

 6

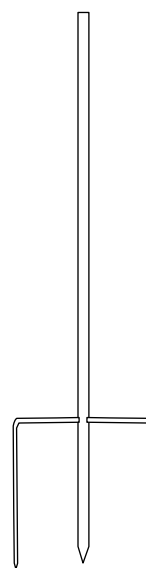

Bottom spike 6 - 1

Assembly and Operating Instructions (see figures 1 and 2 on next pages)

1. Gently take all parts out of the package.
2. Mount the wind spinner fans to each side of the stake as shown.
3. Put on the lock washer then screw the cap to the threaded post--tighten by hand.
4. Locate light globe (part 4). Ensure switch is in the "on" position and then push directly into the top of the U post.
5. Assemble pole by screwing parts 5 and 6 together as shown.
6. Put the stake in the ground.
7. Place the light in direct sunlight to allow the rechargeable battery to reach its maximum capacity (leave in full sunlight for 8 hours).
8. When battery is fully charged, unit will light up when dark.

Figure 1

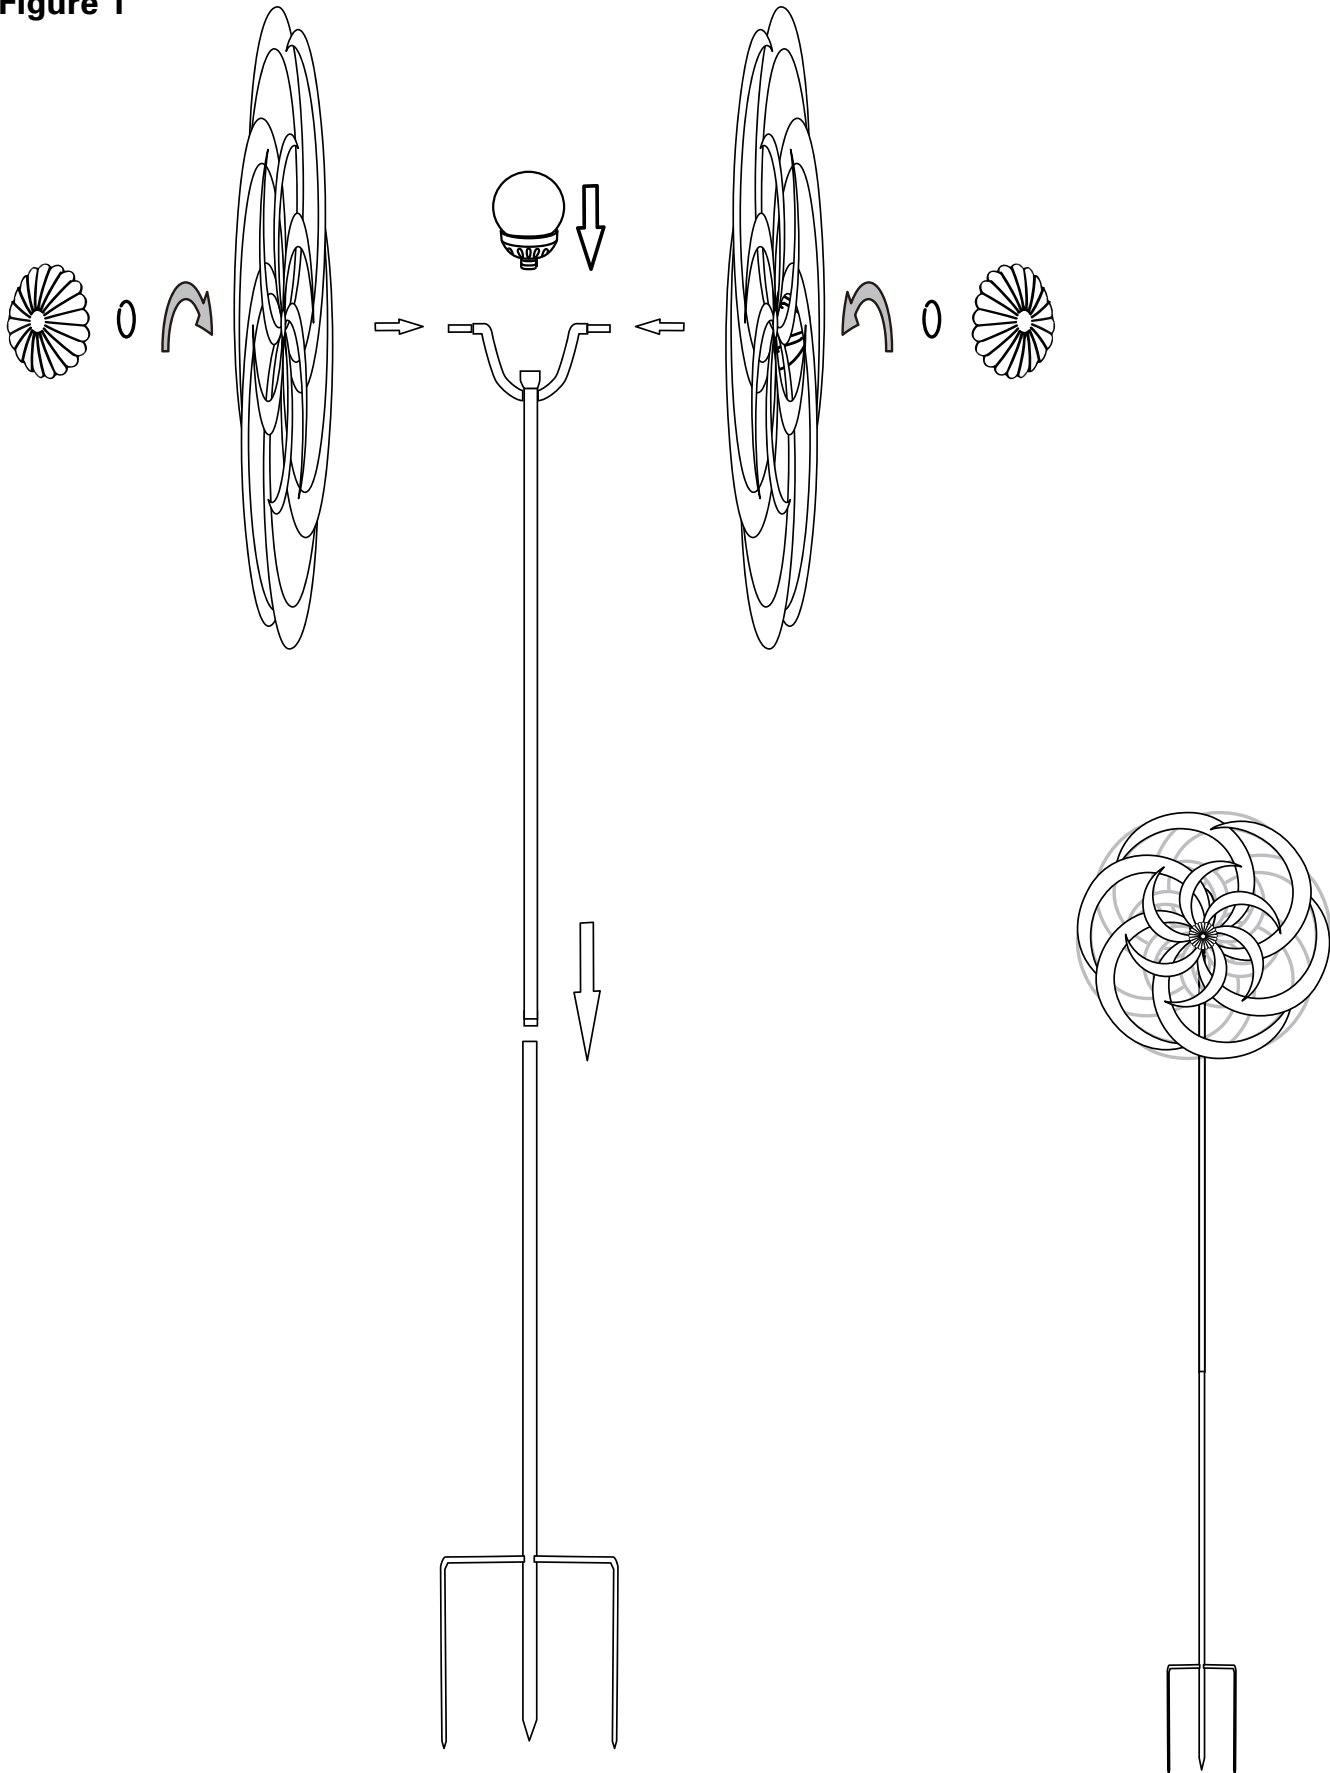 


Figure 2**Changing Batteries**

1. Pull out the light globe from the wind spinner and ensure the switch is in the off position.
2. To open the glass part of the light globe, use a Phillips screwdriver to remove the 2 screws in the metal cover.
3. Remove the metal cover; then unscrew 2 screws on the plastic enclosure.
4. Remove depleted battery. Clean the contacts on the new battery and in the product before installing battery.
5. Always purchase the correct size and grade of battery.
Insert the new battery correctly with regard to polarity (+ and -).
6. Failure to insert batteries in the correct polarity, as indicated in the battery compartment, may shorten the life of the batteries and may leak.
7. Do not mix old and new batteries.
8. Remove batteries when not using product for extended period of time.
Remove used batteries promptly.
9. Reassemble by inserting the two screws back into the plastic enclosure and tighten gently, then re-insert the other two screws back into the metal cover and tighten gently.
Do not over-tighten as this may break the glass.

Rechargeable battery:

This product contains one rechargeable battery. When battery expires, it must be recycled or disposed of properly. Please contact your local waste disposal authority for correct procedure. Do not incinerate the battery or put it into fire.

1 x 1.2V AAA Ni-MH Rechargeable Battery (incl.)



Always ensure that the solar light is only used with the specified rated rechargeable battery.


FUNCTION:

- During day time, the solar panel converts solar power into electricity and recharges the battery; at night, powered by the electricity stored inside the battery, the solar light turns on automatically.
- The lighting hours of the solar light depends on the geographical location and weather condition.

LOCATION:

- It is important to select an outdoor location with full, direct sunshine where the solar panel can receive at least 8 hours of sunlight each day. Shady areas will not enable batteries to be fully charged, which will reduce the lighting hours at night.
- It is also important to select an outdoor location not near night light sources, such as street lights, which may cause the solar light to turn off automatically.
- The solar light is designated for outdoor usage, it is ideal for night lighting of garden, lawn, etc.

CLEANING:

- When the solar panel is covered with dust, please clean it by using a soft moistened cloth (do not use any chemical or abrasive cleaner).
- It is important to ensure that no moisture enters into the solar light.

Troubleshooting

Solar light does not light-up in dark places:

- Check the position of the switch and make sure it is not at the "off" position.
- Check the rechargeable battery and make sure that it is well connected to the metal plate.

Check the location of the solar light; keep it away from night light sources, such as exterior lights.

Lighting hours are short:

Check the location of the solar light, make sure it is in a sunny area, so the batteries can be fully charged during day time.

Dimensions (L x W x H)	37 x 17 x 183 cm
	15 x 6 3/4 x 72"
Product weight	1.85 kg
	4 lb 1 oz

This For Living™ product has three (3) months Warranty. This warranty is limited to the replacement of defective parts only. Labour charges and/or damage incurred during installation, repair, replacement as well as incidental and consequential damages connected with the above are excluded. Any damage to this product as a result of neglect, misuse, accident, improper installation or use other than the purpose SHALL VOID THIS WARRANTY.

