 


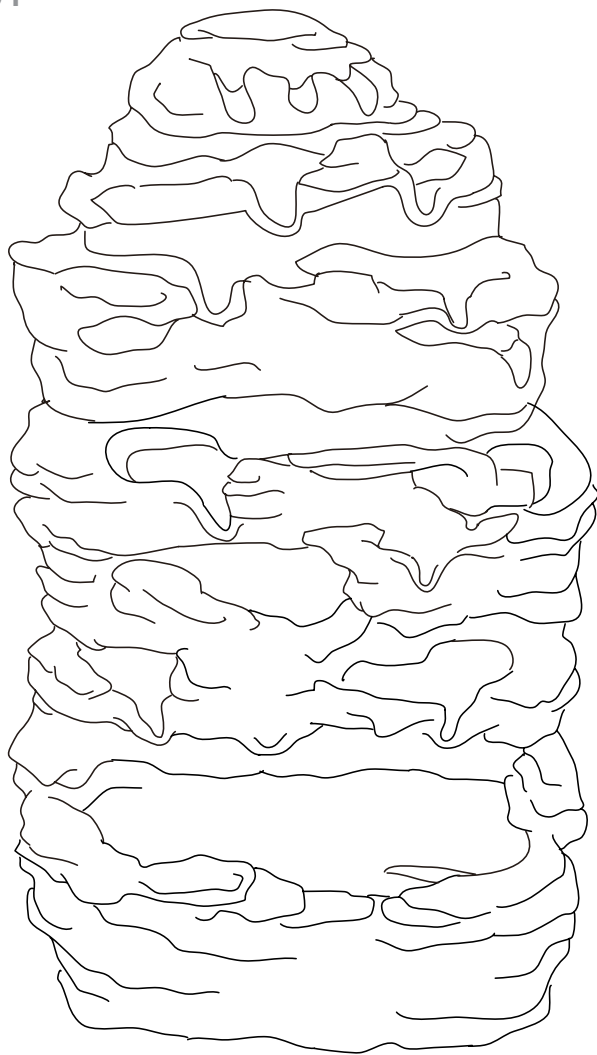

LED Rock Fountain

Product No. 059-7308-0

Model No. 19391



Assembly Instructions

Toll-free: 1-877-483-6759

IMPORTANT: Please read this manual carefully before beginning assembly of this product.
Keep this manual for future reference.

Table of Contents	3
Important Safety Instructions	3
Parts List	4
Assembly	5-7
Cleaning and Maintenance	8
Technical Data	8
Warranty	9



Warning! To reduce the risk of electrical shock, use pump only on self-contained fountains no larger than 5 feet (1.5 m) in any dimension. This pump is supplied with a grounding conductor and grounding type plug. To reduce the risk of electric shock, be certain that it is connected to a properly grounded, grounding type receptacle.

Always disconnect power supply before handling or moving fountain.

Connect only to a grounded outdoor power outlet of 120V- 60Hz.

Do not attempt to repair a damaged pump/power cord. Ask for a replacement pump/cord from the manufacturer.

To avoid possible injuries do not tamper with pump/cord assembly.

Must be used only with the pump AND/OR transformer AND/OR adaptor provided.

 
Be careful not to spill water onto the plug of the pump.
DO NOT allow the pump to run dry!

Caution! Always keep children under close supervision while they are using or around this product. Never leave children unattended.

- Excessive weight or pressure on any of the fountain sections may cause it to tip or fall over. Keep pets and children away from any of the fountain sections. Do not place any items, such as potted plants, on the edge or on top of the fountain.
- If the entire fountain falls into the water accidentally, turn off the circuit breaker immediately before removing from water.
- Do not operate the fountain if the pump has been dropped or has a damaged power cord or plug.
- If the plug or your wall receptacle gets wet due to water dripping down the power cord or for any other reason, do not remove the plug from the wall outlet until the circuit breaker is turned off.
- NOTE: Allow the pump power cord to hang at a lower level than the wall outlet to form a "drip loop." This will help prevent water from dripping down the power cord and getting into the wall outlet.
- Periodically change the water. Clean the fountain water basin, the pump's outlet nozzle and the water tube with a damp cloth to remove dirt and debris.
- Keep the power cord away from high temperatures or heat sources.
- Use only a CUL or CSA or CETL approved extension cord of the correct rating to avoid overheating.
- Do not use attachments, which are not provided by the manufacturer, since they may cause an unsafe condition.
- This fountain pump is not intended for commercial use.

IMPORTANT: RETAIN FOR FUTURE REFERENCE, AND READ CAREFULLY

1

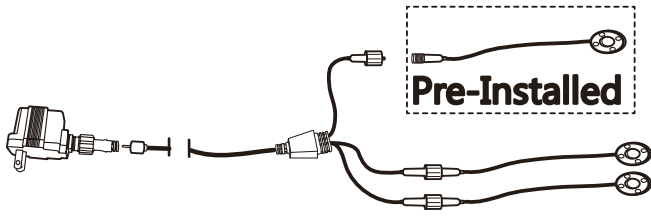


Adaptor 1 - 1

2




Pump 2 - 1

 3

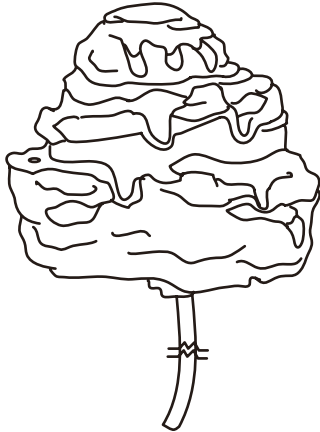

Rock top 3 - 1

 4

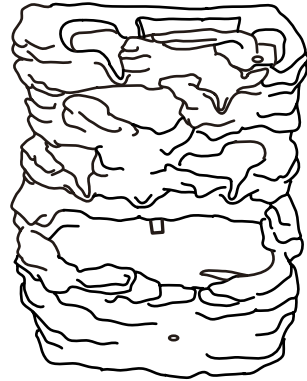

Rock base 4 - 1

**Caution!**

- Proper placement of your fountain is essential.
Do not place the product underneath electrical lines.
- Keep children away during assembly.
This product contains small parts which can be swallowed by children.
- Keep fingers away from the places where they can be pinched or trapped.
- Do not attempt to assemble the fountain if any parts are missing.

**Let us help you!****1-877-483-6759 (toll free)**

If you have questions regarding your product, require warranty assistance, or have damaged or missing parts, please call our customer service toll-free helpline. Contact us for assistance, we're here to help.

IMPORTANT: Please read and understand this manual before any assembly. Before beginning assembly of product, make sure all parts are present. Compare parts with packaging contents list. If any part is missing, or if you have any questions, contact the service centre at 1-877-483-6759 (toll free).

Place all parts from the box in a cleared area and position them on the floor in front of you. Remove all packing materials and place them back into the box. Do not dispose of the packing materials until assembly is complete. Read each step carefully before beginning any assembly and make sure you understand each step. If you are missing a part, please call our toll-free number for assistance 1-877-483-6759.

Place base on a clean level area outdoors. Do not place on or near surfaces that may be damaged by water.

Fountain needs to be located near a GFCI (Ground Fault Circuit Interrupter) outdoor electrical outlet.

To prevent back injuries, please ask for assistance when lifting.

1. Put the base on a clean level surface that will not be damaged by water.
2. Put the pump into the base and run the electrical cord out the hole in the back of the fountain.
3. Run the LED light lead out the same hole in the back of the fountain. It has the end with two prongs. (unhook from the transformer if it comes assembled.)
4. Connect the transformer to the electrical lead after it has been threaded through the hole in the back then set down. Plug in after the rest has been assembled.
5. Put the top of the fountain on the base taking care to run the top LED lead and the hose into the centre cavity in the fountain.
6. Connect all 3 LED fittings to the electrical fittings. BE VERY CAREFUL TO CONNECT FULLY AS WATER CAN LEAK INTO THE FITTING AND CAUSE THE LED LIGHT TO FAIL IF NOT INSTALLED PROPERLY.....(Helpful Hint: a little Petroleum Jelly will help).
7. Connect the hose to the outlet on the top of the pump.
8. Fill with clean water.
9. Plug the pump and transformer into a properly grounded outdoor outlet.

Test run and adjust the water flow by twisting the tab located on the front of the pump to get the desired effect.

Troubleshooting:

If water does not flow out of unit, disconnect the power supply and verify that there are no kinks in the hose. Shake the pump a little while underwater to remove any trapped air in the unit.

Remove any visible debris.

Make sure there is enough water in the fountain. Fill to within 1–2" (2.5–5 cm) inches below the rim of the base (Fountain – Lower Section).

Connect and disconnect the power a few times. The pump should function.

 
 
 
Wait a while in order to allow the water to circulate properly.

General Information:

Adaptor model number: GPU351200200WA00 AC 120V ~60Hz.

Pump model number: YH-606 AC 120V ~60Hz. A

Power cord is 6 ft (1.83 m) long.

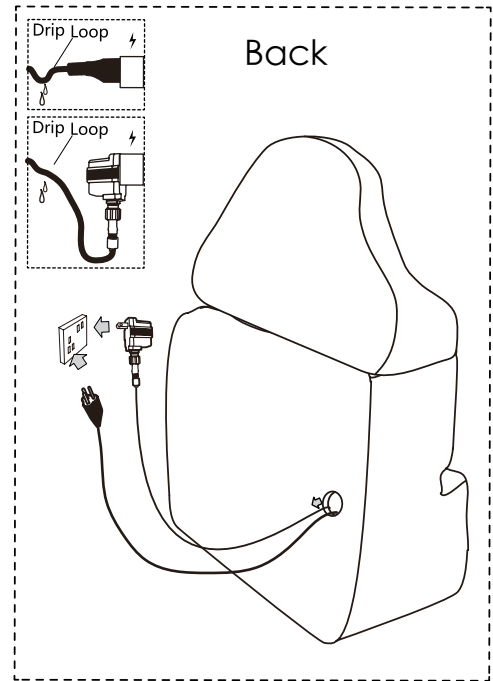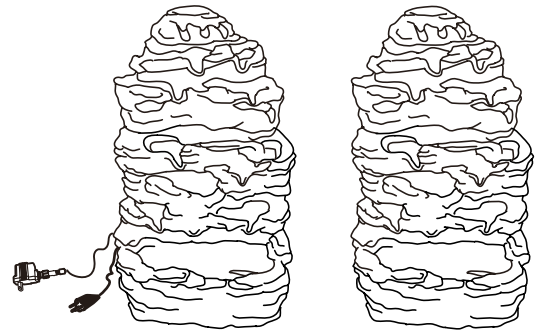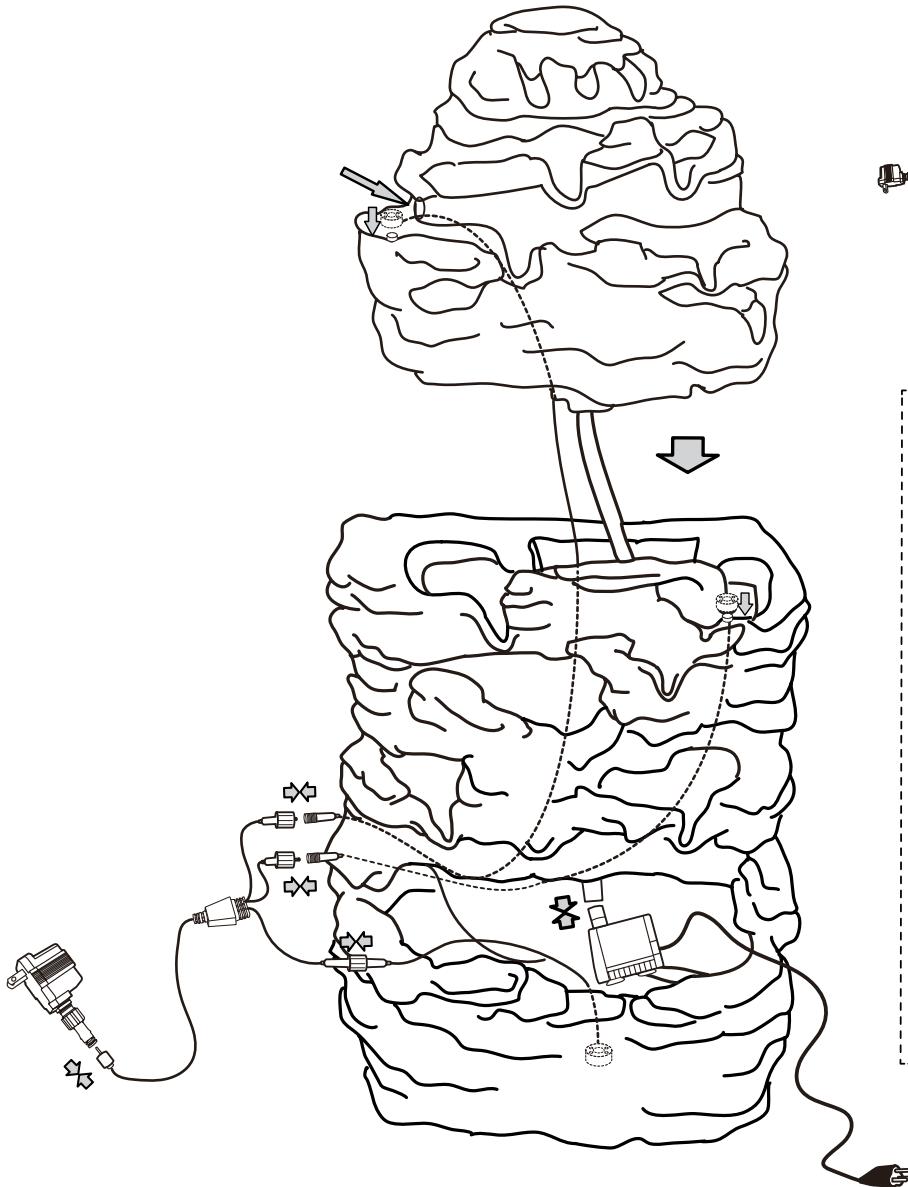

Care and Maintenance

- Keep the water clean at all times.
- Remove all forms of debris.
- Never run the pump dry.
- Verify water level frequently to compensate for evaporation during the summer. Fill within 1–2" (2.5–5cm) inches below the rim of the base (Fountain – Lower section).
- Not for operation below 50°F (10°C). All water must be removed from the unit in freezing conditions.
- This fountain is for outdoor decorative use only.
- This fountain is designed to function with water only.
- Never leave a running fountain unattended.
- The water in the fountain is not safe to drink.
- Keep away from small children and pets.
- Change the water regularly to prevent mosquitoes breeding.

INSTRUCTION FOR STORAGE: THE FOUNTAIN MUST BE STORED INDOORS DURING WINTER OR WHEN TEMPERATURE IS BELOW 50°F (10°C)

- During Winter, this fountain must be stored indoors. Please follow the following steps:
 - Disconnect power supply
 - Carefully empty fountain of all water
 - Store indoors on water resistant surface

IN ORDER TO PRESERVE THE BEAUTY AND THE LIFE OF THIS ITEM, IT IS HIGHLY RECOMMENDED TO COVER WITH A CANVAS TYPE WATERPROOF MATERIAL OR STORE IN A COVERED AREA FOR THE WINTER.

Dimensions (L x W x H)	42 x 42 x 78.5 cm
	16 1/2 x 16 1/2 x 31"
Product weight	30 kg
	66 lb 2 oz

This For Living™ product has three (3) months Warranty. This warranty is limited to the replacement of defective parts only. Labour charges and/or damage incurred during installation, repair, replacement as well as incidental and consequential damages connected with the above are excluded. Any damage to this product as a result of neglect, misuse, accident, improper installation or use other than the purpose SHALL VOID THIS WARRANTY.

