


CANVAS^{TM/MC}

DELLA PEDESTAL SPHERE FOUNTAIN

PRODUCT NO. 0597857

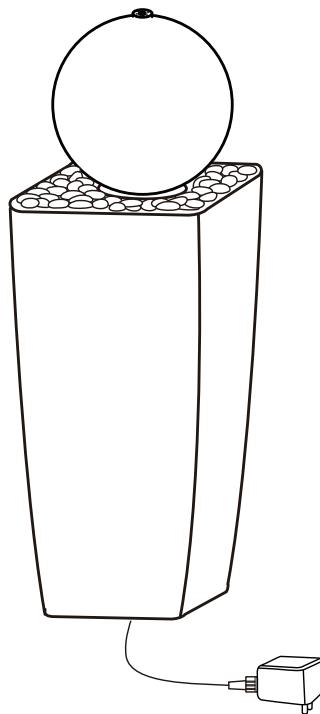

ASSEMBLY INSTRUCTIONS



HAVING TROUBLE?
TOLL-FREE:
1-888-670-6684

IMPORTANT: Please read this manual carefully before beginning assembly of this product. Keep this manual for future reference.

CANVAS™

INSPIRED BY CANADA



We believe in the power of décor and its ability to make up the fabric of your home.

That's why **CANVAS™** collections draw **inspiration from Canadians and the way they live.**

From on-trend furniture pieces to holiday décor and all your outdoor living essentials, **CANVAS™** makes it easy to refresh your space to reflect **your unique style and the way you live every day.**

We would love to hear from you and welcome your thoughtful feedback. Visit our website at **canadiantire.ca** to tell us about your experience, and share your photos with us using **#myCANVASstyle**.

Show us how you bring **CANVAS™** products to life. We can't wait to see!

TABLE OF CONTENTS


Table of Contents	3
Instructions for Use	4
Troubleshooting	6
Caring for Your Item	6
Warranty	7



WARNING! TO REDUCE THE RISK OF SERIOUS INJURY,
READ THE FOLLOWING SAFETY INSTRUCTIONS BEFORE
ASSEMBLING AND USING THE PRODUCT.

- DO NOT use in water intended for swimming, wading, immersion, or bathing.
- Power unit must be supplied by a circuit protected by a ground fault circuit interrupter (GFCI).

WHAT YOU'LL NEED

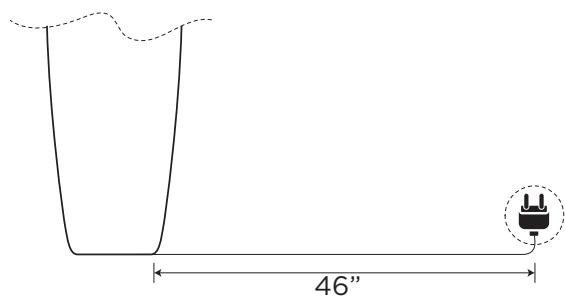


- Consider the location of your power source. The power cord reaches 46" from the base of the fountain body to the plug.
- For best results the water feature should be placed on a firm, level surface.

PARTS LIST


ITEM	DESCRIPTION	THUMBNAIL	QUANTITY
A	Pedestal		1
B	Fountain ball		1
C	Pump		1
D	Adapter		1
E	Stone		1

INSTRUCTIONS FOR USE

STEP 1 Connect the long wire from the pump (C) through the pedestal to the adapter (D).

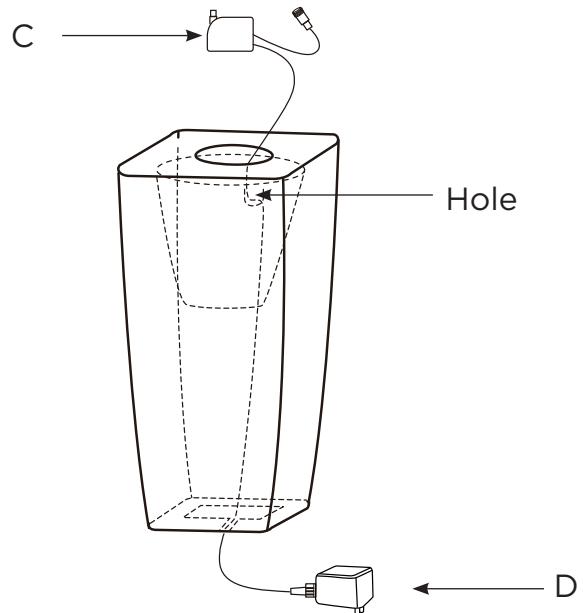


STEP 2 Connect the short wire from the pump (C) to the light of the fountain ball(B).Plug the rubber water hose into the pump.

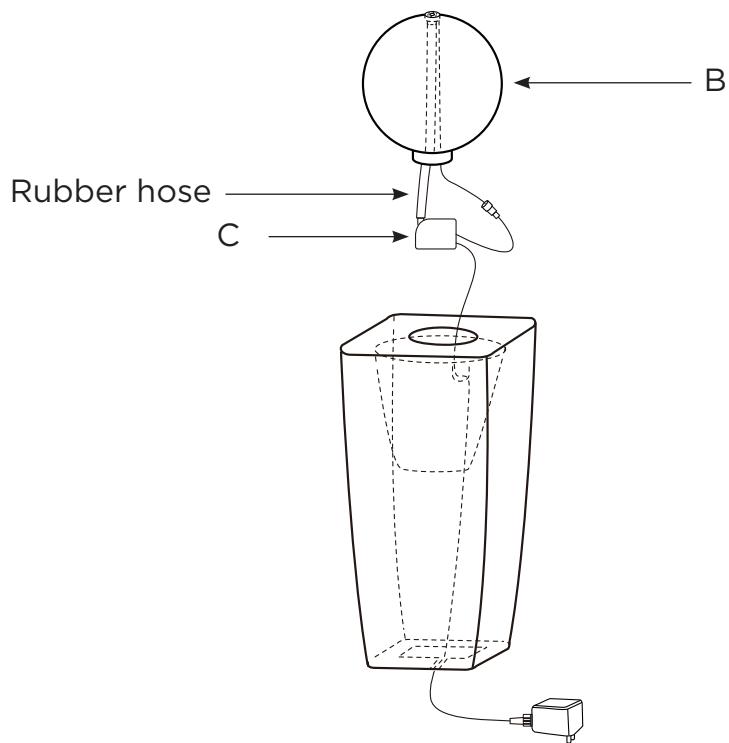


INSTRUCTIONS FOR USE

STEP 3 Fill the pedestal (A) with water, making sure that the water does not exceed the maximum water level.

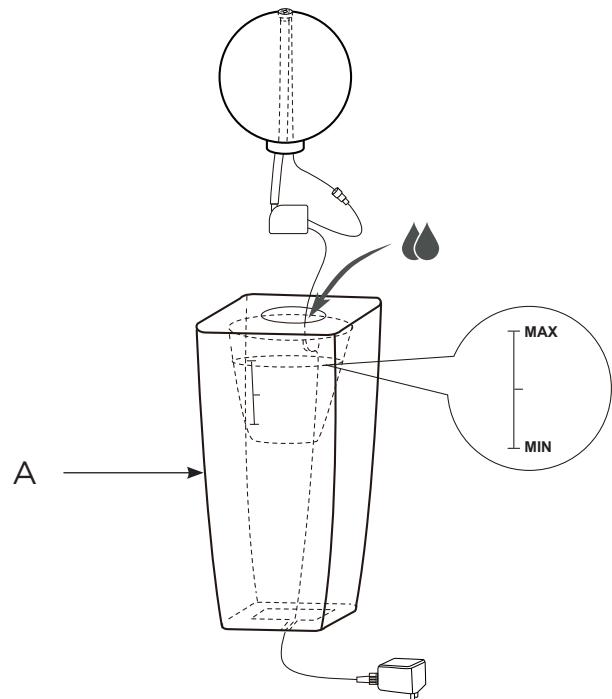

STEP 4 Place the fountain ball (B) on the pedestal (A), and place the stones (E) on the top of the pedestal. Plug the adapter (D) into a standard power socket on a wall.

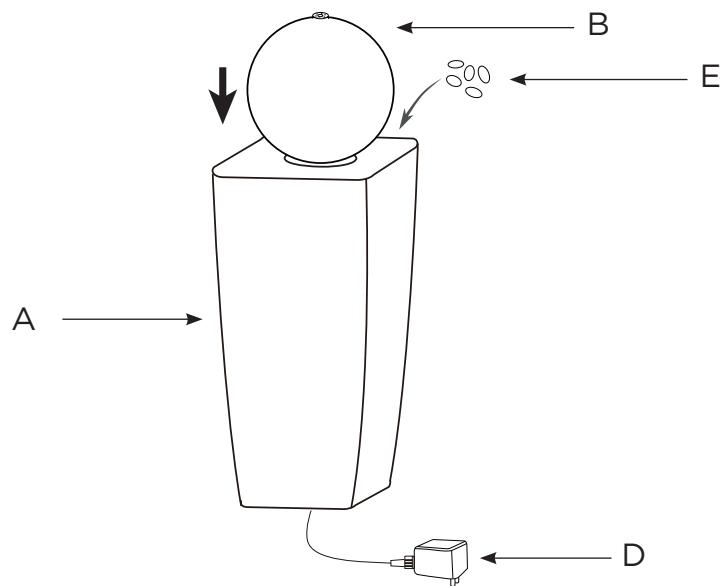

ASSEMBLY TROUBLESHOOTING



BEFORE RETURNING
YOUR PRODUCT

**HAVING TROUBLE?
LET US HELP YOU!**

**TOLL-FREE:
1-888-670-6684**

If you have questions regarding your product or require warranty assistance, please call our customer service helpline.



**CALL US,
WE CAN HELP**

CARING FOR YOUR ITEM

- 1** Always keep children under close supervision while they are using or around this product. Never leave children unattended.
- 2** This product is intended for domestic outdoor use only.
- 3** Do not light any fires below or near the product.
- 4** Check all nuts and bolts periodically for tightness. When required, tighten them again.
- 5** Do not shake, lean or climb on it. Always close and secure the product when not in use and in the event of inclement weather.

OFF SEASON: Clean and dry before storing in a dry, sheltered area.

WARRANTY INFORMATION



1-YEAR LIMITED WARRANTY*

This CANVAS™ product carries a one (1) year warranty against defects in workmanship and materials. Trileaf Distribution agrees to replace the defective product free of charge within the stated warranty period, when returned by the original purchaser with proof of purchase. This product is not guaranteed against wear or breakage due to misuse and/or abuse.

PRODUCT NO. 0597857

Made in China

Imported by Trileaf Distribution Trifeuil Toronto, Canada M4S 2B8

CANVASTM

INSPIRED BY CANADA

