


CANVAS^{TM/MC}

AUBREY INFINITY FOUNTAIN WITH LIGHT

PRODUCT NO. 059-7858-0

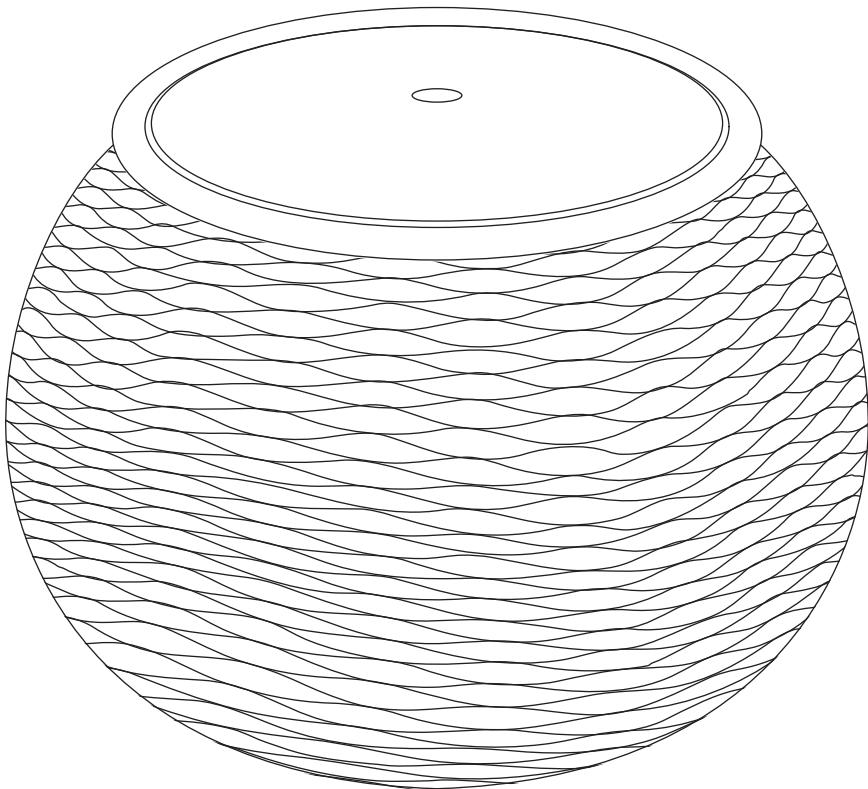

ASSEMBLY INSTRUCTIONS



HAVING TROUBLE?

TOLL-FREE:

1-888-670-6684

IMPORTANT: Please read this manual carefully before beginning assembly of this product. Keep this manual for future reference.



INSPIRED BY CANADA



We believe in the power of décor and its ability to make up the fabric of your home.

That's why **CANVAS™** collections draw **inspiration from Canadians and the way they live.**

From on-trend furniture pieces to holiday décor and all your outdoor living essentials, **CANVAS™** makes it easy to refresh your space to reflect **your unique style and the way you live every day.**

We would love to hear from you and welcome your thoughtful feedback. Visit our website at **canadiantire.ca** to tell us about your experience, and share your photos with us using **#myCANVASstyle**.

Show us how you bring **CANVAS™** products to life. We can't wait to see!

TABLE OF CONTENTS

Table of Contents	3
Instructions for Use	4
Troubleshooting	5
Caring for Your Item	6
Warranty	7



WARNING! TO REDUCE THE RISK OF SERIOUS INJURY,
READ THE FOLLOWING SAFETY INSTRUCTIONS BEFORE
ASSEMBLING AND USING THE PRODUCT.

 
 

- Please read and understand this manual before operating the product.
- Assembly and maintenance of the product must be carried out by adults only.
- Place base on a clean level area outside.
- Do not allow the pump to run dry.

WHAT YOU'LL NEED



1 person

PARTS LIST

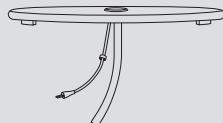ITEM	DESCRIPTION	THUMBNAIL	QUANTITY
A	Plug		1
B	Pump		1
C	Fountain cover		1
D	Fountain body		1

Pump information:

WARNING: Risk of Electric Shock, Install only to a covered Class A GFCI receptacle that has an enclosure that is weatherproof with the attachment plug cap inserted or removed. This power unit is intended to be correctly orientated in a vertical or floor mount position.

MODEL: JXA-12V300-IP44

INPUT : 120VAC 60Hz 0.28A

OUTPUT: 12V AC 0.3A



E474768 Rainproof





Date 10 20

US-CLASS 2 NOT WET CLASS 3 WET

CUL- CLASS 2 NOT WET CLASS 1 WET

CHANG ZHOU BAOJIN ELECTRIC Co., Ltd.

STEP-BY-STEP GUIDE

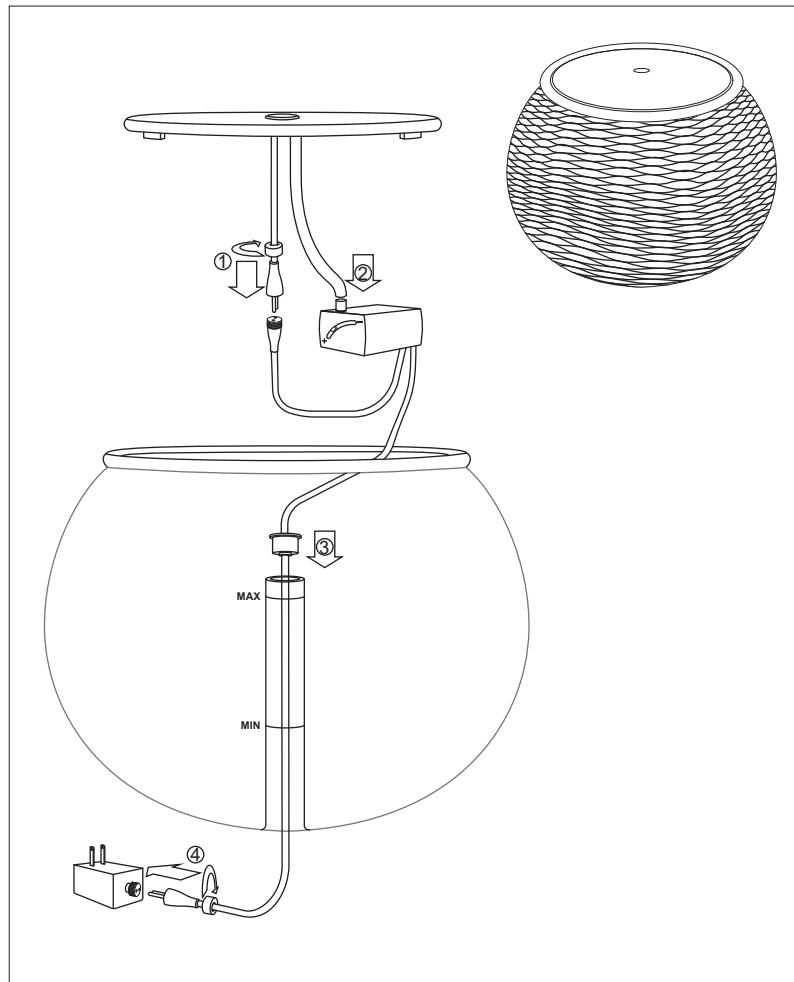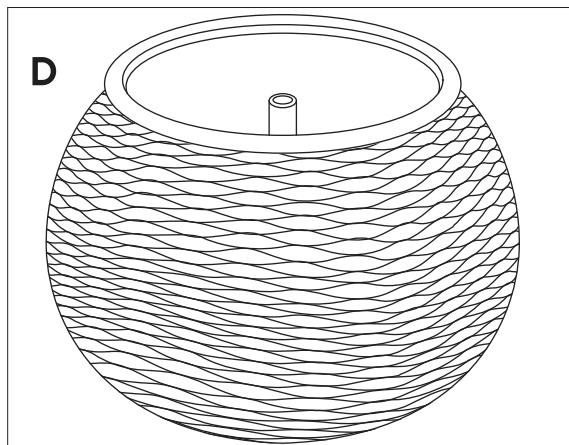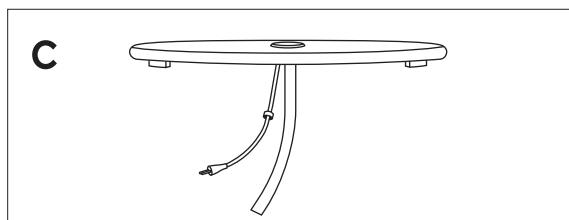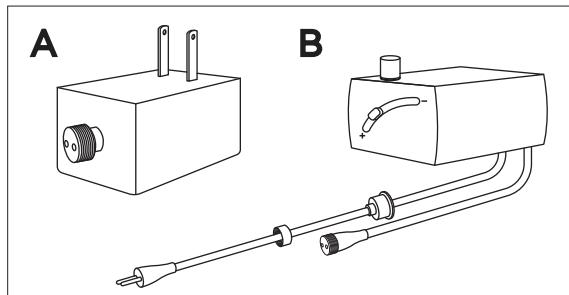

- 1 Connect the plug of the cover C with pump B and screw the cap to fix them.
- 2 Connect the tube of cover C with pump B.
- 3 Make the plug of pump B go through the tube of fountain body D. Plug the black cap of pump's electrical wire into the top of the tube inside the fountain body.
- 4 Connect the pump B with transformer A and screw the cap to fix them. Then fill the fountain with water. Make sure the water line is between MIN and MAX line. Replace fountain cover C and plug in power. Adjust the water flow control setting on the pump B as needed.

ASSEMBLY TROUBLESHOOTING



BEFORE RETURNING
YOUR PRODUCT

**HAVING TROUBLE?
LET US HELP YOU!**

TOLL-FREE:
1-888-670-6684

If you have questions regarding your product or require warranty assistance, please call our customer service helpline.



**CALL US,
WE CAN HELP**

PRODUCT TROUBLESHOOTING

PROBLEM

POSSIBLE CAUSES

SOLUTION

Fountain pump fails to operate.

Outlet has not power.
“Air locked”.

Check the circuit breaker and try another outlet. Plug and unplug the pump several times.

Fountain pump fails to operate.

The water level is too low.
The setting of flow was closed.

Make water higher than the MIN line.
Check the setting of the flow control on the pump.

Fountain is leaking after add water.

The water has exceeded the MAX line.

Keep water lower than MAX line.

Pump is running slowly.

The water/tube is not clean.

Keep fountain clean and change the water regularly.

CARING FOR YOUR ITEM

1 Verify water level frequently to compensate for evaporation during the summer.
Keep the water level between MIN and MAX line.

2 This fountain is designed to function with water only.

3 Never leave a running fountain unattended.

4 During Winter, this fountain must be stored indoors. Disconnect power supply, carefully empty fountain of all water, store indoors on water-resistant surface.

5 While this fountain is designed to operate as splash-free as possible, some water splashing out of the fountain is inevitable. Place your fountain in location where any splashing will not cause damage.

WARRANTY INFORMATION



1-YEAR LIMITED WARRANTY*

This CANVAS™ product carries a one (1) year warranty against defects in workmanship and materials. Trileaf Distribution agrees to replace the defective product free of charge within the stated warranty period, when returned by the original purchaser with proof of purchase. This product is not guaranteed against wear or breakage due to misuse and/or abuse.

PRODUCT NO. 059-7858-0

Made in China

Imported by Trileaf Distribution Trifeuil Toronto, Canada M4S 2B8

CANVASTM

INSPIRED BY CANADA

