
CANVAS

BATTEI - OPERATED LANTERN

Product No. 059-7873-2

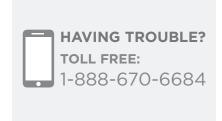

IMPORTANT: Please read this manual carefully before beginning assembly of this product. Keep this manual for future reference.

ASSEMBLY INSTRUCTIONS

FIRST-TIME USE:


REQUIRES 2 AA BATTERIES (NOT INCLUDED).

OPERATION:

Lift up the locking clasp on the front of the lantern. Open the top of the lantern to access the battery compartment. Lift up the battery cover to open. Insert 2 new batteries (AA, 1.5 V), noting the correct polarity for each. Close the battery cover. Move the switch to the ON position to turn on. Move the switch to the OFF position to turn off when not in use.


NOTE:

This product is intended for indoor or outdoor (covered) use only. For decorative use only. This is not a toy.

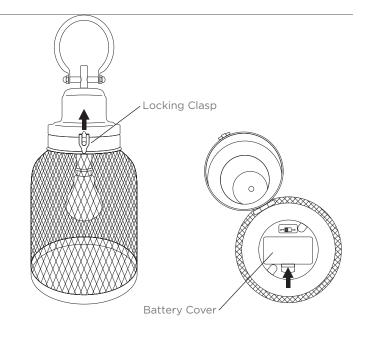

BATTERY REPLACEMENT

Move the switch to the OFF position. Lift up the battery cover to open. Insert 2 new batteries (AA, 1.5 V), noting the correct polarity for each. Re-assemble the unit by reversing the above procedure.

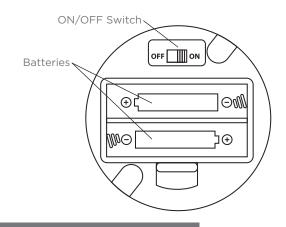

WARNING

Do not dispose of batteries in the regular trash, municipal waste stream or by fire as batteries may leak or explode. Do not open, short circuit, or mutilate batteries as injury may occur. Preserve our environment by recycling batteries or disposing of them in accordance with local, provincial, and federal regulations. Do not mix old and new batteries. Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel cadmium or nickel metal hydride) batteries. Do not ingest the batteries.

WARRANTY

This product carries a one (1) year warranty against defects in workmanship and materials. CANVAS® agrees to replace a defective product, within the stated warranty period, when returned to the place of purchase with proof of purchase. This product is not guaranteed against wear or breakage due to misuse and/or abuse.

Made in China

Imported by Trileaf Distribution Trifeuil Toronto, Canada M4S 2B8