




# YARDWORKS<sup>TM/MC</sup>

## Cordless Li-Ion Blower

model number 060-2392-0 | contact us: 1.866.523.5218



CERTIFIED TO CSA STD. C22.2 NO. 147  
CONFORMS TO UL STD.1017

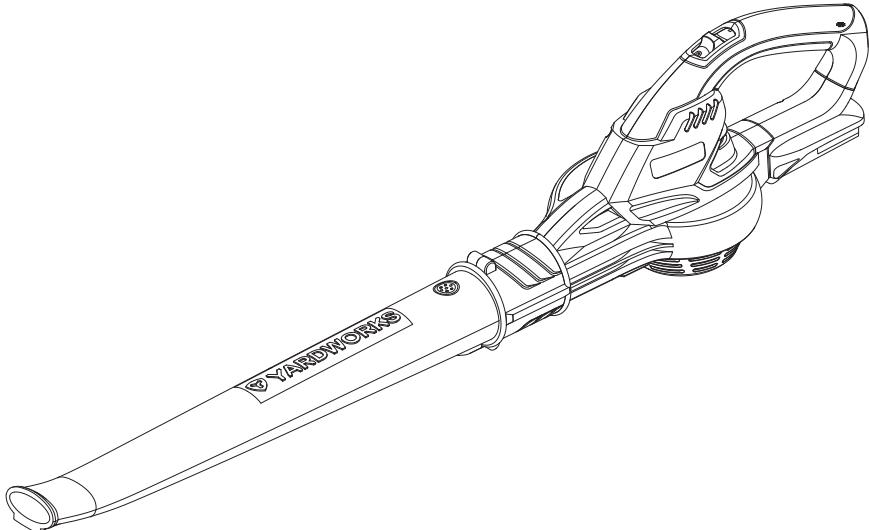

### **IMPORTANT:**

Read and follow all safety rules and operating instructions before using this product.

**Instruction  
Manual**

Technical Specifications	2
General Safety Rules	3
Know Your Blower	8
Accessories	8
Exploded View	9
Parts List	10
Assembly	11
Operating Instructions	13
Storage	16
Maintenance	16
Symbols	17
Warranty	18

## TECHNICAL SPECIFICATIONS

Rated voltage	20 V max*
No load speed	12500/min
Blow speed	120 MPH
Machine weight	3 lb 8 oz (1.6 kg)
Charger voltage	120 V AC, 60 Hz
Battery capacity	2.0 Ah Li-ion
Charging time	5—7 hr

\* Maximum battery voltage without workload.

model no. 060-2392-0 | contact us: 1.866.523.5218

**WARNING:** Some dust created by power sanding, sawing, grinding, drilling and other construction activities contains chemicals known to cause cancer, birth defects or other reproductive harm. Some examples of these chemicals are:

- Lead from lead-based paints;
- Crystalline silica from bricks and cement and other masonry products.
- Arsenic and chromium from chemically-treated lumber.

Your risk from these exposures varies, depending on how often you do this type of work. To reduce your exposure to these chemicals work in a well-ventilated area, and work with approved safety equipment, such as those dust masks that are specially designed to filter out microscopic particles.

**WARNING:** This product can expose you to chemicals including lead, phthalate or bisphenol A which are known to cause cancer, birth defects or other reproductive harm.

**Wash your hands after use.**

#### FOR ALL APPLIANCES

- Avoid dangerous environments — do not use appliances in damp or wet locations.
- Don't use in rain.
- Keep children away — all people and pets should be kept at a distance from the work area.
- Dress properly — do not wear loose clothing or jewellery. They can be caught in moving parts. Wear protective clothing; use of work gloves, long pants, a long sleeved shirt and safety footwear is recommended when working outdoors. Wear protective hair covering to contain long hair.
- Use safety glasses — always use face or dust mask if the area in which you are working is dusty.
- Use right appliance — do not use appliance for any job except that for which it is intended.
- Do not force appliance — it will do the job better and with less likelihood of a risk of injury at the rate for which it was designed.
- Do not overreach — keep proper footing and balance at all times.
- Stay alert. Use common sense. Do not operate appliance when you are tired or under the influence of drugs, alcohol or



**WARNING:** When using electric gardening appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and personal injury.



**WARNING:** Read all instructions.



**WARNING:** This product may contain lead, phthalates or other chemicals known to cause cancer, birth defects and other reproductive harm. Please wash your hands after use.

model no. 060-2392-0 | contact us: 1.866.523.5218

## General Safety Rules

- medication.
- When not in use, appliances should be stored indoors in places out of reach of children.
- Maintain appliance with care. Follow instructions for lubricating and changing accessories. Keep handles dry, clean, and free from oil and grease.
- Check damaged parts. Before using the appliance, make sure the safety guards are intact. Never use a tool without its safety guard. Check the alignment of the moving parts to prevent binding of moving parts. Check for broken or defective parts that can affect the safe operation of your tool. A guard or other part that is damaged should be properly repaired or replaced by an authorized service centre unless indicated elsewhere in this manual.
- For all battery-operated gardening appliances:
  - Do not charge appliance in rain or in wet locations.
  - Do not use battery-operated appliance in rain.
  - Remove or disconnect battery before servicing, cleaning or removing material from the gardening appliance.
- For all battery-operated products employing a detachable or separable battery:
  - Use only the following type and size battery(ies): 060-2346-2
  - Do not dispose of the battery(ies) in a fire. The cell may explode. Check with local codes for possible special disposal instructions.
  - Do not open or mutilate the battery(ies).

Released electrolyte is corrosive and may cause damage to the eyes or skin. It may be toxic if swallowed.

- Exercise care in handling batteries in order not to short the battery with conducting materials such as rings, bracelets, and keys. The battery or conductor may overheat and cause burns.
- Avoid unintentional starting – do not insert the battery with your finger on the switch. Be sure the switch is off when inserting the battery.

### ADDITIONAL SAFETY WARNINGS

#### IMPORTANT SAFETY INSTRUCTIONS

- When using an electrical appliance, basic precautions should always be followed, including the following:

#### READ ALL INSTRUCTIONS BEFORE USING THIS APPLIANCE

#### WARNING – TO REDUCE THE RISK OF FIRE, ELECTRIC SHOCK, OR INJURY:

- To reduce the risk of electric shock do not use on wet surfaces. Do not expose to rain. Store indoors.
- Do not allow to be used as a toy. Close attention is necessary when used by or near children.
- Use only as described in this manual. Use only manufacturer's recommended



**WARNING:** Read all safety warnings and instructions. Failure to follow the warnings and instructions may result in electric shock, fire and/or serious injury.

model no. 060-2392-0 | contact us: 1.866.523.5218

attachments.

- If appliance is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, return it to a service centre.
- Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts.
- Do not charge the unit outdoors.
- Use only the charger supplied by the manufacturer to recharge.
- Do not incinerate the appliance even if it is severely damaged. The batteries can explode in a fire.
- Do not put any object into openings. Do not use with any opening blocked; keep free of dust, lint, hair, and anything that may reduce airflow.
- Do not handle plug or appliance with wet hands.
- Do not leave appliance when plugged in. Unplug from outlet when not in use and before servicing.
- Turn off all controls before unplugging.
- Use extra care when cleaning on stairs.

#### SAFETY WARNINGS FOR BATTERY PACK

**WARNING:** Read all safety warnings and instructions. Failure to follow the warnings and instructions may result in electric shock, fire and/or serious injury.

Save all warnings and instructions for future reference.

- **WARNING:** Risk of fire and burns. Do not disassemble, heat above 100°C (212°F), or incinerate. Do not expose cells or

batteries to heat or fire. Avoid storage in direct sunlight.

- Dispose of used battery promptly. When disposing of secondary cells or batteries, keep cells or batteries of different electrochemical systems separate from each other.
- Keep battery out of reach of children and in original package until ready to use.
- Never put batteries in mouth. If swallowed, contact your physician or local poison control centre.
- **CAUTION** – The battery used in this device may present a risk of fire or chemical burn if mistreated. Replace battery with YARDWORKS only. Use of another battery may present a risk of fire or explosion.
- **WARNING:** Do not use a visibly damaged battery pack or appliance as applicable.
- **WARNING:** Do not modify or attempt to repair the appliance or the battery pack as applicable.
- **BATTERY MUST BE RECYCLED.**
- Do not short-circuit a cell or battery. Do not store cells or batteries haphazardly in a box or drawer where they may short-circuit each other or be short-circuited by conductive materials.
- Do not subject cells or batteries to mechanical shock.
- Keep cells and batteries clean and dry. Wipe the cell or battery terminals with a clean dry cloth if they become dirty.
- Do not maintain secondary cells and batteries on charge when not in use.
- Retain the original cell and battery literature for future reference.

**SAVE THESE INSTRUCTIONS!**

model no. 060-2392-0 | contact us: 1.866.523.5218

- Do not use any charger other than that specifically provided for use with the equipment. Secondary cells and batteries need to be charged before use. Always use the correct charger and refer to the manufacturer's instructions or equipment manual for proper charging instructions.
- When possible, remove the battery from the equipment when not in use.
- Prevent unintentional starting. Ensure the switch is in the off-position before connecting to battery pack, picking up or carrying the appliance. Carrying the appliance with your finger on the switch or energizing appliance that have the switch on invites accidents.
- Disconnect the battery pack from the appliance before making any adjustments, changing accessories, or storing appliance. Such preventive safety measures reduce the risk of starting the appliance accidentally.
- Under abusive conditions, liquid may be ejected from the battery; avoid contact. If contact accidentally occurs, flush with water. If liquid contacts eyes, additionally seek medical help. Liquid ejected from the battery may cause irritation or burns.
- Have servicing performed by a qualified repair person using only identical replacement parts. This will ensure that the safety of the product is maintained.

#### GENERAL SAFETY WARNINGS FOR BATTERY CHARGER

#### INFORMATION FOR RADIATED EMISSION

This device complies with Canadian ICES-001.

This device complies with Part 15 of the FCC Rules.

Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

**WARNING:** Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

**NOTE:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy. If not installed and used in accordance with the instructions, it may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the



model no. 060-2392-0 | contact us: 1.866.523.5218


interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

model no. 060-2392-0 | contact us: 1.866.523.5218

1. Handle
2. On/Off Switch
3. Tube Release Button
4. Blower Tube


\*Not all the accessories illustrated or described are included in standard delivery.

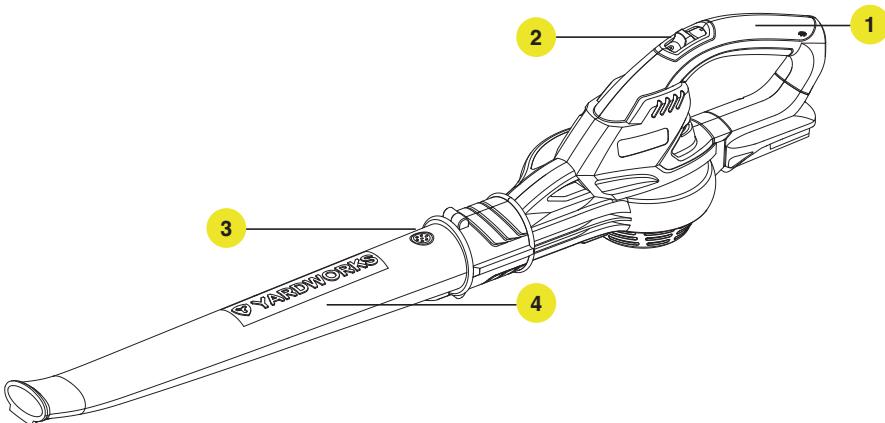

We recommend that you purchase your accessories from the same store that sold you the tool. Choose the type according to the work you intend to undertake. Refer to the accessory packaging for further details. Store personnel can assist you and offer advice.

model no. 060-2392-0 | contact us: 1.866.523.5218

## Exploded View

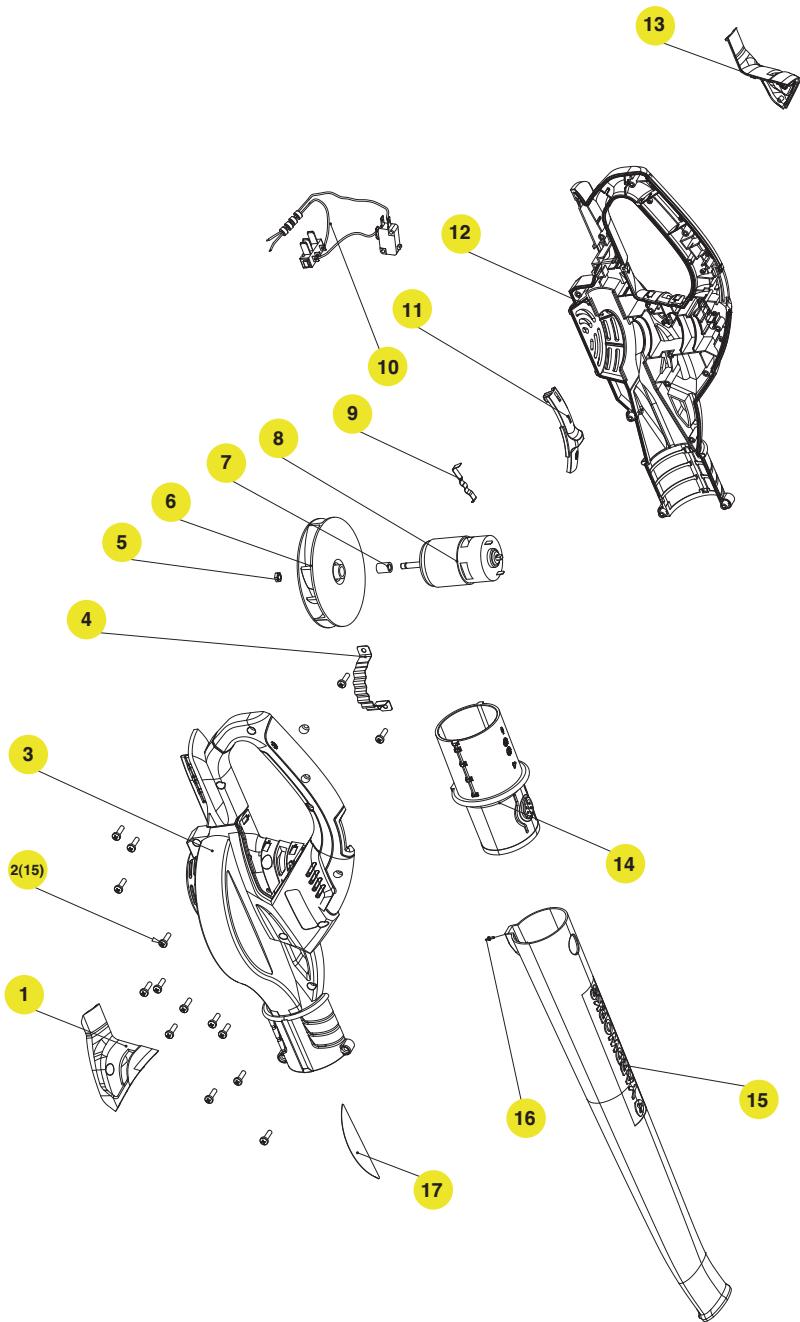

model no. 060-2392-0 | contact us: 1.866.523.5218

## Parts List


Item	Description	QTY.
1	Right Ornament Cover	1
2	Self-tapping Screw 194 3P9X16	15
3	Right Housing	1
4	Clamp	1
5	Nut LH	1
6	Fan	1
7	Connect Sheath	1
8	AC Motor	1
9	Spring Plate	1
10	Switch Assembly	1
11	Push Button	1
12	Left Housing	1
13	Left Ornament Cover	1
14	Blower Tube I	1
15	Blower Tube II	1
16	Screw ST2.9x10	1
17	Label	1

model no. 060-2392-0 | contact us: 1.866.523.5218


#### ASSEMBLING THE BLOWER TUBE (Fig. A1, Fig. A2, and Fig. A3)

Before assembling the blower tube (4), be sure the on/off switch (2) is in "O" Off position.


Fit the blower tube to the motor housing as shown in Fig. A1. Fix the blower tube to the blower port with the screw provided (Fig. A2). Check the blower tube is firmly secured (Fig. A3).

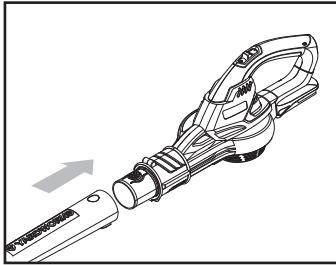

A1

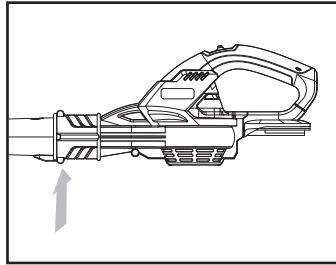

A2

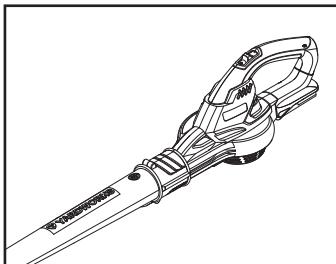

A3




**WARNING: Do not attempt to operate or disable the On/Off switch by any means other than the normal assembly or removal of the tube.**

model no. 060-2392-0 | contact us: 1.866.523.5218

#### DISASSEMBLING THE BLOWER TUBE

**NOTE:** Before disassembling the blower tube, be sure the on/off switch (2) is in "O" Off position.  
Loosen the screw. Press the release button (3), so that you can separate the tube (Fig. A4).  
Do not try to separate the tubes by force or by using tools.

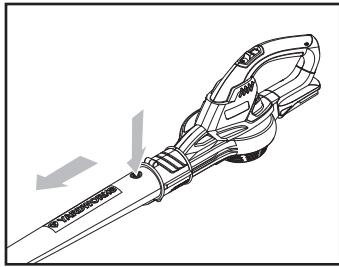

A4



model no. 060-2392-0 | contact us: 1.866.523.5218

## 1. BEFORE USING YOUR CORDLESS BLOWER

Your battery pack is UNCHARGED and you must charge once before use.

## 2. CHARGING YOUR BATTERY PACK

The Li-ion battery is protected against deep discharging. When the battery is empty, the machine is switched off by means of a protective circuit: the machine will stop running. In a warm environment or after heavy use, the battery pack may become too hot to permit charging. Allow time for the battery to cool down before recharging.

Please charge the battery to reach full or no less than half charge before storage. If the tool will not be used for long periods of time, charge the battery every 3–6 months.

- 1) Plug the charger into an appropriate outlet.
- 2) Place the battery pack into the charger.
- 3) When charging is completed, unplug the charger and remove the battery pack.



**WARNING!** The charger and battery pack are specially designed to work together so do not attempt to use any other devices. Never insert or allow metallic objects into your charger or battery pack connections because an electrical failure and hazard will occur.



**WARNING:** When battery charge runs out after continuous use or exposure to direct sunlight or heat, allow time for the battery to cool down before re-charging to achieve the full charge.

model no. 060-2392-0 | contact us: 1.866.523.5218

**3. TO REMOVE OR INSTALL BATTERY PACK (See Fig. B)**


Depress the battery release button (6) to release battery pack from your tool. After recharging, insert the battery pack into tool's battery port. A simple push and slight pressure will be sufficient.

**4. STARTING/STOPPING (See Fig. C)****Starting**


Move the On/Off switch (2) to the "I" On position.

**Stopping**

Move the On/Off switch (2) to the "O" Off position.

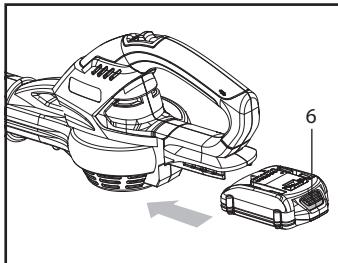

B

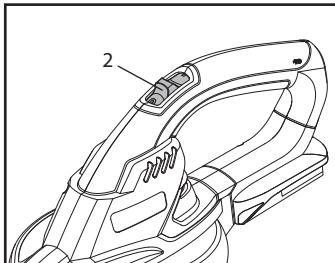

C



**WARNING!** The tool runs for a few seconds after it has been switched off. Let the motor come to a complete standstill before setting the tool down.


model no. 060-2392-0 | contact us: 1.866.523.5218

### 5. USING THE BLOWER (See Fig. D)

The blower is intended for residential use only. Use the blower outdoors to move debris from hard surfaces. This blower is not designed to clear leaves from large grassy areas, or move wet, heavy debris.

#### USER TIPS

- Hold the blow tube approx 7" (17.8 cm) above the ground when operating the tool. Use a sweeping motion from side to side. Advance slowly keeping the accumulated debris/leaves in front of you.
- After blowing the debris/leaves into a pile, it is easy to dispose of the pile.

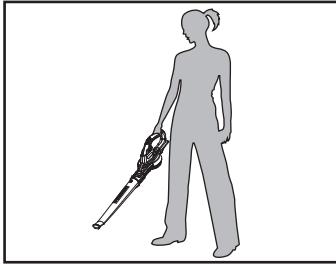

D



#### CAUTION!

- Do not blow hard objects such as nails, bolts, or rocks.
- Use extra care when cleaning debris from stairs or other tight areas.
- Wear safety goggles or other suitable eye protection, long pants, and shoes.



**WARNING: Store the blower indoors, in a cool dry location, out of reach of children and animals.**

Clean the tool regularly.



**WARNING: Always remove or disconnect battery pack before adjusting, cleaning, servicing or transporting the blower vacuum.**



**WARNING:**  
Keep your product dry. Under no circumstances spray with water.  
To clean the tool, use only mild soap and a damp cloth.



**WARNING:**  
Do not use any type of detergent, cleaner or solvent which may contain chemicals that could seriously damage the plastic. Self lubricating bearings are used in your product, therefore lubrication is not required.



model no. 060-2392-0 | contact us: 1.866.523.5218

## Symbols

Symbol	Name	Designation/Explanation
V	Volts	Voltage
A	Amperes	Current
Hz	Hertz	Frequency (cycles per second)
W	Watts	Power
min	Minutes	Time
~	Alternating Current	Type of current
—	Direct Current	Type of current
	Class II Construction	Double-insulated construction
/min	Per Minute	Revolutions, strokes, surface speed, orbits etc., per minute.
	Read The Operator's Manual	To reduce the risk of injury, user must read instruction manual.
	Ear Protection	Wear ear protection.
	Operation condition	Do not expose to rain.
	Li-ion Battery	Lithium-ion. Separate collection: battery must be recycled.

**SAVE THESE INSTRUCTIONS!**

model no. 060-2392-0 | contact us: 1.866.523.5218

## TWO-YEAR LIMITED WARRANTY

For Two (2) Years from the date of purchase within Canada, YARDWORKS CANADA will, at its option, repair or replace for the original purchaser, free of charge, any part or parts found to be defective in material or workmanship.

### THIS WARRANTY DOES NOT COVER

1. Any part that has become inoperative due to misuse, commercial use, abuse, neglect, accident, improper maintenance, or alteration;
2. The unit, if it has not been operated and/or maintained in accordance with the owner's manual;
3. Normal wear, except as noted below;
4. Routine maintenance items such as lubricants, blade sharpening; or
5. Normal deterioration of the exterior finish due to use or exposure.

## FULL ONE HUNDRED TWENTY (120) DAYS WARRANTY ON NORMAL WEAR PARTS

Normal wear parts are defined as blade adaptors, blades, grass bags and tires. These parts are warranted to the original purchaser to be free from defects in material and workmanship for a period of one hundred twenty (120) days from the date of retail purchase.

## HOW TO OBTAIN SERVICE

Warranty service is available by calling the toll-free helpline, at 1.866.523.5218. The factory will not accept the return of a complete unit unless prior written permission has been extended by YARDWORKS CANADA.

## TRANSPORTATION CHARGES

Transportation charges for the movement of any power equipment unit or attachment are the responsibility of the purchaser. The purchaser must pay transportation charges for any part submitted for replacement under this warranty unless such return is requested in writing by YARDWORKS CANADA.

## OTHER WARRANTIES

All other warranties, express or implied, including any implied warranty of merchantability is limited in its duration to that set forth in this express limited warranty. The provisions as set forth in this warranty provide the sole and exclusive remedy of YARDWORKS CANADA obligations arising from the sale of its products.



**Always remove or disconnect the battery pack before adjusting, cleaning, servicing or transporting the blower.**



Made in China. Imported by Yardworks Canada  
Toronto, Canada M4S 2B8