


model no. 068-1226-8

Mastercraft®/MD

WALL CABINET

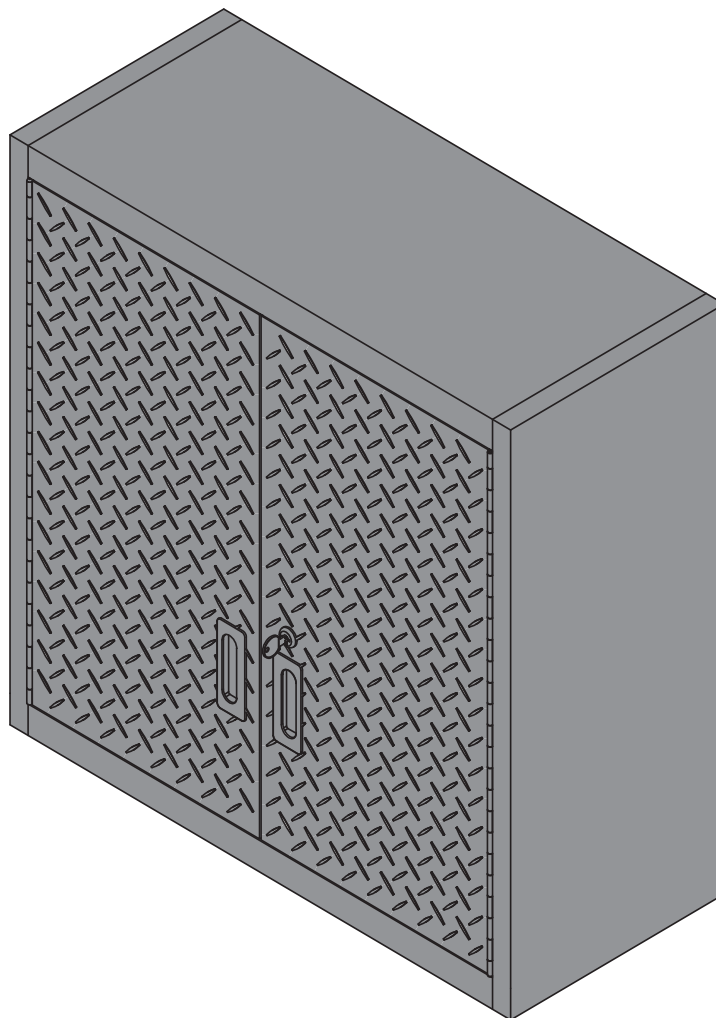

IMPORTANT:

Please read this manual carefully before installing this cabinet and save it for reference period.

**INSTRUCTION
MANUAL**

 


TABLE OF CONTENTS	3
SAFETY GUIDELINES	4
PARTS LIST	5
ASSEMBLY INSTRUCTIONS	6
MASTERCRAFT LINE	10
WARRANTY	11

TABLE OF CONTENTS

Safety guidelines

This manual contains information that relates to PROTECTING PERSONAL SAFETY and PREVENTING EQUIPMENT PROBLEMS. It is very important to read this manual carefully and understand it thoroughly before using the product. The symbols listed below are used to indicate this information.



CAUTION!

Potential hazard that may result in moderate injury or damage to equipment.

Note-The word “Note” is used to inform the reader of something the user needs to know about the tool.

SAFETY RECOMMENDATIONS

These precautions are intended for the personal safety of the user and others working with the user. Failure to follow these instructions may result in a permanent loss of vision, serious personal or even fatal injury, property damage and/or tool damage. Please take time to read and understand them.



CAUTION!

Potential hazard that may result in moderate injury or damage to equipment.

- The cabinet should be positioned on a level surface.
- This cabinet is intended for indoor use only.
- Check all nuts and bolts periodically and tighten them if required.
- Use a slightly damp, soft cloth to clean the cabinet.
- Do not stand on the cabinet and do not use it as scsffold.
- Do not exceed the weight limit specified for this cabinet.
- Any assembly or maintenance of the cabinet must be carried out by adults only.
- Do not assemble or move the cabinet without necessary manpower.
- Do not exceed the following weight limits for this product.

Maximum middle shelves load: 130 lb (59 kg).


Maximum bottom panel load: 140 lb (64 kg).

Maximum cabinet load: 400 lb (182 kg).

PARTS LIST

No.	Description	Qty.
1	Bottom panel	1
2	Left panel	1
3	Right panel	1
4	Lower back panel	1
5	Upper back panel	1
6	Top panel	1
7	Middle shelf	2

No.	Description	Qty.
8	Left door	1
9	Right door	1
10	Wall-hanging bracket	2
11	M4 x 8 screw	36
12	M4 x 8 screw	10
13	M6 x 60 screw	8
14	Wall plug	8
15	Magnet	2
16	Hook	8
17	Screwdriver	1
18	Key	2

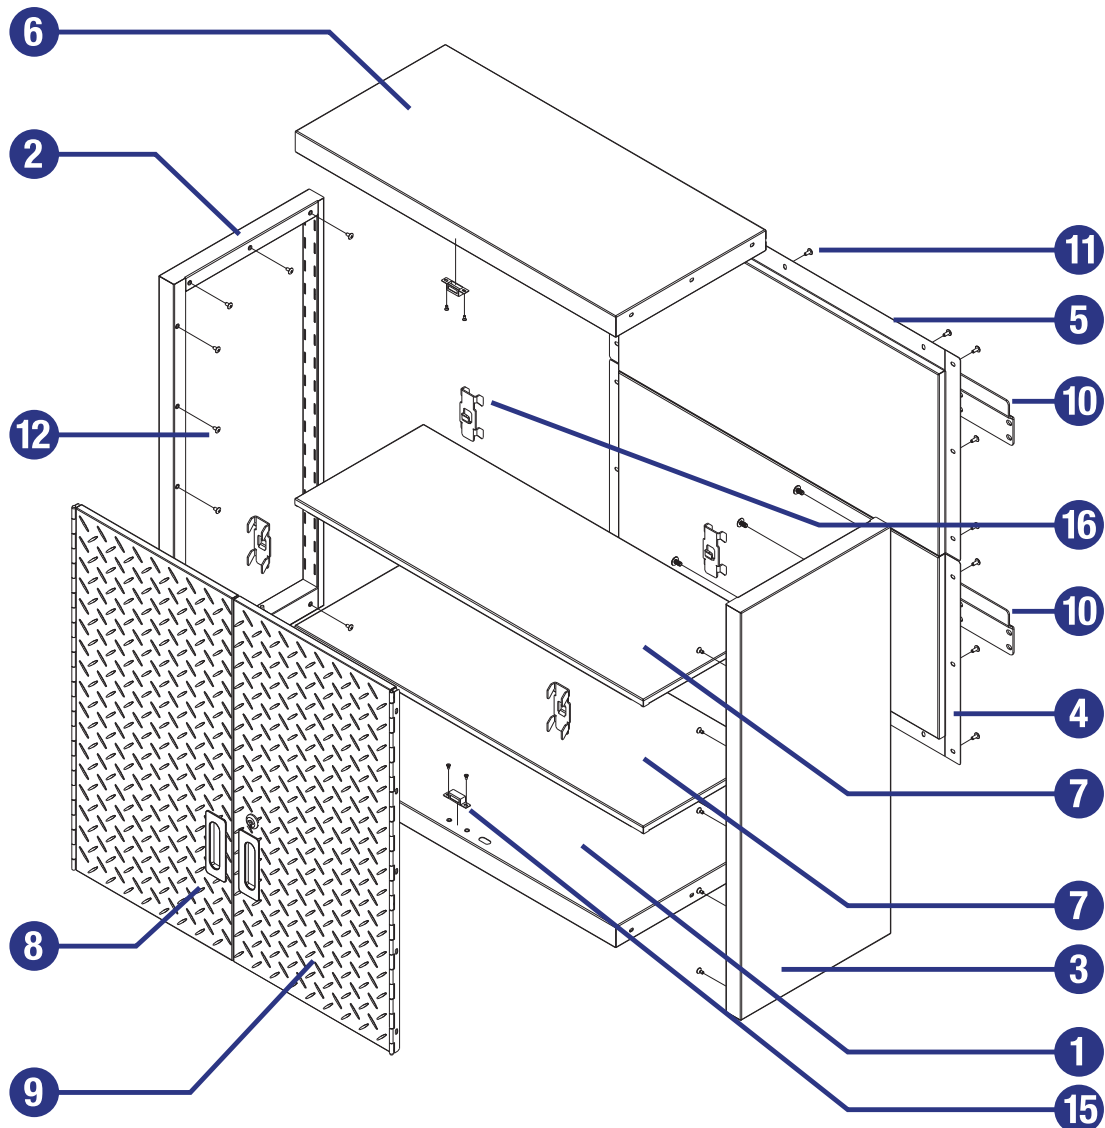


PARTS LIST

Assembly preparation


- Assemble the cabinet on a clean, level surface.
- Remove all items from the packaging box and ensure that all parts listed on pages 5 are available.
- When installing parts that have more than one screw, tighten all screws by hand before tightening them with the screwdriver provided.

Assembly instructions


1. Place the right panel (3) to the right side of the top panel (6). Line up screw holes of both the panels. Insert three M4 X 8 screws (11) into the screw holes and tighten them using the screwdriver (17) (see Fig A).

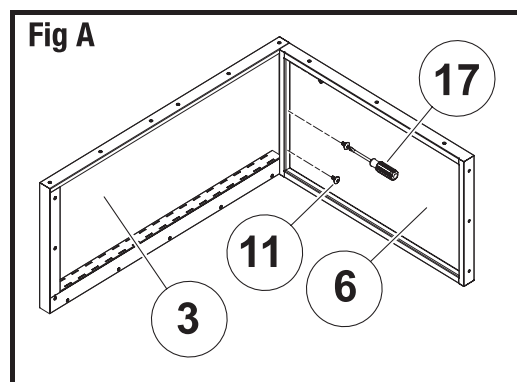

2. Place the left panel (2) to the left side of the top panel (6). Line up the screw holes of both the panels. Insert three M4 X 8 screws (11) into the screw holes and tighten them using the screwdriver (see Fig B).

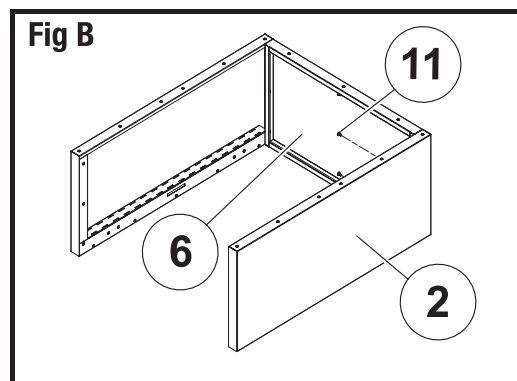


3. Attach the bottom panel (1) between the left panel (2) and the right panel (3). Line up the screw holes of all the panels. Insert three M4 X 8 screws (11) into the screw holes on each side of the bottom panel and tighten them using the screwdriver. Cabinet frame is assembled (see Fig C).

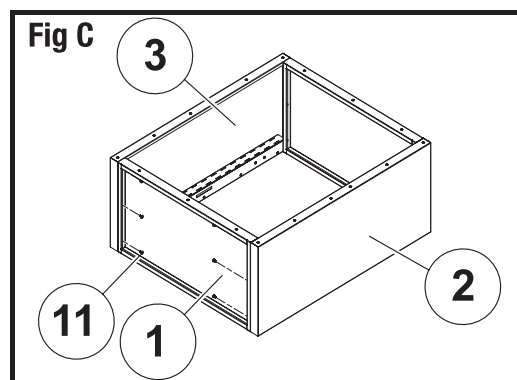


4. Place the lower back panel (4) and the upper back panel (5) onto the cabinet frame. Line up the screw holes of all the panels. Insert 20 M4 X 8 screws (11) into the screw holes and tighten them using the screwdriver (see Fig D).

Fig D

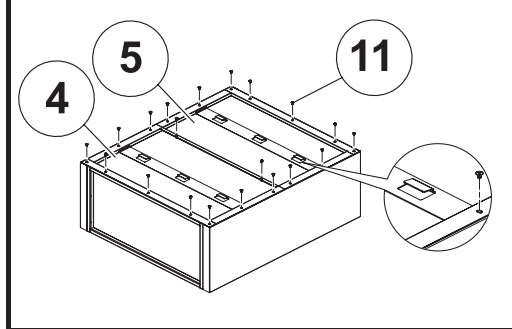

5. Place the cabinet frame in an upright position. Attach one of two magnets (15) to the top panel (6) and another magnet to the bottom panel (1) by screwing two M4 x 8 screws (11) into each magnet (see Fig E).

Fig E

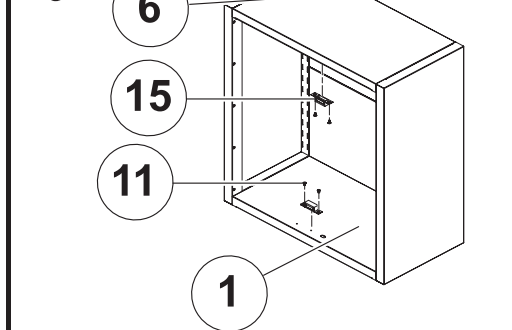


Note: The black plate of the Magnet should be facing the front.

Note: Decide the height for the middle shelf.

6. Insert four hooks (16) into the hook slots provided at side ends of the cabinet frame at the decided height. Then, place the middle shelf (7) into the cabinet frame and push it down onto the hooks to lock it. Follow the same procedure for attaching the other middle shelf into the cabinet frame (see Fig F).

Fig F

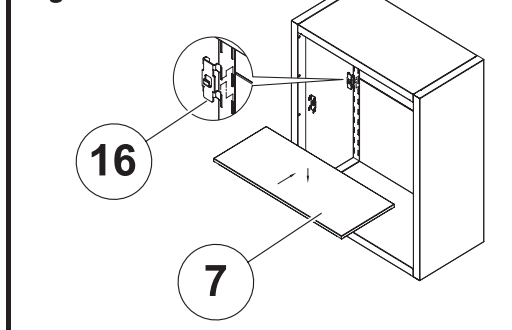


Note: When placing the hooks, make sure they are at the same height.

ASSEMBLY INSTRUCTIONS


7. Attach the left door (8) to the left side of the cabinet frame by securing it with five M4 x 8 screws (12) (see Fig G).

Fig G

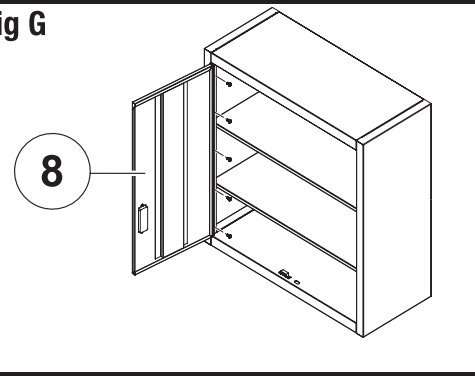


8. Attach the right door (9) to the right side of the cabinet frame by securing it with five M4 x 8 screws (12) (see Fig H).

Fig H

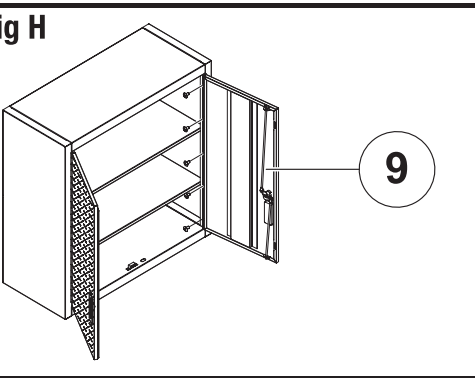

9. The cabinet is ready to be mounted on the wall (see Fig I).


Fig I

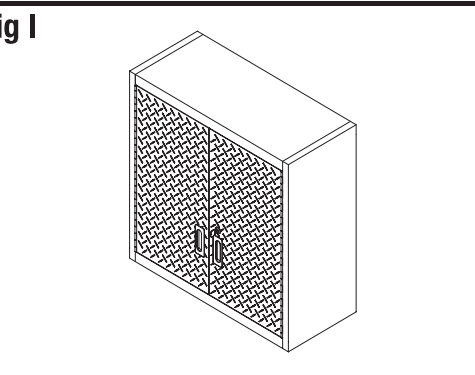**NOTE:****FINGERPRINT RESISTANT SURFACES AND INCREASED DURABILITY****Stainless Steel Maintenance:**


A fingerprint-resistant finish has been applied to these parts. Do not use traditional stainless steel cleaners on this unit. Lightly wipe off once a month with clean warm water and a soft cloth (preferably a micro fibre cloth). This is the safest formula to prevent new stains from appearing over time and manage unwanted fingerprints or grease marks. Remember to always wipe in the direction of the surface grain (NEVER ACROSS) and always use a lint-free cloth. Once the surface is clean, thoroughly wipe dry with a soft absorbent cloth.

Wall mounting


1. Choose a location for mounting the cabinet on the wall. The recommended height from the floor to the bottom of the cabinet is 63" (160 cm) (see Fig J).

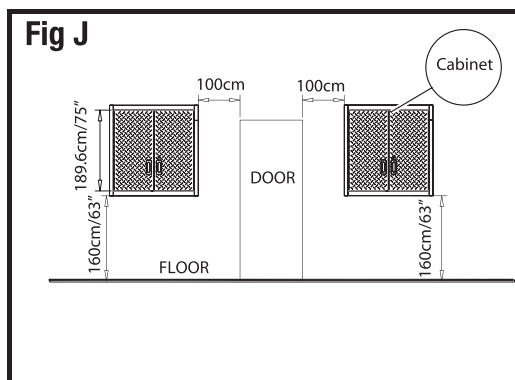

2. To place the wall-hanging brackets (10) at the chosen location, mark the screw locations provided at the ends of the wall-hanging brackets using a pencil. The distance between marked screw locations should be 16" (40.6 cm) apart. Drill a small hole with a diameter of 1/8" (3 mm) at the marked screw locations (see Fig K).

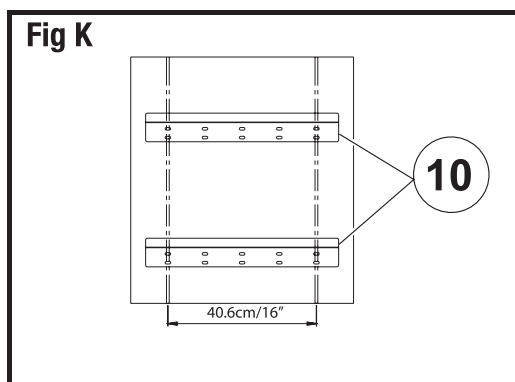


3. Insert the wall plugs into the holes drilled into the wall. Then, attach the wall-hanging brackets (10) to the wall by securing four M6 x 60 screws (13) for each wall-hanging bracket. Hang the cabinet on the wall-hanging brackets. (see Fig L).

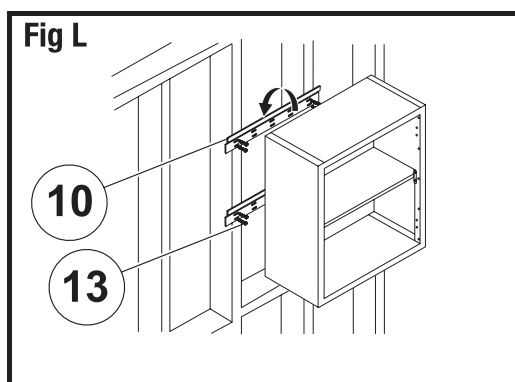


4. The cabinet is ready to be used. Use the keys to lock the doors of the cabinet, if desired.


MASTERCRAFT LINE

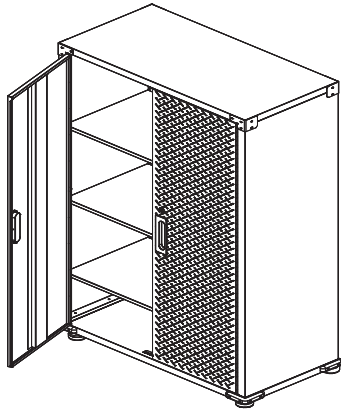


Model no. 068-0667-4
MC TALL STORAGE CABINET

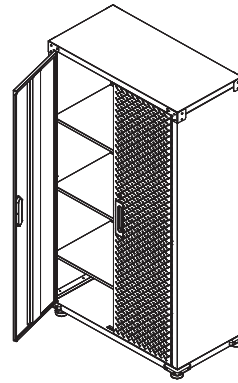


Model no. 068-0003-4
TALL CABINET

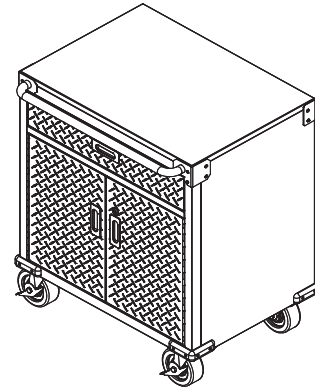


Model no. 068-0558-4
MC BASE CABINET

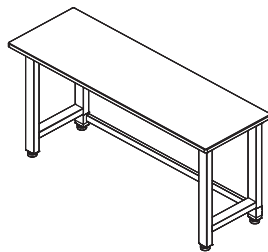


Model no. 068-6099-0
MC WORKBENCH

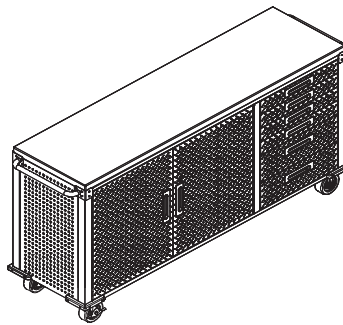


Model no. 068-7305-4
MC ROLLING CABINET

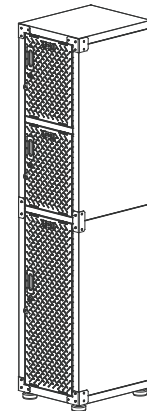


Model no. 068-0007-6
3-TIER LOCKER

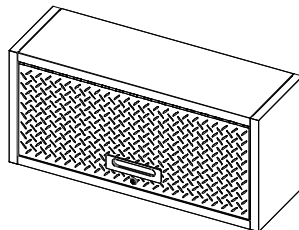

Model no. 068-7306-2
MC 36" WALL CABINET

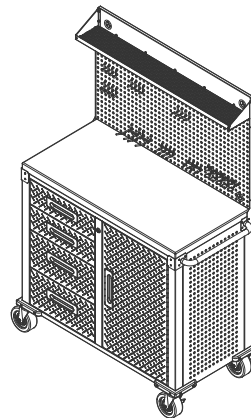

Model no. 068-0002-6
BUTCHER BLOCK TOP WORK CENTRE

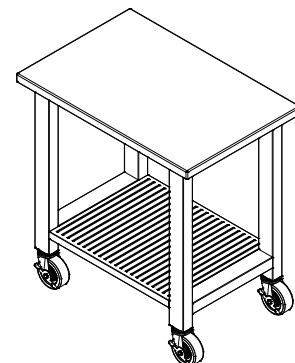

Model no. 399-1300-2
MOBILE WORKTABLE

This Mastercraft product is guaranteed for a period of one (1) year from the date of original retail purchase, against defects in materials and workmanship. Subject to the conditions and limitations described below, this product, if returned to us with proof of purchase within the stated warranty period and if covered under this warranty, will be repaired or replaced (with the same model, or one of equal value or specification), at our option. We will bear the cost of any repair or replacement and any costs of labour relating thereto.

These warranties are subject to the following conditions and limitations

- a. a bill of sale verifying the purchase and purchase date must be provided;
- b. this warranty will not apply to any product or part thereof which is worn or broken or which has become inoperative due to abuse, misuse, accidental damage, neglect or lack of proper installation, operation or maintenance (as outlined in the applicable owner's manual or operating instructions) or which is being used for industrial, professional, commercial or rental purposes;
- c. this warranty will not apply to normal wear and tear or to expendable parts or accessories that may be supplied with the product which are expected to become inoperative or unusable after a reasonable period of use;
- d. this warranty will not apply to routine maintenance and consumable items such as, but not limited to, fuel, lubricants, vacuum bags, blades, belts, sandpaper, bits, fluids, tune-ups or adjustments;
- e. this warranty will not apply where damage is caused by repairs made or attempted by others (i.e. persons not authorized by the manufacturer);
- f. this warranty will not apply to any product that was sold to the original purchaser as a reconditioned or refurbished product (unless otherwise specified in writing);
- g. this warranty will not apply to any product or part thereof if any part from another manufacturer is installed therein or any repairs or alterations have been made or attempted by unauthorized persons;
- h. this warranty will not apply to normal deterioration of the exterior finish, such as, but not limited to, scratches, dents, paint chips, or to any corrosion or discolouring by heat, abrasive and chemical cleaners; and
- i. this warranty will not apply to component parts sold by and identified as the product of another company, which shall be covered under the product manufacturer's warranty, if any.

Additional Limitations

This warranty applies only to the original purchaser and may not be transferred. Neither the retailer nor the manufacturer shall be liable for any other expense, loss or damage, including, without limitation, any indirect, incidental, consequential or exemplary damages arising in connection with the sale, use or inability to use this product.

Notice to Consumer

This warranty gives you specific legal rights, and you may have other rights, which may vary from province to province. The provisions contained in this warranty are not intended to limit, modify, take away from, disclaim or exclude any statutory warranties set forth in any applicable provincial or federal legislation.

Made in China

Imported by
Mastercraft Canada Toronto, Canada M4S 2B8