

Step 1: Hold the knife handle with one hand

Step 2: When the thumb and forefinger hold down the symmetrical button on the front of the handle and push back, the blade will be fully released

Step 3: With the other hand, adjust the Angle of the blade to complete the opening or folding