



EASY UP® SCREEN HOUSE 17 x 15' (5.2 x 4.6 m)

STITCH LINE

076-3243-4

Before you begin


Read all instructions thoroughly before beginning setup.

- Select a level site clear of rocks, branches, and other hard or sharp objects, to set up your shelter.


WARNING: Keep clear of overhead power lines.

- Do not set up your shelter under trees because of potential lightning strikes or falling tree limbs in inclement weather.
- For best results in windy conditions, position narrow end of shelter into the wind.
- Secure with all stakes and guylines provided to prevent property damage or personal injury.
- Two people can easily set up this shelter in 60 seconds or less.

Parts List:

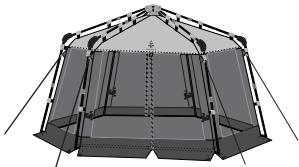

A (1) Integrated Frame with Shelter Body

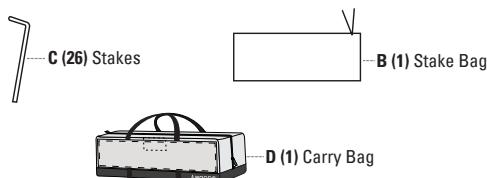

C (26) Stakes
B (1) Stake Bag




D (1) Carry Bag

Setup Instructions:

1 Extend Screen House Frame

CAUTION: Avoid pinch points when opening or closing the shelter frame.

- Unfold and spread out screen house.


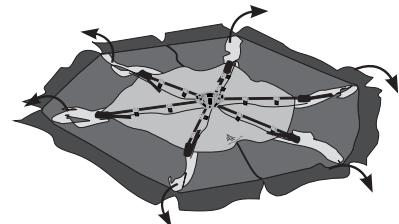


2 Lift Steel Roof Poles & Hub Assembly

- Lift up on the STEEL ROOF POLE above the ARM JOINT while pushing downward on the STEEL LEG POLE. (Detail 1)


NOTE: This will allow the HUB ASSEMBLY and centre of the screen house to begin to lift properly.

- Repeat for remaining 5 STEEL ROOF POLE locations.

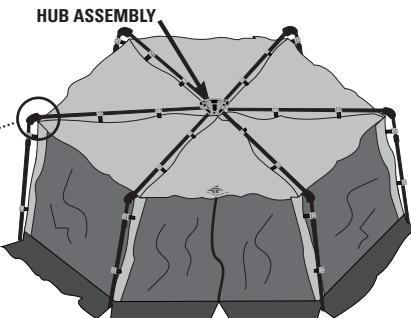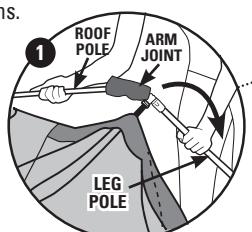

3 Lift and Telescope Steel Leg Poles

- Grasp and extend TELESCOPING STEEL LEG POLE until the silver LOCKING BUTTON "clicks" into locked position.
- Repeat above steps for remaining LEG POLES.

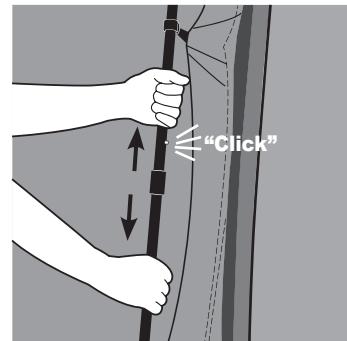

To Secure Screen House:

Stake Screen House

- Locate WEBBING LOOPS sewn into the corners at the base of the screen house. (Detail 2)
- Slide STAKE through WEBBING LOOP at each location; then gently extend out before securing. (Detail 2)


NOTE: Shelter should be taut when staked properly.

Secure Guylines

- Locate GUYLINES attached to the shelter and unroll.
- Slide STAKE through loop at each location, extend out and drive in to secure. (Detail 3)

NOTE: Six corner GUYLINES should extend out at a 45° angle from shelter.

- Tighten GUYLINES as needed by adjusting the SLIDER up the cord.

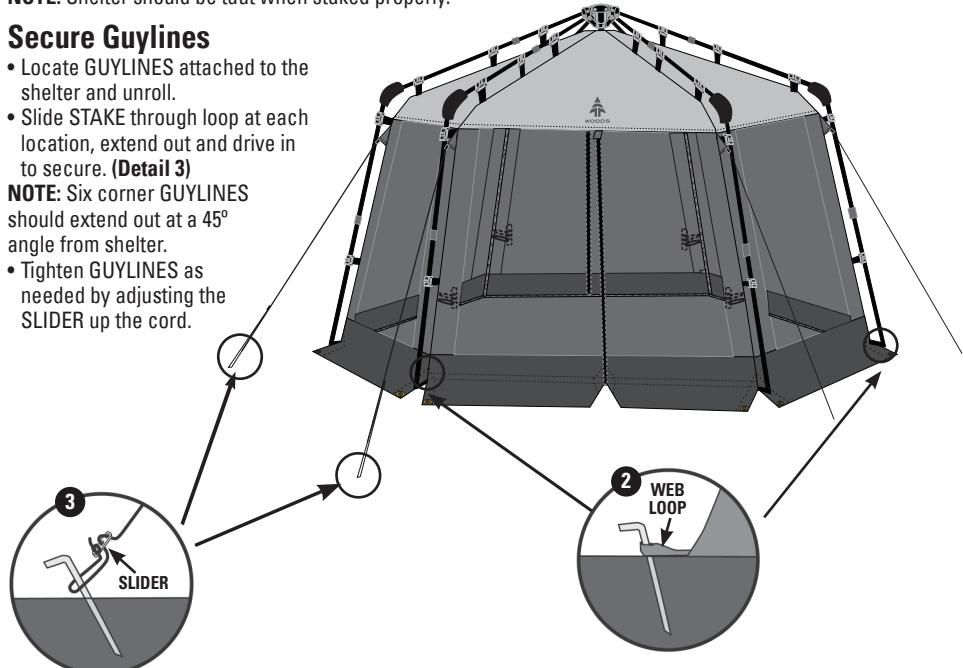

(See other side for proper Take Down Instructions)

Front & Rear Opening Options

- By using the convenient front and rear zippered door panels you have three opening options: both panels closed to help keep insects out; front or back panel unzipped and tied back; or both front & rear panel unzipped and tied back.




Take Down & Storage Instructions:

To Take Down Screen House

Follow the previous steps and illustrations on the front of the tag in the reverse order:

- Remember to push the silver LOCKING BUTTONS and telescope the STEEL LEG POLES. (Fig. 8)
- Push down on the ARM JOINTS while rotating the STEEL LEG POLES up to flatten the shelter. (Fig. 9 & 10)
- Fold up shelter as shown. (Fig. 11 & 12)
- Lay the shelter down on its side and roll out the excess air and put back into the bag.

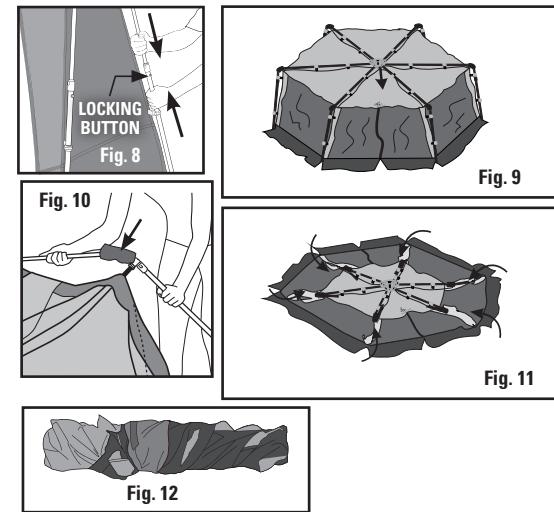

Storing the Screen House

- Remove guylines and stakes and place in their storage bag.
- All stakes must be placed in their own storage bag before placing in shelter carrying case to prevent damage to the shelter fabric.
- Store in a clean, dry area.



IMPORTANT:

THE ORIGINAL FIRE RETARDANT AND WATER REPELLENT PROTECTIVE COATINGS MAY BE COMPROMISED IF SPRAYS OR OTHER CHEMICAL TREATMENTS ARE USED ON THE SCREEN HOUSE. FABRIC HAS BEEN FACTORY TREATED. IT IS HIGHLY WATER-REPELLANT; HOWEVER, IT IS NOT WATERPROOF. ALL TENTS CAN EXPERIENCE SEAM LEAKAGE DURING WET WEATHER. IF YOU WANT ADDITIONAL MOISTURE PROTECTION, TRY A SEAM SEALING COMPOUND ONLY; STRICTLY FOLLOW THE MANUFACTURER'S DIRECTIONS. IT IS RECOMMENDED THAT YOU SEAL THE SCREEN HOUSE DURING THE INITIAL SETUP AS WELL AS PRIOR TO EACH CAMPING SEASON. SEAM SEALER COMPOUNDS CAN BE PURCHASED AT YOUR LOCAL CAMPING PRODUCTS OUTLET. FOR MISSING PARTS CALL 1-855-966-3785.

PLEASE DO NOT RETURN THIS PRODUCT TO THE RETAIL STORE.

IMPORTANT FACTS:

- Never store screen house, even for a short period of time, without drying it thoroughly and brushing off caked dirt. Do not pack stakes inside your screen house. Use a separate storage bag.
- STAKES SHOULD BE REMOVED BY PULLING ON THE STAKE ITSELF. NEVER PULL ON THE SHELTER TO REMOVE STAKE.
- Do not leave your screen house setup for weeks at a time. Be aware that exposure to ultraviolet rays from the sun can seriously damage material and/or cause it to become discoloured.

WARNING: KEEP ALL FLAME AND HEAT SOURCES AWAY FROM THIS SCREEN HOUSE FABRIC

This screen house is made of flame-resistant fabric which meets CPAI-84 specifications. **IT IS NOT FIRE-PROOF.** The fabric will burn if left in continuous contact with any flame source. The application of any foreign substance to the product fabric may render the flame-resistant properties ineffective.

DO NOT use fuel burning devices inside or near screen house materials.

DO NOT permit children to light matches, operate burning appliances, or handle any flame sources in or near the screen house.

- Do not smoke, use matches, candles or open flames of any kind in or near the screen house.
- Do not refuel lanterns, stoves or heaters inside screen house.
- Do not cook inside screen house.
- Do not store flammable liquids inside screen house.

Warranty

Within 7 days of purchase assemble your tent and inspect it for any defects or missing parts. Tents are covered by a 7-day replacement warranty followed by the manufacturer's repair warranty. Warranties commence from the date of purchase.

This product carries a 1-year warranty from the original date of purchase this product against any defects in materials or workmanship. At our discretion, we may provide replacement parts to original purchaser. Original receipt or proof of purchase as well as proof of defect is required. We will not be responsible for shipping costs incurred outside continental CANADA. Warranty is valid for the original purchaser 1-year from the date of purchase and is not transferable. This warranty does not cover any product purchased through non authorized dealers and/or online auction websites.

This Warranty Does Not Cover

This 1-year Limited Warranty does NOT cover normal wear and tear, abuse or misuse, mildew and rot caused by storage of a damp tent, or damage and fading caused by prolonged exposure to UV rays, including damage from inclement weather conditions, such as wind rain or hail. In case of inclement weather remove all valuables and seek appropriate screen house. **Under no circumstances will we be liable or responsible for any incidental or consequential damages.**

This product is designed and intended for recreational use only

All replacement products or parts will assume the remaining warranty of the original product. This warranty gives you specific legal rights. You may also have other rights that vary from province to province.

Keep your sales receipt.

NOTICE: DO NOT RETURN PRODUCT TO RETAIL STORE.

Made in Bangladesh • Printed in Bangladesh

Imported by Woods Canada, Toronto, ON M4S 2B8