


# OWNER'S MANUAL

## Gazebo

CTC Model: 076-5515-6

XP1212SL

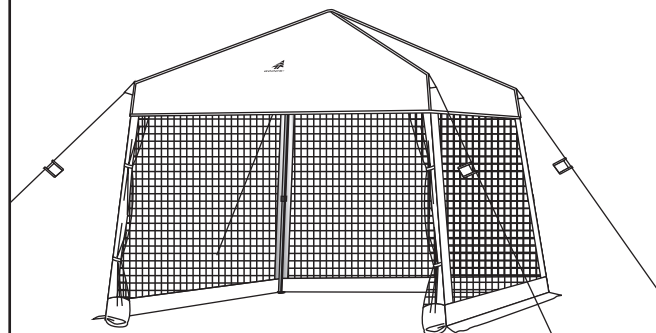

### ⚠ DANGER!

Stoves, lanterns, candles, grills, heaters and other fuel-burning devices produce carbon monoxide and will consume the available oxygen in a tent. Use of such devices in a tent may cause asphyxiation, carbon monoxide poisoning, and death or serious and permanent injuries. For this reason:

- DO NOT use fuel-burning devices inside or near this product.
- Your failure to follow this warning may cause death or serious and permanent injury to you or others.

### ⚠ WARNING!

**- KEEP ALL FLAME AND HEAT SOURCES AWAY FROM THIS FABRIC.** This product is made with flame-resistant fabric, which meets CPAI-84 specifications. **IT IS NOT FIREPROOF!**

- The fabric will burn if left in continuous contact with any flame source. The application of any foreign substance to the fabric may render the flame-resistant properties ineffective.
- Anchor properly at all times and carefully consider campsite choice. Be aware of possible falling rocks or tree limbs, lightning strikes, flash floods, strong winds and other hazards which may cause harm to this product or its occupants.
  - Have a minimum of two adults for assembly. During assembly poles are under tension. If not held firmly in place during assembly, poles could break or flip up, possibly causing serious injury.
  - Safety glasses may be worn throughout the assembly process as an additional precaution.
  - Exercise care when using electric devices in and near tents.

### CLEANING:

Allow dirt to dry on the fabric after a rainfall before lightly sweeping it off with a brush. For tougher stains, spray the area with water and lightly wipe it off with a few strokes. Do not use washer or dryer. **DO NOT SCRUB THE FABRIC. ALWAYS MAKE SURE IT IS COMPLETELY DRY BEFORE REPACKING.**

### CTC 7-DAY REPLACEMENT WARRANTY

Unpack and inspect all contents for defects in workmanship and materials within 7 days of purchase. If any defects are found, return the product to the place of purchase, along with the proof of purchase, and it will be replaced free of charge.

### 2-YEAR REPLACEMENT PARTS LIMITED WARRANTY

This product carries a replacement parts warranty against defects in materials and workmanship for a period of 24 months from date of purchase. At its discretion, the manufacturer may provide replacement parts. Original purchaser will be required to provide proof of purchase. The consumer will be responsible for shipping costs incurred outside of the U.S. or Canada.

Warranties **DO NOT** cover normal wear and tear, misuse, abuse, inclement weather conditions (i.e. wind, rain, hail, lightning, tornadoes or hurricanes) or other acts of God, mildew and rotting, damage or fading caused by prolonged exposure to UV rays. This warranty gives you specific legal rights. You may also have other rights which vary depending on locale.

**Under no circumstances shall the manufacturer be liable for any incidental or consequential damages.**

The tent is water-repellent. It is not waterproof. During heavy or continuous rain, some leakage may occur. Avoid contact between objects and the inside of the tent, as this may result in leakage at points of contact. In the event of seam leakage, apply a seam-sealer compound.

Although our products are manufactured according to rigorous specifications, periods of wind or rain may loosen the stakes and cause the frame to sink into the ground. This will weaken the structure's overall rigidity. Puddles may also form on the roof if the unit has not been assembled tightly. If pooling should occur, it is advisable to drain the fly to avoid possible damage to frame and fabric. Adjustment of guy lines may be necessary. In case of inclement weather, remove valuables and seek appropriate shelter. Intended for recreational use only.

### For your tent, screen house or canopy DO NOT...

- Pitch near an open fire.
- Use candles or open flames of any kind inside or near it.
- Leave children unattended inside.
- Use fuel-burning, oxygen-consuming devices (heaters, lanterns, cooking stoves or other flame sources) inside.
- Refuel lamps, heaters or stoves inside.
- Smoke inside.
- Store flammable liquids inside.
- Use water-repellent compounds other than those recommended for use on outdoor equipment.
- Spray with insecticide.
- Store on concrete floor.

### For your tent, screen house or canopy DO...

- Always extinguish campfire before sleeping or leaving the area.
- Exercise care when using electricity and lighting.
- Make certain it is properly ventilated in all weather conditions. In extreme weather conditions, snow could obstruct airflow and cause asphyxiation. Clear frequently.
- Anchor securely to provide additional security in changing climatic conditions. Snow pegs, skis and/or heavy rocks may be necessary to supplement stakes and guy lines.
- Take down and store properly after camping.

## For service call:

**1-855-Woods 85**

**1-855-966-3785**

### CAMPERS' TIPS

The key to an enjoyable camping experience is planning and preparation.

#### Before you go ...

Research the area where you intend to camp. Prepare for any possible weather condition. Be aware of hazards and emergency protocol. Know the rules and regulations.

Check out your equipment before your trip. Be sure your cook stove, lanterns, flashlights, air mattress, etc., are in good working order. Erect your tent to become familiar with setup. Once you've assembled your tent in a dry, well-ventilated area, apply seam-sealing compound to the stitching of the inside seams following manufacturer's directions. Allow to dry thoroughly before storage. Reapply annually.

**Checklists are great planning tools.** Here are some areas to consider.

**Camp setup:** Tent, chairs, table, ground cloth, entrance mat, tarp, poles, rope, stakes, bungee cords, duct tape, zip ties, hammer/tools, bedding.

**Kitchen setup, food and beverages:** Plan for transport, preparation, storage and disposal. Remember to pack fire-starting devices in waterproof containers, and bring pots, dishes, utensils, can opener, heavy-duty garbage bags and biodegradable soap. Store your food in lockers or out of sight in vehicles.

**Clothing:** Be prepared for all your activities. Include a hat, sunglasses and quality socks. Dress in layers.

**Hygiene:** Personal toiletries, rubber gloves, basic first aid items. Don't forget your medications.

**Miscellaneous:** Extra batteries, sewing kit, clothespins, dust pan/brush and insect-repellant.

**Be considerate of others, humans and wildlife. Remember to clean up and dispose of waste properly. "Leave no trace behind."**

# XP1212SL(076-5515-6)

## ASSEMBLY INSTRUCTIONS

### IMPORTANT NOTES:


- \* THIS RECREATIONAL PRODUCT REQUIRES A MINIMUM OF TWO PEOPLE TO ASSEMBLE.
- \* Avoid pinch points when opening and closing the gazebo frame.
- \* Do not drop carry bag.
- \* Do not bounce bag on its end to remove product, as these actions may damage the frame.
- \* Select a level site clear of rocks, branches, and other hard or sharp objects.
- \* Secure with all stakes and guylines provided to prevent property damage or personal injury.
- \* For best results in windy conditions, position corner of gazebo into the wind.

### Step 1: Verify package contents

- ☐ Canopy : 1 each



- ☐ Screen wall : 1 each

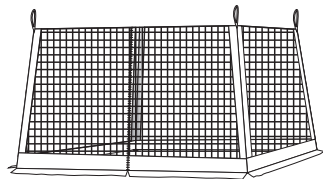

- ☐ Frame : 1 each




- ☐ Tent Stakes : 8 each




### Step 2: Pull and extend the gazebo frame

- 1) With two persons standing at diagonal corners of the structure, grab a leg and have one person stand in place while the other walks the frame out.
- 2) Do not extend the legs at this time to allow for ease of roof assembly.

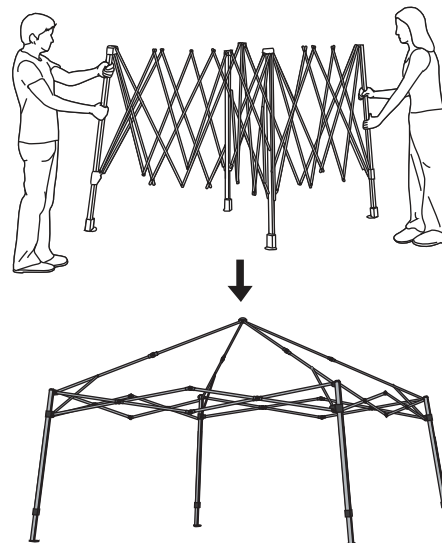

### Step 3: Lock sliding hubs

- 1) Lift the sliding hub upward locking the hub into place. Listen for the "click".

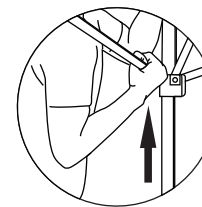


- 2) Frame only will appear as shown.




### Step 4: Attach the canopy

- 1) Unfold the canopy and place over the frame.
- 2) Attach the Velcro® fasteners on the canopy to the Velcro® at the top of the legs.


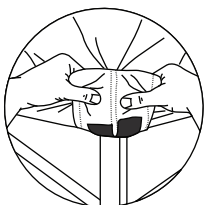


- 3) Gazebo will appear as shown.

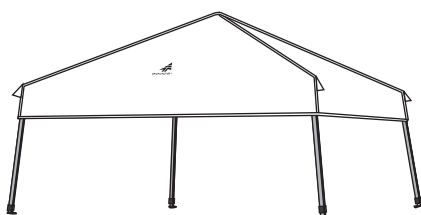


### Step 5: Fasten Velcro® tabs

- 1) Locate the Velcro® fasteners on the underside of fabric body. Attach to roof frame.

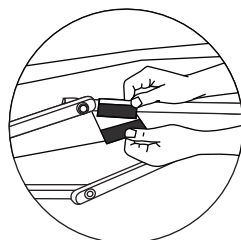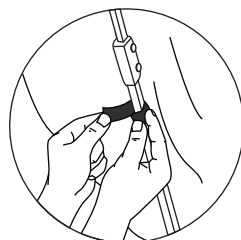


### Step 6: Adjust the height

- 1) Extend legs two at a time to adjust height. Step on foot of frame leg and pull up until push-button pops out. Circle around and repeat process with remaining legs.

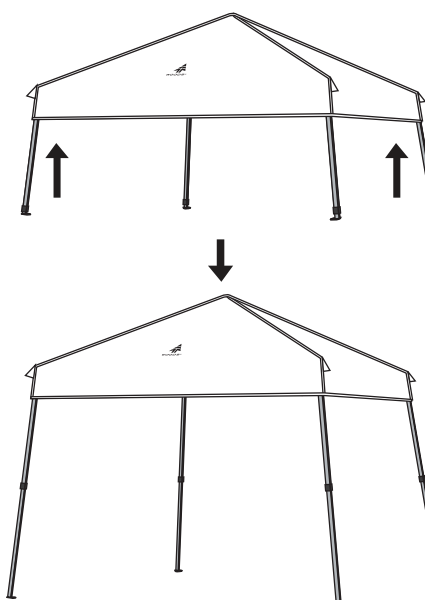


### Step 7: Stake gazebo

- 1) Secure gazebo by driving stakes through the holes in the base of each frame post.

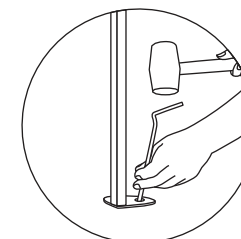


### Step 8: Secure guy line

- 1) Secure gazebo using all guy lines and stakes. **Gazebo must be secured for proper function.**
- 2) Hammer stakes into ground at a 45° angle using a hammer or mallett.

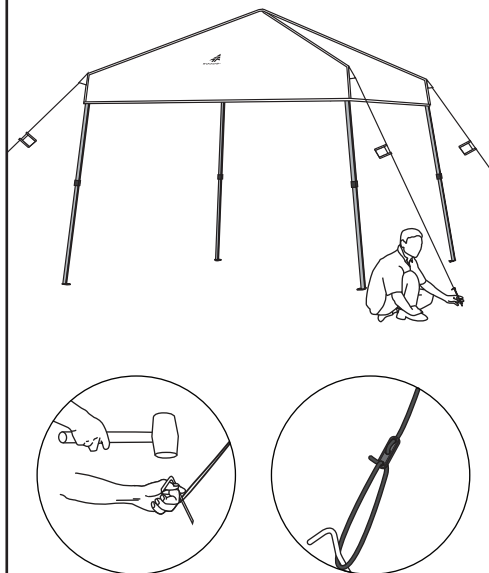


### Step 9: Attach screen wall

- 1) Attach the screen wall around the tent by wrapping Velcro® tabs around the eave part of the steel frame.
- 2) Attach the aluminum hooks on the screen wall to the d-rings on the frame.

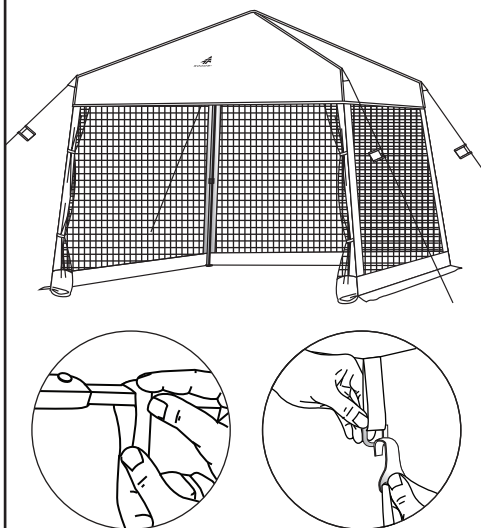


### Step 10: Disassembly

- 1) To disassemble work in reverse order. Be cautious of pinch points.
- 2) Detach Velcro® and remove screen wall.
- 3) Remove stakes with hammer or stake puller. DO NOT pull on tent.
- 4) To lower the gazebo, carefully lower two legs at the same time. Press the push-buttons located at the middle of each leg and slide the legs downward. Lower the opposite legs in the same manner.

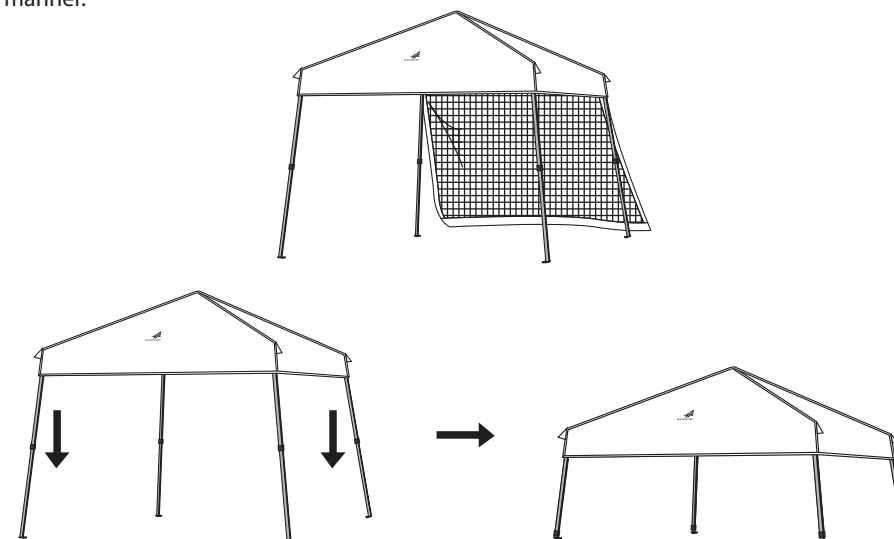


### Step 11: Remove fabric part

- 1) Detach all Velcro® fasteners and remove canopy. Fold for storage.

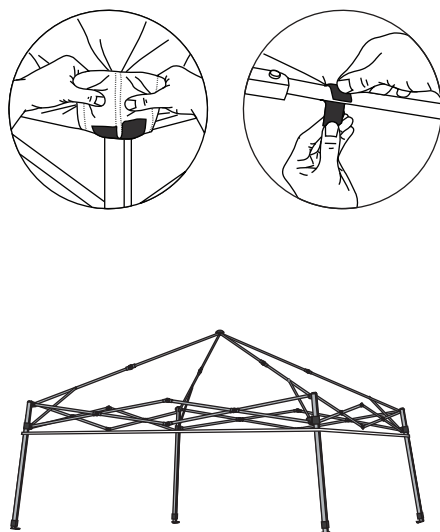


### Step 12: Fold the steel frame

- 1) Depress the button on the sliding leg hubs, making sure all sides are unlocked from the legs. With two persons at diagonal corners slowly slide the gazebo sides downward while one persons walks inward fully compressing the frame.

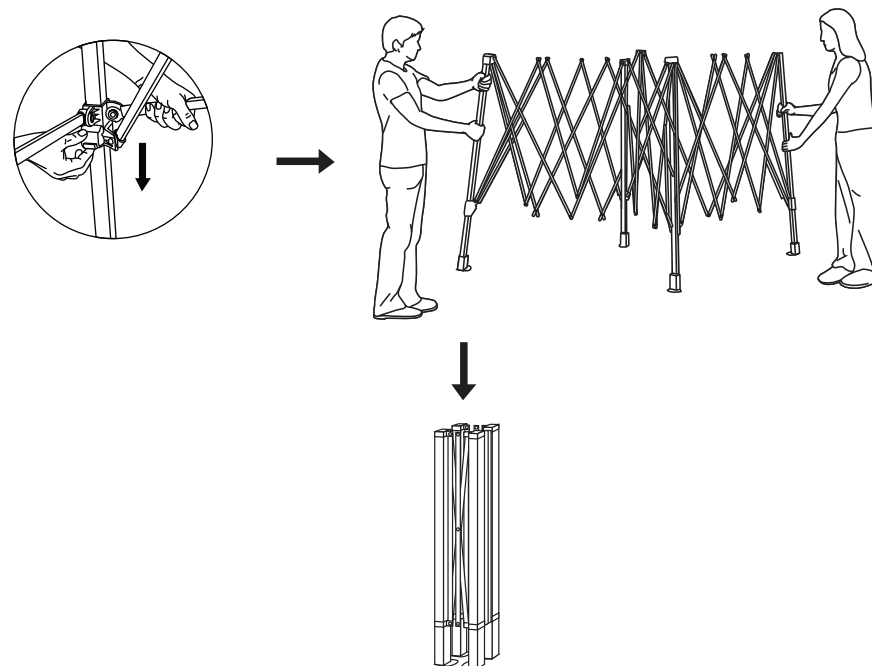

### Step 13: Store your gazebo

- 1) To prolong the life of your gazebo make sure all components are clean and dry before placing in the carry bag.
- 2) Place folded frame "feet first" into the carry bag.
- 3) Place stakes in the stake bag to prevent damage to the canopy.
- 4) Place folded canopy along the side of the frame and carefully zip the bag closed.
- 5) Store in a clean, dry area.

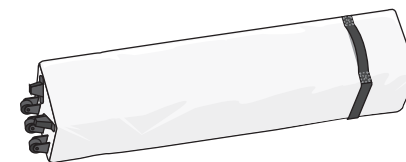

**STORE GAZEBO UPRIGHT TO AVOID  
DAMAGE TO FABRIC, FRAME, OR BOTH.**



**SPECIFICATIONS:**

**Shade size:**

**12' x 12' (3.66x3.66m)**

**Center height:**

**111" (2.82m)**

**Weight:**

**44.00lbs (19.96kgs)**

**REPLACEMENT PARTS**

KEY NO.	MODEL NO. XP1212SL(076-5515-6)		QTY. REQ
	DESCRIPTION	PART NO.	
	Call customer service for steel frame replacement parts.		
	Canopy	HTFXP1212ST	1
	Detachable screen wall	HTDXP1212ST	1
	Stakes	HMS5-8	8

**TROUBLESHOOTING GUIDE**

PROBLEM	SOLUTION
1. CONDENSATION	Condensation occurs when warm moist air inside tent comes in contact with cooler outside air. Avoid touching walls to reduce contact leakage. Venting doors and windows will reduce condensation. Store wet clothing outside of tent. A battery powered fan may be helpful. Not applicable to screen houses.
2. SEAM LEAKAGE	Apply a generous amount of seam sealer on inside seams. Seam sealer may be purchased at any local sporting goods store.
3. MILDEW	To avoid mildew, store tent/screen house ONLY when thoroughly dry. However, if mildew occurs, use a soft bristle brush or sponge with mild dishwashing soap or Fels Naptha soap to clean. Let dry thoroughly, and a tent approved water repellent compound may be applied.
4. REPAIRING A TEAR	For small tears, use a self-adhesive patch kit. We recommend a canvas or awning repair shop for larger tears.
5. FAULTY ZIPPER	Zippers are self-repairing. If the zipper separates, you can move the slider to the beginning of the zipper tape and rework the zipper.
6. FADING FABRIC	Do not leave up in direct sunlight longer than necessary. If left in sunlight for prolonged periods of time, fabric will fade and weaken.
7. FLOOR CONDENSATION	A ground cloth under the floor helps prolong its life, provides additional insulation and moisture protection. The cloth should be smaller than the floor to prevent rain from running under the tent. Not applicable to screen houses.
8. USE OF STAKES	Stakes should be installed at a 45° angle using a hammer or mallet. Stake loops should be kept taut without over-stretching fabric or webbing. This could cause tears or leakage. To remove safely, use a hammer or stake puller. Do not remove by pulling on the fabric.