

INSTRUCTION MANUAL

CASCADE 2 Tent

Product No. 076-6074-8 / Model No. CTC2389108



WOODS CANADA | Vancouver, BC V5Y 1M8
www.woods.ca | www.woodscanada.com

FOR SERVICE CALL:

1-855-WOODS85 (1-855-966-3785)

IMPORTANT: Read these instructions carefully and familiarize yourself with the product before using. Keep for future reference.

SAFETY

DANGER!

- > Stoves, lanterns, candles, grills, heaters and other fuel-burning devices produce carbon monoxide and will consume the available oxygen in a tent. Use of such devices in a tent may cause asphyxiation, carbon monoxide poisoning, and death or serious and permanent injuries. For this reason:
 - > DO NOT use fuel-burning devices inside or near this product.
 - > Your failure to follow this warning may cause death or serious and permanent injury to you or others.

For your tent, screen house or canopy DO...

- > Always extinguish campfires before sleeping or leaving the area.
- > Exercise care when using electricity and lighting.
- > Ensure tent is properly ventilated in all weather conditions. In extreme weather conditions, snow could obstruct airflow and cause asphyxiation. Clear frequently.
- > Anchor securely to provide additional security in changing weather conditions. Snow pegs, skis and/or heavy rocks may be necessary to supplement stakes and guy lines.
- > Disassemble and store properly after camping.

WARNING!

- > **KEEP ALL FLAME AND HEAT SOURCES AWAY FROM THIS TENT.** This tent is not fireproof. The fabric will burn if left in continuous contact with a flame source.
- > **Precautions:** Do NOT use candles, matches or other open flames in or near a tent. Fuel-powered lanterns and appliances are NOT recommended for use in or near a tent. If fuel-powered lanterns or appliances such as wood stoves or electric heaters are used, exercise extreme caution. Keep them away from the tent walls. Do NOT leave them unattended. Turn them off before going to sleep. Make sure the tent is well ventilated at all times to avoid suffocation. Build campfires downwind and several metres away from a tent. Extinguish campfires before leaving a campsite or going to sleep. Do NOT fuel lamps, heaters or stoves in a tent. Do NOT smoke in a tent. Do NOT store flammable liquids in a tent. Keep exits clear. Do NOT apply any foreign substance to a tent. It may diminish the flame resistant properties of tent material(s).


ASSEMBLY INSTRUCTIONS

- > Assemble your tent before camping to become familiar with the assembly.
- > Two people are recommended for setup.
- > Select a clean, level area for your campsite, free from debris and sharp objects and away from any natural water source.


- > To prevent damage to the zippers, unzip the doors and windows of the tent prior to disassembly.
- > Use of a ground cloth is recommended to prolong the life of the tent floor and provide additional insulation and moisture protection.

1. VERIFY PACKAGE CONTENTS

☐ Tent: 1 each

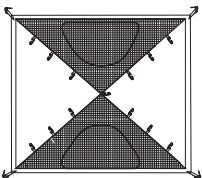

☐ Rainfly: 1 each

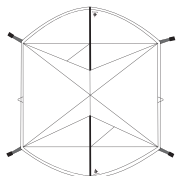

☐ Aluminum Poles: 3 each (total)




(A) Main: 2 each

(B) Fly Ridge: 1 each




☐ "V" Aluminum Stakes: 12 each

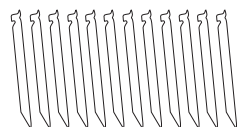

2. ASSEMBLE POLES

1. Assemble the poles by placing aluminum sections into metal ferrules. Three poles are provided.

 2 each (A) Main Poles




1 each (B) Fly Ridge




3. SPREAD TENT OUT

1. Spread out the tent flat, floor side down.
2. Lay out the poles in a crisscross fashion across the inner tent.

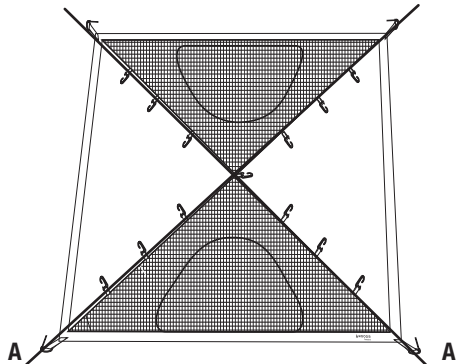


4. ATTACH POLE CLIPS AND RAISE TENT

1. With a person holding each end of a main pole (A), flex the pole into an arch. Carefully place the ends into the brass eyelet located at the stake loops.
2. Repeat this step for the remaining main tent pole (A).
3. Clip the plastic hooks on the tent to the aluminum pole frame.

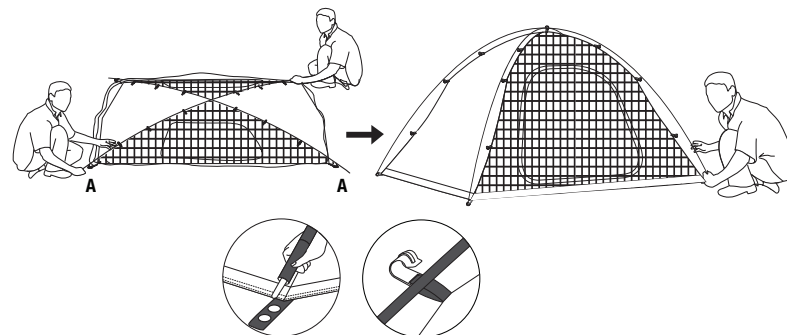


5. STAKE TENT

1. Stake down the tent by inserting a stake through the stake loops, located along the perimeter of the tent.
2. Ensure the tent floor is pulled out evenly and tightly.
3. Hammer the stakes into the ground at a 45° angle using a hammer or mallet.

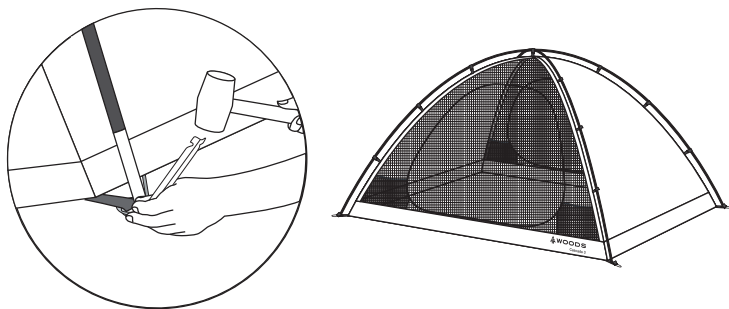


6. ATTACH THE RAINFLY

1. Unfold the fly.
2. On the underside of the fly, locate the brass eyelets at the top of the vestibule doors.
3. Insert the fly pole (B) tipped ends into the brass eyelets.
4. Place over the tent. Make sure that the rainfly awning is over the front door.
5. Attach the rainfly to the tent by attaching the plastic side release female buckle on the rainfly corners to the plastic side release male buckle at the tent corners.
6. Adjust tension using the webbing ladder locks at each corner.

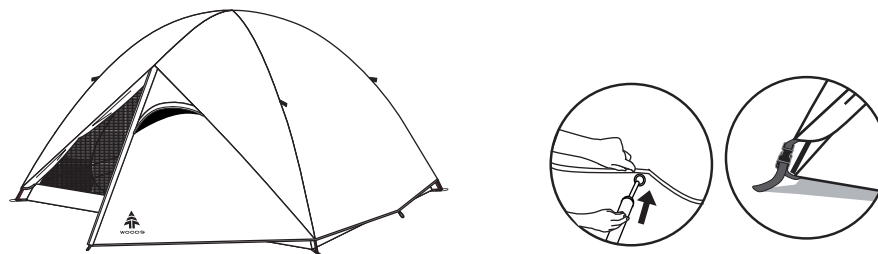

7. SECURE THE RAINFLY

1. Secure tent using all guy lines and stakes. Tent must be secured for proper function.

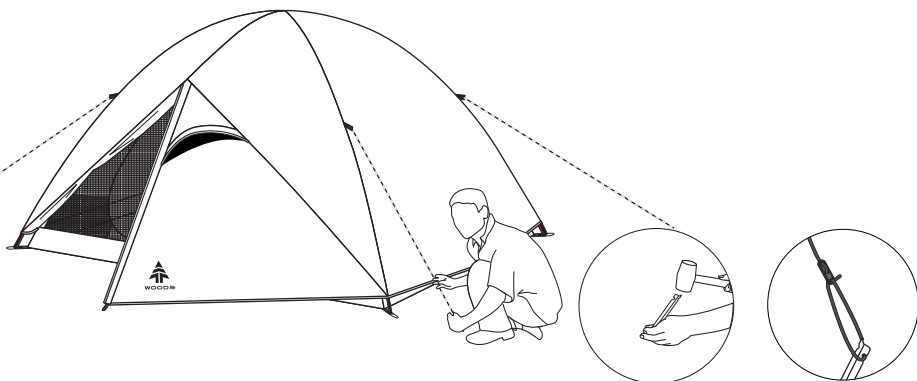

8. FULLY ASSEMBLED



Tent appears as shown.

ASSEMBLY INSTRUCTIONS

Product No. 076-6074-8
Model No. CTC2389108

DISASSEMBLY


1. To take down the tent, disassemble in reverse order.
2. Remove accessories (if included).
3. Remove and fold fly.
4. Be sure to leave doors and windows unzipped to avoid zipper damage.
5. Remove stakes with hammers or stake puller. DO NOT pull on tent.
6. Carefully disengage poles from brass eyelets. Carefully push pole away from you through the hanger to minimize risk of damage to tent or poles.
7. Keep poles and stakes together in bags provided.

PACKING THE TENT

1. Spread tent flat; distribute evenly.
2. Fold into quarters not to exceed the length of pole bag.
3. Lay pole bag at opposite end from the door. Tightly roll bag, tent, and fly, forcing any air out of unzipped door side.
4. Secure with ties and place in carry bag with stakes and accessories.
5. Tent must be clean and dry before storage. Store off concrete floor.

SPECIFICATIONS

Floor size:	7' 5" x 9' (2.3 m x 2.8 m)
Centre height:	3' 5" (1 m)
Weight:	5 lb 11 oz (2.5 kg)

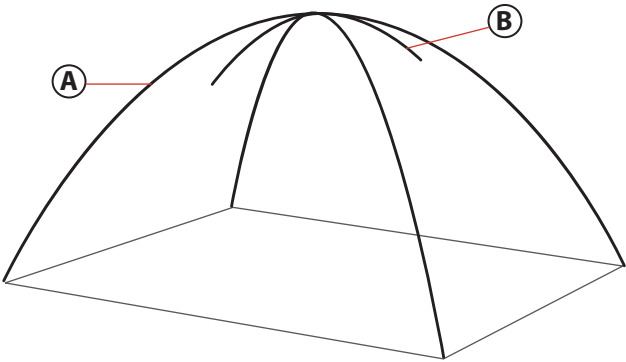

REPLACEMENT PARTS

KEY NO.	MODEL NO. CTC2389108 (076-6074-8)		QTY. REQ.
	DESCRIPTION	PART NO.	
A	Aluminum Pole (Main)	HAP8.5-363t	2
B	Aluminum Pole (Fly)	HAP9.5-145t	1
	Replacement Fly	HTFCTC2389108- Grey	1
	Tent Stakes	HAS- 7	12

PROBLEM	SOLUTION
CONDENSATION	Condensation occurs when warm, moist air inside the tent comes in contact with cooler outside air. Avoid touching walls to reduce contact leakage. Venting doors and windows will reduce condensation. Store wet clothing outside of tent. A battery-powered fan may be helpful. Not applicable to screen houses.
SEAM LEAKAGE	Apply a generous amount of seam-sealer on inside seams. Seam-sealer may be purchased at any local sporting goods store. Seam-seal the inside stitched seams of the tent. This will improve weather resistance. Discolouration may occur if applied to outside seams.
MILDEW	To avoid mildew, store tent/screen house ONLY when thoroughly dry. However, if mildew occurs, use a soft-bristle brush or sponge with mild dishwashing soap or laundry soap to clean. Let dry thoroughly and a tent-approved water-repellent compound may be applied.
REPAIRING A TEAR	For small tears use a self-adhesive patch kit. We recommend a canvas or awning repair shop for larger tears.
FAULTY ZIPPER	Zippers are self-repairing. If the zipper separates, you can move the slider to the beginning of the zipper tape and rework the zipper.
FADING FABRIC	Do not leave up in direct sunlight longer than necessary. If left in sunlight for prolonged periods of time, fabric will fade and weaken.
FLOOR CONDENSATION	A ground cloth under the floor helps prolong its life, provides additional insulation and moisture protection. The cloth should be smaller than the floor to prevent rain from running under the tent. Not applicable to screen houses.
USE OF STAKES	Stakes should be installed at a 45° angle using a hammer or mallet. Stake loops should be kept taut without over-stretching fabric or webbing. This could cause tears or leakage. To remove safely, use a hammer or stake puller. Do not remove by pulling on the fabric.

CARE AND MAINTENANCE

- > Allow dirt to dry on the fabric after a rainfall before lightly sweeping it off with a brush. For tougher stains, spray the area with water and lightly wipe it off with a few strokes. Do not use washer or dryer. **DO NOT SCRUB THE FABRIC. ALWAYS MAKE SURE IT IS COMPLETELY DRY BEFORE REPACKING.**

WARRANTY

- > **CTC 7-DAY REPLACEMENT WARRANTY:** Unpack and inspect all contents for defects in workmanship and materials within 7 days of purchase. If any defects are found, return the product to the place of purchase, along with the proof of purchase, and it will be replaced free of charge.
- > **2-YEAR REPLACEMENT PARTS LIMITED WARRANTY:** This product carries a replacement parts warranty against defects in materials and workmanship for a period of 24 months from date of purchase. At its discretion, the manufacturer may provide replacement parts. The original purchaser will be required to provide proof of purchase. The consumer will be responsible for shipping costs incurred outside of the U.S. or Canada.
- > **Warranties DO NOT** cover normal wear and tear, misuse, abuse, inclement weather conditions (i.e. wind, rain, hail, lightning, tornadoes or hurricanes) or other acts of God, mildew and rotting or damage fading caused by prolonged exposure to UV rays. This warranty gives you specific legal rights. You may also have other rights which vary depending on locale. Under no circumstances shall the manufacturer be liable for any incidental or consequential damages.
- > The tent is water-repellent. It is not waterproof. During heavy or continuous rain, some leakage may occur. Avoid contact between objects and the inside of the tent as this may result in leakage at points of contact. In the event of seam leakage, apply a seam-sealer compound.
- > Although our products are manufactured according to rigorous specifications, periods of wind or rain may loosen the stakes and cause the frame to sink into the ground. This will weaken the structure's overall rigidity. Puddles may also form on the roof if the unit has not been assembled tightly. If pooling should occur, it is advisable to drain the fly to avoid possible damage to frame and fabric. Adjustment of guy lines may be necessary. In case of inclement weather, remove valuables and seek appropriate shelter. Intended for recreational use only.