


INSTRUCTION MANUAL

LODGE 11' x 9' Camp Screen Shelter Tent

Product No. 076-6171-6 / Model No. CTC211109-POSH

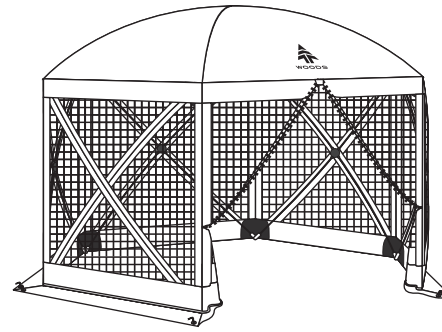

FOR SERVICE CALL:

1-855-WOODS85 (1-855-966-3785)

IMPORTANT: Read these instructions carefully and familiarize yourself with the product before using. Keep for future reference.

SAFETY

DANGER!

- > Stoves, lanterns, candles, grills, heaters and other fuel-burning devices produce carbon monoxide and will consume the available oxygen in a tent. Use of such devices in a tent may cause asphyxiation, carbon monoxide poisoning, and death or serious and permanent injuries. For this reason:
 - > DO NOT use fuel-burning devices inside or near this product.
 - > Your failure to follow this warning may cause death or serious and permanent injury to you or others.

For your tent, screen house or canopy DO...

- > Always extinguish campfires before sleeping or leaving the area.
- > Exercise care when using electricity and lighting.
- > Ensure tent is properly ventilated in all weather conditions. In extreme weather conditions, snow could obstruct airflow and cause asphyxiation. Clear frequently.
- > Anchor securely to provide additional security in changing weather conditions.
- > Disassemble and store properly after camping.

WARNING!

- > **KEEP ALL FLAME AND HEAT SOURCES AWAY FROM THIS TENT.** This tent is not fireproof. The fabric will burn if left in continuous contact with a flame source.
- > **Precautions:** Do NOT use candles, matches or other open flames in or near a tent. Fuel-powered lanterns and appliances are NOT recommended for use in or near a tent. If fuel-powered lanterns or appliances such as wood stoves or electric heaters are used, exercise extreme caution. Keep them away from the tent walls. Do NOT leave them unattended. Turn them off before going to sleep. Make sure the tent is well ventilated at all times to avoid suffocation. Build campfires downwind and several metres away from a tent. Extinguish campfires before leaving a campsite or going to sleep. Do NOT fuel lamps, heaters or stoves in a tent. Do NOT smoke in a tent. Do NOT store flammable liquids in a tent. Keep exits clear. Do NOT apply any foreign substance to a tent. It may diminish the flame resistant properties of tent material(s).

ASSEMBLY INSTRUCTIONS


- > Assemble your tent before camping to become familiar with the assembly.
- > Two people are recommended for setup.
- > Select a clean, level area for your campsite, free of debris and sharp objects, and away from any natural water source.

- > To prevent damage to the zippers, unzip the doors and windows of the tent prior to disassembly.
- > Use of a ground cloth is recommended to prolong the life of the tent floor and provide additional insulation and moisture protection.


1. VERIFY PACKAGE CONTENTS

☐ Screen shelter: 1 each

☐ Door poles: 2 each

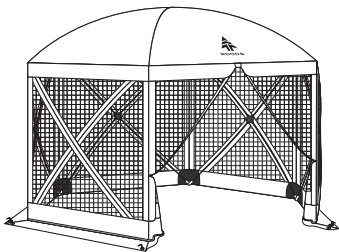


☐ Tent Stakes: 20 each

 


2. UNFOLD SCREEN HOUSE

- 1) Remove screen shelter from the bag.
- 2) Spread the screen shelter, unfolding the frame. Solid fabric is the roof.

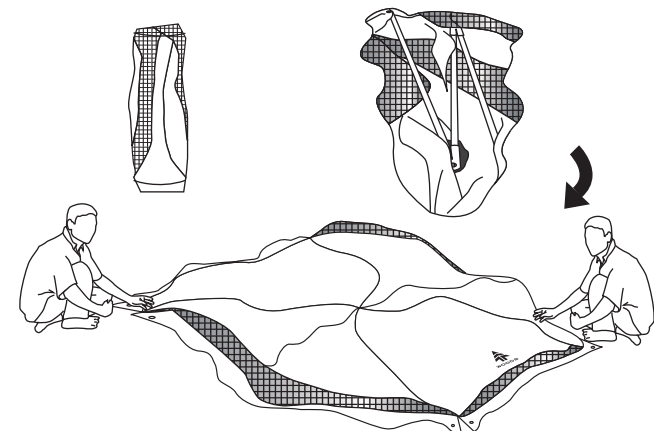


3. POP-OUT WALLS

- 1) Grasp the roof line along one wall.
- 2) Lift the roof line and locate the green loop attached to the centre hub. Guy line is attached to the loop.
- 3) Grasp the roof line with one hand. With your foot along the bottom edge of the wall, grasp the green loop and pull outward. The wall will pop out, erecting the wall.
- 4) Continue around the perimeter until all walls are upright.

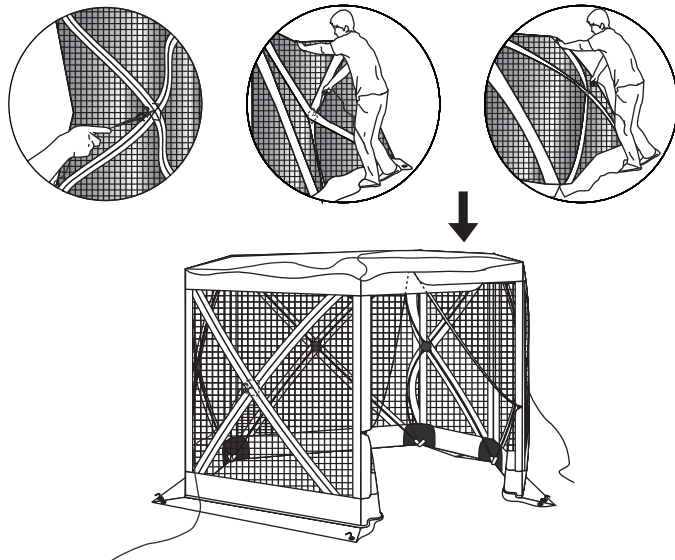


4. ERECT THE ROOF

- 1) Inside the screen shelter, grasp the top mould and push upward.

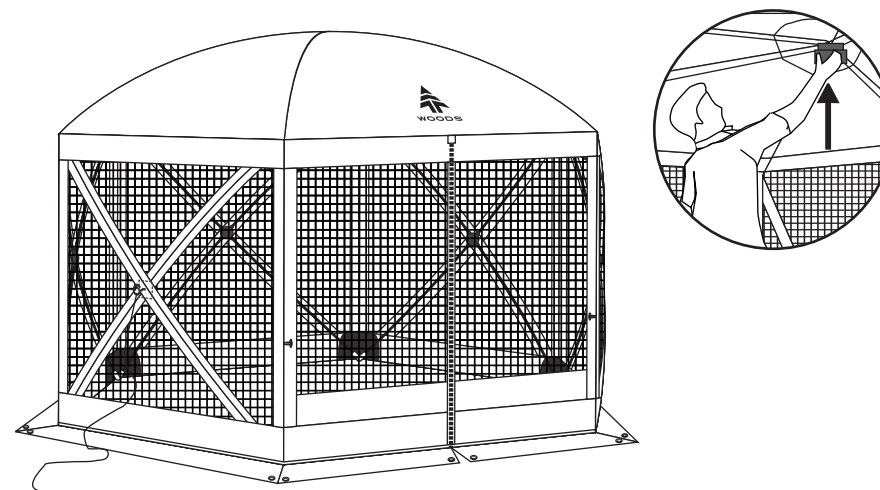


5. ATTACH DOOR POLES

- 1) Unzip the doorway and attach door poles inside the doorway.
- 2) Insert each pole into webbing pockets at the bottom and top of the doorway.
- 3) Extend pole until silver button locks into the slot. Listen for the click.

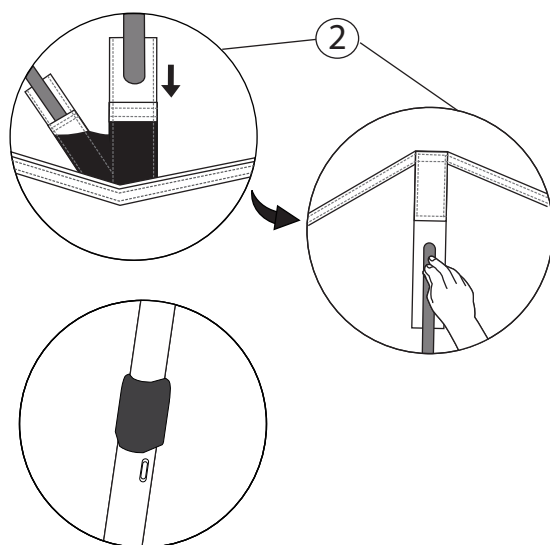

6. STAKE THE SCREEN SHELTER AND SECURE GUY LINES

- 1) Position skirt along the outside perimeter of the screen shelter. At the corners, hammer stakes through the grommets into the ground at a 45° angle using a hammer or mallet.
- 2) On the inside, install stakes through the grommets on tabs at each corner.
- 3) Secure guy lines with stakes.

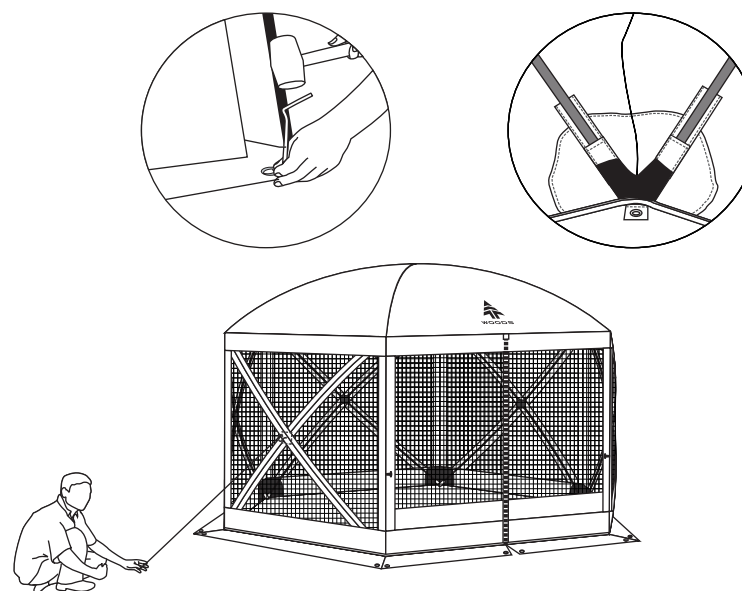


DISASSEMBLY INSTRUCTIONS


Product No. 076-6171-6
Model No. CTC211109-POSH

DISASSEMBLY

- 1) Remove all door poles and fold guy lines.
- 2) Collapse each wall, pushing inward at the centre hub.
- 3) Collapse the roof, pushing a roof pole inward.
- 4) Once flat, remove all stakes.
- 5) Fold and roll screen house. Place in the carry bag.
- 6) Place stakes, and door poles in their bags inside the carry bag.

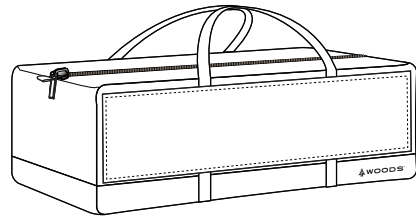

Note: Screen shelter must be clean and dry before storage. Store in a clean, dry area. Do not store on a concrete floor.

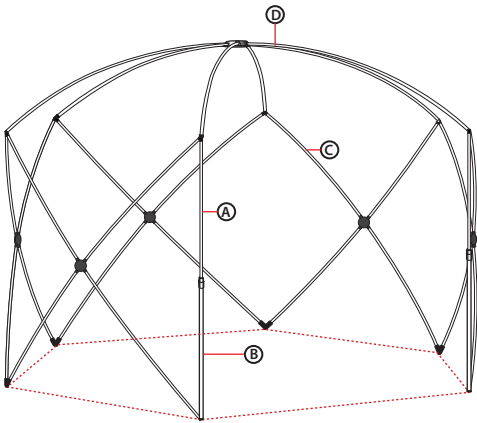

SPECIFICATIONS

Shade size:	11' x 9' (3.35 m x 2.74 m)
Centre height:	82" (2.08 m)
Weight:	21 lb 14 oz (9.92 kg)

REPLACEMENT PARTS

KEY NO.	MODEL NO. CTC211109-POSH(076-6171-6)		QTY. REQ
	DESCRIPTION	PART NO.	
	Call customer service for replacement parts.		
	Stakes	HMS 3.5-4	8
		HMS 5-8	12

PROBLEM	SOLUTION
CONDENSATION	Condensation occurs when warm, moist air inside the tent comes in contact with cooler outside air. Avoid touching walls to reduce contact leakage. Venting doors and windows will reduce condensation. Store wet clothing outside of tent. A battery-powered fan may be helpful. Not applicable to screen houses.
SEAM LEAKAGE	Apply a generous amount of seam-sealer on inside seams. Seam-sealer may be purchased at any local sporting goods store. Seam-seal the inside stitched seams of the tent. This will improve weather resistance. Discolouration may occur if applied to outside seams.
MILDEW	To avoid mildew, store tent/screen house ONLY when thoroughly dry. However, if mildew occurs use a soft-bristle brush or sponge with mild dishwashing soap or laundry soap to clean. Let dry thoroughly and a tent-approved water-repellent compound may be applied.
REPAIRING A TEAR	For small tears use a self-adhesive patch kit. We recommend a canvas or awning repair shop for larger tears.
FAULTY ZIPPER	Zippers are self-repairing. If the zipper separates, you can move the slider to the beginning of the zipper tape and rework the zipper.
FADING FABRIC	Do not leave up in direct sunlight longer than necessary. If left in sunlight for prolonged periods of time, fabric will fade and weaken.
FLOOR CONDENSATION	A ground cloth under the floor helps prolong its life, provides additional insulation and moisture protection. The cloth should be smaller than the floor to prevent rain from running under the tent. Not applicable to screen houses.
USE OF STAKES	Stakes should be installed at a 45° angle using a hammer or mallet. Stake loops should be kept taut without over-stretching fabric or webbing. This could cause tears or leakage. To remove safely, use a hammer or stake puller. Do not remove by pulling on the fabric.
FAULTY LED TENT LIGHTS	Check light string for any visible damage or tears. If damaged, do not use the light string and return the product as per the stated warranty. If no damage is visible, ensure the USB power cable is securely connected to either a fully-charged PWR POD™ battery or USB battery pack.

CARE AND MAINTENANCE

- > Allow dirt to dry on the fabric after a rainfall before lightly sweeping it off with a brush. For tougher stains, spray the area with water and lightly wipe it off with a few strokes. Do not use washer or dryer. **DO NOT SCRUB THE FABRIC. ALWAYS MAKE SURE IT IS COMPLETELY DRY BEFORE REPACKING.**

WARRANTY

- > **CTC 7-DAY REPLACEMENT WARRANTY:** Unpack and inspect all contents for defects in workmanship and materials within 7 days of purchase. If any defects are found, return the product to the place of purchase, along with the proof of purchase, and it will be replaced free of charge.
- > **2-YEAR REPLACEMENT PARTS LIMITED WARRANTY:** This product carries a replacement parts warranty against defects in materials and workmanship for a period of 24 months from date of purchase. At its discretion, the manufacturer may provide replacement parts. The original purchaser will be required to provide proof of purchase. The consumer will be responsible for shipping costs incurred outside of the U.S. or Canada.
- > **Warranties DO NOT** cover normal wear and tear, misuse, abuse, inclement weather conditions (i.e. wind, rain, hail, lightning, tornadoes or hurricanes) or other acts of God, mildew and rotting, damage or fading caused by prolonged exposure to UV rays. This warranty gives you specific legal rights. You may also have other rights which vary depending on locale. Under no circumstances shall the manufacturer be liable for any incidental or consequential damages.
- > The tent is water-repellent. It is not waterproof. During heavy or continuous rain, some leakage may occur. Avoid contact between objects and the inside of the tent, as this may result in leakage at points of contact. In the event of seam leakage, apply a seam-sealer compound.
- > Although our products are manufactured according to rigorous specifications, periods of wind or rain may loosen the stakes and cause the frame to sink into the ground. This will weaken the structure's overall rigidity. Puddles may also form on the roof if the unit has not been assembled tightly. If pooling should occur, it is advisable to drain the fly to avoid possible damage to frame and fabric. Adjustment of guy lines may be necessary. In case of inclement weather, remove valuables and seek appropriate shelter. Intended for recreational use only.