


# 10 x 10' ECLIPSE CANOPY SHELTER

Product No. 076-6440-6

Model No. XP1010ST-3

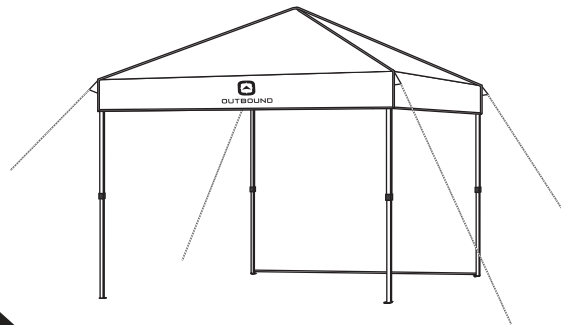

## SPECIFICATIONS



Floor size	10' x 10' (3 x 3 m)
Centre height	9' 2" (2.8 m)
Weight	39 lb 6 oz (17.87 kg)

## SAFETY



### DANGER!

- Stoves, lanterns, candles, grills, heaters and other fuel-burning devices produce carbon monoxide and will consume the available oxygen in a shelter. Use of such devices in a shelter may cause asphyxiation, carbon monoxide poisoning, and death or serious and permanent injuries. For this reason:

- DO NOT use fuel-burning devices inside or near this product.
- Your failure to follow this warning may cause death or serious and permanent injury to you or others.

### WARNING!

- **KEEP ALL FLAME AND HEAT SOURCES AWAY FROM THIS SHELTER.** This shelter is not fireproof. The fabric will burn if left in continuous contact with a flame source. The application of any foreign substance to the fabric may render the flame-resistant properties ineffective.
- Do NOT use candles, matches or other open flames in or near a shelter. Exercise extreme caution: keep appliances away from the shelter fabric. Do NOT leave them unattended. Turn them off before going to sleep. Make sure the shelter is well ventilated at all times to avoid suffocation. Build campfires downwind and several metres away from a shelter. Extinguish campfires before leaving a campsite or going to sleep. Do NOT fuel lamps, heaters or stoves in a shelter. Do NOT smoke in a shelter. Do NOT store flammable liquids in a shelter. Keep exits clear. Do NOT apply any foreign substance to a shelter. It may diminish the flame resistant properties of shelter material(s). Follow manufacturer's instructions for safe appliance use.
- Anchor properly at all times and carefully consider campsite choice. Be aware of possible falling rocks or tree limbs, lightning strikes, flash floods, strong winds and other hazards which may cause harm to this product or its occupants.
- Have a minimum of two adults for assembly. During assembly poles are under tension. If not held firmly in place during assembly, poles could break or flip up, possibly causing serious injury.
- Exercise care when using electric devices in and near shelters.
- This product is intended for temporary day use and activities including camping, picnicking, and day tripping. This product is not intended as a semi-permanent shelter.

## INSTRUCTION MANUAL



**HAVING TROUBLE?**  
CALL US: 1-888-280-7876  
[hkdglobal.net/contact-us](http://hkdglobal.net/contact-us)

**IMPORTANT:** Please read this manual carefully before assembly of this product. Keep for future reference.

## BEFORE YOU GO...



### TIPS:

- Research the area where you intend to camp. Prepare for any possible weather condition. Be aware of hazards and emergency protocol. Know the rules and regulations.
- Check out your equipment before your trip. Be sure your cook stove, lanterns, flash lights, air mattress, etc., are in good working order. Erect your tent to become familiar with setup. Once you've assembled your shelter in a dry, well-ventilated area, apply seam-sealing compound to the stitching of the inside seams following manufacturer's directions. Allow to dry thoroughly before storage. Reapply annually.

## ASSEMBLY INSTRUCTIONS



### IMPORTANT NOTE BEFORE ASSEMBLY:

- Assemble your screen house before camping to become familiar with the assembly.
- Two people are recommended for setup.
- Select a clean, level area for your campsite, free of debris and sharp objects, and away from any natural water source.
- To prevent damage to the zippers, unzip the doors and windows of the screen house prior to disassembly.


### 1 VERIFY PACKAGE CONTENTS

- Canopy: 1 each
- Frame: 1 each
- Canopy Clip: 24 each
- Wind Wall: 1 each
- PWR POD<sup>TM</sup> USB Adaptor (battery not included): 1 each
- Battery Bag: 1 each
- Shelter Stakes: 8 each
- Light string with hub: 1 each





## 2 PULL AND EXTEND THE GAZEBO FRAME

1. Have two people stand at diagonal corners of the shelter and grasp a shelter leg. Have one person stand in place while the other person walks the frame out until the shelter is fully expanded.
2. Do not extend the legs at this time to allow for ease of roof assembly.

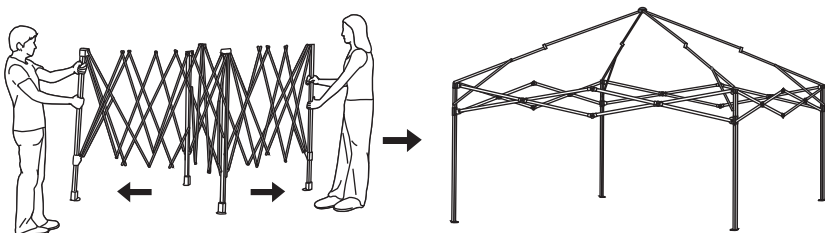



## 3 LOCK SLIDING HUBS

1. Lift the sliding hub upward locking the hub into place. Listen for the "click".
2. Once assembled, the shelter frame will appear as shown.

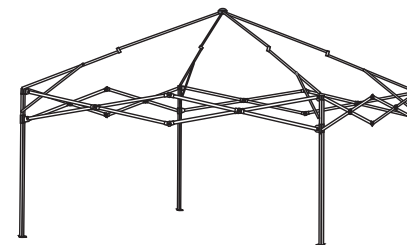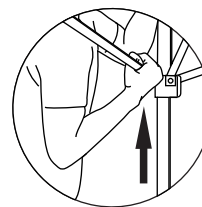



## 4 ATTACH THE CANOPY

1. Unfold the canopy and place over the frame.
2. Attach the hook and loop fasteners on the canopy to the hook and loop fasteners at the top of the legs.
3. Canopy will appear as shown.

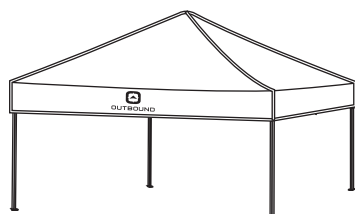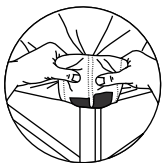



## 5 FASTEN HOOK AND LOOP TABS

1. Locate the hook and loop fasteners on the underside of fabric body. Attach to roof frame.

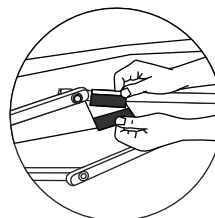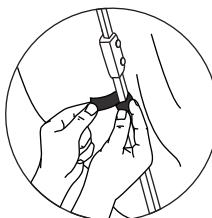


## 6 ATTACH LED LIGHTS

  1. **NOTE: SHELTER DOES NOT COME WITH A POWER SOURCE.** Included PWR POD™ adaptor allows use of PWR POD battery to power shelter, or USB battery pack can be used. Ensure lights face downward.
2. From inside the shelter, evenly space 6 clips along each roof beam. Insert the LED light strands through bottom of the clips. Attach adaptor and battery bag to the leg frame using SR-buckle. Battery bag will hold the power source (either PWR POD™ adaptor/battery or USB battery pack).
3. Plug the USB cable into the power source.
4. Keep the PWR POD™ or USB adaptor/battery pack inside the battery bag.




## 7 ADJUST THE HEIGHT

1. Extend legs two at a time to adjust height. Step on the foot of the frame leg and pull up until push button pops out. Circle around and repeat process with remaining legs.

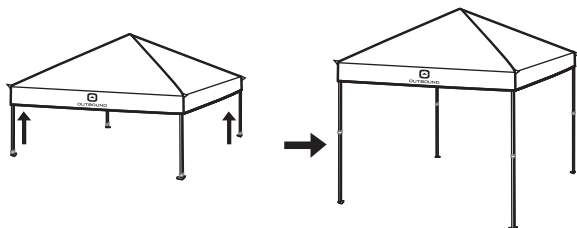



## 8 SECURE GUY LINES

1. Secure shelter by driving stakes through the holes in the base of each frame post.
2. Secure shelter using all guy lines and stakes.  
**Shelter must be secured for proper function.**
3. Hammer stakes into ground at a 45° angle using a hammer or mallet.

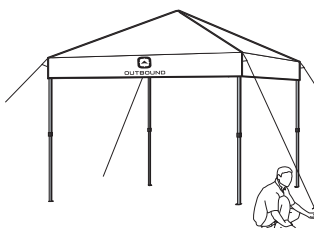

## 9 ATTACH WIND WALL

1. Attach the wall on the back side of the shelter by wrapping hook and loop tabs around the steel frame.

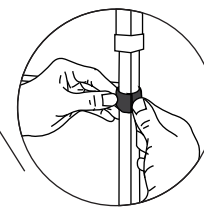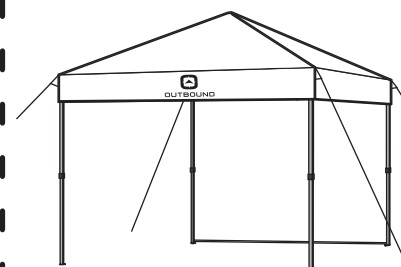


## ASSEMBLY INSTRUCTIONS



Product No. 076-6440-6  
Model No. XP1010ST-3


### 10 USING LED LIGHTS

1. Press the on/off switch to turn light on or off.
2. Press the up button to increase the light output from low to high.
3. Press the down button to decrease the light output from high to low.

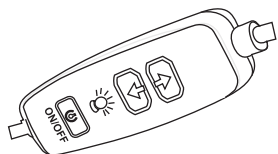


### 11 DISASSEMBLY

1. To disassemble, work in reverse order. **Be cautious of pinch points.**
2. Detach hook and loop fasteners and remove wind wall.
3. Remove stakes with hammer or stake puller. DO NOT pull on shelter.
4. To lower the shelter, carefully lower two legs at the same time. Press the push buttons located at the middle of each leg and slide the legs downward. Lower the opposite legs in the same manner.

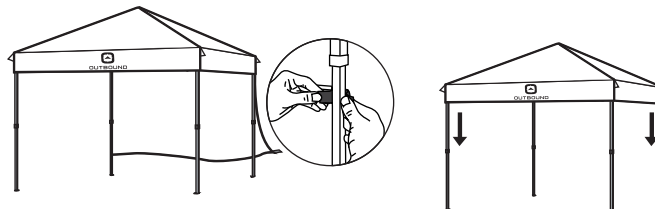


### 12 REMOVE CANOPY

1. Detach all hook and loop fasteners and remove canopy. Fold for storage.

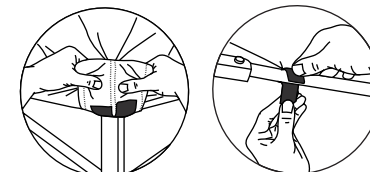

### 13 FOLD THE STEEL FRAME

1. Depress the button on the sliding leg hubs, making sure all sides are unlocked from the legs. With two people at diagonal corners slowly slide the shelter sides downward while one person walks inward fully compressing the frame.

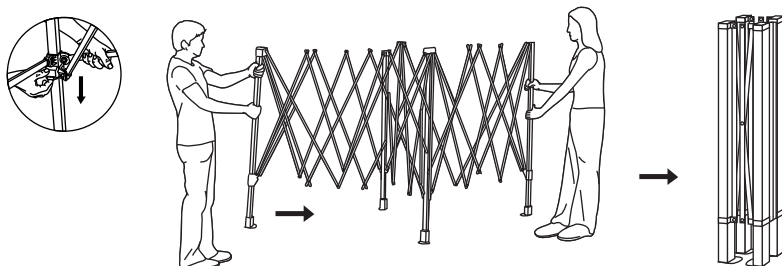

### 14 STORE YOUR SHELTER

1. To prolong the life of your shelter, make sure all components are clean and dry before placing in the carry bag.
2. Place folded frame "feet first" into the carry bag.
3. Place stakes in the stake bag to prevent damage to the canopy.
4. Place folded canopy along the side of the frame and carefully zip the bag closed.
5. Store in a clean, dry area.



**NEVER STORE CANOPY WHILE ATTACHED TO FRAME.  
YOU MAY DAMAGE CANOPY FABRIC, FRAME, OR BOTH.**

## REPLACEMENT PARTS



MODEL NO. XP1010ST-3 (076-6440-6)		QTY. REQ.
DESCRIPTION	PART NO.	
Call customer service for steel frame replacement parts.		
Canopy	HTFXP1010ST-3-Khaki	1
Detachable Wind Wall	HTDXP1010ST-3-Khaki	1
Stakes	HMS5-8	8





PROBLEM	SOLUTION
CONDENSATION	Condensation occurs when warm, moist air inside shelter comes in contact with cooler outside air. Avoid touching walls to reduce contact leakage. Venting doors and windows will reduce condensation. Store wet clothing outside of shelter. A battery-powered fan may be helpful. Not applicable to screen houses.
SEAM LEAKAGE	Apply a generous amount of seam-sealer on inside seams. Seam-sealer may be purchased at any local sporting goods store.
MILDEW	To avoid mildew, store shelter ONLY when thoroughly dry. However, if mildew occurs, use a soft-bristle brush or sponge with mild dishwashing soap or laundry soap to clean. Let dry thoroughly and a shelter-approved water-repellent compound may be applied.
REPAIRING A TEAR	For small tears use a self-adhesive patch kit. We recommend a canvas or awning repair shop for larger tears.
FAULTY ZIPPER	Zippers are self-repairing. If the zipper separates, you can move the slider to the beginning of the zipper tape and rework the zipper.
FADING FABRIC	Do not leave up in direct sunlight longer than necessary. If left in sunlight for prolonged periods of time, fabric will fade and weaken.
FLOOR CONDENSATION	A ground cloth under the floor helps prolong the tent floor's life, and provides additional insulation and moisture protection. The cloth should be smaller than the floor to prevent rain from running under the shelter. Not applicable to screen houses.
USE OF STAKES	Stakes should be installed at a 45° angle using a hammer or mallet. Stake loops should be kept taut without over-stretching fabric or webbing. This could cause tears or leakage. To remove safely, use a hammer or stake puller. Do not remove by pulling on the fabric.
LIGHTS NOT WORKING	Battery could be depleted. Or loose connection.

CARE AND MAINTENANCE



- Allow dirt to dry on the fabric after a rainfall before lightly sweeping it off with a brush. For tougher stains, spray the area with water and lightly wipe it off with a few strokes. Do not use washer or dryer. DO NOT SCRUB THE FABRIC. ALWAYS MAKE SURE IT IS COMPLETELY DRY BEFORE REPACKING.

WARRANTY



- CTC 7-DAY REPLACEMENT WARRANTY: Unpack and inspect all contents for defects in workmanship and materials within 7 days of purchase. If any defects are found, return the product to the place of purchase, along with the proof of purchase, and it will be replaced free of charge.
- 1-YEAR REPLACEMENT PARTS LIMITED WARRANTY: This product carries a replacement parts warranty against defects in materials and workmanship for a period of 12 months from date of purchase. At its discretion, the manufacturer may provide replacement parts. The original purchaser will be required to provide proof of purchase. The consumer will be responsible for shipping costs incurred outside of the U.S. or Canada.
- Warranties DO NOT cover normal wear and tear, misuse, abuse, inclement weather conditions (i.e., wind, rain, hail, lightning, tornadoes or hurricanes) or other acts of God, mildew and rotting, damage or fading caused by prolonged exposure to UV rays. This warranty gives you specific legal rights. You may also have other rights which vary depending on locale. Under no circumstances shall the manufacturer be liable for any incidental or consequential damages.
- The shelter is water-repellent. It is not waterproof. During heavy or continuous rain, some leakage may occur. Avoid contact between objects and the inside of the shelter, as this may result in leakage at points of contact. In the event of seam leakage, apply a seam-sealer compound.
- Although our products are manufactured according to rigorous specifications, periods of wind or rain may loosen the stakes and cause the frame to sink into the ground. This will weaken the structure's overall rigidity. Puddles may also form on the roof if the unit has not been assembled tightly. If pooling should occur, it is advisable to drain the fly to avoid possible damage to frame and fabric. Adjustment of guy lines may be necessary. In case of inclement weather, remove valuables and seek appropriate shelter. Intended for recreational use only.