


CANVAS^{TM/MC}

FIRE TABLE OF RIDEAU 5-PC FIRE DINING SET

MODEL NO. 088-0538-4

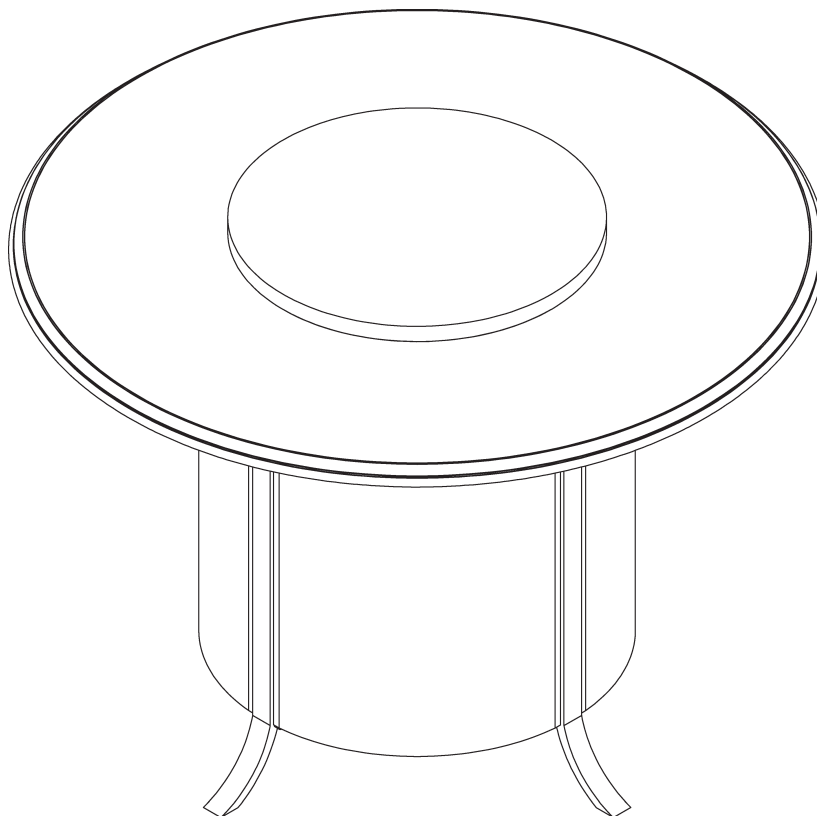

ASSEMBLY INSTRUCTIONS



HAVING TROUBLE?

TOLL-FREE:

1-888-670-6684

IMPORTANT: Please read this manual carefully
before beginning assembly of this product.
Keep this manual for future reference.

Production Number : xxxxxxxx

CANVAS™

INSPIRED BY CANADA



We believe in the power of décor and its ability to make up the fabric of your home.

That's why **CANVAS™** collections draw **inspiration from Canadians and the way they live.**

From on-trend furniture pieces to holiday décor and all your outdoor living essentials, **CANVAS™** makes it easy to refresh your space to reflect **your unique style and the way you live every day.**

We would love to hear from you and welcome your thoughtful feedback. Visit our website at **canadiantire.ca** to tell us about your experience, and share your photos with us using **#mycanvasstyle.**

Show us how you bring **CANVAS™** products to life. We can't wait to see!

Fire Table of Rideau 5-pc Fire Dining Set




WARNING: For Outdoor Use Only.

Installation and service must be performed by a qualified installer, service agency, or the gas supplier.

INSTALLER: Leave this manual with the appliance.

CONSUMER: Retain this manual for future reference.

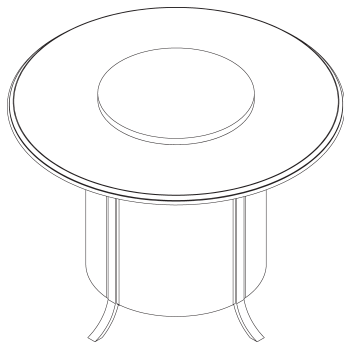

Propane cylinder required (not included)
1 AA 1.5V battery required (not included)
CAUTION: Rechargeable batteries contain nickel-metal hydride and must be recycled or disposed of properly. Do not mix old and new batteries. Do not mix alkaline, standard (carbon-zinc), or rechargeable batteries. Do not dispose of batteries in fire. Batteries may explode or leak. The battery cannot be ingested.



DANGER: FIRE OR EXPLOSION HAZARD

If you smell gas:

1. Shut off gas to the appliance.
2. Extinguish any open flame.
3. If odour continues, leave the area immediately. After leaving the area, call your gas supplier or fire department.

Failure to follow these instructions could result in fire or explosion, which could cause property damage, personal injury, or death.



WARNING: If the information in this manual is not followed exactly, a fire or explosion may result causing property damage, personal injury, or loss of life.



WARNING:

Do not store or use gasoline, or other flammable vapours and liquids, in the vicinity of this or any other appliance.

An LP-cylinder not connected for use shall not be stored in the vicinity of this or any other appliance.



DANGER

CARBON MONOXIDE HAZARD

This appliance can produce carbon monoxide which has no odour.

Using it in an enclosed space can kill you.

Never use this appliance in an enclosed space such as a camper, tent, car or home.



This appliance complies with ANSI Z21.97-2017/CSA 2.41-2017, Outdoor Decorative Gas Appliances .

TABLE OF CONTENTS

General information	4
Tools required	4
Specifications	5
Important safety information and precautions	6
Parts list	7
Expanded view	9
Before you begin assembly	10
Step-by-step guide	11
Location	20
Setup	20
Gas connection	20
Leak test	21
Lighting	21
Storage and maintenance	22
Technical data	23
Troubleshooting	24
Limited warranty	25



WARNING: Failure to position the parts in accordance with these diagrams or to use only parts specifically approved with this appliance may result in property damage or personal injury.

GENERAL INFORMATION



WARNING: This product can expose you to carbon monoxide, which is known to cause birth defects or other reproductive harm. For more information go to www.P65Warnings.ca.gov.

IMPORTANT

Please take time to read these instructions thoroughly and follow each step carefully for safe and easy operation. Keep this manual for installer and consumer future reference/use. We would like to hear from you with any comments or suggestions.

TOOLS REQUIRED



Wrench M6



2 people

SPECIFICATIONS


Product name	Fire Table of Rideau 5-pc Fire Dining Set
Model No.	088-0538-4 (A208041010)
Rated Heat Output	38,000 BTU/HR
Fuel	Propane—LP
Gas Supply	20 lb (9 kg) LP-Gas cylinder
Manifold Pressure	11" W.C.
Orifice Size (diameter)	1.9 mm
Gas Supply Pressure	25 PSI (minimum) to 250 PSI (maximum)

IMPORTANT SAFETY INFORMATION AND PRECAUTIONS








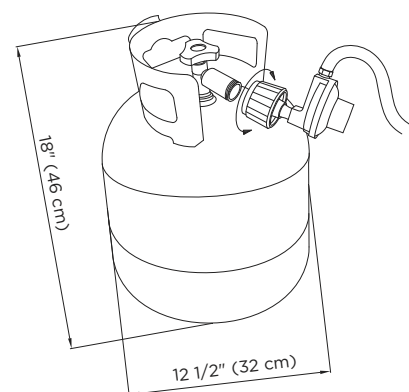



- The installation must comply with local codes, or in the absence of local codes with the National Fuel Gas Code, ANSI Z223.1/NF-PA54; the International Fuel Gas Code, Natural Gas and Propane Installation Code, CSA B149.1; or the Propane Storage and Handling Code, B149.2, as applicable.
- The LP gas supply cylinder to be used must be:
 - 1-Constructed and marked in accordance with the U.S. Department of Transportation (D.O.T.) Specifications for LP-Gas Cylinders, or the Standard for Cylinders, Spheres and Tubes for Transportation of Dangerous Goods and Commission, CAN/CSA-B339 as applicable;
 - 2-Provided with a listed overfilling prevention device;
 - 3-Provided with a cylinder connection device compatible with the connection for the appliance.
- Always place the appliance on a firm and level surface.
- Solid fuels must not be burned in this gas appliance. When using decorative lava rocks, use only lava rocks (INCLUDED).
- The appliance must be used only outdoors in a well-ventilated space and shall not be used in a building, garage or any other enclosed area.
- When in use, keep the appliance area clear and at least 40" (101.6 cm) side, back and top clearance from combustible materials, gasoline and other flammable liquids and vapours . Do not use the appliance under overhead combustible surfaces. Certain items or materials, when stored under the appliance or nearby, will be subjected to radiant heat and could be damaged.

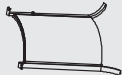IMPORTANT SAFETY INFORMATION AND PRECAUTIONS




- Open the door and inspect the hose assembly and burner prior to each use. If there is evidence of excessive abrasion or wear or if the hose or burner is damaged, it must be replaced by an appropriate part from the manufacturer.
- Inspect the gas connections of the appliance prior to each use. Do not operate the unit if there is a gas leak. Have the appliance inspected annually by a qualified service person.
- The pressure regulator and hose assembly provided with the appliance must be used. The replacement part must be the same as the part specified by the manufacturer.
- For instructions on how to connect the LP-Gas tank and check for leaks, please refer to “Gas Connection” on page 19 and “Leak Test” on page 20.
- **Children and adults should be alerted to the hazards of high surface temperatures and should stay away to avoid burns and prevent clothing ignition.**
- **Young children and pets should be carefully supervised when they are in the area of the appliance.**
- **Any guard or other protective device removed for servicing the appliance must be replaced prior to operation.**
- **Clothing or other flammable materials should not be hung from the appliance or placed on or near the appliance.**
- Do not use this appliance if any part has been under water. Immediately call a service technician to inspect the appliance and to replace any part of the control system which has been under water.
- The LP-Gas supply cylinder to be used must be constructed and marked in accordance with the specifications for LP-Gas cylinders of the U.S. Department of Transportation (DOT).
- The cylinder supply system must be arranged for vapour withdrawal and the cylinder must include a collar to protect the cylinder valve.
- Use only 20 lb (9 kg) LP-Gas cylinders.
- Do not burn wood or any other materials in this appliance.
- The appliance must be isolated from the gas supply piping system by closing its individual manual shutoff valve during any pressure testing of the gas supply piping system at test pressure equal to or less than 1/2 PSI (3.5 kPa).
- Other cylinders may be acceptable for use with the appliance provided they are compatible with the appliance retention means and accompanied by illustration(s) depicting the cylinder mounted on the appliance using the cylinder retention means and the point of contact between the cylinder and the retention means.
- Properly place the hose out of pathways where people may trip over it or in areas where they may be subject to accidental damage.
- The burner must be replaced prior to the appliance being put into operation if it is clear that the burner is damaged. The replacement burner must be the same as the part specified by the manufacturer.
- To clean the appliance, including the burner, please refer to “Storage and Maintenance” on page 22.



PARTS LIST


ITEM	DESCRIPTION	THUMBNAIL	QUANTITY
A P00310010301	Metal Mesh Lid		1
B P00210053001	Table Top		1
C P00410018401	Door		1
D P00400037201	Rear Door		1
E P00380065401	Panel 1		1
F P00380065501	Panel 2		1
G P00670006801	Cylinder Rack		1
J P002500130	Fire Bowl		1
K P006600026	Glass Rocks		1
L P00210053101	Turning Tray		1
M P00540065001	Leg		2

PARTS LIST

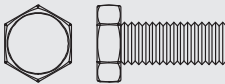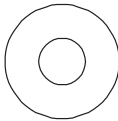ITEM	DESCRIPTION	THUMBNAIL	QUANTITY
H1 H010010003	Bolt M6*15		26+4 Spare
H2 H050030001	Flat Washer M6		26+4 Spare
HW H090010017	Wrench M6		1

If you want to replace the parts listed, please contact Customer Service Centre: 1-888-670-6684


EXPANDED VIEW

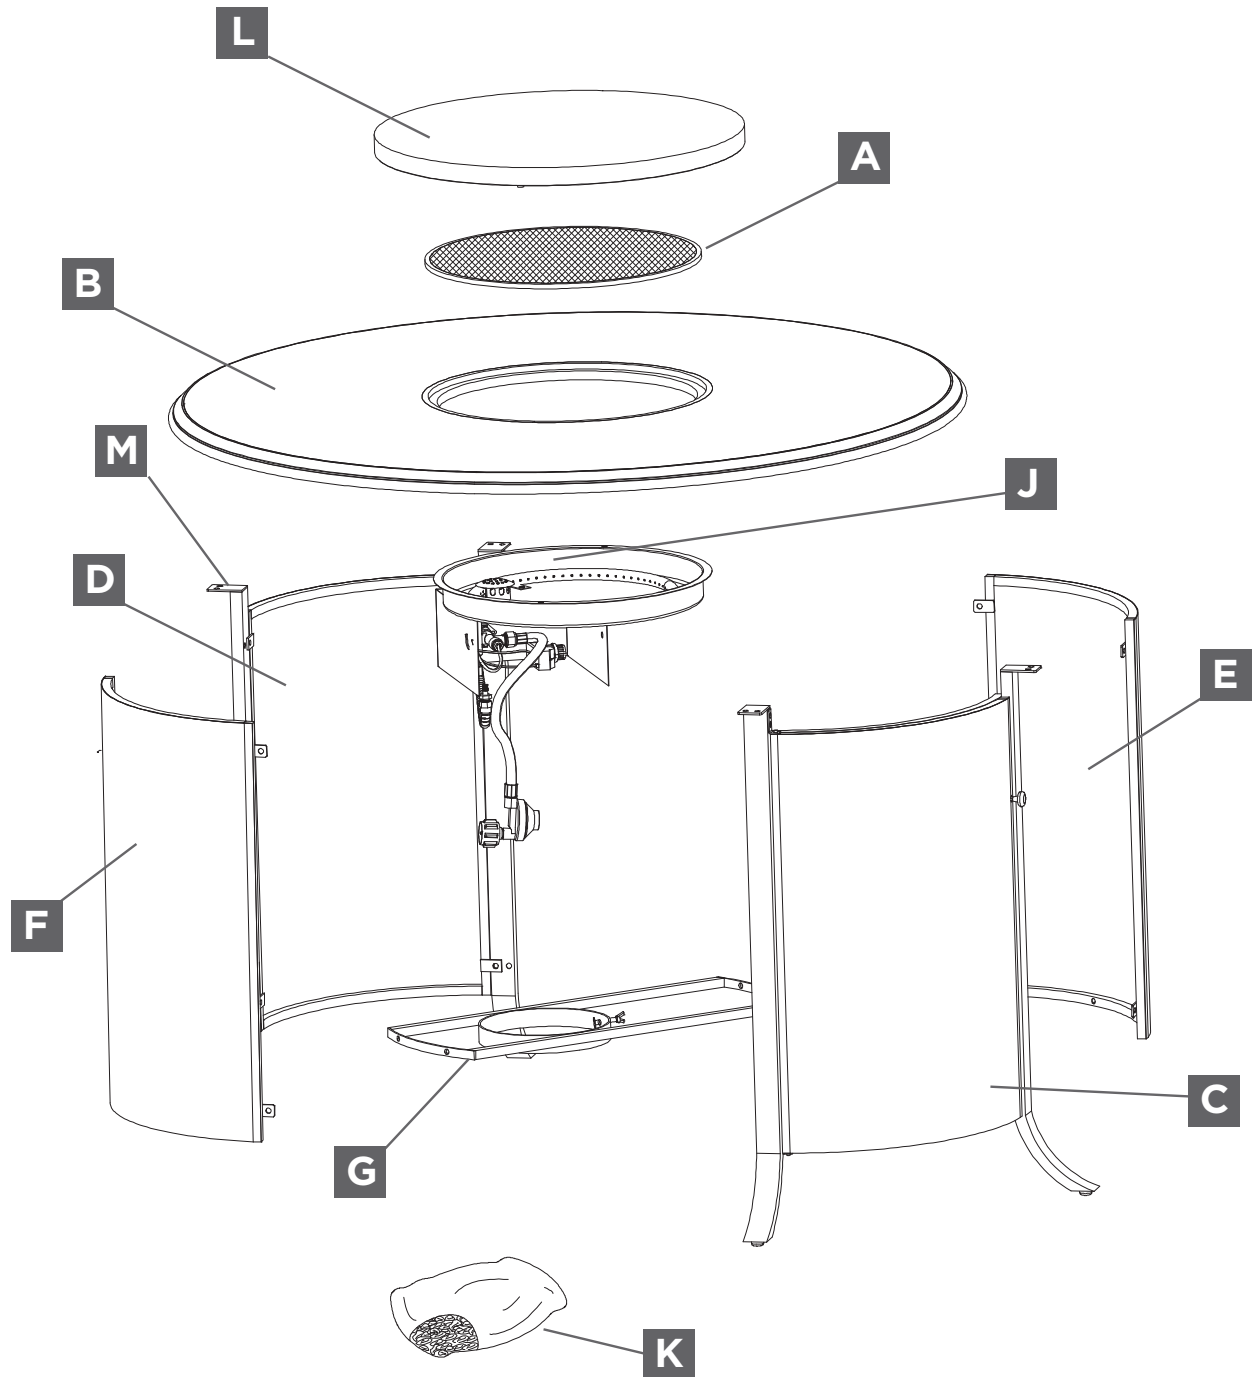

BEFORE YOU BEGIN ASSEMBLY


MAKE SURE ALL PARTS ARE PRESENT

Compare all pieces to the parts and hardware lists, and make sure you have all tools required for assembly.

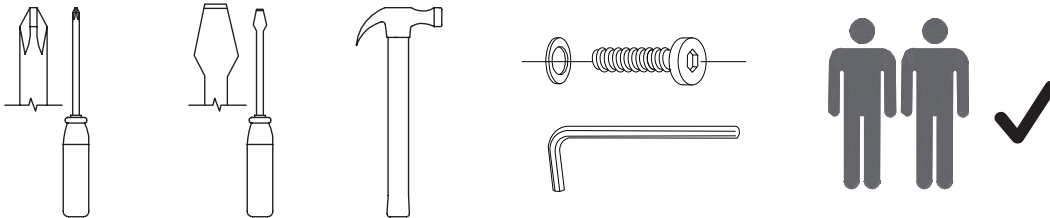


ASSEMBLE IN A CLEARED AREA

Place all parts from the box on the floor in front of you on a clean, dry, level surface to protect the product as it is being assembled.

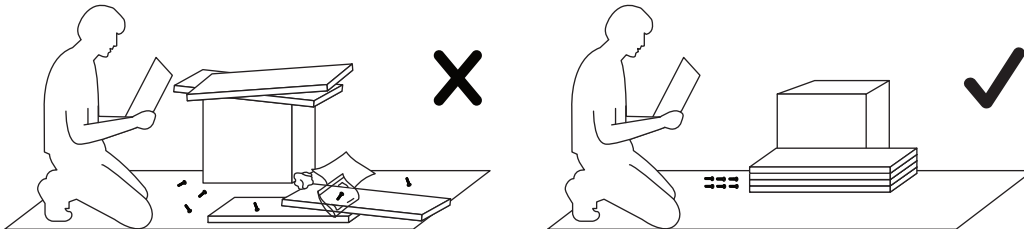


REMOVE PACKAGING MATERIALS

Place packing materials back in the box. Do not dispose of packaging materials until assembly is complete.

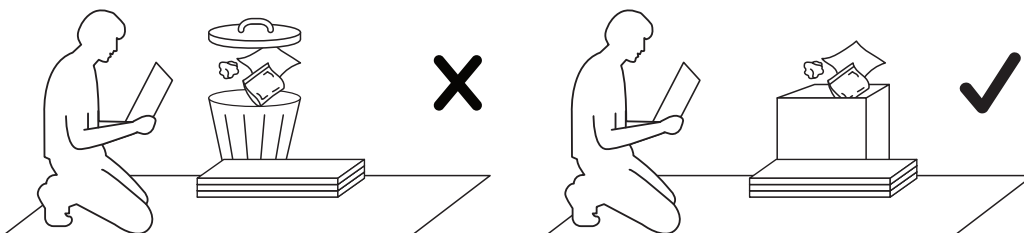

READ EACH STEP CAREFULLY



Make sure you understand each step. If you have questions, contact CANVAS™ customer service at 1-888-660-6684 (toll-free).

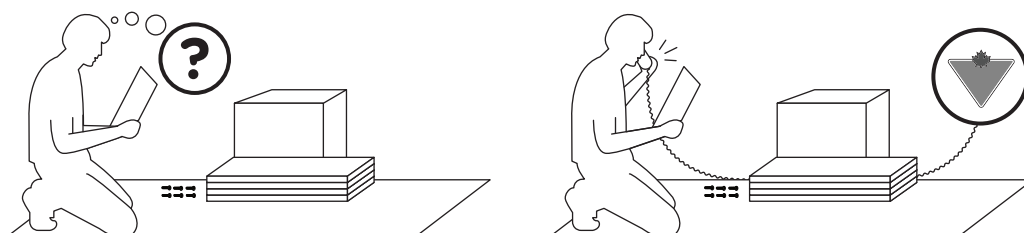

STEP-BY-STEP GUIDE



STEP 1

Place Rear Door **D** face down on a non-abrasive surface. Attach Legs **M** using Bolts **H1** and Flat Washers **H2**. Do not tighten completely.

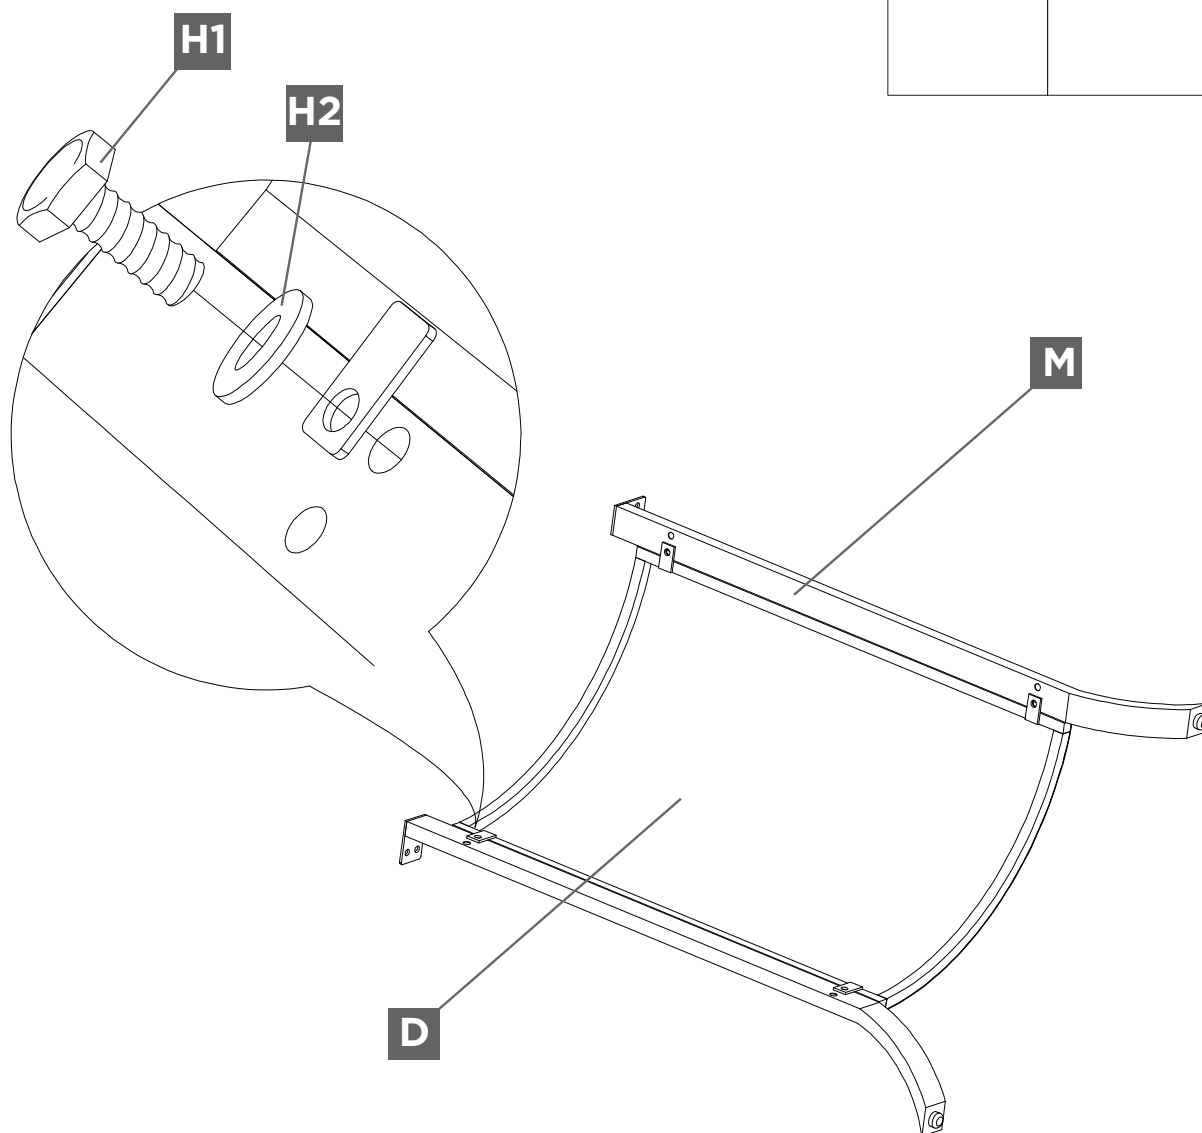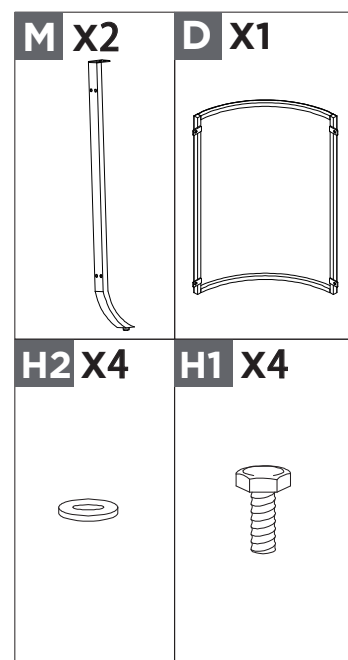

STEP 2



Attach Panel 2 **F** to the Rear Door assembly using Bolts **H1** and Flat washers **H2**.

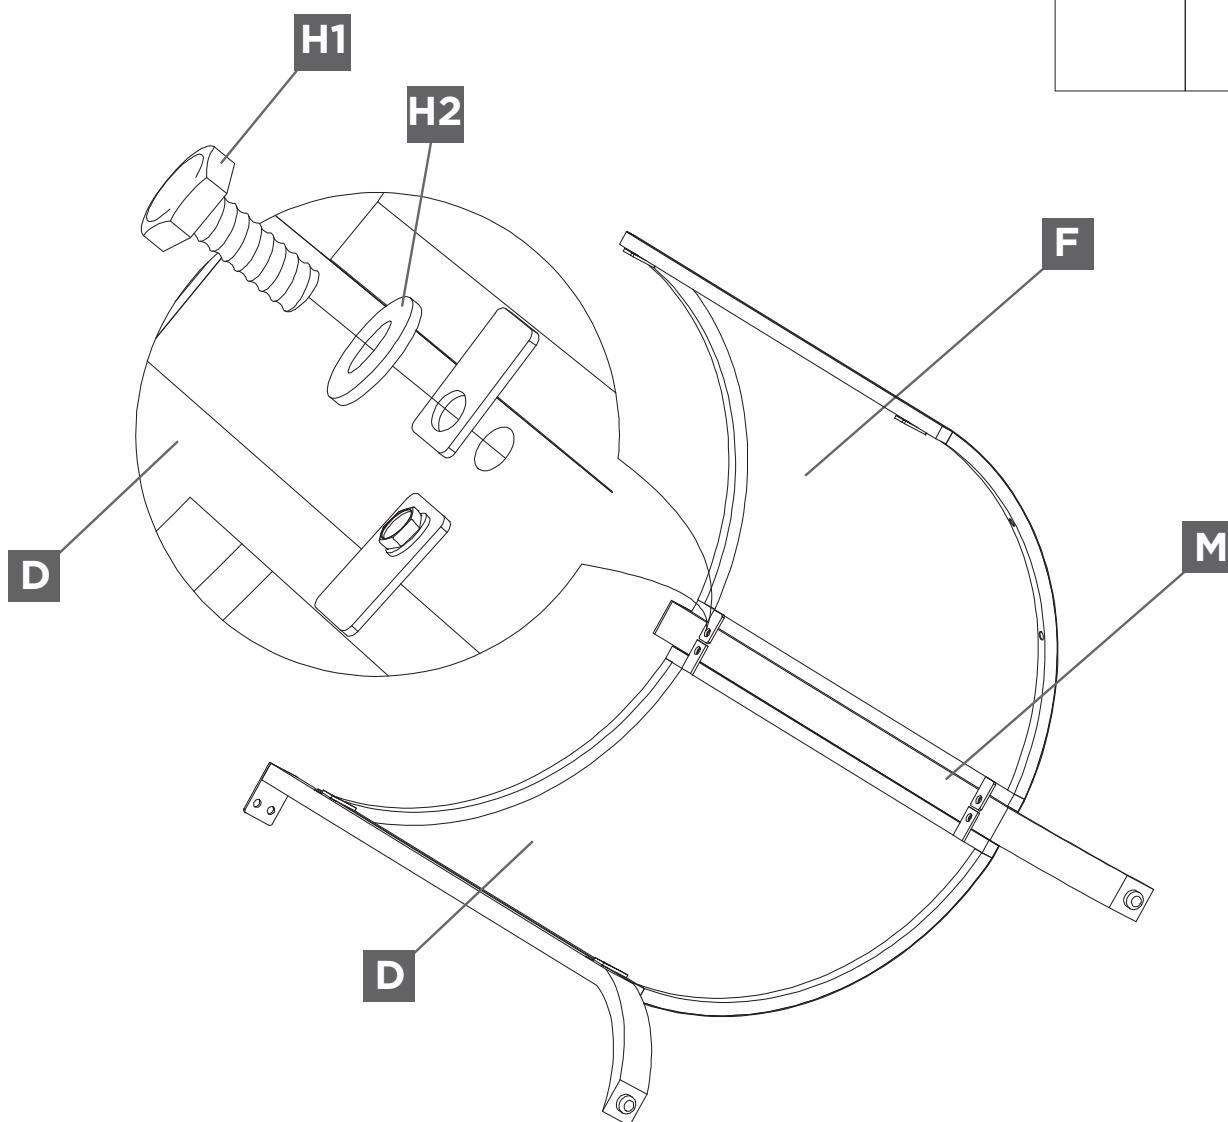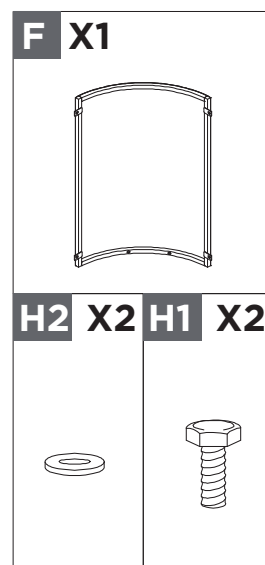

STEP-BY-STEP GUIDE


STEP 3

Attach Panel 1 **E** to the Rear Door assembly using Bolts **H1** and Flat washers **H2**.

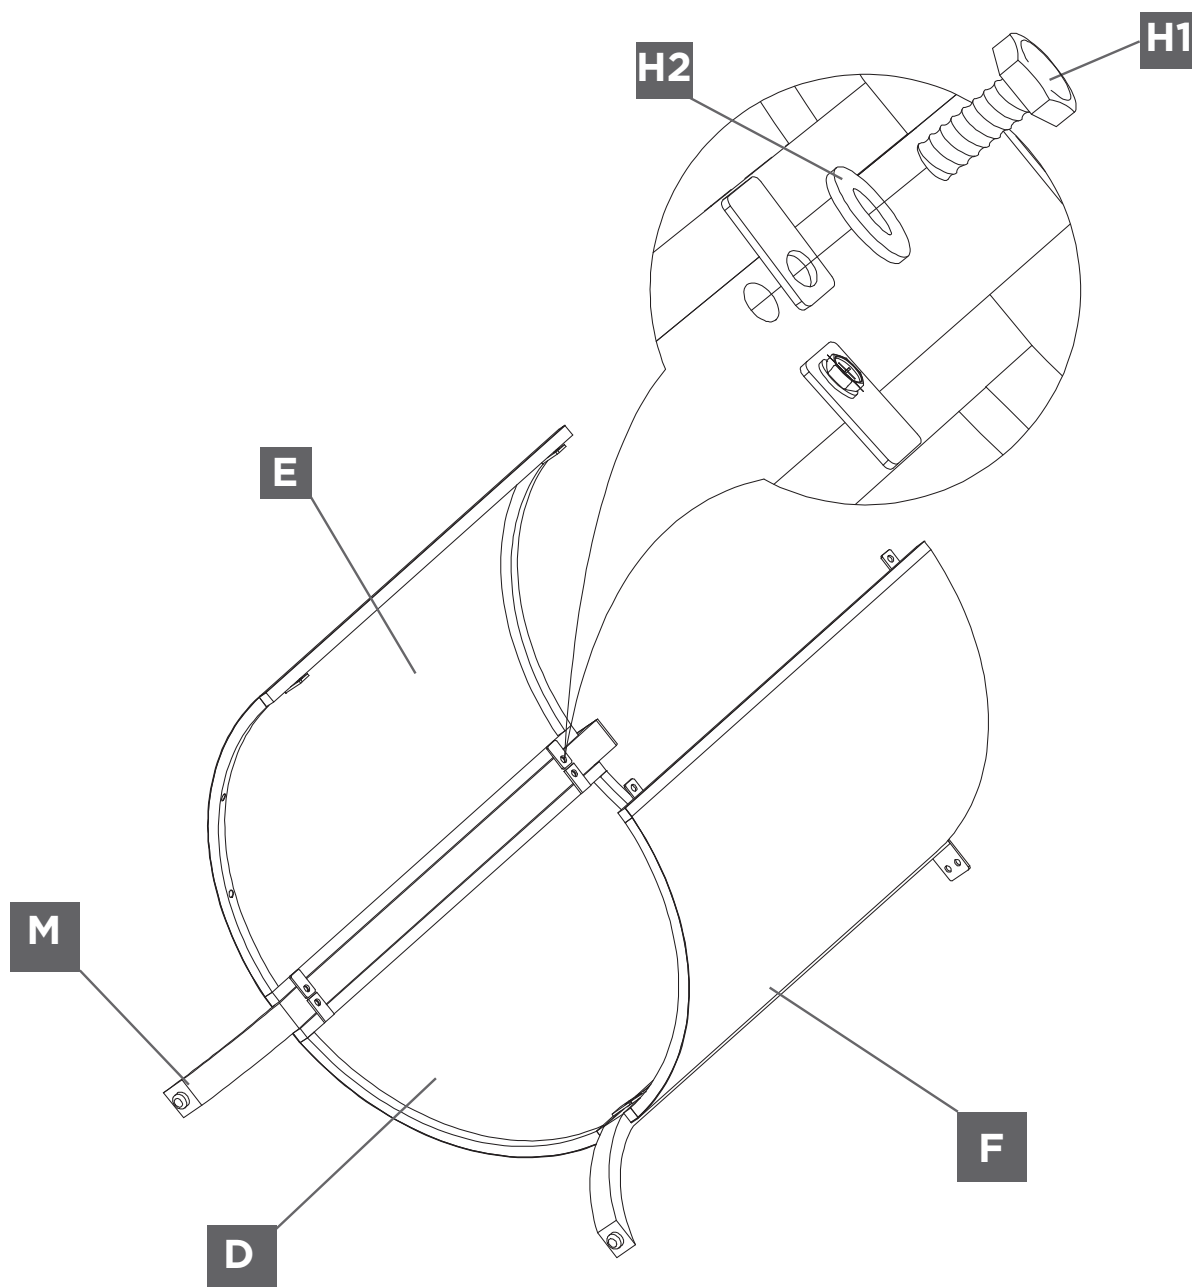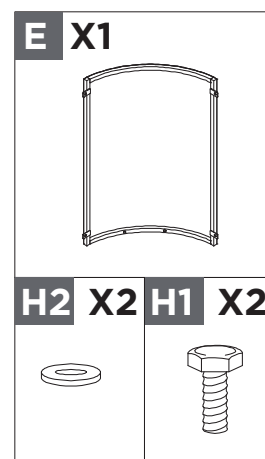

STEP 4



Turn assembly upside down and attach Cylinder Rack **G** using Bolts **H1** and Flat Washers **H2**.

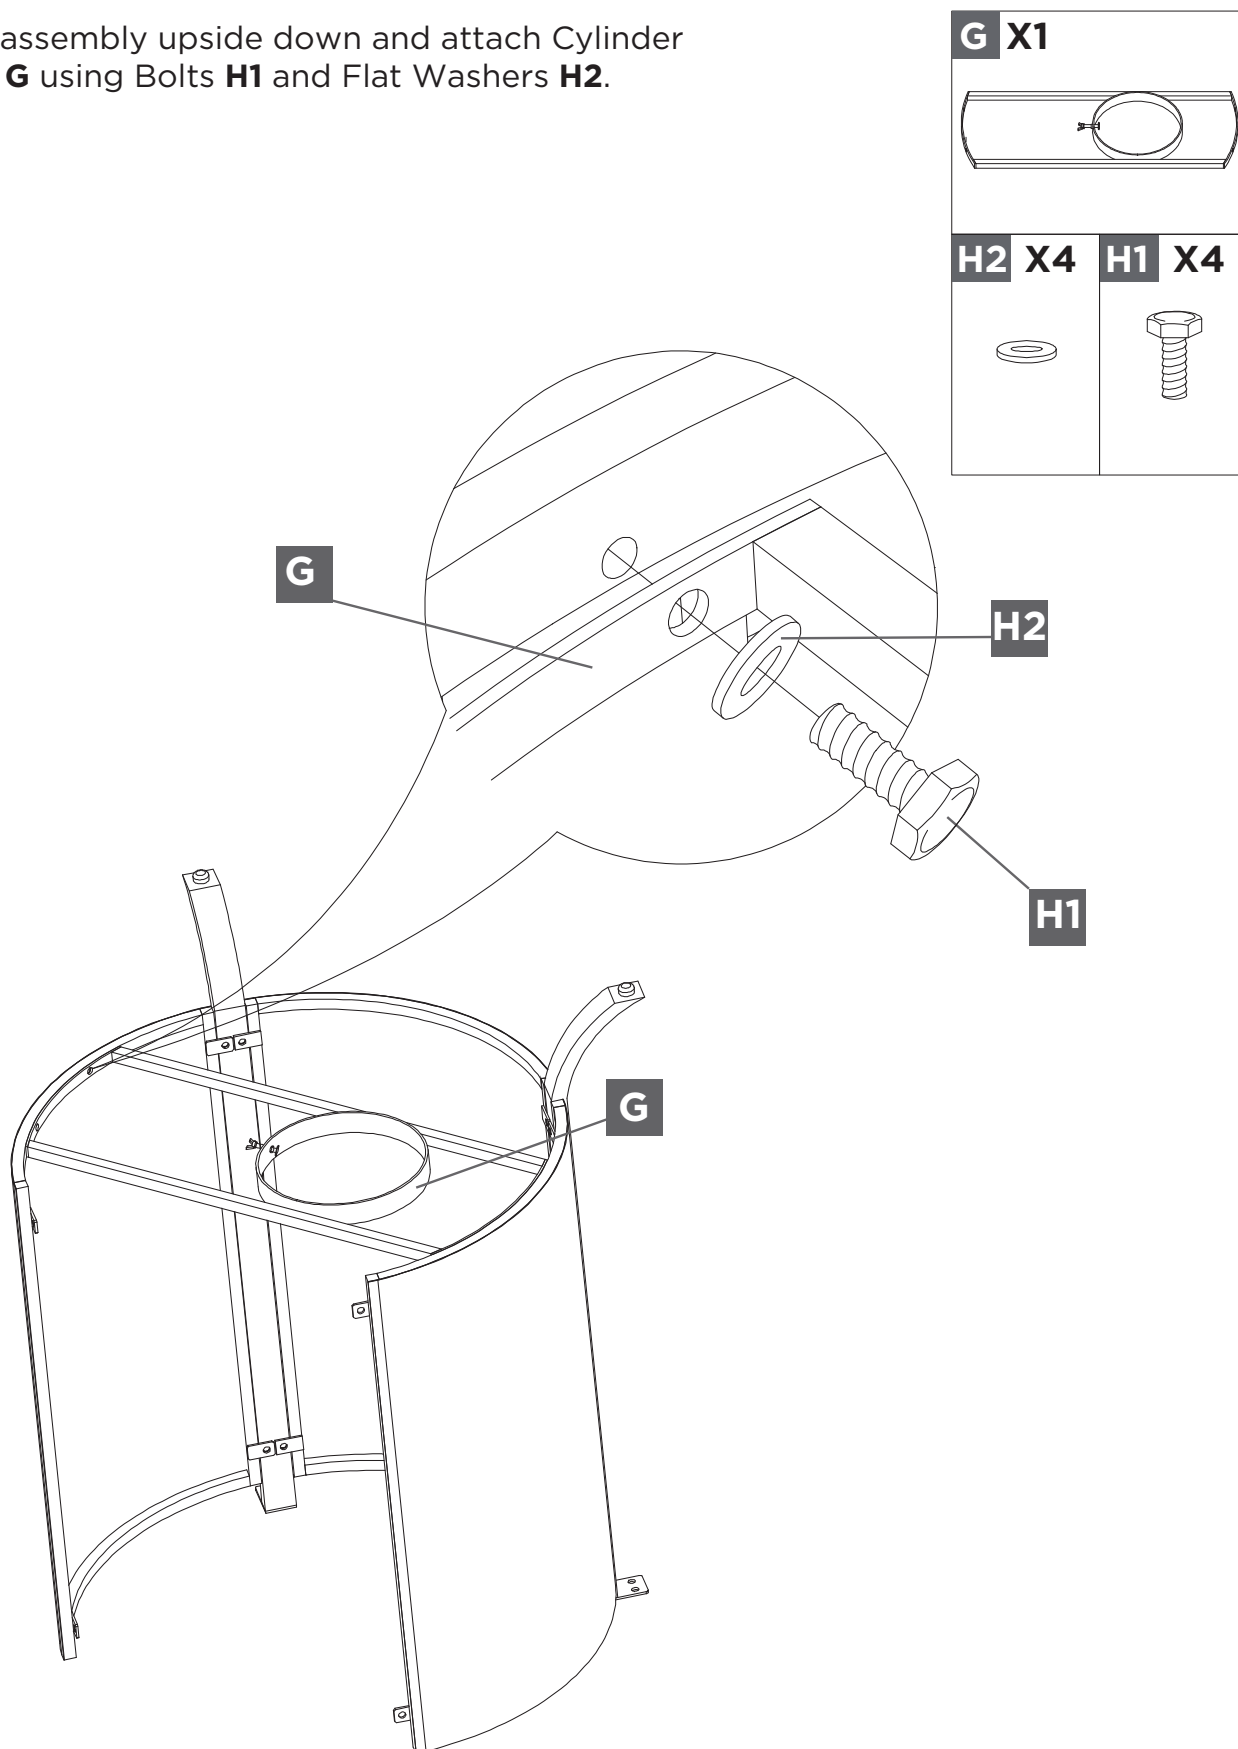

STEP-BY-STEP GUIDE


STEP 5

Attach Door **C** to base assembly using Bolts **H1** and Flat Washers **H2**.

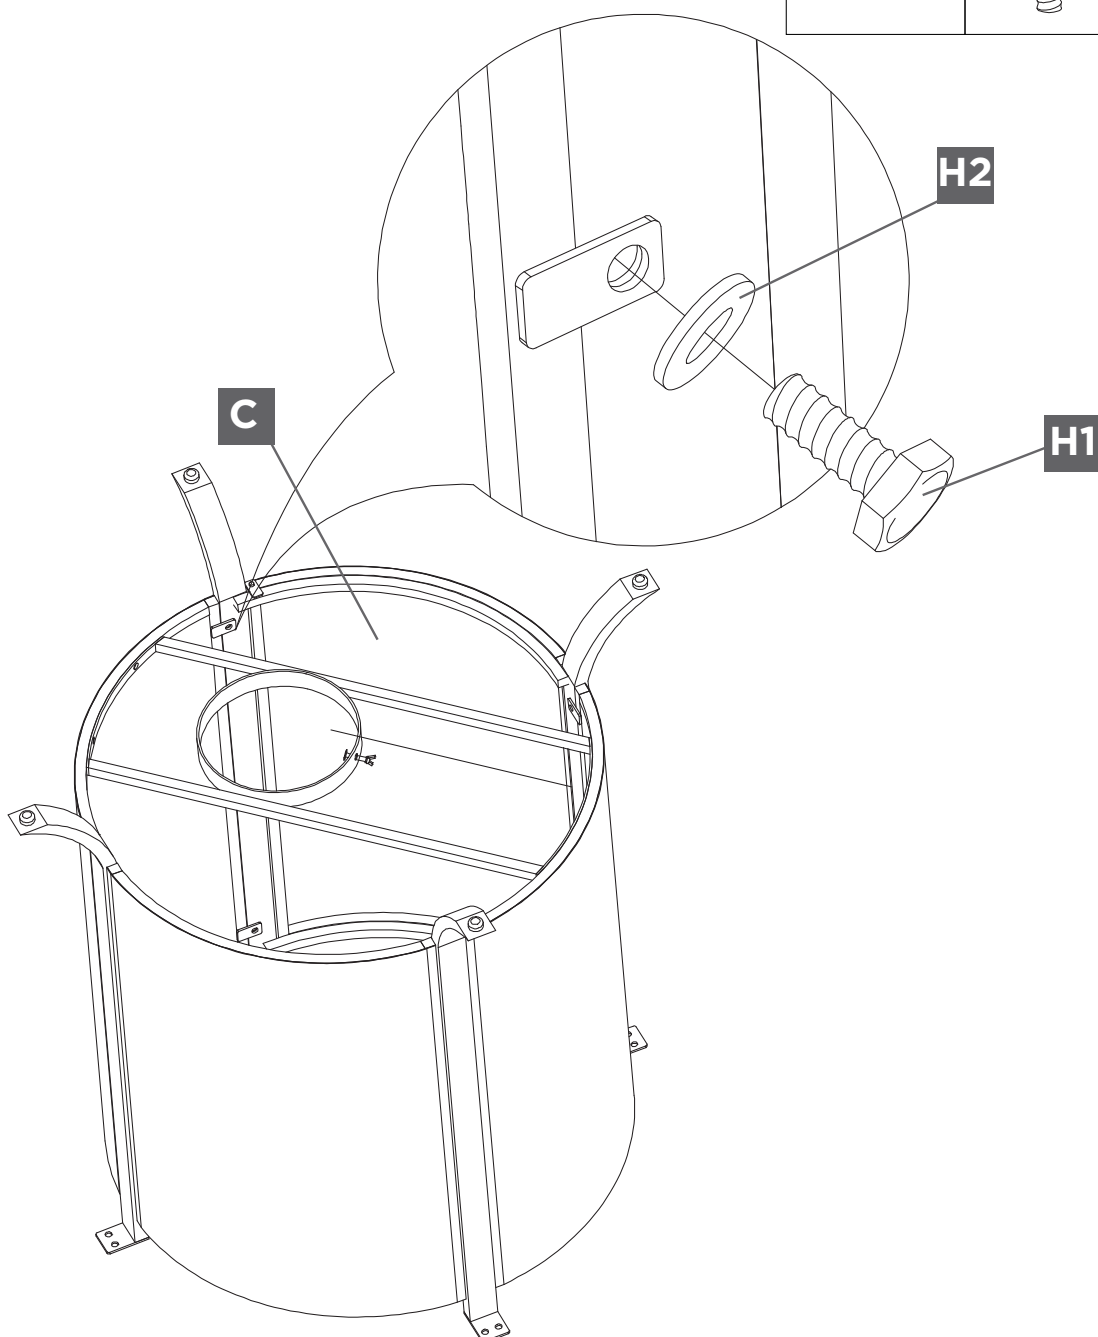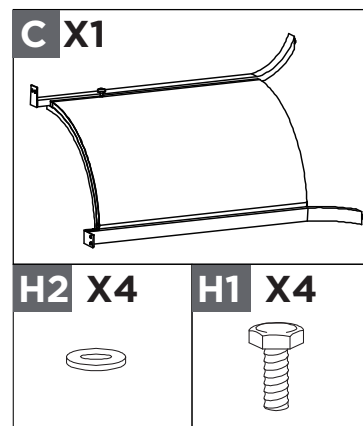

STEP 6



Place Table Top **B** upside down on a non-abrasive surface. Install Fire Bowl **J** to centre using Bolts **H1** and Flat Washers **H2**.

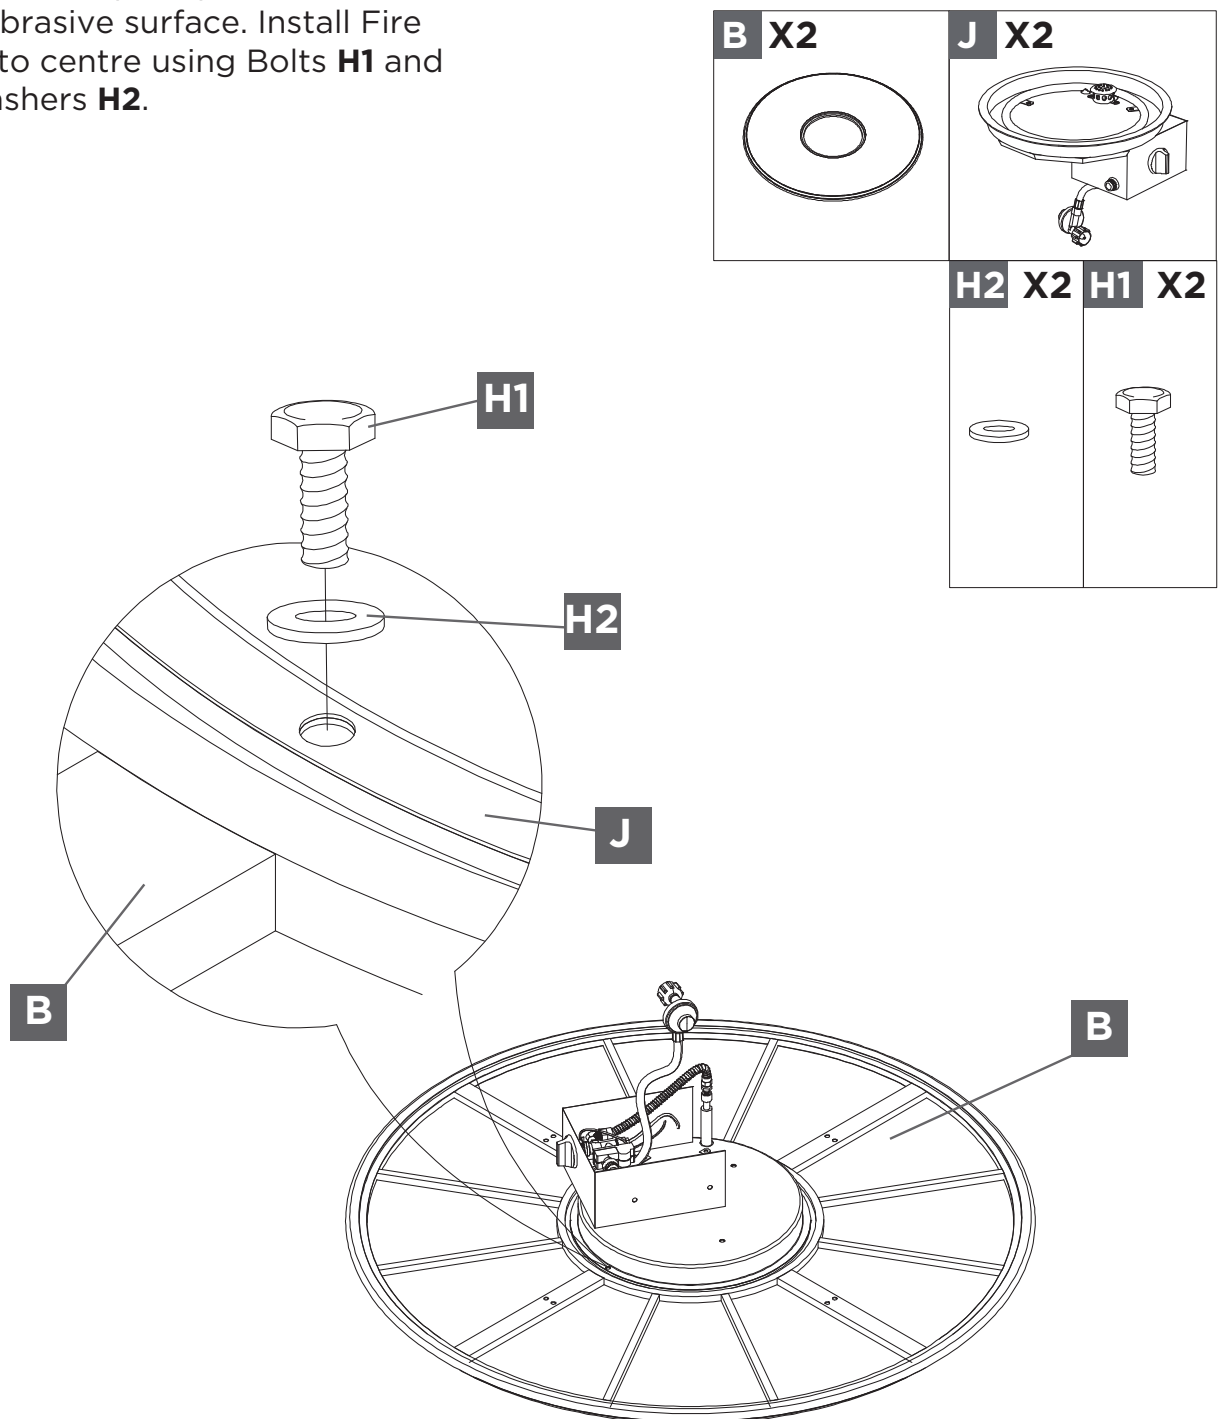

STEP-BY-STEP GUIDE


STEP 7

Place base assembly upside down onto Table Top assembly as shown below and fasten using Bolts **H1** and Flat Washers **H2**.

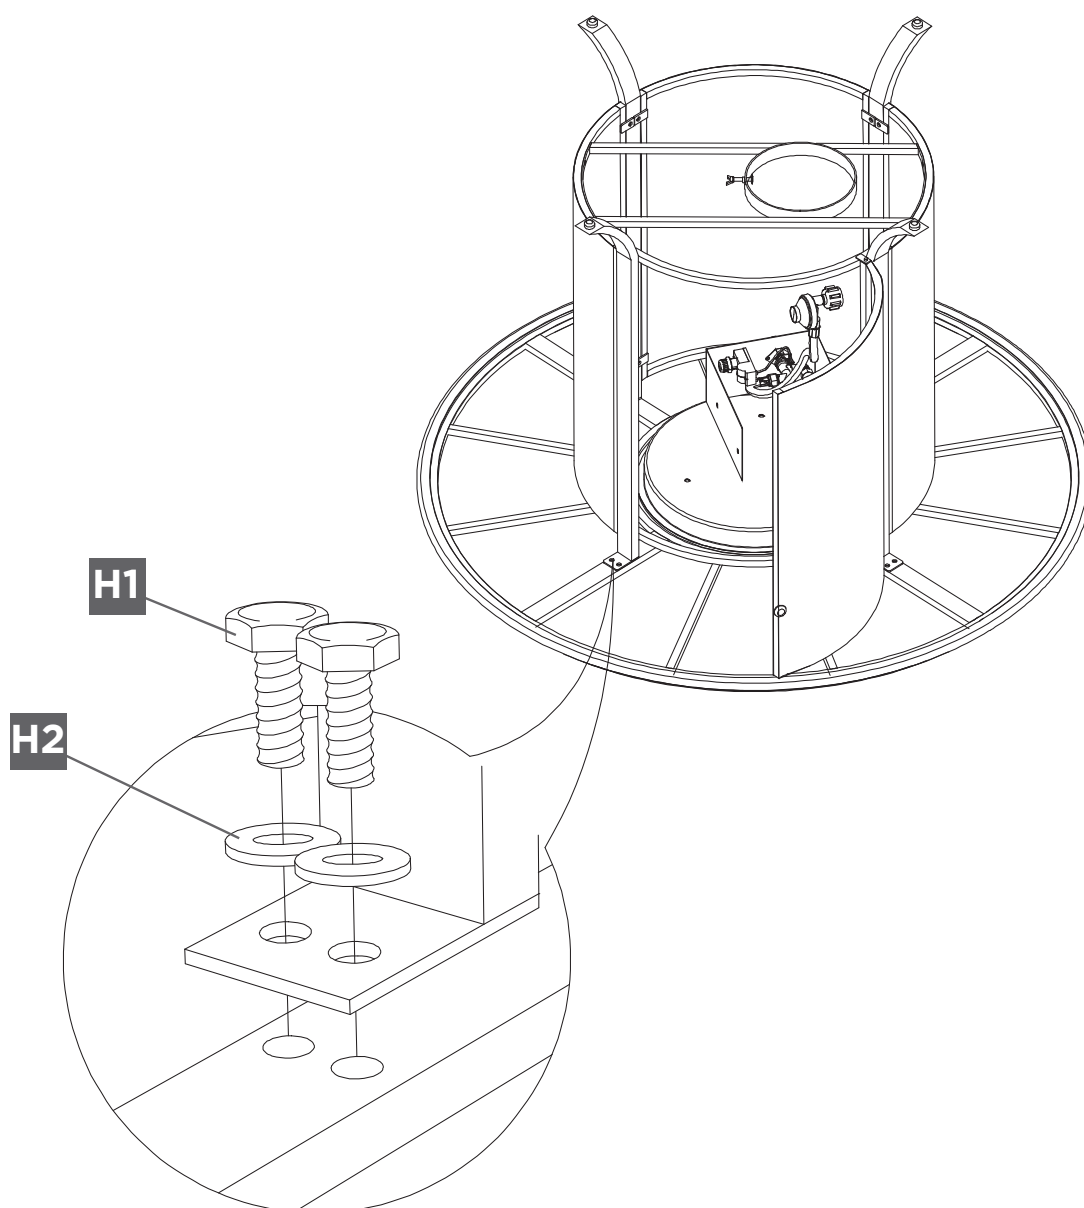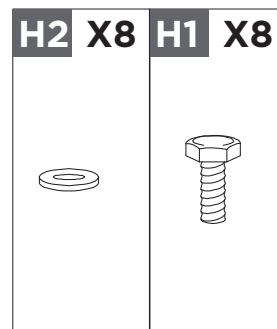

STEP 8



Turn Fire Table assembly upright.
Pour Glass Rocks **K** into centre of
Fire Table and place Metal Mesh
Lid **A** on top.

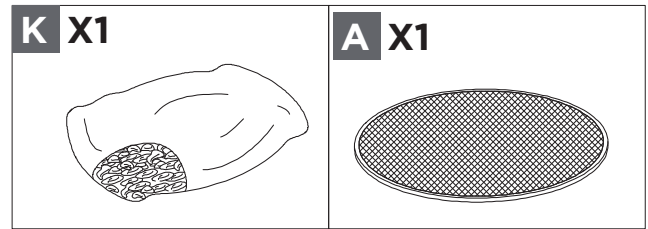

STEP-BY-STEP GUIDE

STEP 9

Place Turning Tray **L** over centre of Table Top to cover fire pit as desired.

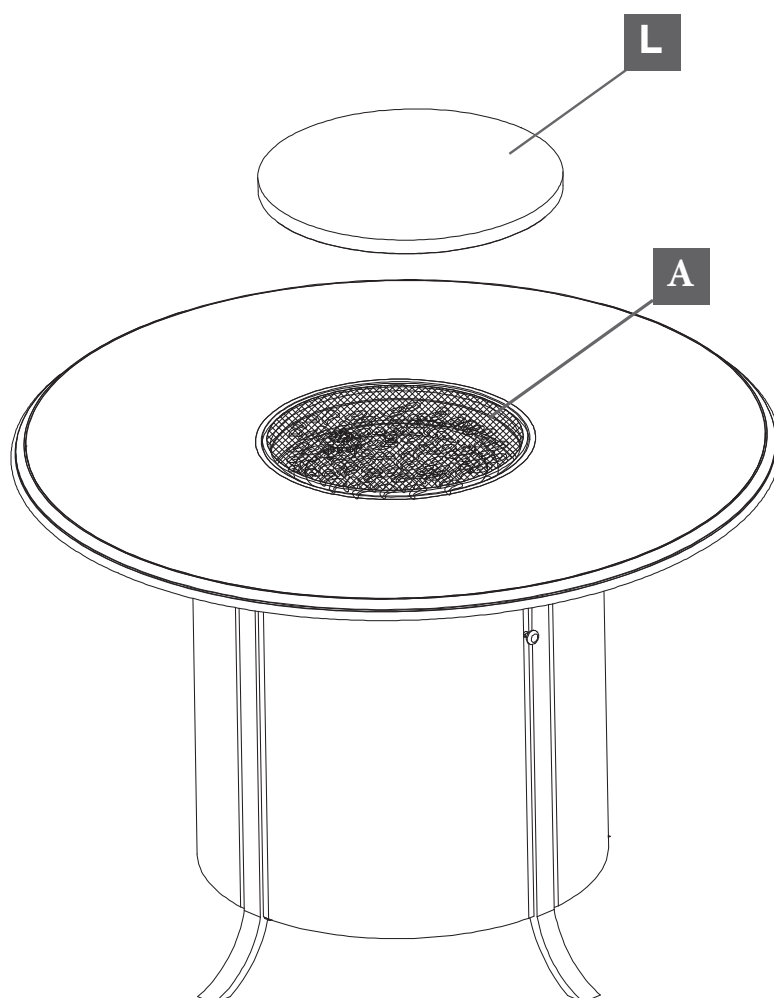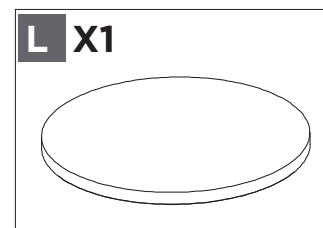

LOCATION

Your gas appliance must be installed on a flat, stable surface, away from any combustible materials or construction.

SETUP

Your gas appliance comes assembled, ready for a gas connection.

1-Remove the appliance from container box and place it on any level, outdoor, non-combustible surface.

NOTE: Do not place this appliance on grass or dirt area. This may prevent proper safety venting.

2-Open the gas door and put the cylinder inside.

3-Unscrew the battery box as shown in Fig. 1. Insert the negative electrode side of the battery into the bottom of battery box as shown in Fig. 2. Then screw the battery box as shown in Fig. 3.

Fig. 1

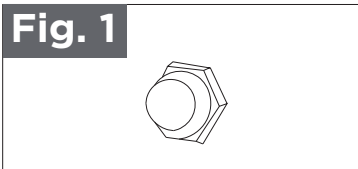


Fig. 2


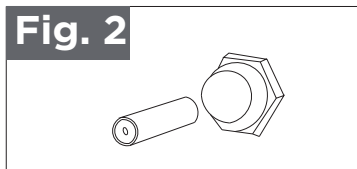


Fig. 3

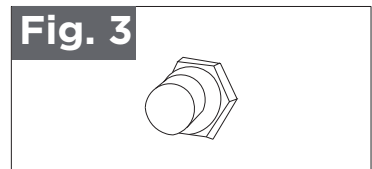

GAS CONNECTION

1) Open the door and control valve outside. See Fig 4.

2) Put the cylinder into the cylinder rack. See Fig 5.

3) Connect the regulator and the cylinder as per Fig. 6. Make sure there is no leakage or damage (please refer to “Leak Test” on page 20 and the safety information on page 6).

4) Turn the butterfly nut on the cylinder frame, so that the nut is held against the bottom of the cylinder, to make sure the cylinder can be fixed. See Fig 7.

5) Disconnect the regulator and the cylinder as per Fig 8.

Fig. 4

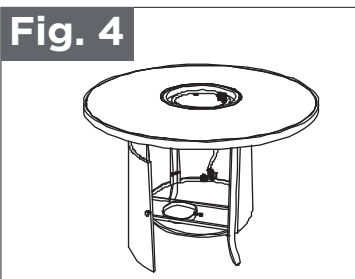


Fig. 5

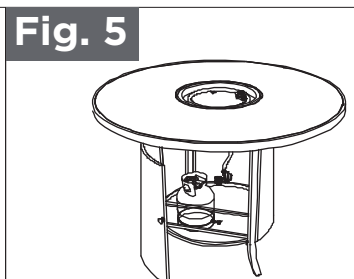


Fig. 6

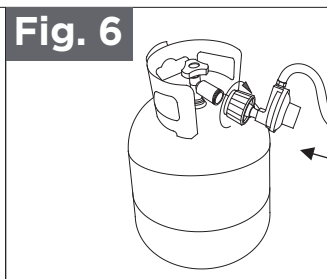


Fig. 6

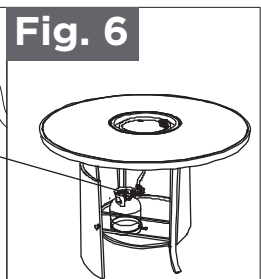


Fig. 7

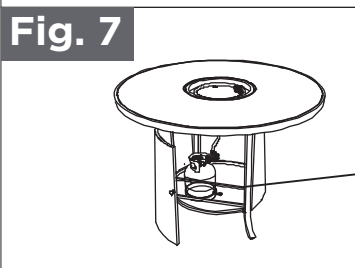


Fig. 7


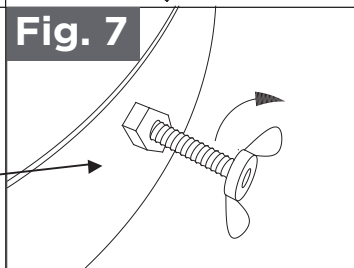


Fig. 8



LEAK TEST

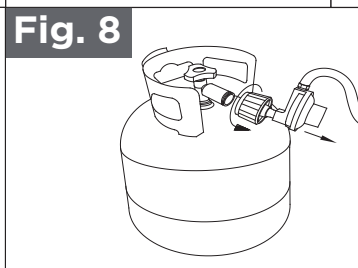


WARNING:

- Do not use an open flame to check for leaks.
- Do not smoke during testing.
- Do not test indoors.
- A leak test must be performed whenever the gas cylinder is replaced.


1. Make sure the control knob is in the "OFF" position.
2. Make sure the gas cylinder is correctly and securely connected to the pressure regulator, without over-tightening.
3. Turn on the gas cylinder valve. Apply 50% soap and 50% water solution to the gas hose and connections between the control knob and gas cylinder.
4. If gas is leaking, you will see bubbles form. In case of leaks, turn off the gas supply, undo the leaking connection, re-connect it and try again. If the leak persists, consult Customer Service Centre for assistance at 1-888-670-6684.
5. If the connection does not leak, continue to the next step.

LIGHTING

1. Push in and turn control knob to LOW.
2. If the burner is not lit, turn the knob back to "OFF". Wait 5 minutes and repeat step 1.
3. If burner is lit, continue to depress control knob for 1-2 minutes until the thermocouple is hot.
4. Release control knob and the burner should stay lit.
5. Turn control knob to desired heat setting: LOW - HIGH.
6. Turn control knob to OFF to shut down. Turn off gas supply at cylinder. Allow a 5-minute complete shut-off period before relighting the appliance.

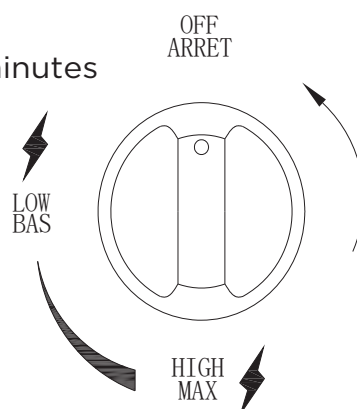

NOTE: While in use, the burner flame should be mainly blue in appearance with a small amount of yellow. The flame can be identified by the following figure.

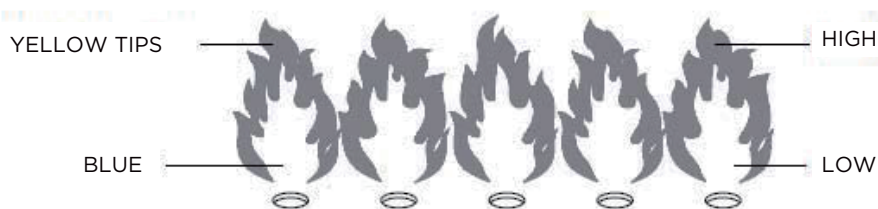

Correct Flame



Incorrect Flame


Warning: Lighting the fire table improperly could lead to an unsafe condition.

7. Press and turn the control valve knob clockwise to OFF to shut down the fire pit. Close the gas cylinder valve when the fire pit is not in use.
(CAUTION: Do not kink flexible gas hose. If it is kinked, a gas leak could occur.)


STORAGE AND MAINTENANCE

To obtain the best performance from your fire table, you must perform the following storage and maintenance activities on a regular basis:

- Allow at least 35 minutes for the fire table to cool down after use, before disconnecting and removing the gas cylinder.
- Store the gas cylinder in a dry, well-ventilated and sheltered area protected from inclement weather and dust, out of the reach of children, and not in a building, garage or any other closed area.
- The fire table may be stored indoors only if the cylinder is disconnected and removed.
- Keep the fireplace area clear and free from combustible materials, gasoline and other flammable vapours and liquids.
- **Installation and repair should be done by a qualified service person. The fire table should be inspected before use and at least annually by a qualified service person. More frequent cleaning may be required as necessary. It is imperative that the control compartment, burner, and circulating air passageways of the fire table be kept clean.**
- If you disassemble the burner when cleaning the fire table, please reassemble it according to the picture on the right to make sure the burner induction tunnel is on and exactly covers the orifice base. It is imperative that the control compartment, burner, and circulating air passageways of the fire table be kept clean. It is recommended not to disassemble the burner.
- Permanent installation and repair should be done by a qualified service person. The fire table should be inspected annually by a qualified service person.

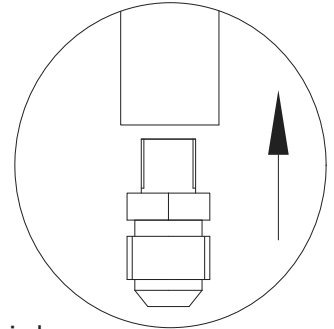

TECHNICAL DATA

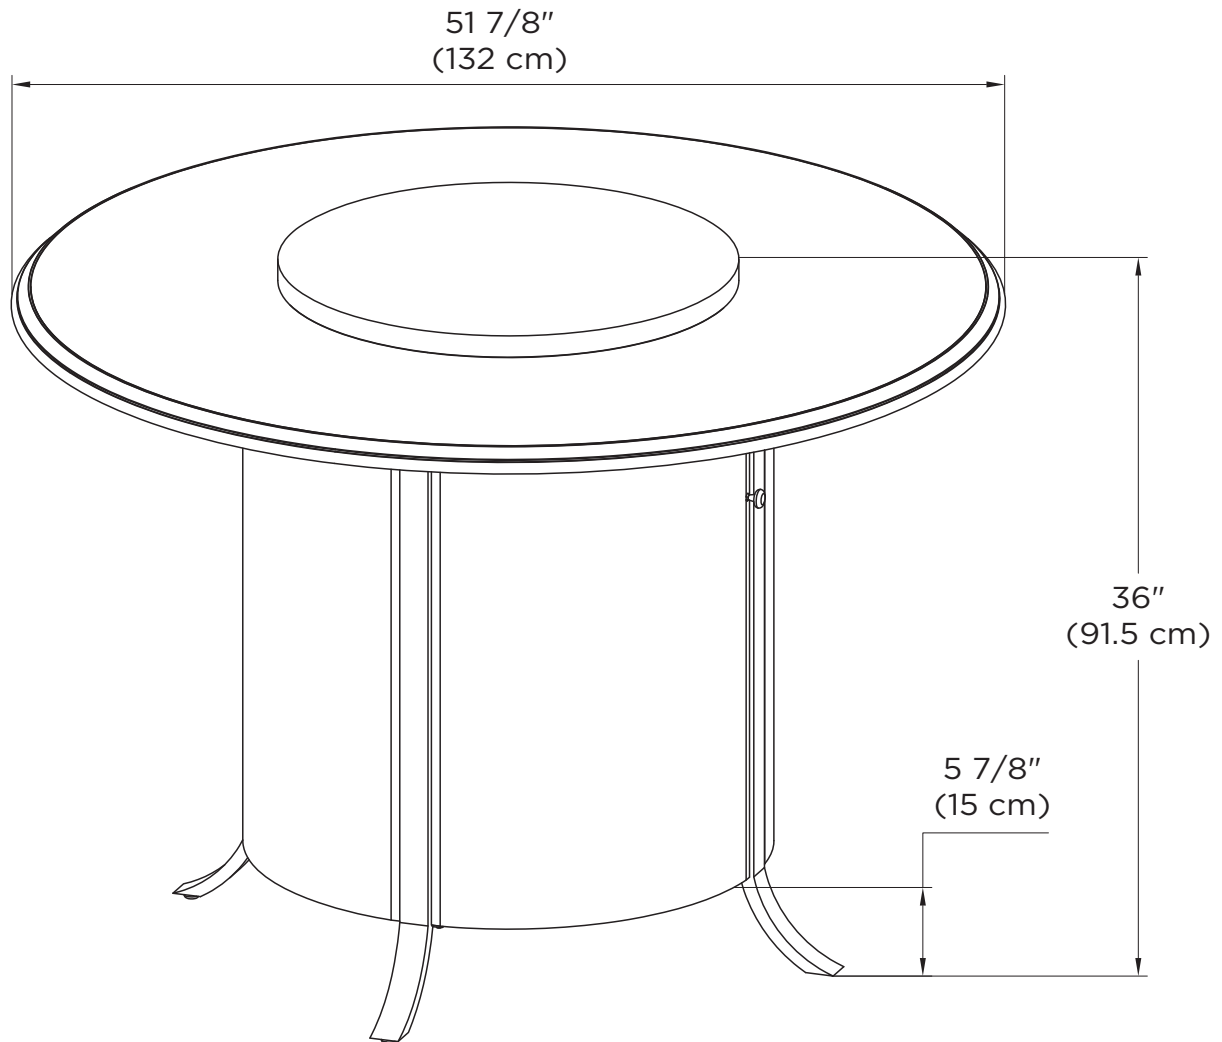

SPECIFICATIONS

ASSEMBLED DIMENSIONS (W x D x H)

$51 \frac{7}{8}" \times 51 \frac{7}{8}" \times 36"$

132 x 132 x 91.5 cm

ASSEMBLED WEIGHT

121 lb 3 oz

55 kg


TROUBLESHOOTING



**BEFORE RETURNING
YOUR PRODUCT**

**HAVING TROUBLE?
LET US HELP YOU!**

**TOLL-FREE:
1-888-670-6684**

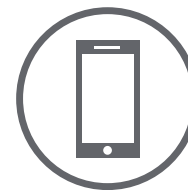

**CALL US,
WE CAN HELP**

If you have questions regarding your product or require warranty assistance, please call our customer service helpline.

PROBLEM OBSERVED	POSSIBLE CAUSE	CORRECTIVE MEASURES
Gas odour	Gas leak	See “If you smell gas:” on page 3 of manual. Check all gas connections.
Delayed ignition	Low gas pressure Clogged or dirty burner ports Blocked orifice Spent battery	Check gas supply pressure. Clean burner ports—see manual section. Check orifice opening. Replace battery.
Incorrect burner flame	Incorrect gas supply or pressure Blocked orifice Clogged or dirty burner ports	Check gas supply pressure. Check and clean orifice opening. Clean burner ports.

LIMITED WARRANTY



1-YEAR LIMITED WARRANTY*

This CANVAS™ product carries a one (1) year warranty against defects in workmanship and materials. Trileaf Distribution agrees to replace the defective product free of charge within the stated warranty period, when returned by the original purchaser with proof of purchase. This product is not guaranteed against wear or breakage due to misuse and/or abuse.

MODEL NO. 088-0538-4

Made in China

Imported by Trileaf Distribution Trifeuil Toronto, Canada M4S 2B8

CANVAS™

INSPIRED BY CANADA

