
CANOPY FOR 88-0342 HAVANA GAZEBO

MODEL NO. 088-1044-2 PRODUCT NO. A111001300

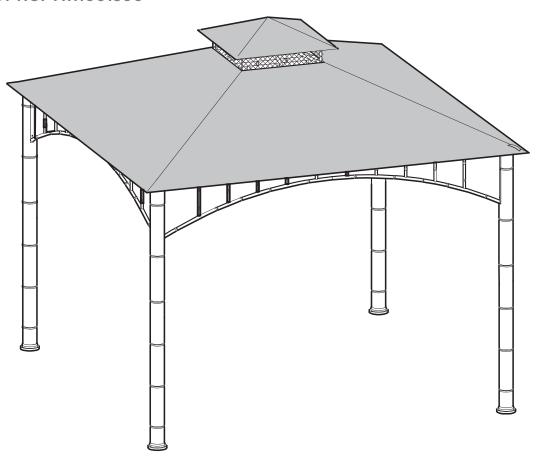

ASSEMBLY INSTRUCTIONS

Toll-free: 1-888-670-6684

IMPORTANT: Please read this manual carefully before beginning assembly of this product. Keep this manual for future reference.

Production Number:xxxxxxxx

Table of Contents	3
Important Safety Instructions	3
Parts List	4
General Requirements	4
Assembly	5-12
Cleaning and Maintenance	13
Technical Data	13
Warranty	13



Warning! Please read and understand the manual before proceeding with assembly. To check and ensure all parts present without breakage.






Let us help you! DO NOT RETURN YOUR PRODUCT TO THE STORE. CALL US FIRST! 1-888-670-6684

If you have questions regarding your product, require warranty assistance, or have damaged or missing parts, please call our customer service toll-free helpline. Contact us for assistance; we'rehere to help.


IMPORTANT: Please read and understand this manual before any assembly. Before beginning the assembly of product, make sure all parts are available. Compare parts list with packaging contents. If any part is missing, or if you have any questions, contact the service centre at 1-888-670-6684 (toll-free).


Unpack and place all the parts from the packaging box in an open area and position them on the floor. Remove all packing materials and place them back into the box. Do not dispose of the packing materials until assembly is complete. Read each step carefully before beginning any assembly and make sure you understand each step. If you are missing a part, please call our toll-free number for assistance: 1-888-670-6684.


Needed for assembly: The following tooling not included in the package

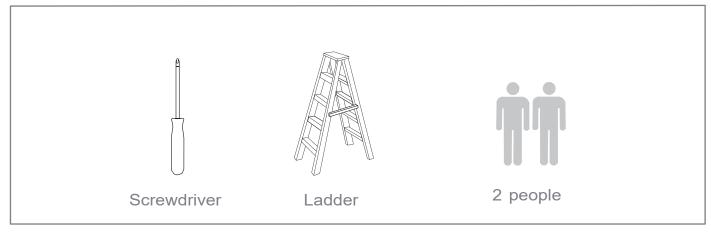


1

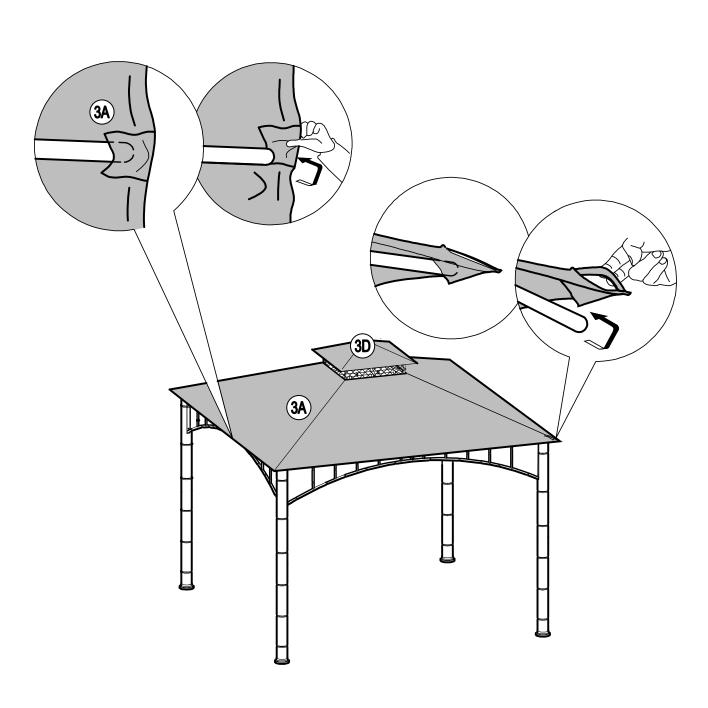

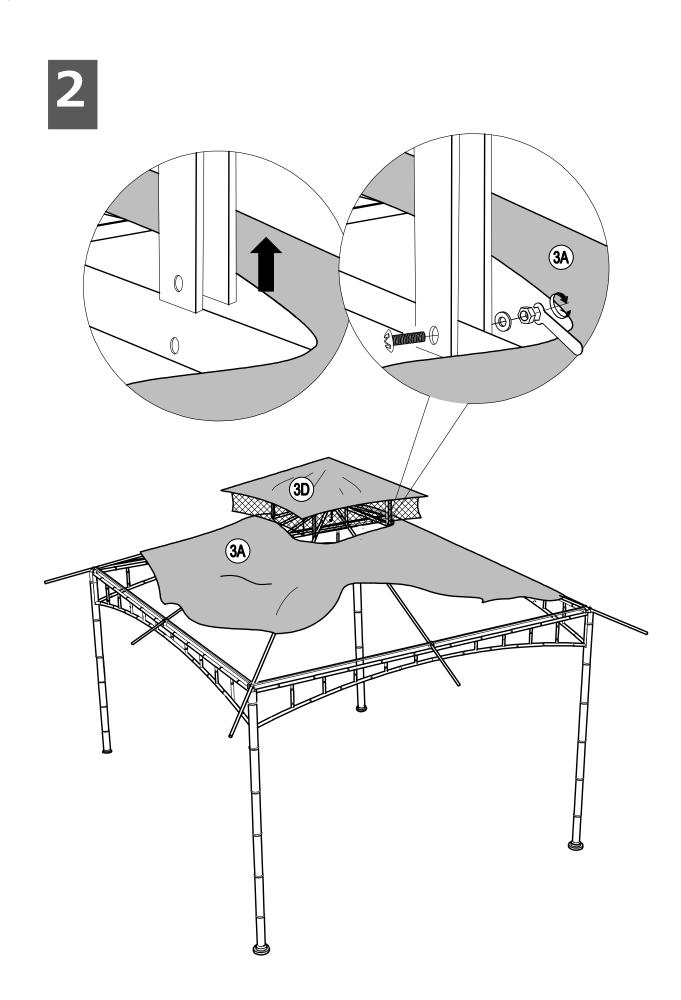


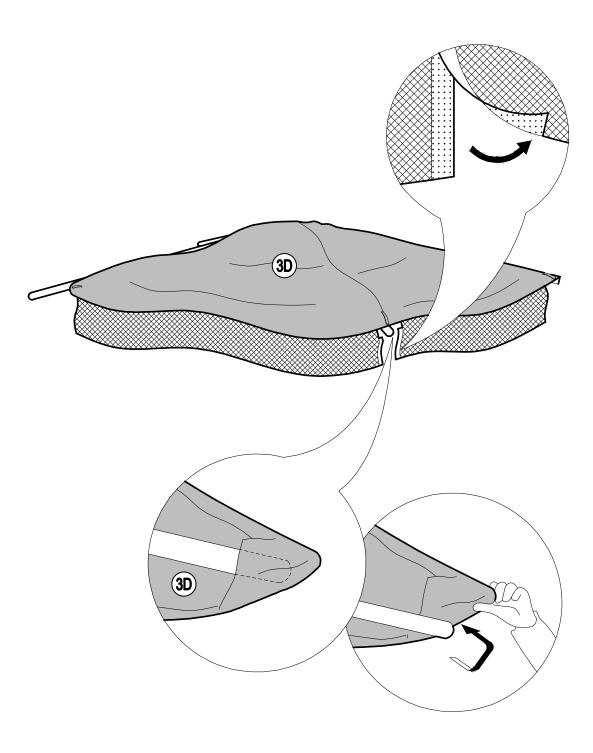





 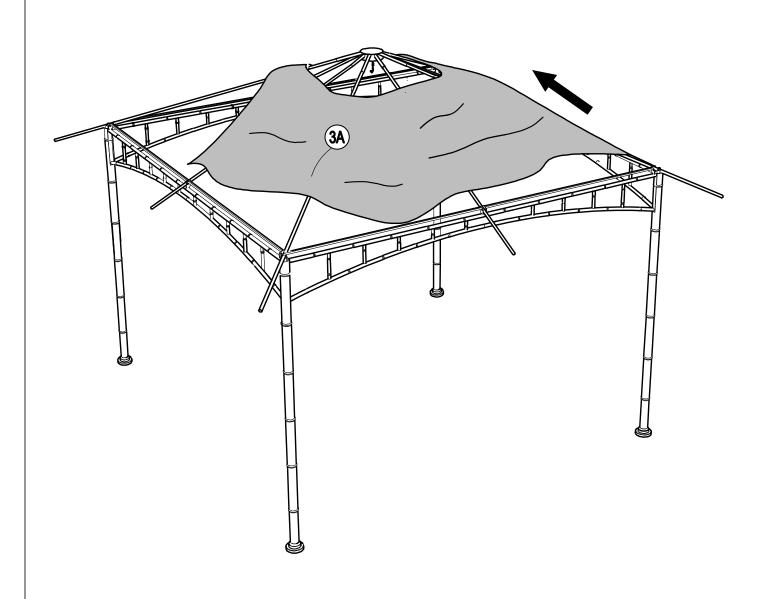





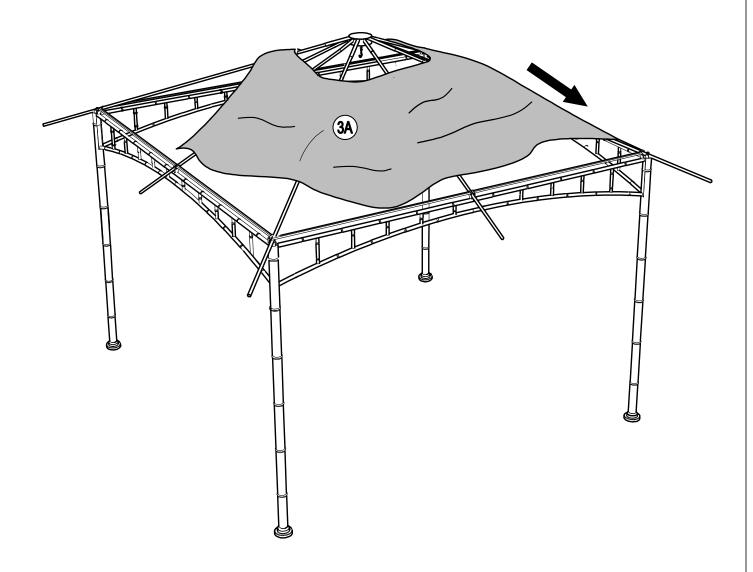


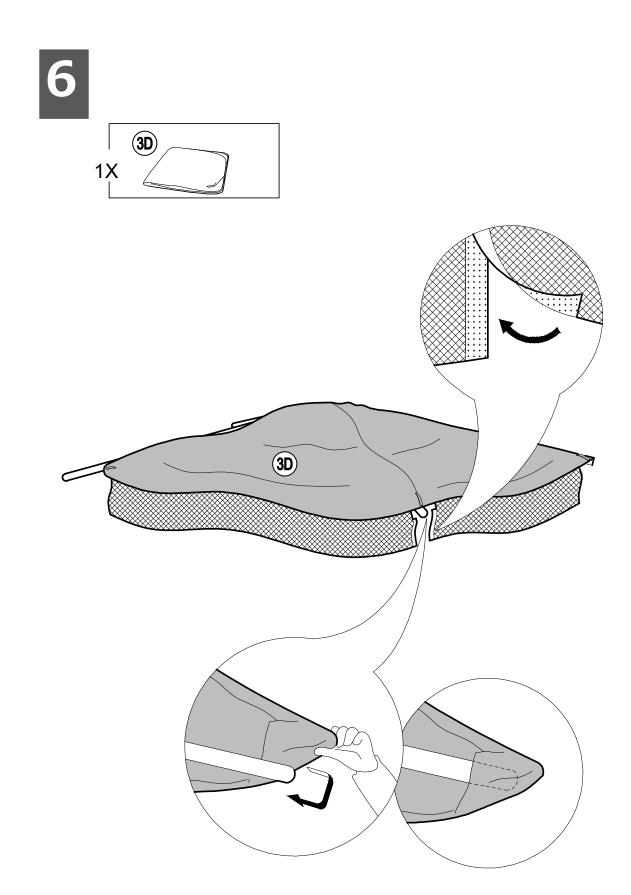


ASSEMBLY

CANVAS



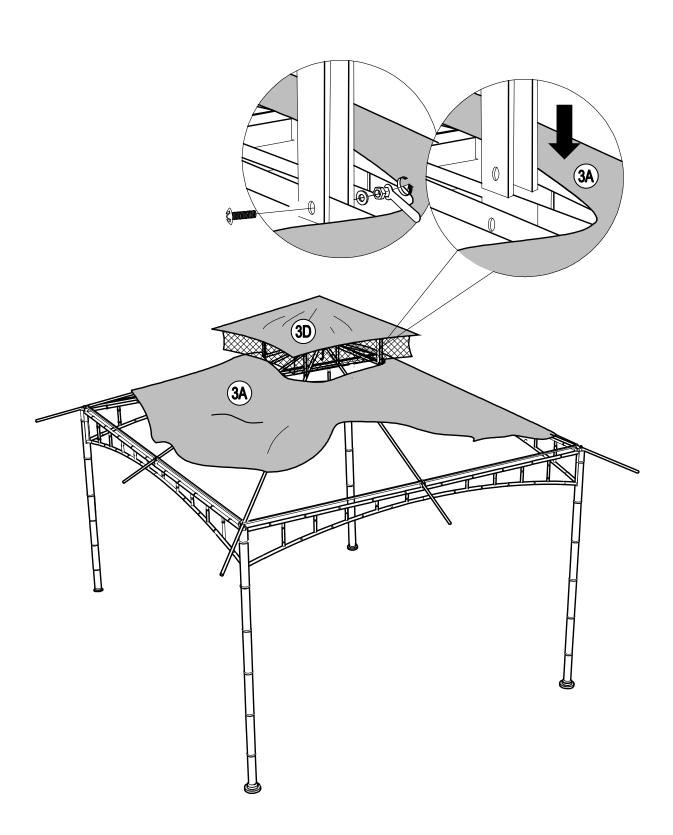



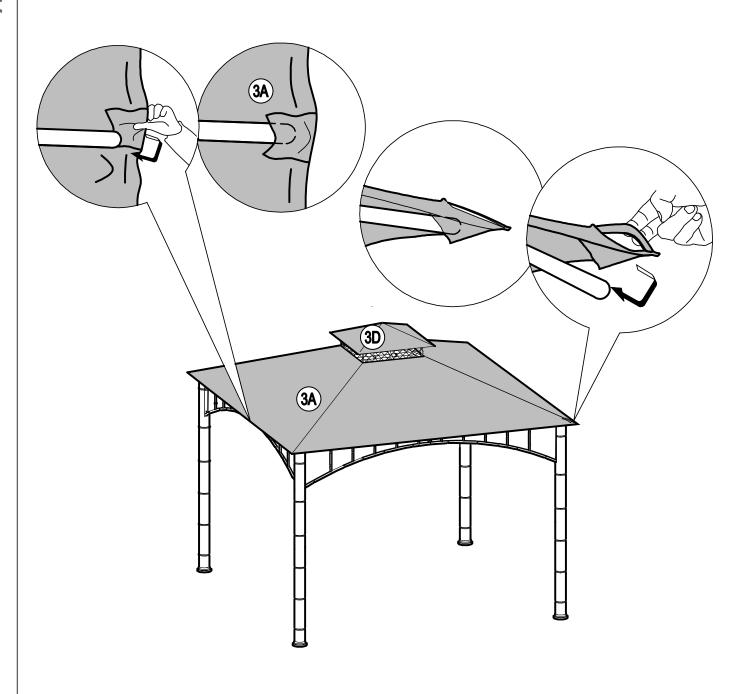



CAUTION!

- Check all screws and nuts periodically for tightness; fasten them as required.
- Disassemble the gazebo in reverse order of the steps used to assemble. Always disassemble the gazebo completely. A partially-disassembled gazebo is not stable enough to resist wind and bad weather, and therefore can be damaged and/or cause damage.

Dimensions (L x	$W \times H$)	127.75" x 127.75" x 35.82"

	324.5 x 324.5 x 91 cm
Product weight	5.5 lbs
	2.5 Kg

This product carries a one (1) year warranty against defects in workmanship and materials.

Trileaf Distribution agrees to replace the defective product free of charge within the stated warranty period, when returned by the original purchaser with proof of purchase. This product is not guaranteed against wear or breakage due to misuse and/or abuse.