




for  
**LIVING**<sup>®</sup>

# Clarkson Gazebo Walls & Netting

Product No. 088-1444-0  
Model No. LGZ340PS3DMC

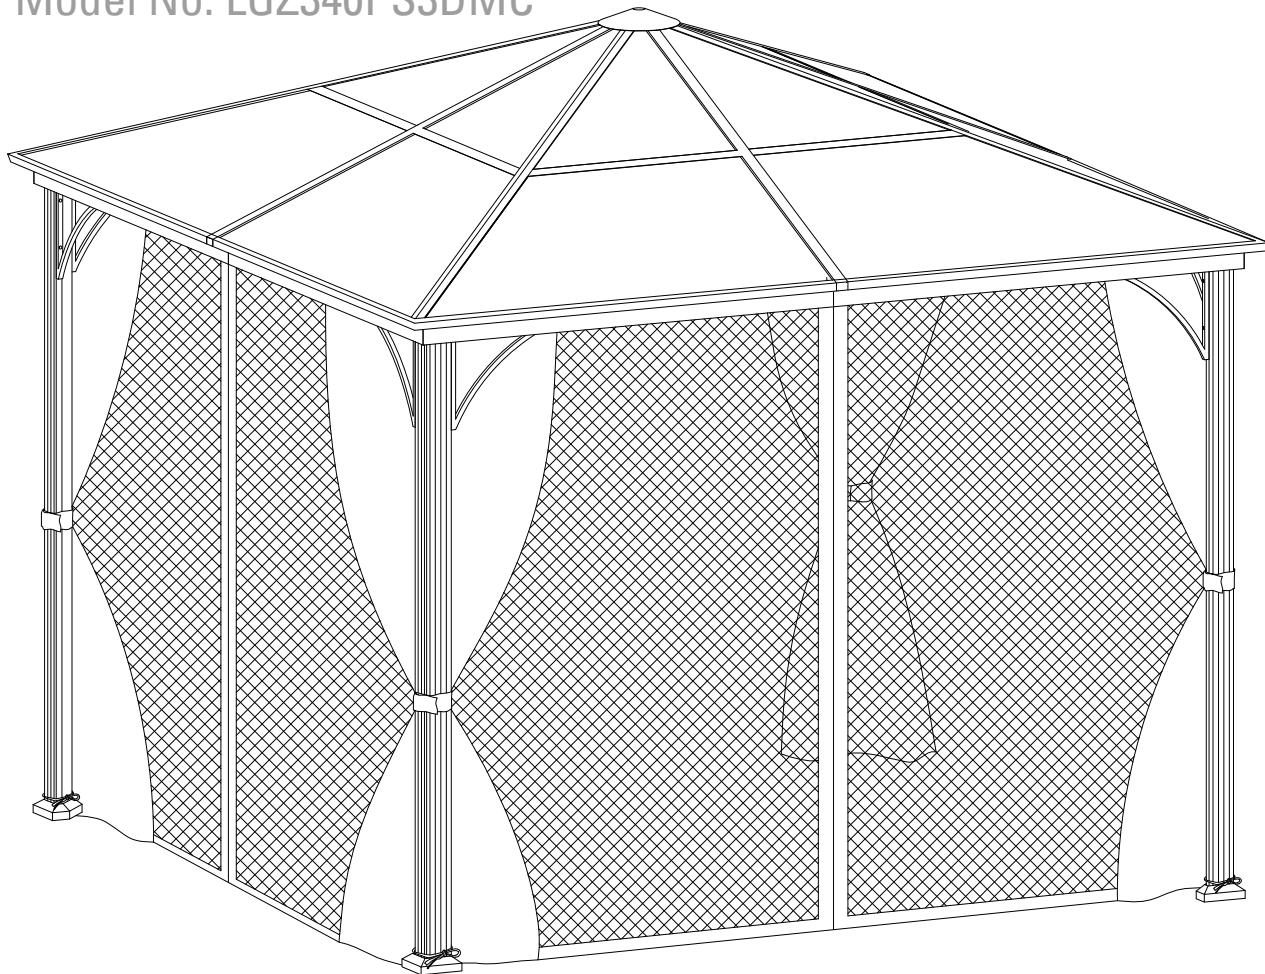

## Assembly Instructions

**Toll-free: 1-877-483-6759**

**IMPORTANT:** Please read this manual carefully before beginning assembly of this product.  
Keep this manual for future reference.

Production Number: xxxxxxxx



Important Safety Instructions	3
Part List	4
Assembly	5-8
Cleaning and Maintenance	9
Technical Data	9
Warranty	10



**Warning!** To reduce the risk of serious injury, read the following safety instructions before assembling and using the gazebo.

**Caution!** Always keep children under close supervision while they are using or around this product. Never leave children unattended.

- **IMPORTANT: RETAIN FOR FUTURE REFERENCE, AND READ CAREFULLY**

**Q**Curtain - **1****R**Mosquito Netting - **1****GG**Ring - **96+10**

**Caution!**


- Proper placement of your gazebo is essential.  
Do not place the product underneath electrical lines.
- Keep children away during assembly.  
This product contains small parts which can be swallowed by children.
- Keep fingers away from the places where they can be pinched or trapped.
- Do not attempt to assemble the gazebo if any parts are missing.

**Let us help you!****DO NOT RETURN YOUR PRODUCT TO THE STORE. CALL US FIRST!****1-877-483-6759**

If you have questions regarding your product, require warranty assistance, or have damaged or missing parts, please call our customer service toll-free helpline. Contact us for assistance, we're here to help.

**IMPORTANT:** Please read and understand this manual before any assembly. Before beginning assembly of product, make sure all parts are present. Compare parts with packaging contents list. If any part is missing, or if you have any questions, contact the service center at 1-877-483-6759 (toll free).

Place all parts from the box in a cleared area and position them on the floor in front of you. Remove all packing materials and place them back into the box. Do not dispose of the packing materials until assembly is complete. Read each step carefully before beginning any assembly and make sure you understand each step. If you are missing a part, please call our toll-free number for assistance 1-877-483-6759.



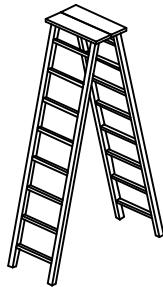
**Needed for assembly:**

Ladder






1 people



1

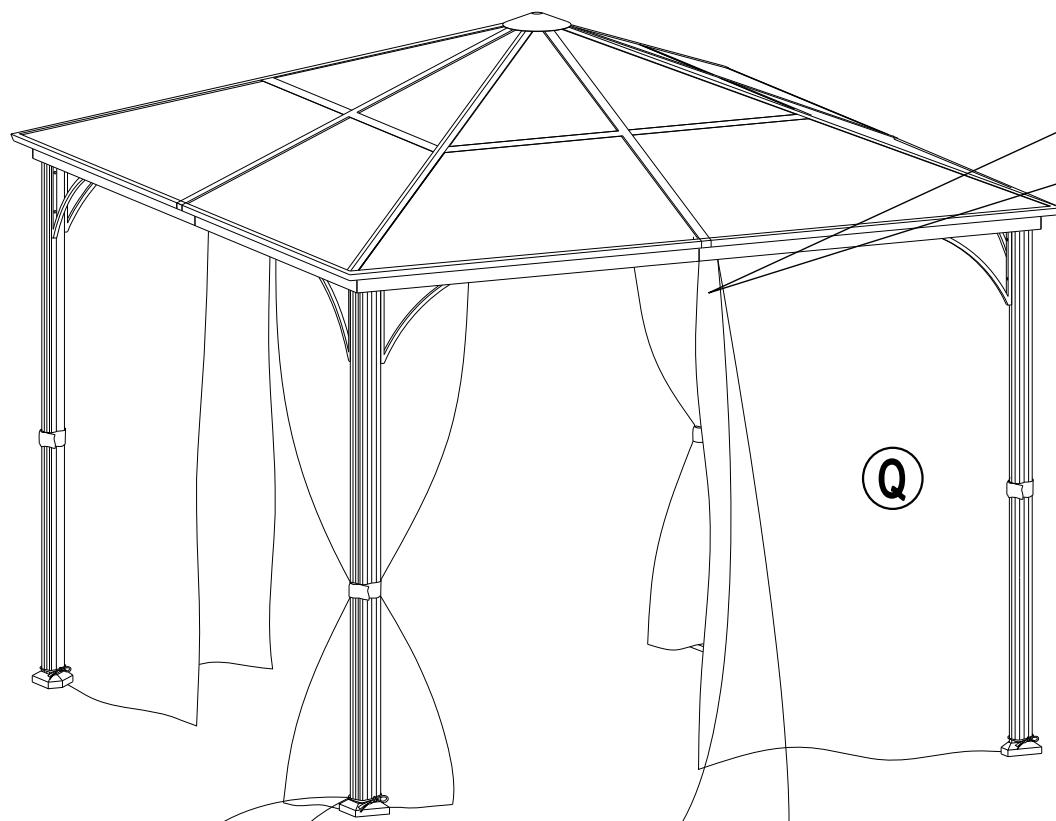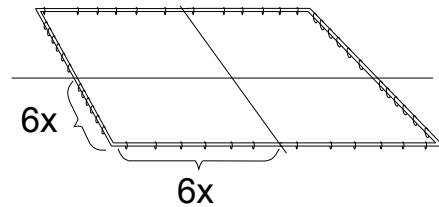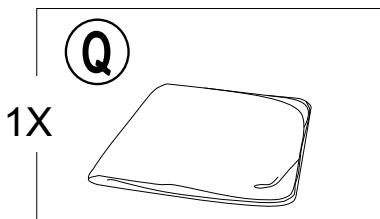





Match the panel zippers  
by number as shown  
in the illustration.

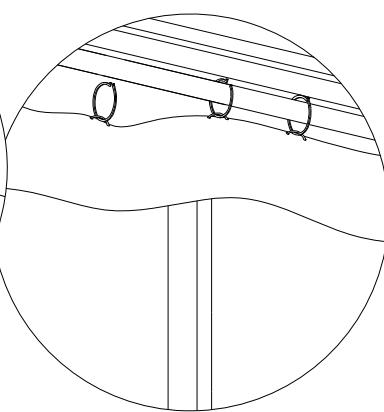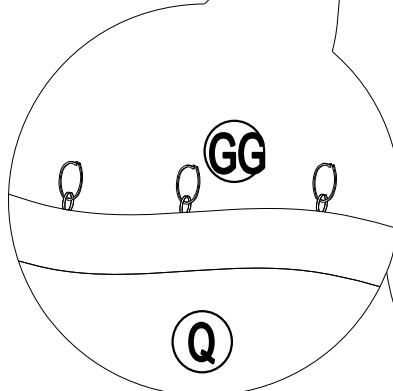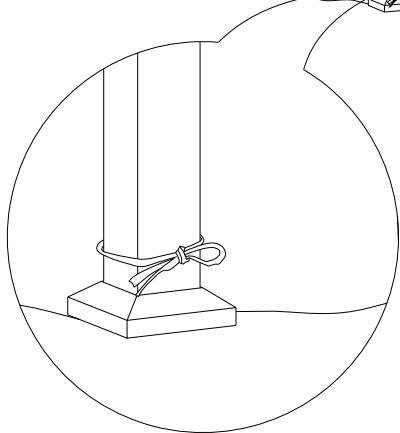

2

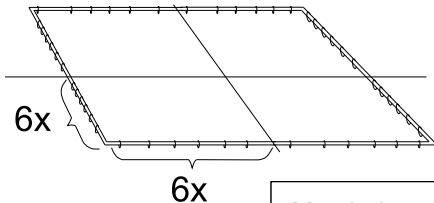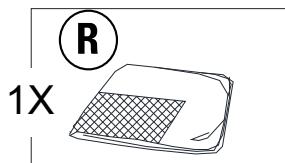


Match the panel zippers by number as shown in the illustration.

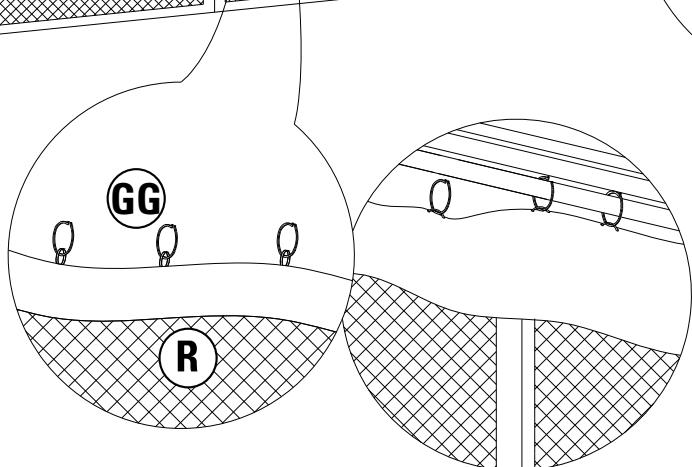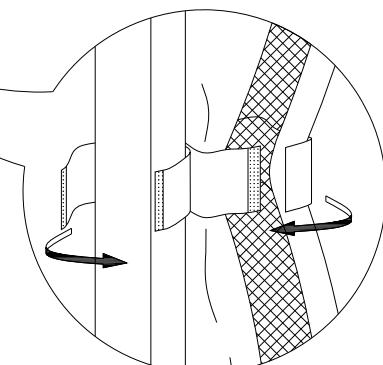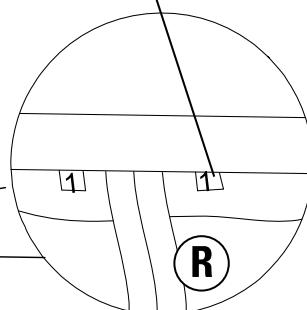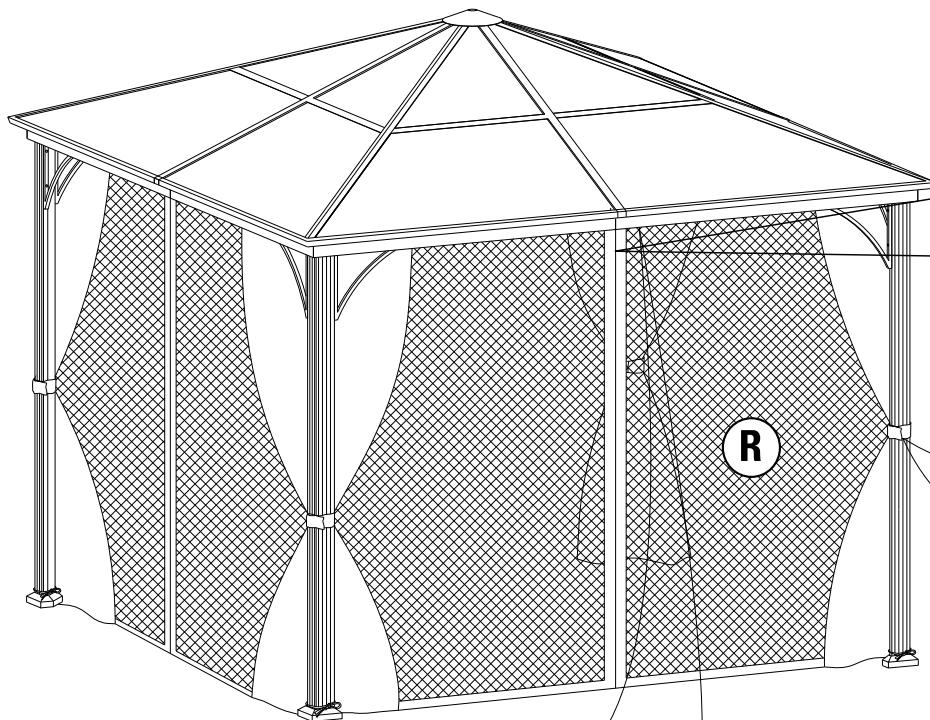

3

Assembly

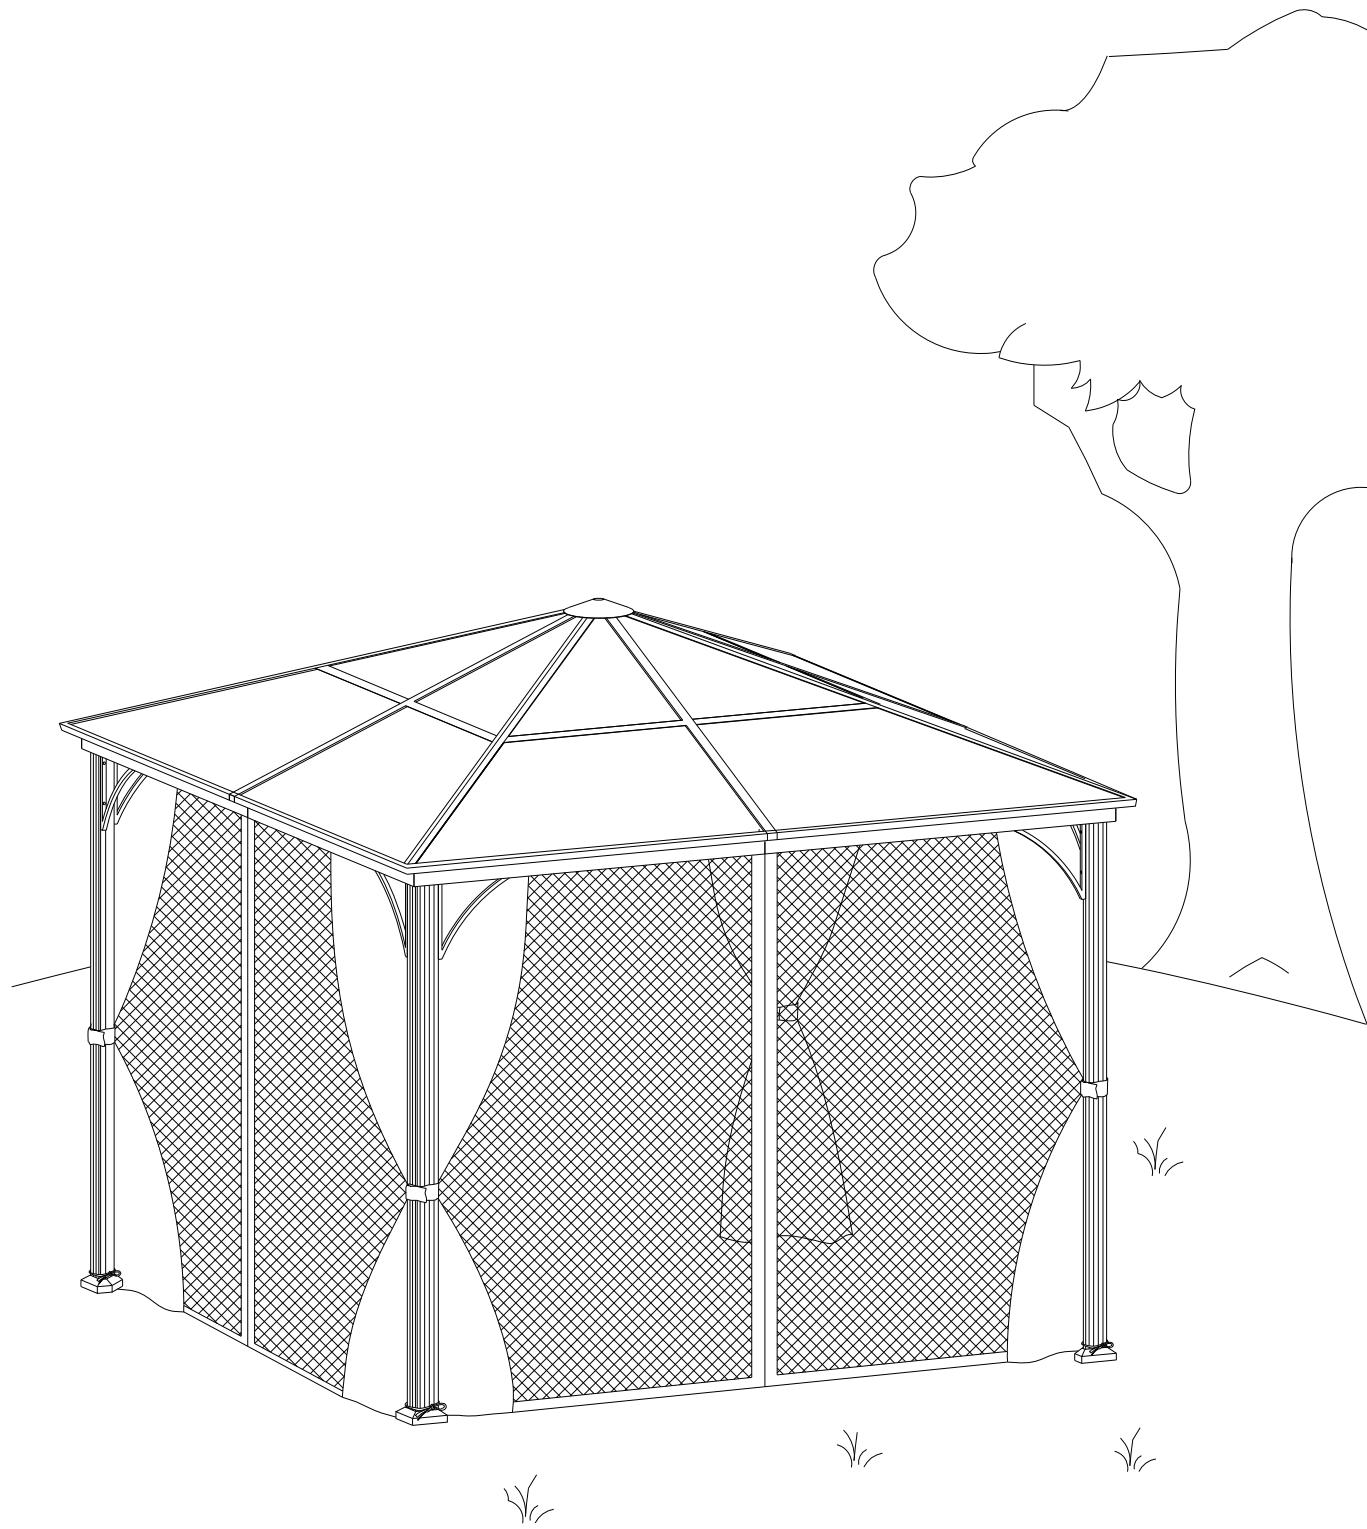

**Caution!**

- Check all screws and nuts periodically for tightness, fastening them again as required.
- Disassemble the gazebo in the reverse order of the assembly steps. Always disassemble the gazebo completely. A partially disassembled gazebo is not stable enough to resist wind and bad weather, and therefore can be damaged and/or cause damage.

**• To wash the fabric parts:**

- Spread the fabric and use a soft-bristle brush to clean.
- Always use a natural soap. Never use detergent.
- Water should be cold to lukewarm, not more than 25°C (77°F).
- Air dry only. Do not spin in washing machine or hand squeeze.

- Do not use bleach, acid, or other abrasive cleaners on the canopies or frame parts.

Dimensions (L x W x H)	305 x 305 x 209 cm
	120 x 120 x 82.3"
Product weight	7.2kg
	15.87 lb

This For Living™ product carries a one (1) year warranty against defects in workmanship and materials. Trileaf Distribution agrees to replace the defective product free of charge within the stated warranty period, when returned by the original purchaser with proof of purchase. This product is not guaranteed against wear or breakage due to misuse and/or abuse.