 


CANVAS^{TM/MC}

SUNSHADE PERGOLA

MODEL NO. 088-2016-4

PRODUCT NO. A106000700

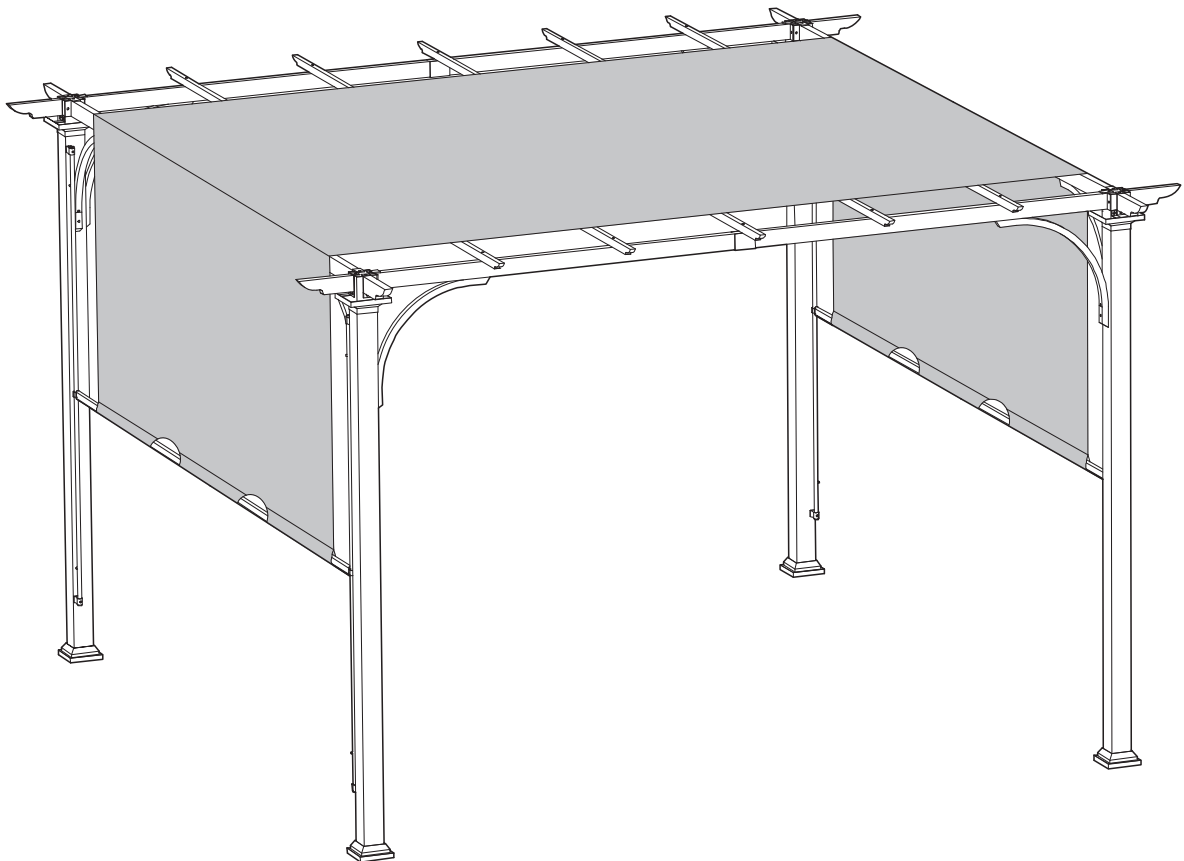

ASSEMBLY INSTRUCTIONS

Toll-free: 1-866-578-6569

IMPORTANT: Please read this manual carefully before beginning assembly of this product.
Keep this manual for future reference.

Production Number :xxxxxxx

Table of Contents	3
Important Safety Instructions	3
Parts List	4-5
General Requirements	6
Assembly	7-32
Cleaning and Maintenance	33
Technical Data	33
Warranty	33



Warning! To reduce the risk of serious injury, read the following safety instructions before assembling and using the gazebo.

Caution! Always keep children under close supervision while they are playing around this product. Never leave children unattended. Keep pets away while setting up the gazebo.

Caution! Check municipal by-laws prior to installing the gazebo.

- This product is intended for domestic outdoor use only.
- The product should be placed and assembled on flat, horizontal ground.
- Consult with your local governing authority/local municipal codes regarding installation of temporary structures before assembly.
- Ensure there is enough clearance around the product. Before assembling the gazebo, make sure to leave a distance of not less than 6' (1.8 m) from any structures or obstructions, such as fences, garages, houses, overhanging branches, laundry lines, or electrical wires.
- Anchor the gazebo to the ground with stakes for added safety. Stakes are provided to secure the gazebo to the ground. If you wish to secure the gazebo to a concrete or wood surface, use anchors suited for these surfaces (anchors not included). Do not assemble the gazebo on sandy, muddy or loose soil, as stakes do not have enough anchorage in these types of soil.
- If more than one gazebo is set up, keep a minimum distance of 10' (3 m) between the gazebos.
- Any assembly or maintenance of the product must be carried out by adults only.
- Make sure there is sufficient manpower when assembling or moving the product.
- Some parts may contain sharp edges. Wear protective gloves if necessary.
- Check all nuts and bolts periodically for tightness. When required, tighten them.
- Repairing and replacing parts should be done by a qualified technician.
- This gazebo is intended for decorative and sunshade purposes only.
- The gazebo is not designed to withstand harsh weather, including high winds, rain and snow. Always remove the gazebo in such heavy weather conditions, otherwise it might tip over and cause damage to the product or injuries to bystanders.
- During snow days, remove the snow at the top when the snow is thicker than 4" (10 cm).
- After a period of time, usually in 2-3 months, tighten all the bolts.
- After a period of use, rinse the ash on top of the gazebo using water. Avoid using acid or alkali wash lotion.
- Do not hang any weights on the roof frame.
- Do not climb onto the roof of the gazebo. Falling off the gazebo can result in serious injury.
- After a few years, if the paint peels off, use paint of similar colour. It is recommended to use outdoor paint.
- Retain the original packaging to store the gazebo.
- If the product will not be used for a long period of time (e.g. winter time), it should be disassembled and stored in a clean, dry environment.

IMPORTANT: Retain for future reference, and read carefully.

A3 P000600791 
Beam1 - 5

A4 P000600792 
Beam2 - 5

 
B5 P000600795 
Big Beam1-1 - 2

B6 P000600797 
Big Beam1-2- 2


B7 P000600796 
Big Beam2-1 - 2

B8 P000600798 
Big Beam2-2 - 2


C1 P005600134 
Decoration tube - 8

C2 P000300032 
Decoration - 4

 
E3 P000200255 
Post 1- 2

E4 P000200256 
Post 2 - 2

 G1 P000100160 
Base-4

H1 P006100100 
Base Cover - 4

 I P005000220 
Arc Support Bar - 8

K P000500654 
Rail Tube Connector - 8

L3 P005700225 
Fabric Tube 1 - 2

L4 P005700226 
Fabric Tube 2 - 2

 
M1 P005700227 
Rail Tube - 4


N P006400007 
Canopy - 1

P1 P000600793 
Cross Beam 1 - 1


P2 P000600794 
Cross Beam 2 - 1


Spare Parts List


AA H02020C11 
Bolt M6*20 - 64

 BB H19001C11 
Flat Washer M6 (Large) - 122

 CC H13001C11 
Spring Washer M6 - 68


DD H09015C11 
Bolt M6*15- 16

 EE H02045C11 
Bolt M6*45 - 42

 FF P12401A01001 
Stake Φ8 * 180 - 8


GG H02075C11 
Bolt M6*75- 8

 
Z1 H00001C12 
Wrench M6- 2


AA H02020C11 
Bolt M6*20 - 4

BB H19001C11 
Flat Washer M6 (Large) - 7

 CC H13001C11 
Spring Washer M6 - 4

DD H09015C11 
Bolt M6*15- 1

 EE H02045C11 
Bolt M6*45 - 3

 GG H02075C11 
Bolt M6*75- 1

**CAUTION!**

- Proper placement of the gazebo is essential. Do not place the product underneath electrical lines.
- Keep children under close supervision while they are playing around this product. This product contains small parts which can be swallowed by children.
- Keep fingers away from places where they can be pinched or trapped.
- Do not attempt to assemble the gazebo if any part is missing.
- Do not light any fires inside or near the product!
- Stay calm if fire breaks out. Search for the nearest exit. Do not return to the gazebo before firemen allow you to do so.

**Let us help you!**

 
DO NOT RETURN YOUR PRODUCT TO THE STORE. CALL US FIRST!
1-866-578-6569

If you have questions regarding your product, require warranty assistance, or have damaged or missing parts, please call our customer service toll-free helpline. Contact us for assistance; we're here to help.

IMPORTANT: Please read and understand this manual before any assembly. Before beginning the assembly of product, make sure all parts are available. Compare parts list with packaging contents. If any part is missing, or if you have any questions, contact the service centre at 1-866-578-6569(toll-free).

Unpack and place all the parts from the packaging box in an open area and position them on the floor. Remove all packing materials and place them back into the box. Do not dispose of the packing materials until assembly is complete. Read each step carefully before beginning any assembly and make sure you understand each step. If you are missing a part, please call our toll-free number for assistance 1-866-578-6569


Needed for assembly: (The following tooling not included)



Hammer




 
Screwdriver

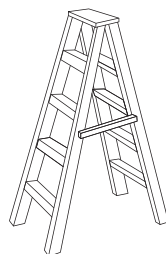


Ladder



  
5 people

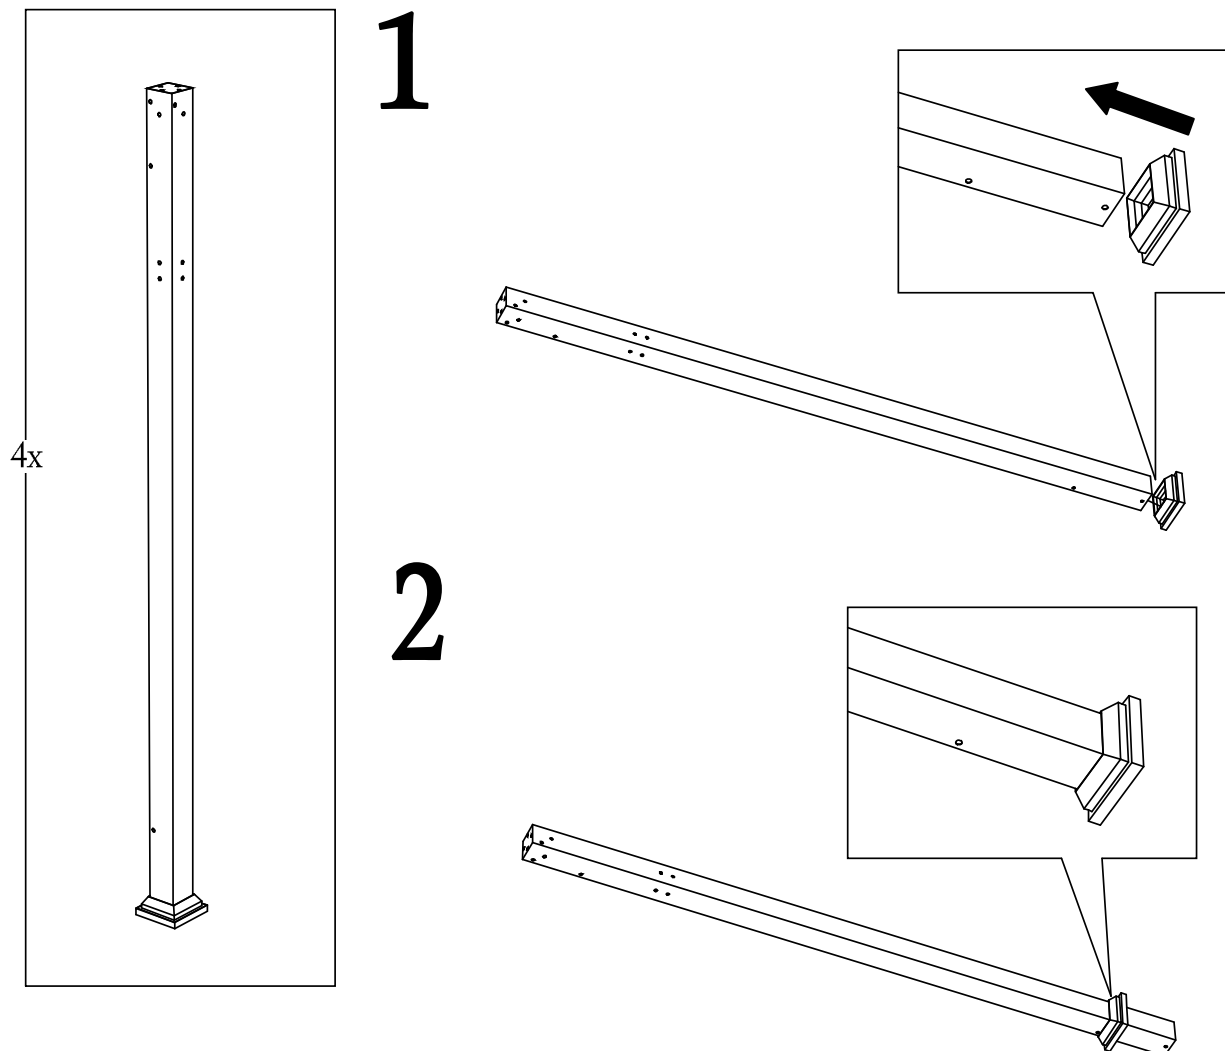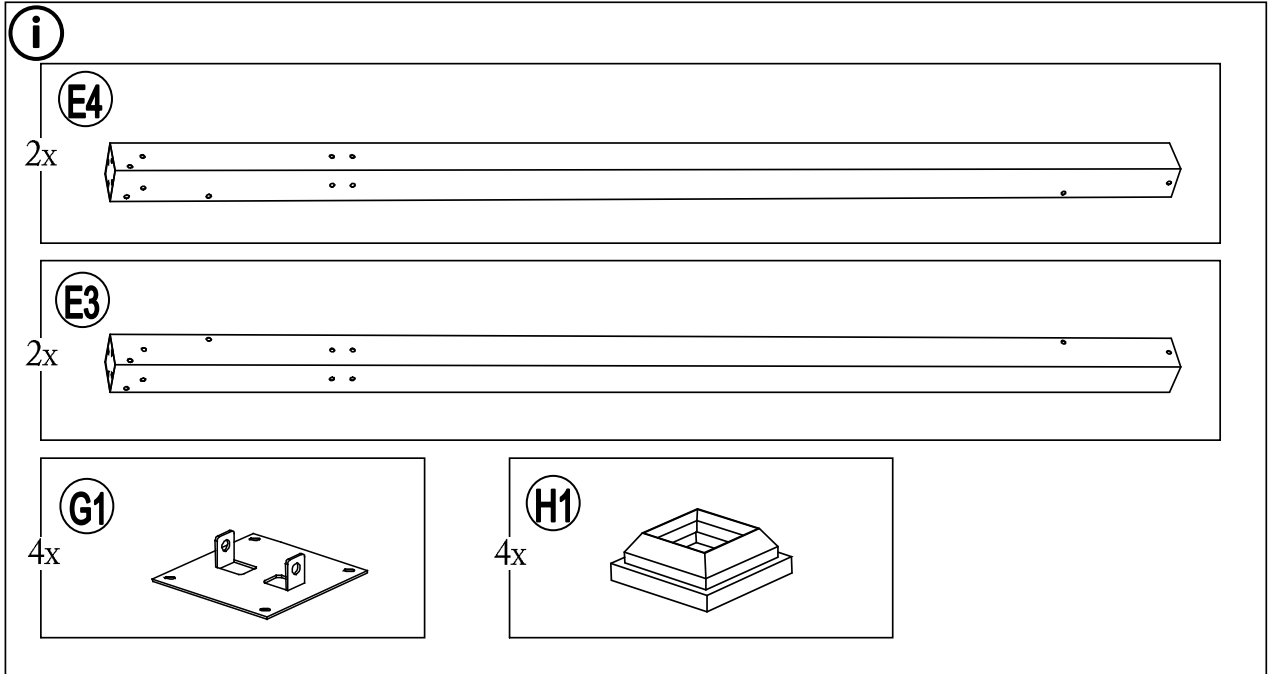


3


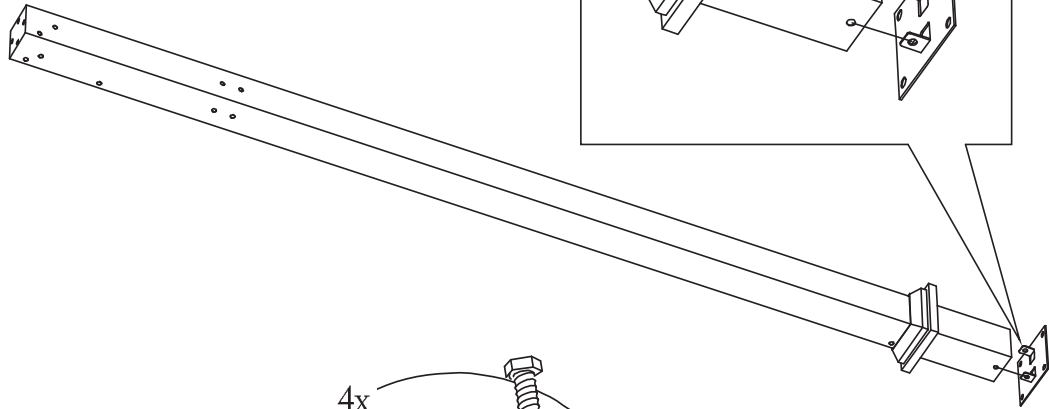 


4

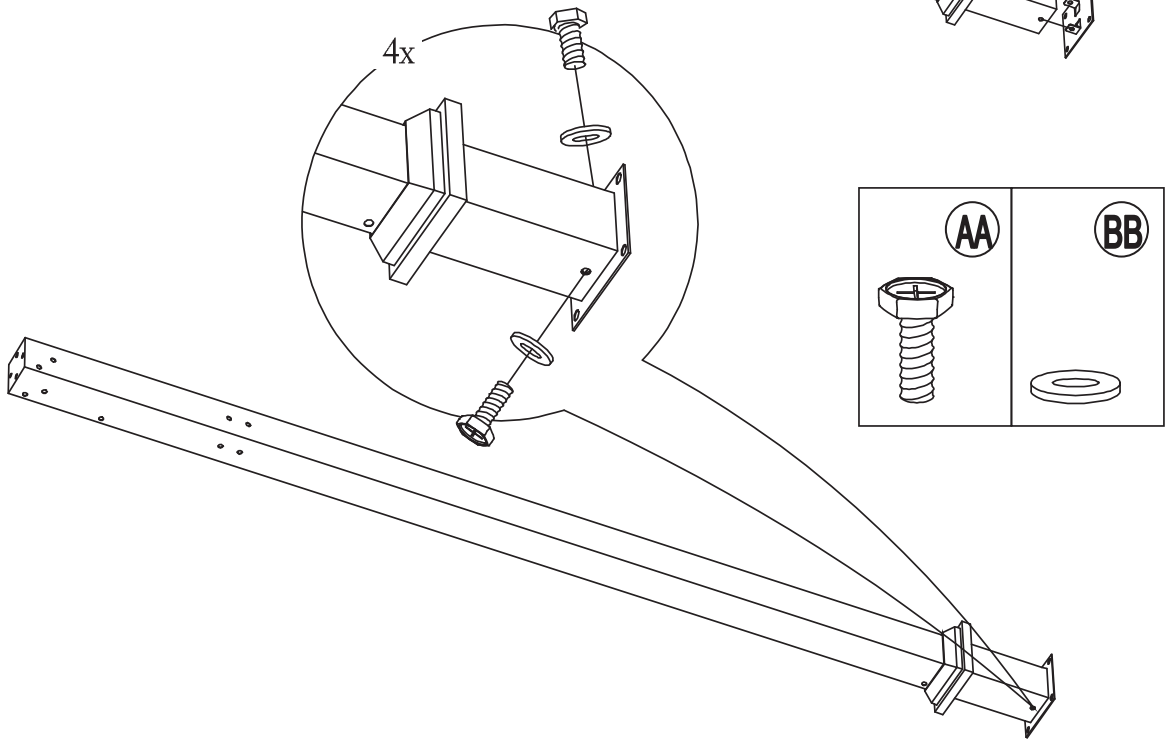 


5

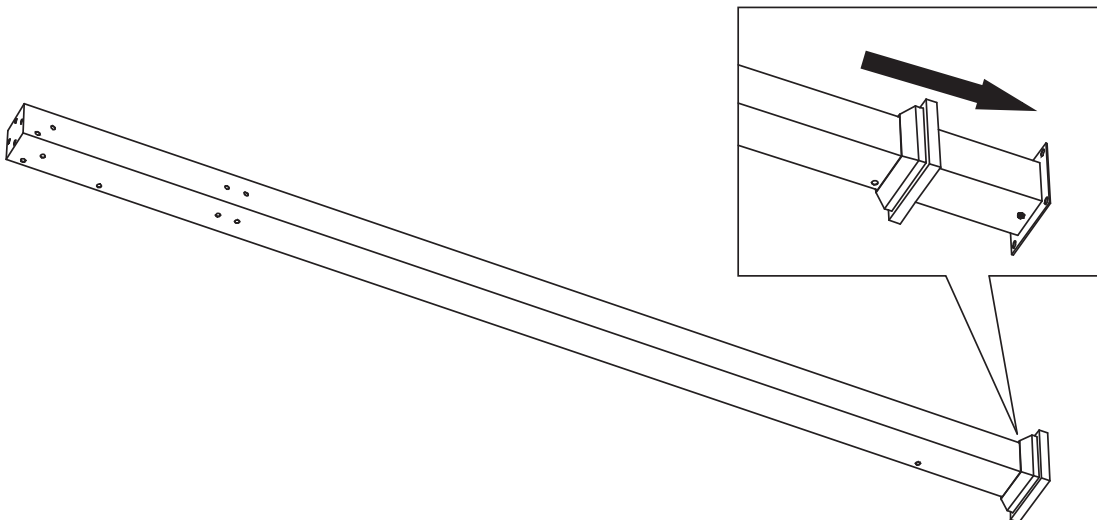 


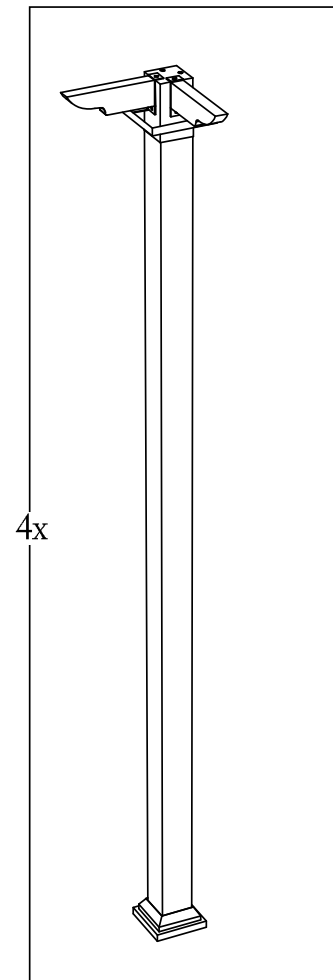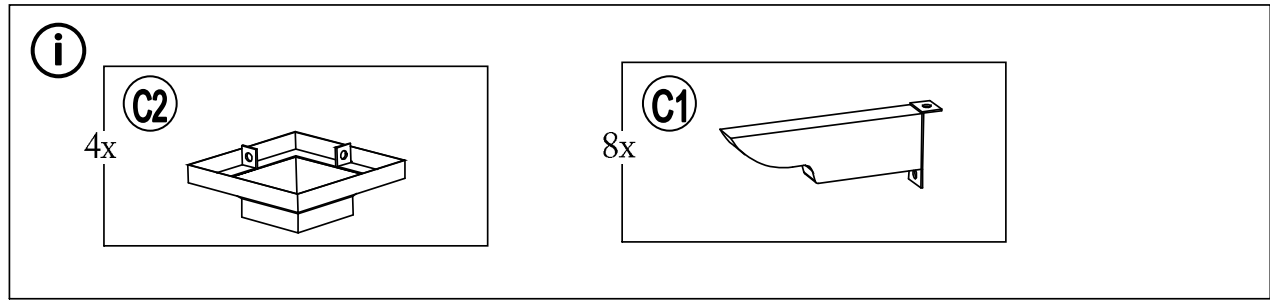  


6

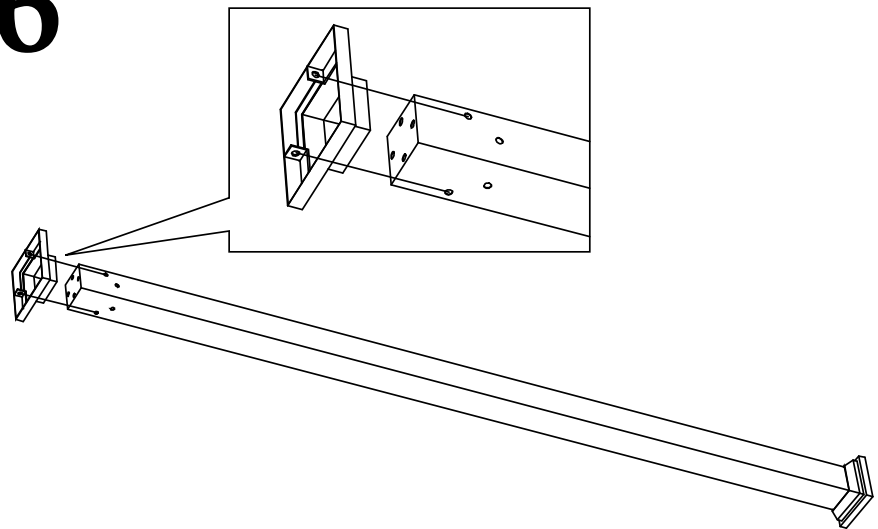 


7

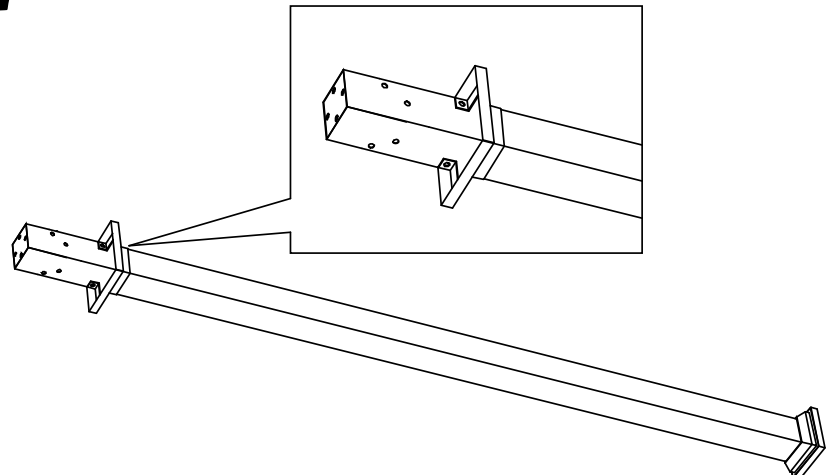 


8

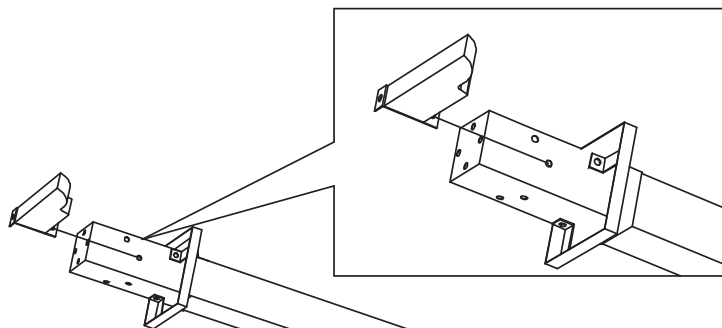 


9

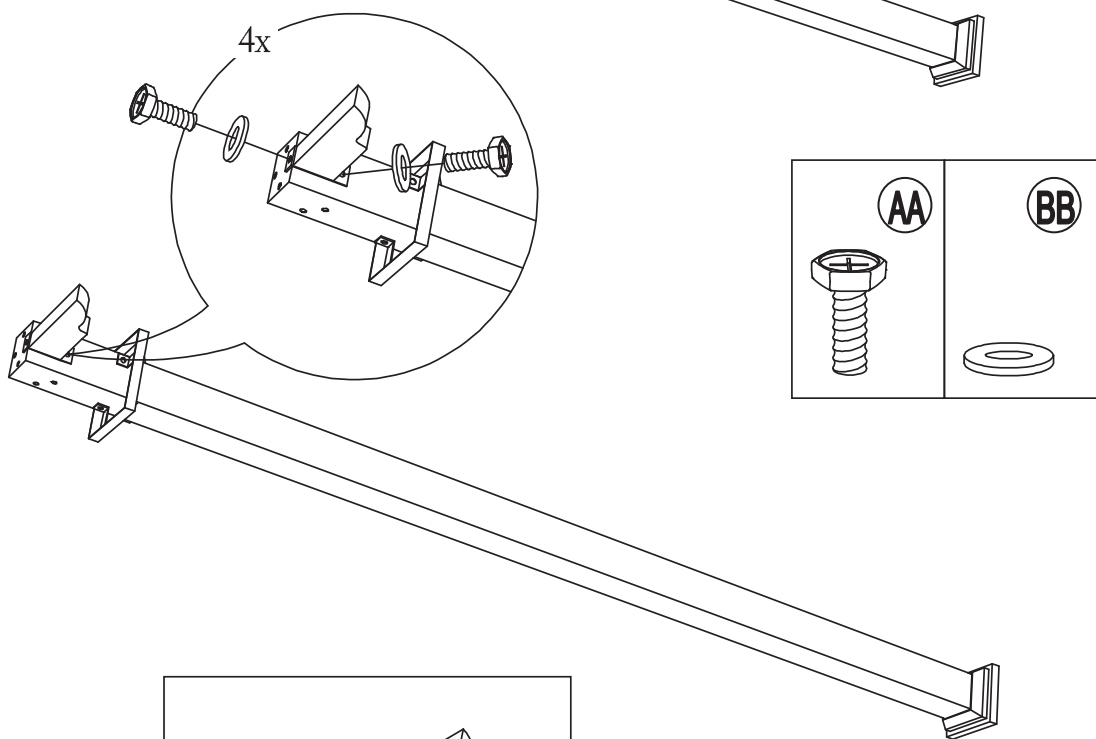 


10

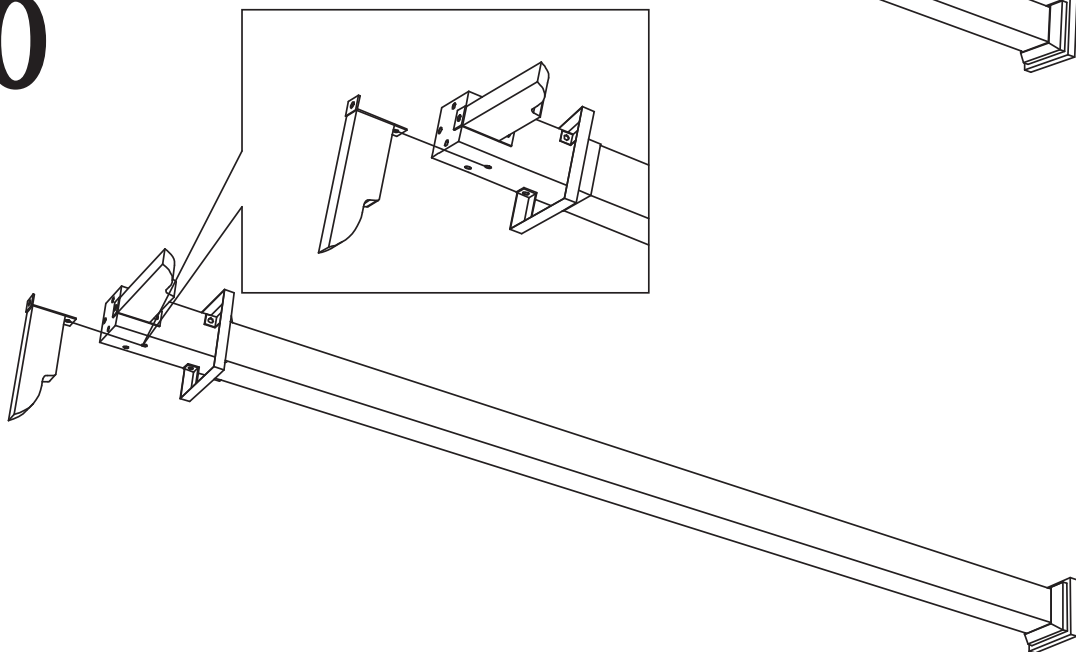 


11


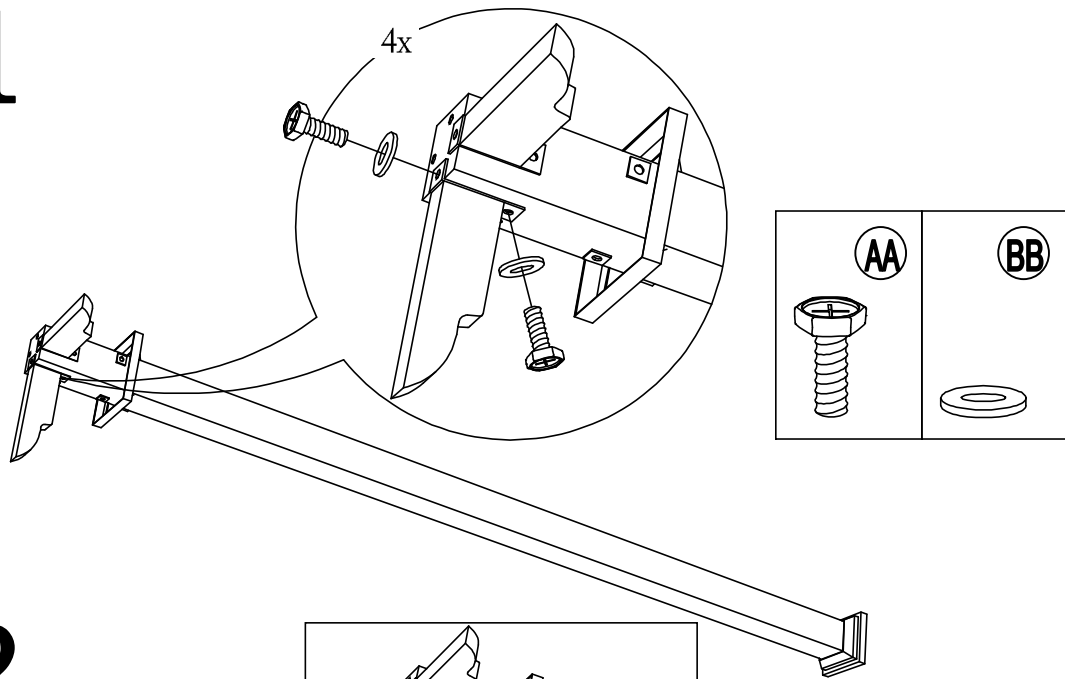 


12

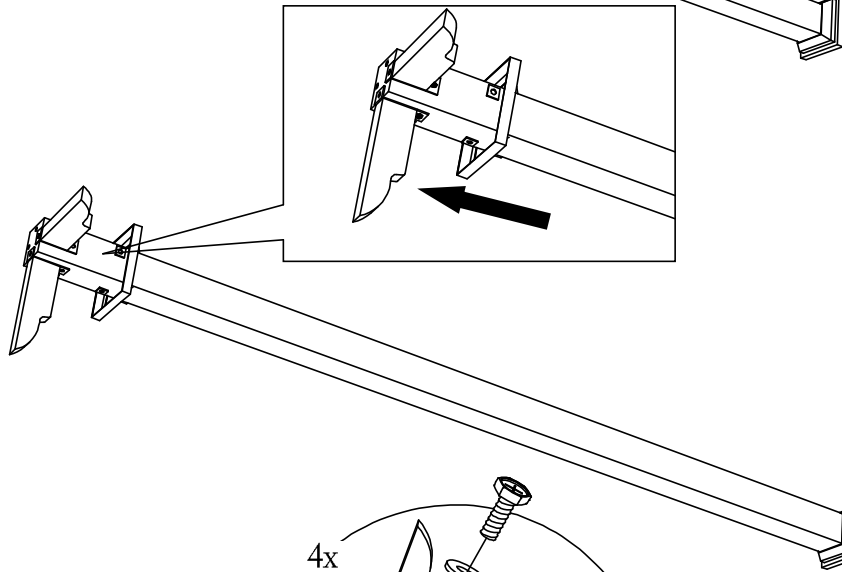 


13




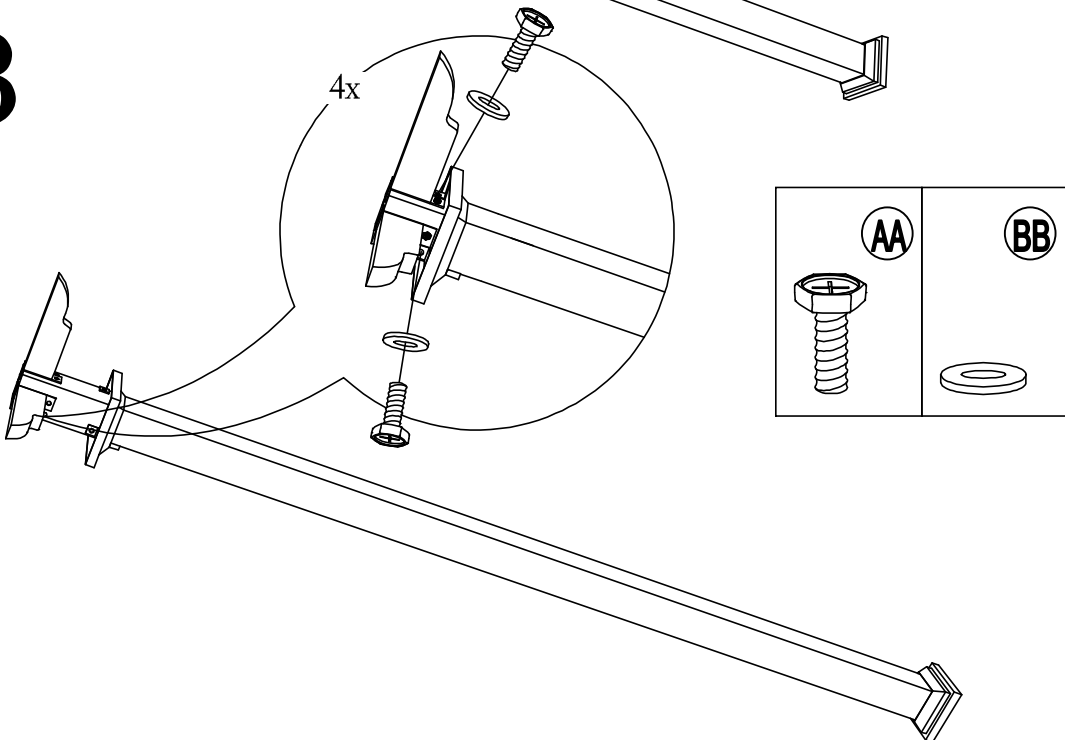 


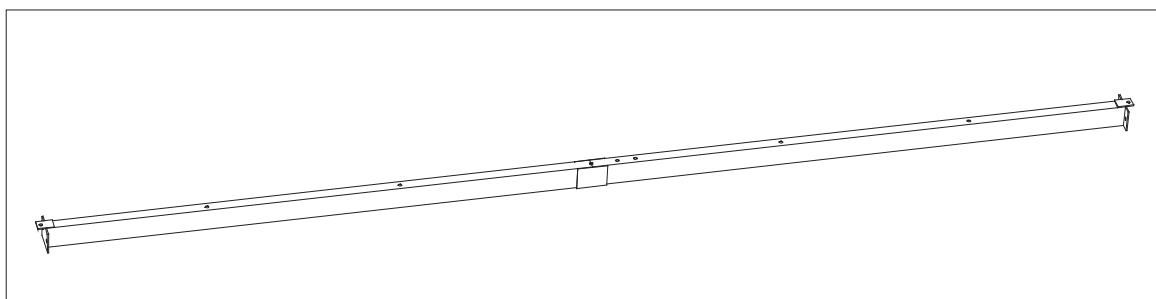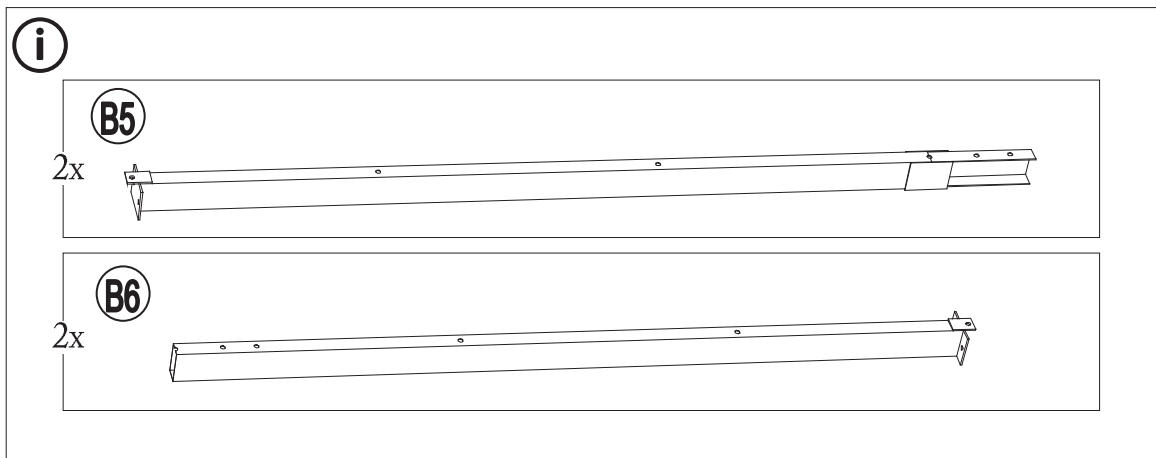  


14

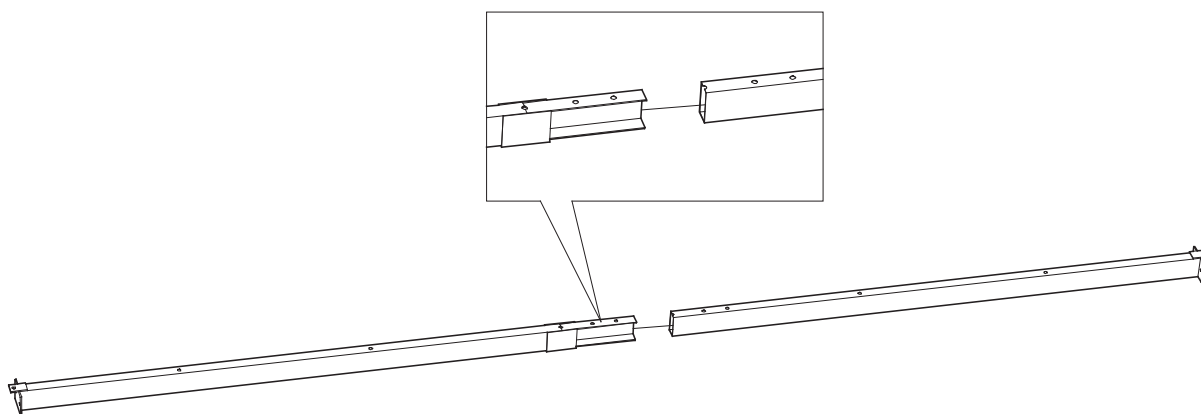 



15

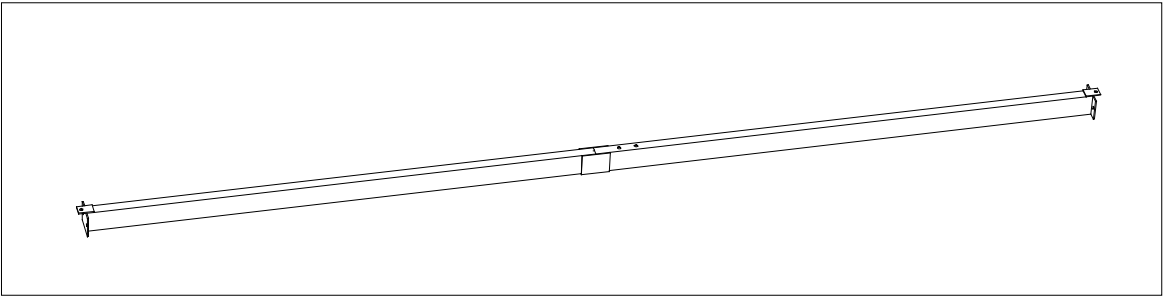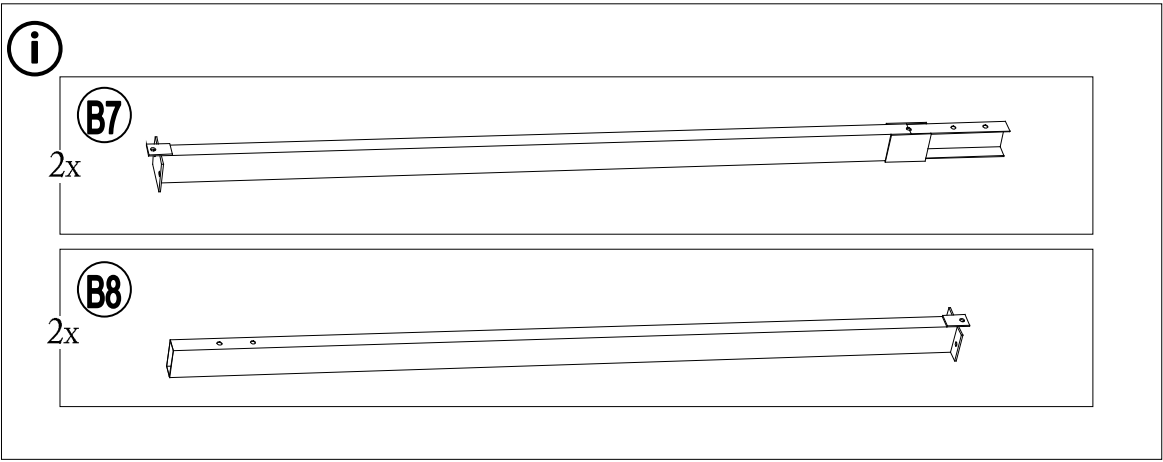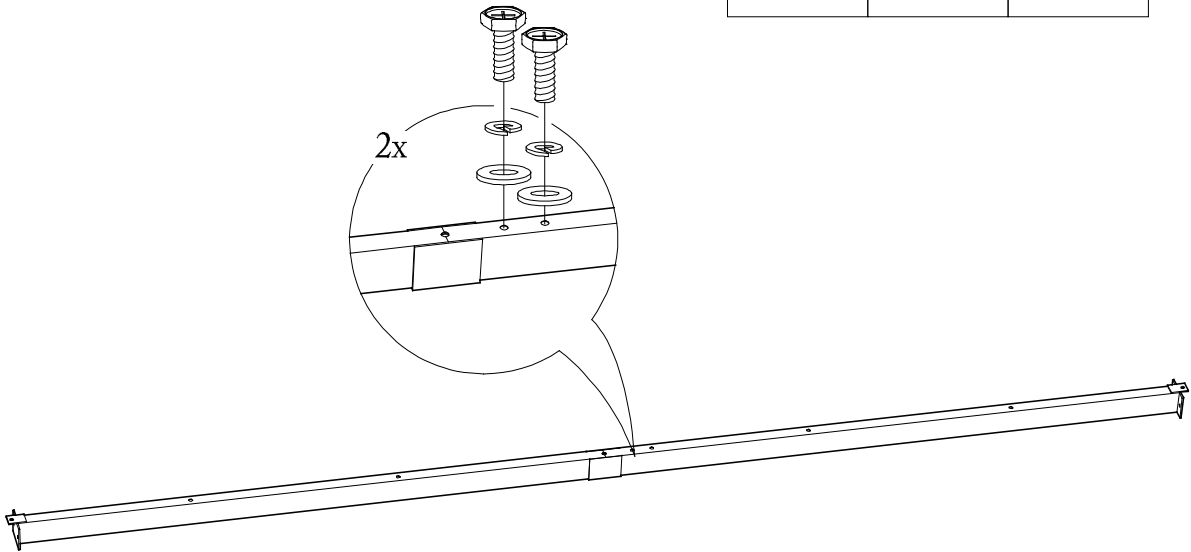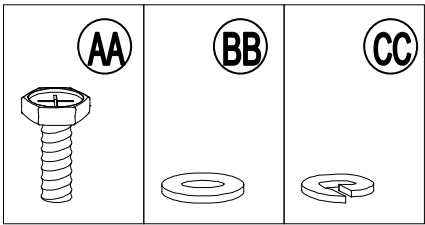    


16

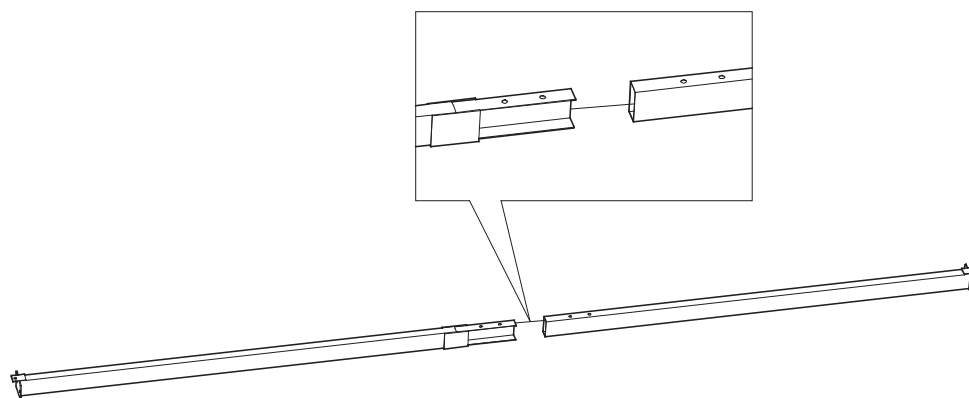 


17

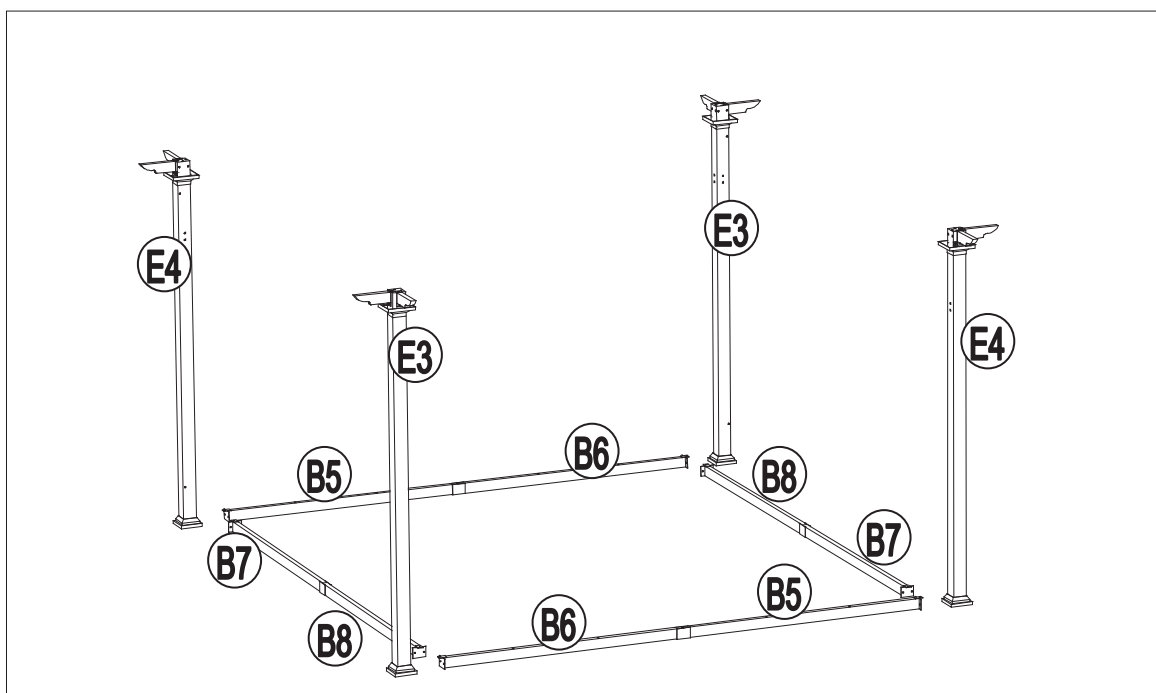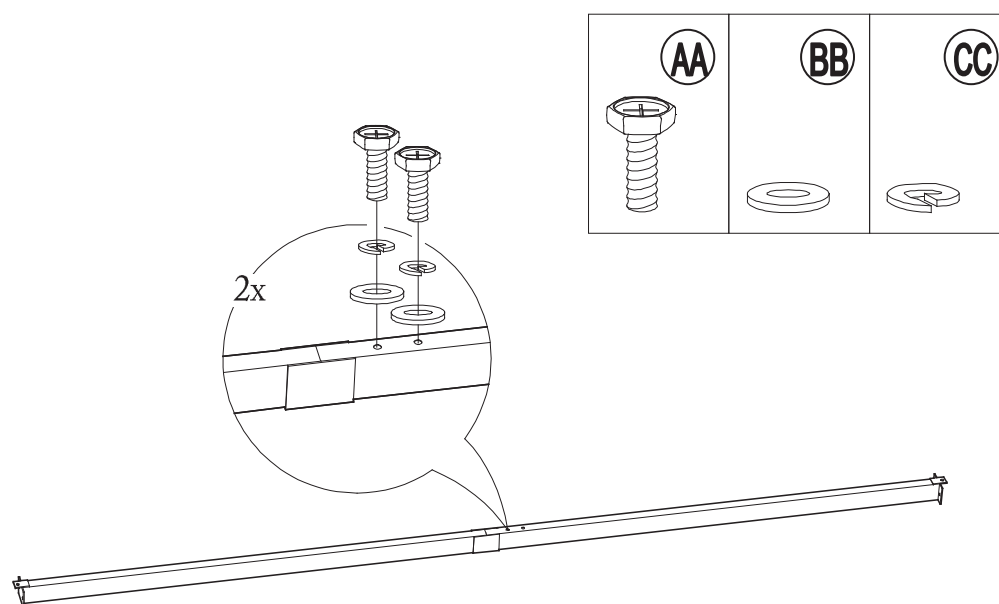  


18

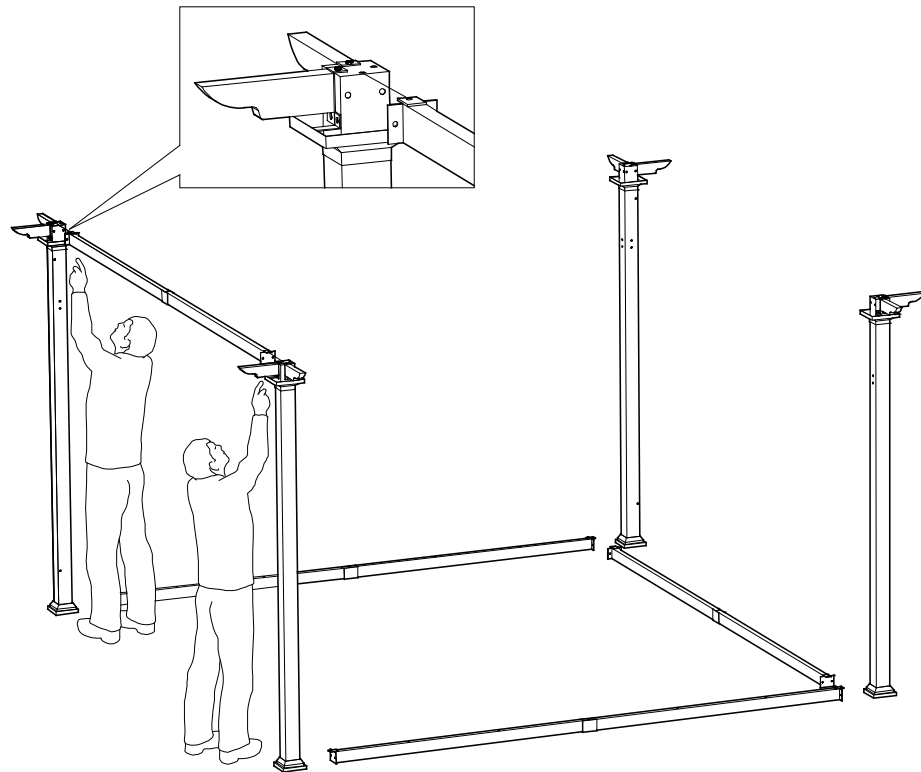 


19

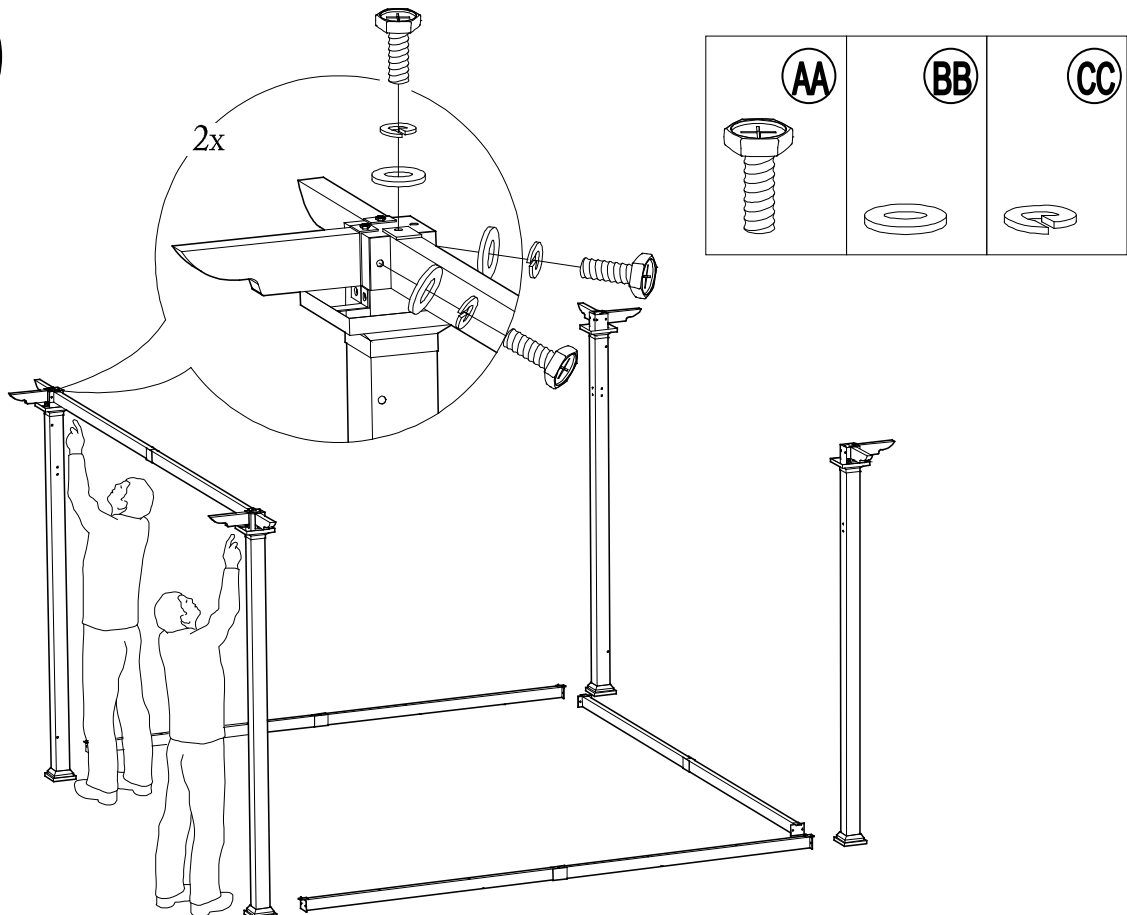 



20

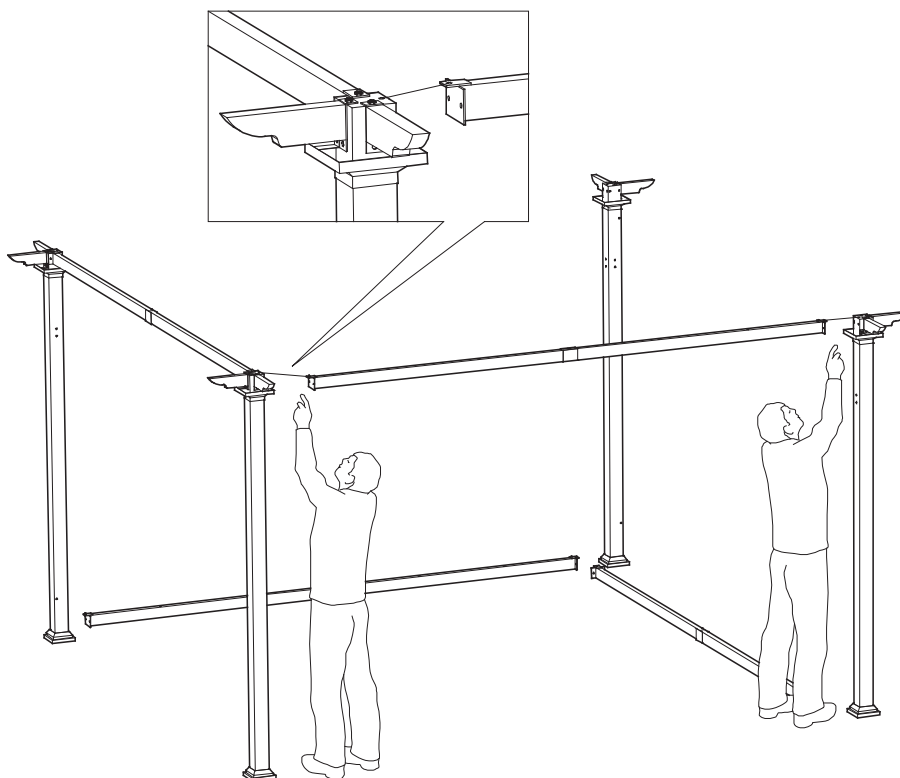 




21

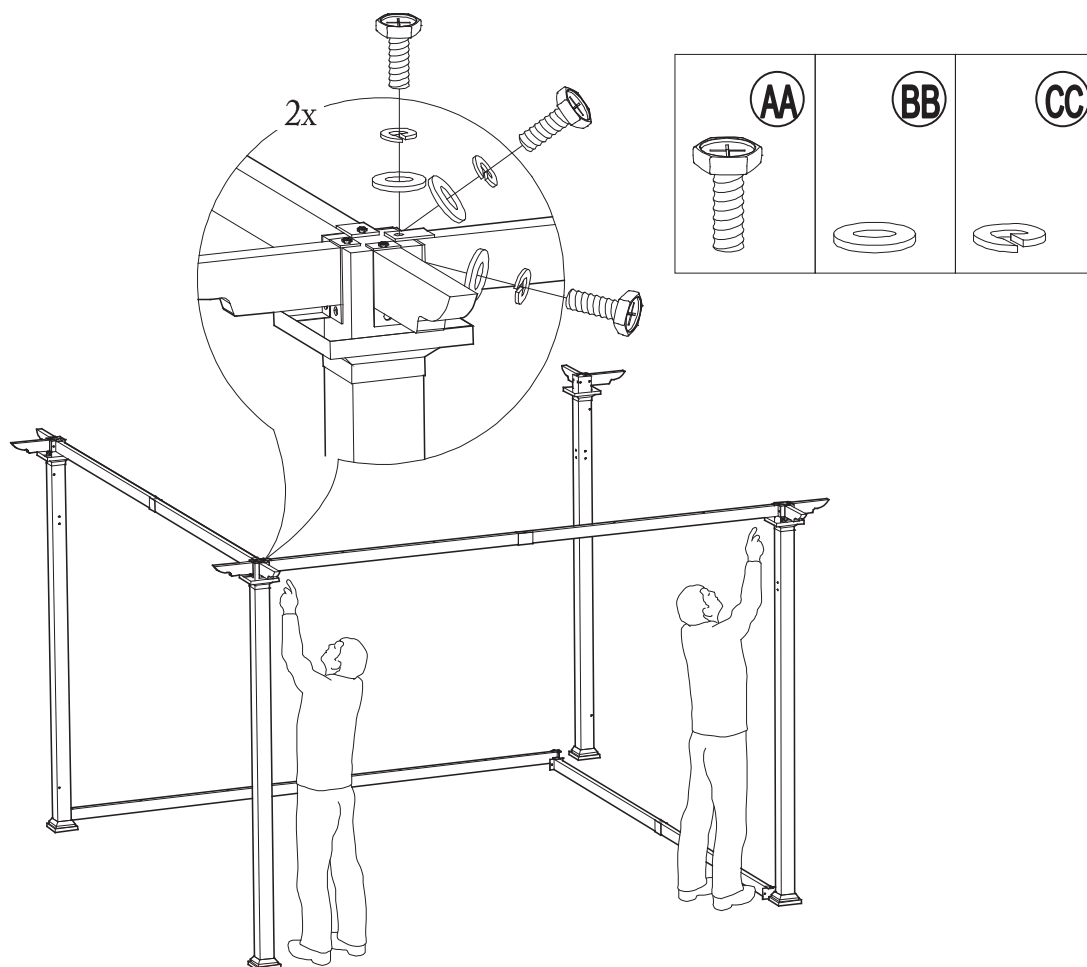 


22

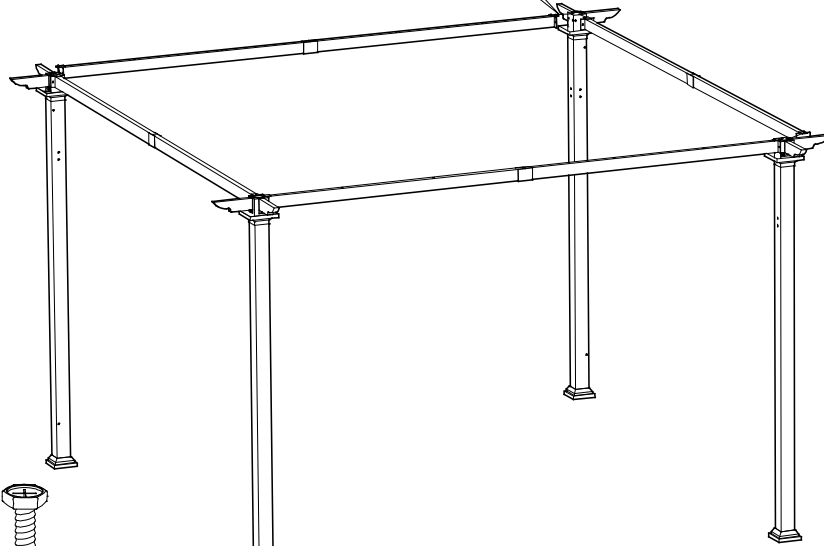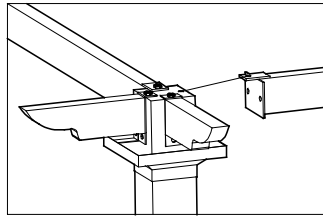  


23

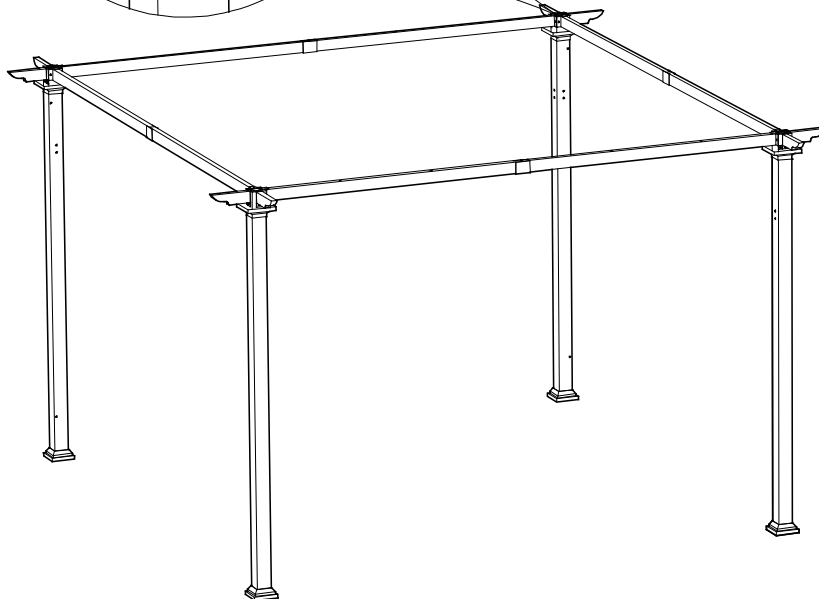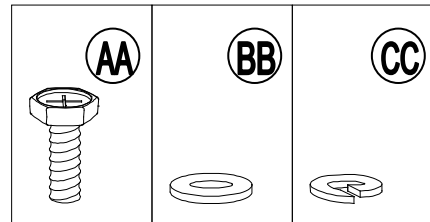  
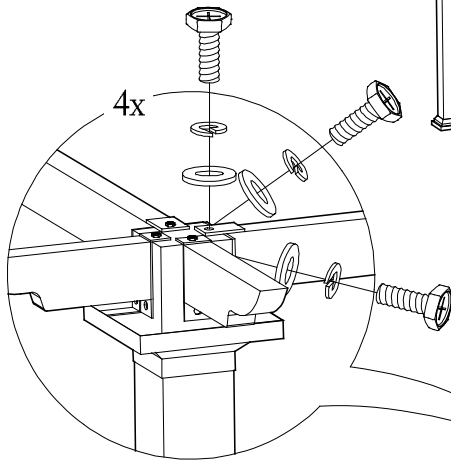 


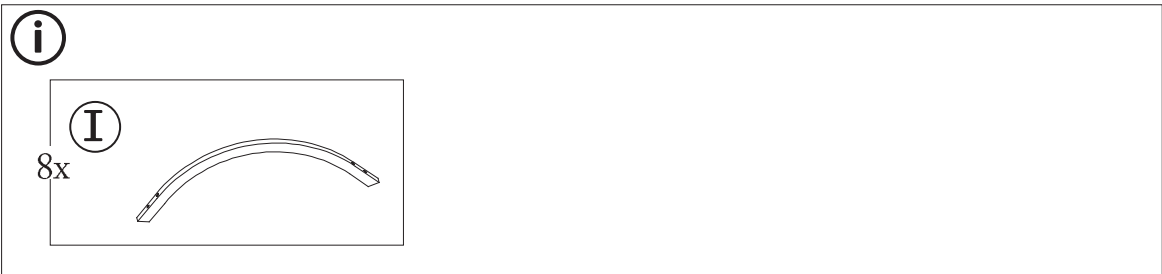 


24

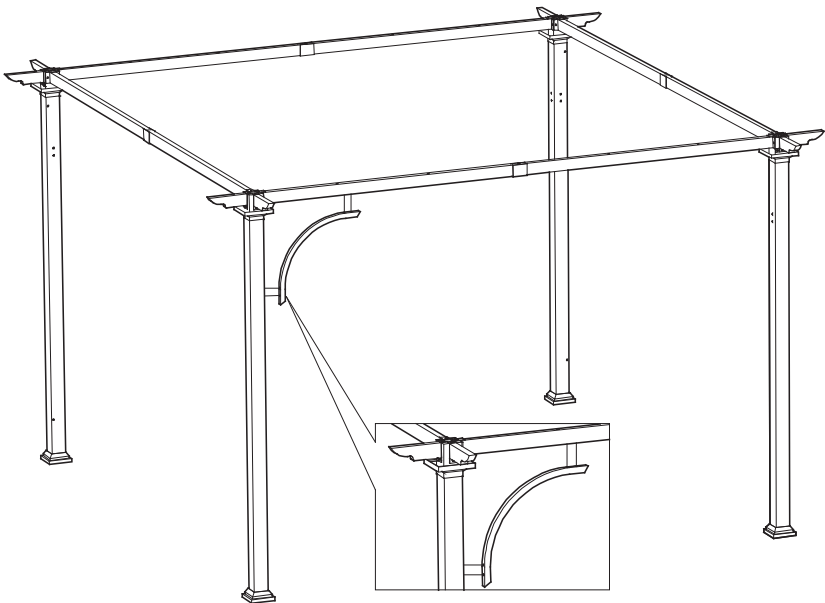 


25

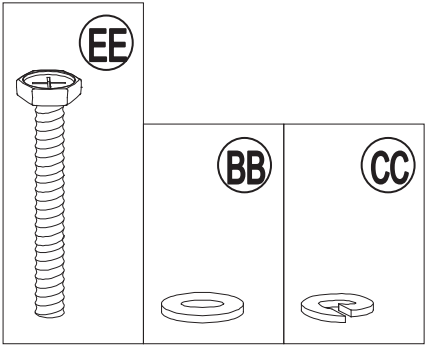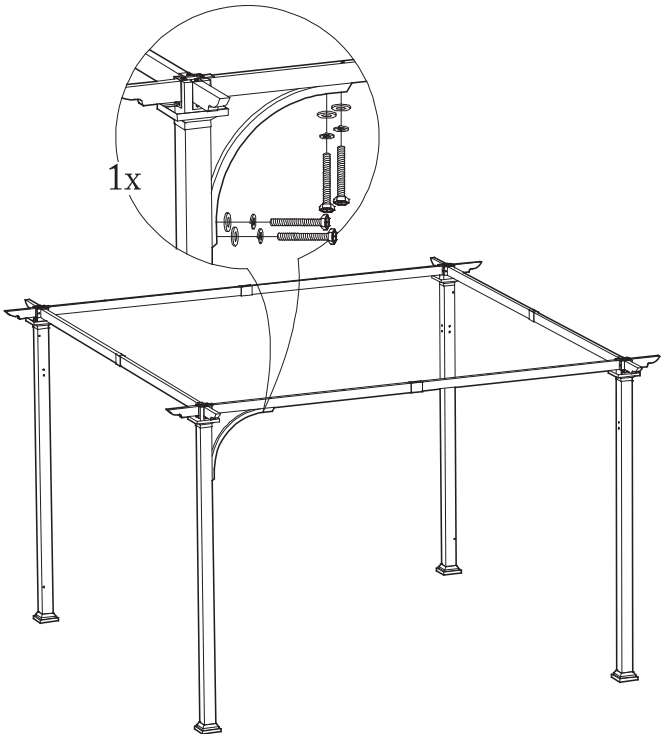  


26

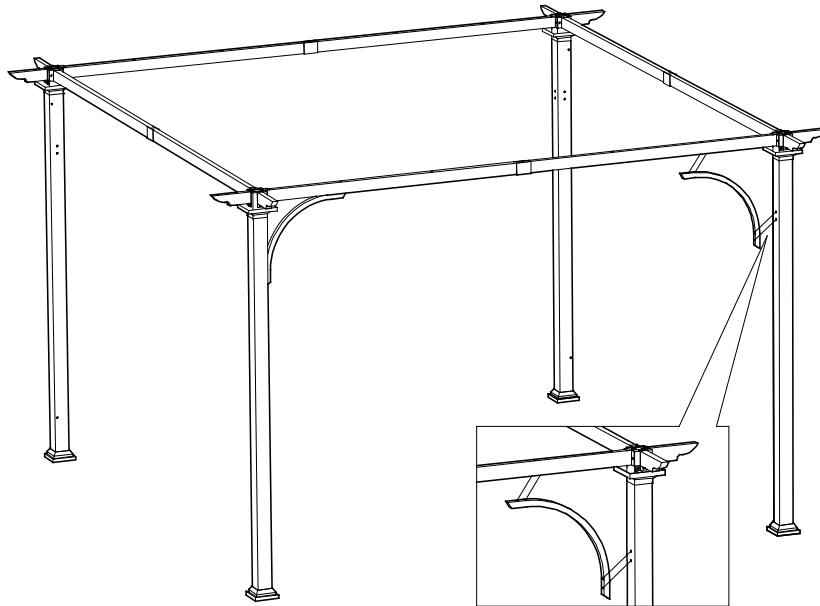 



27

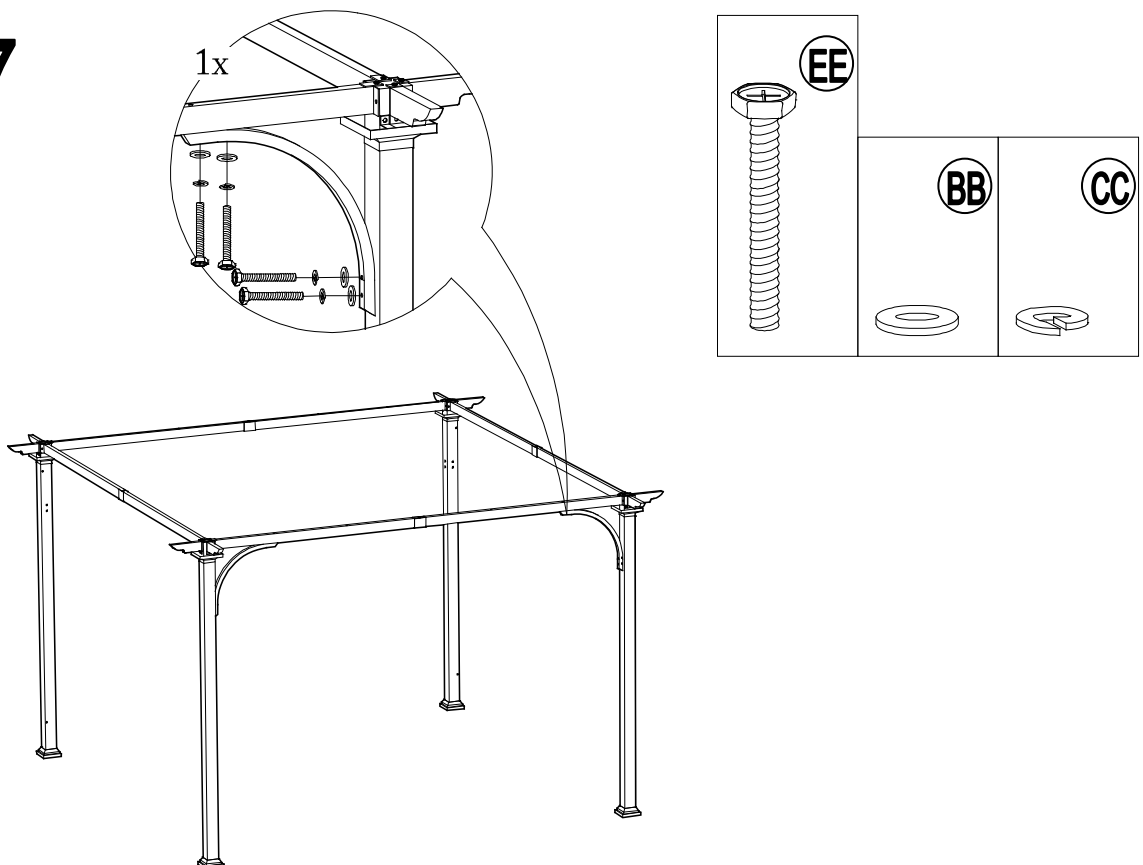 


28

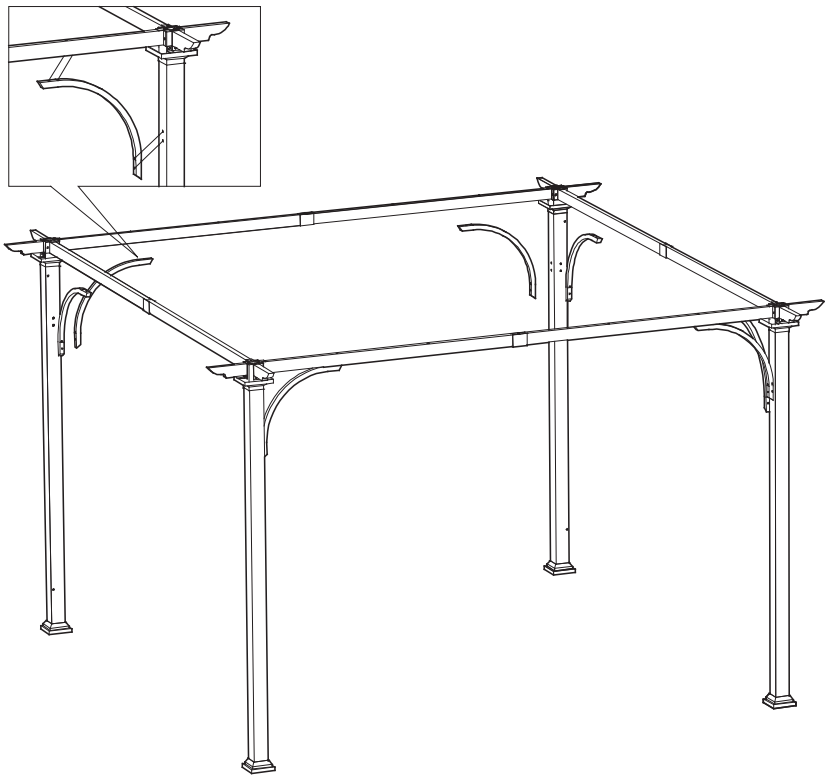 


29

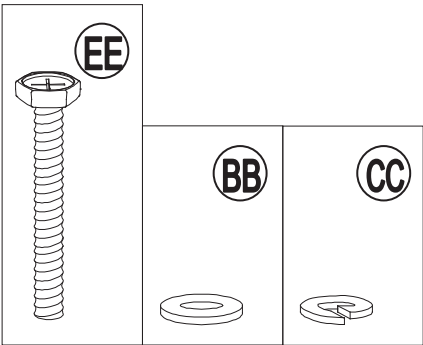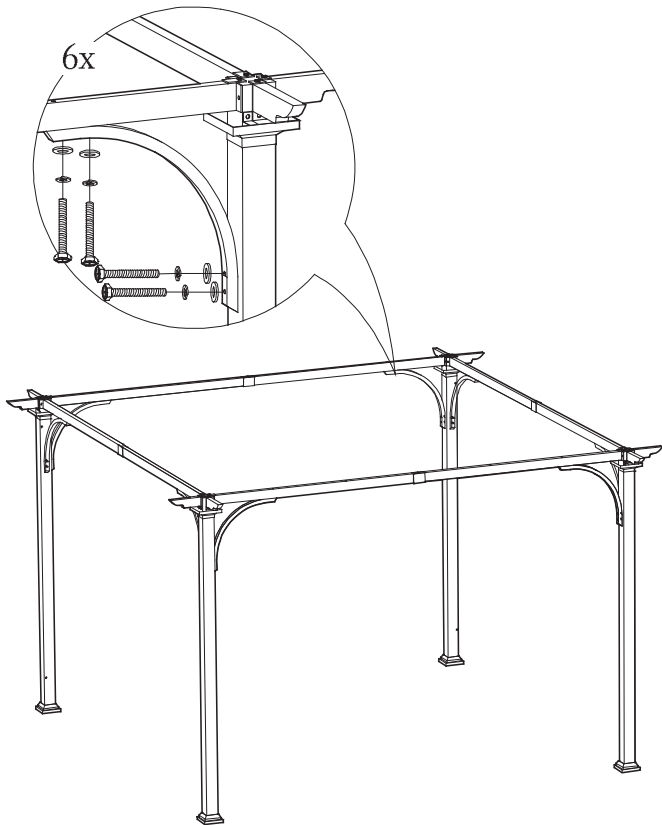  


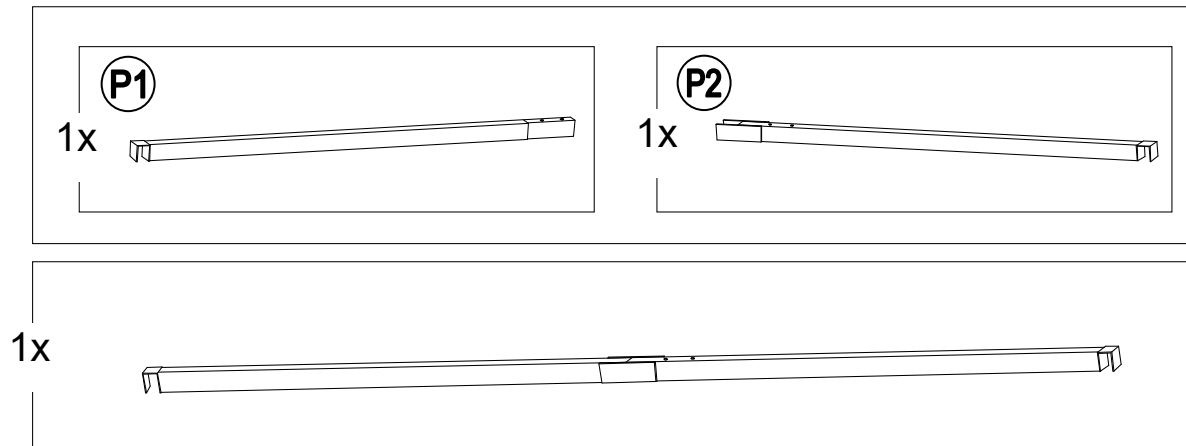 


30

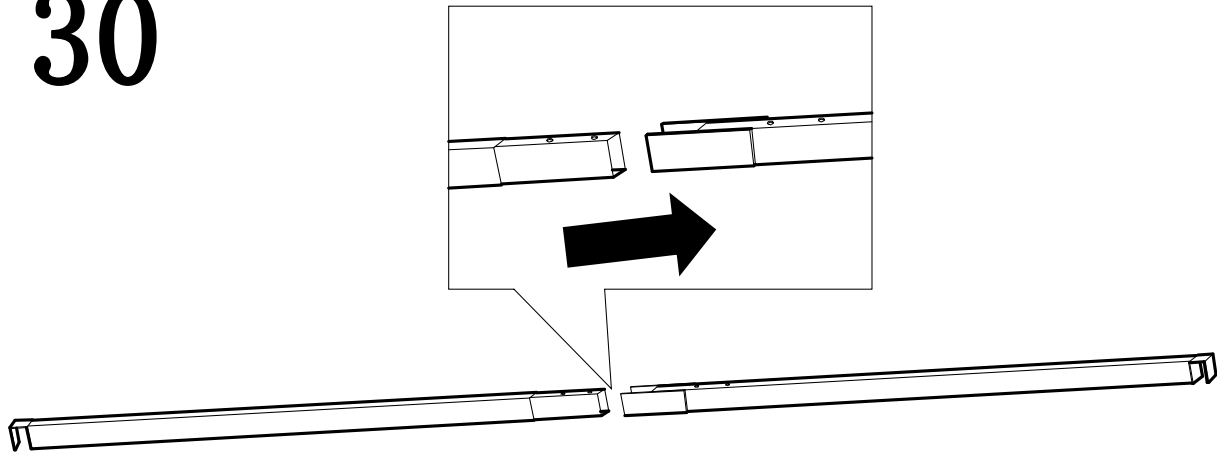 




31

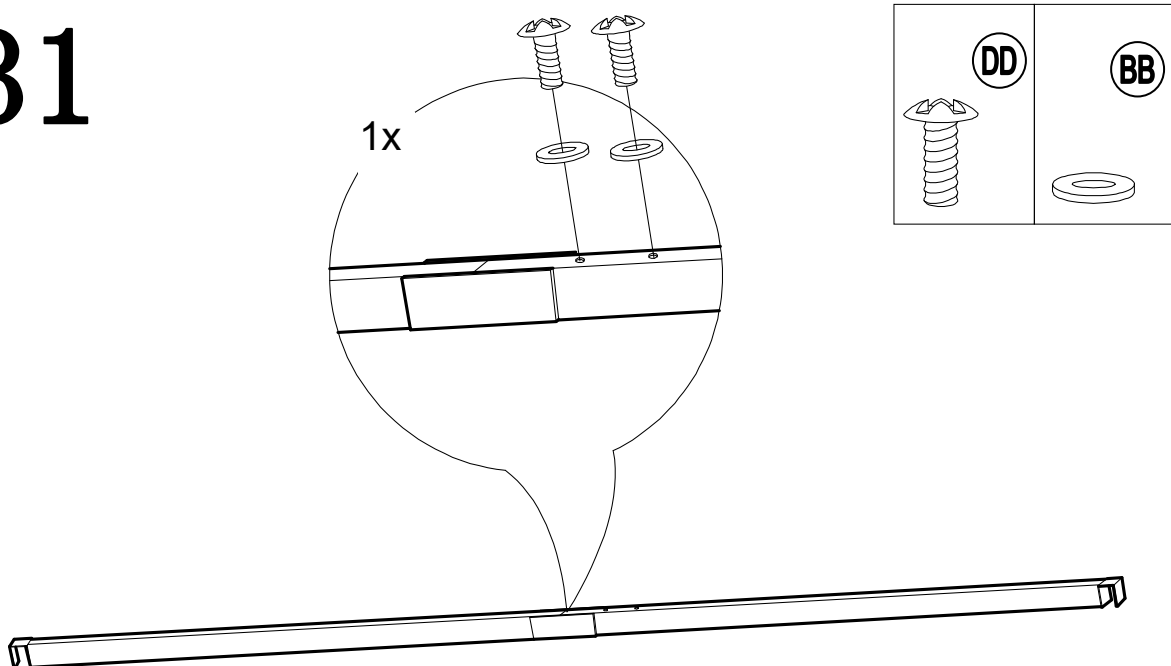 

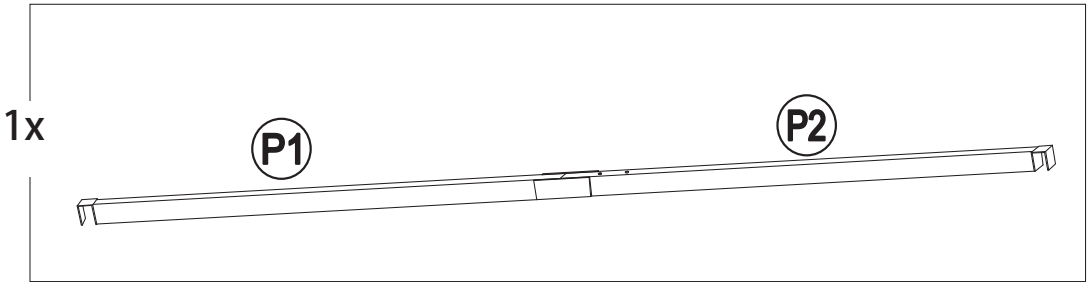 


32

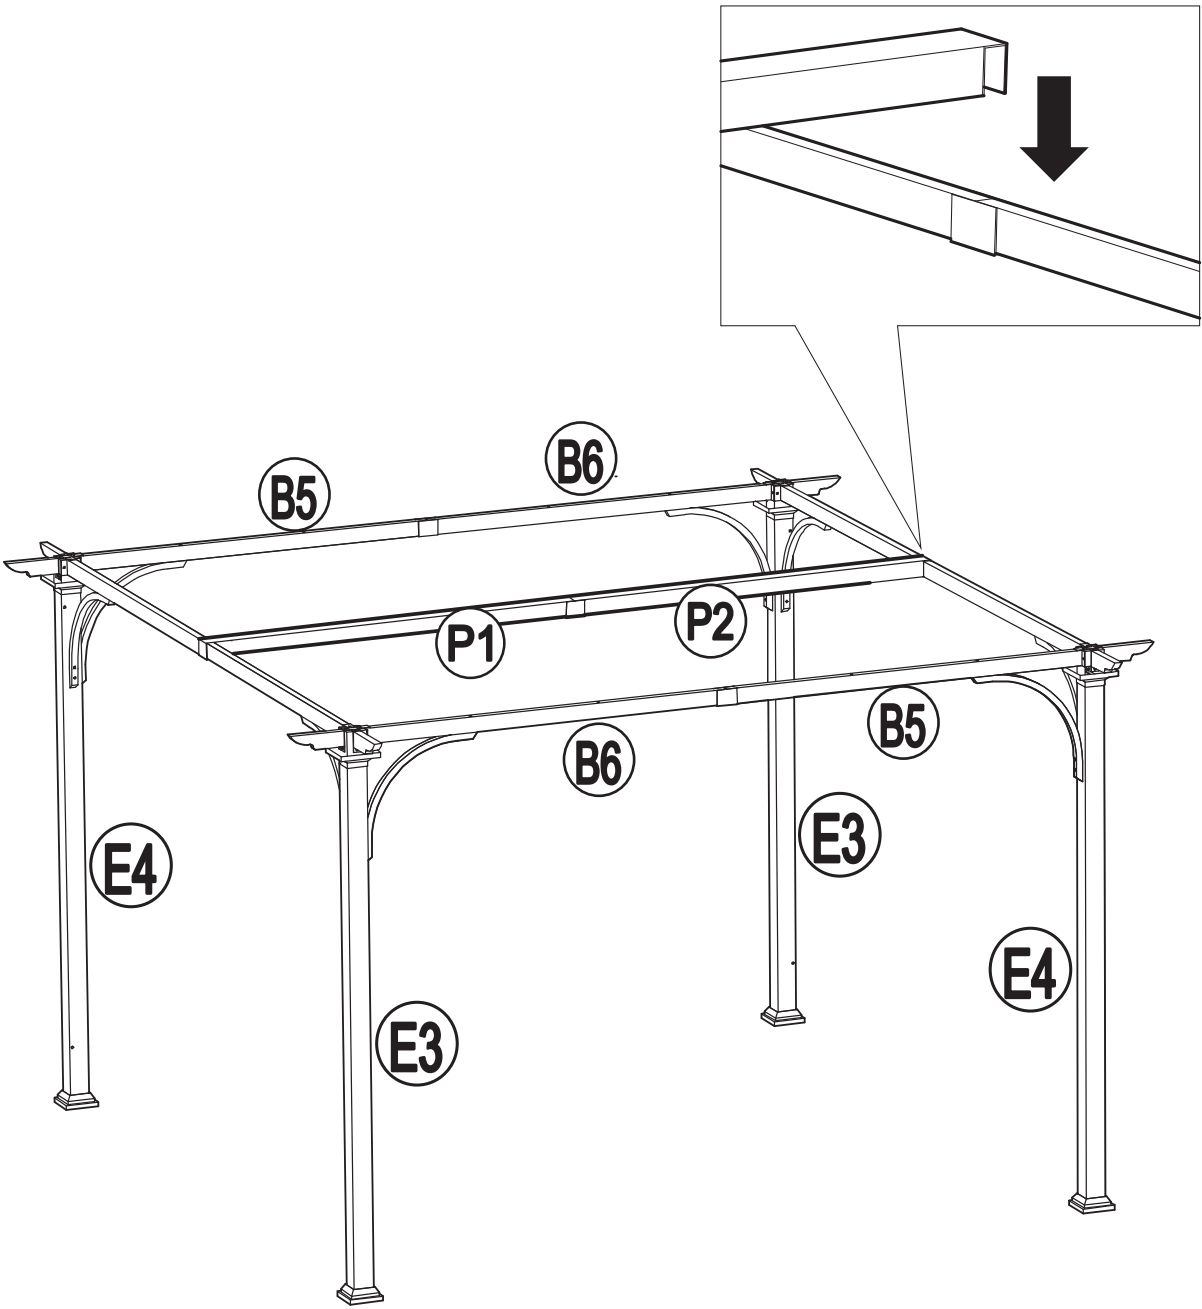 


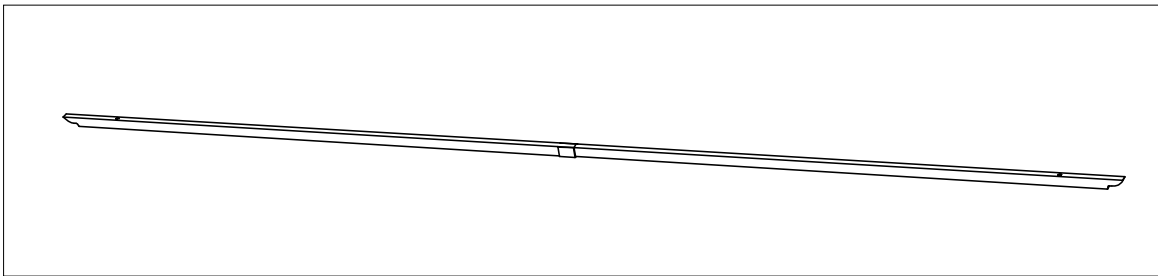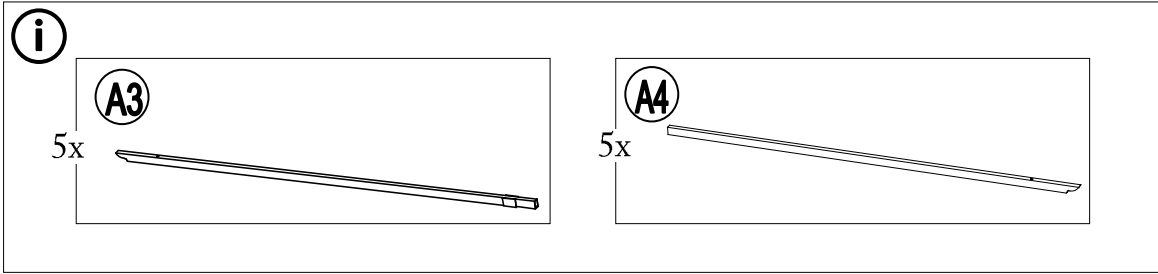  


33

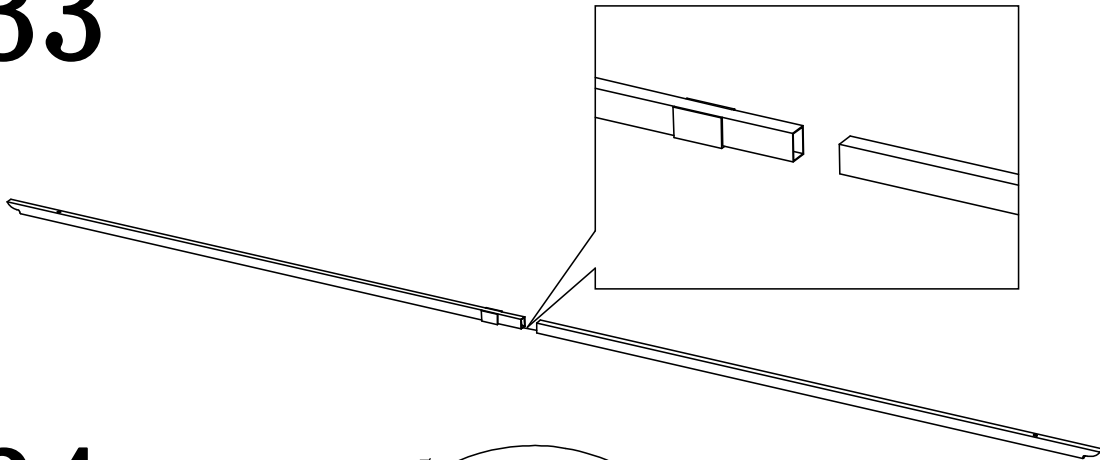 


34


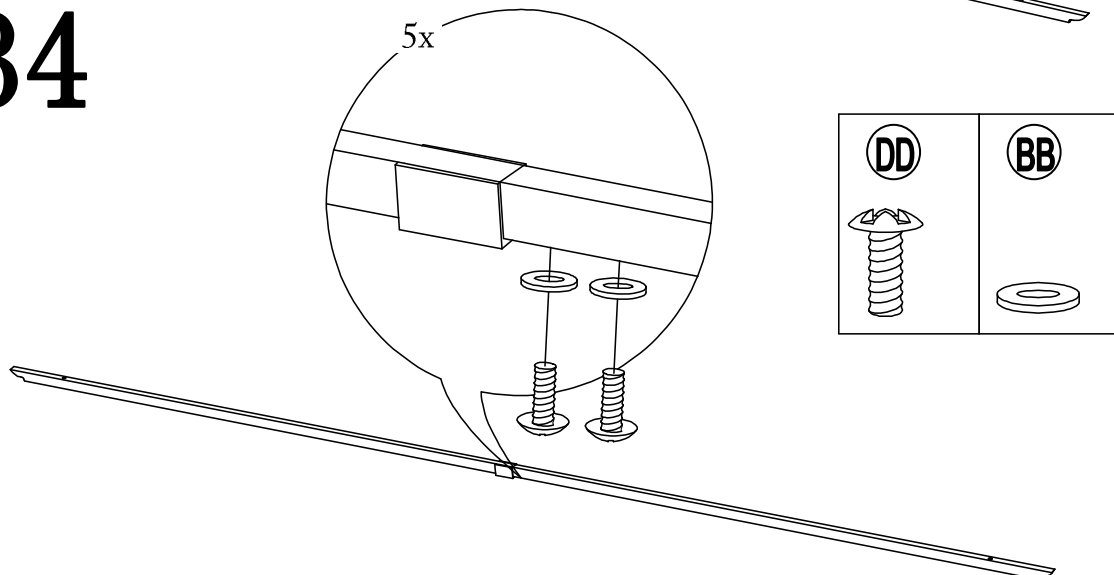 


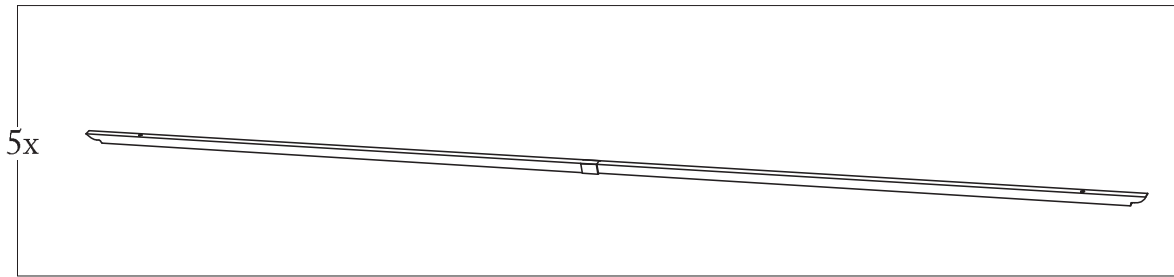 


35

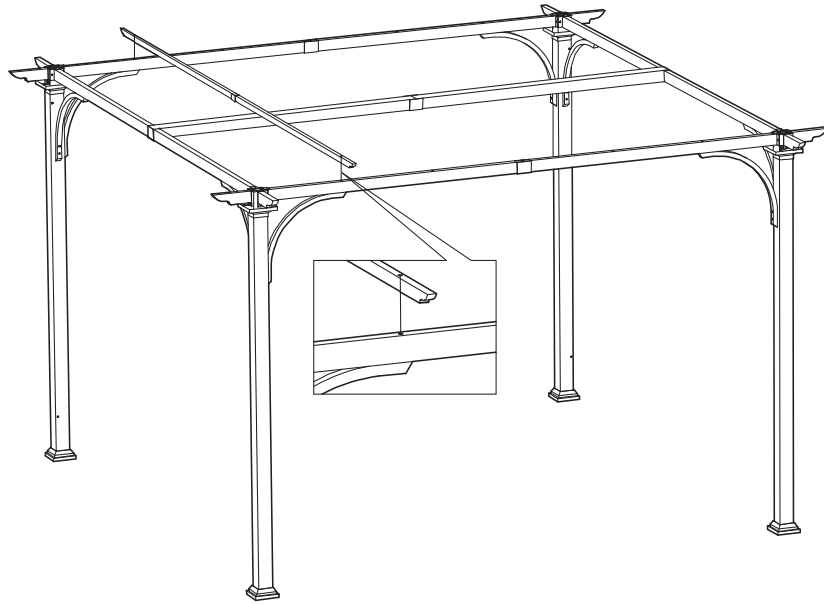 



36

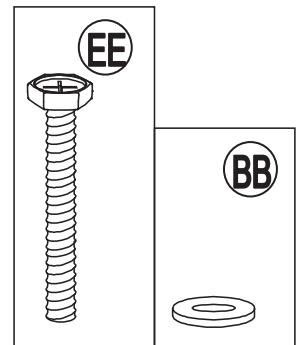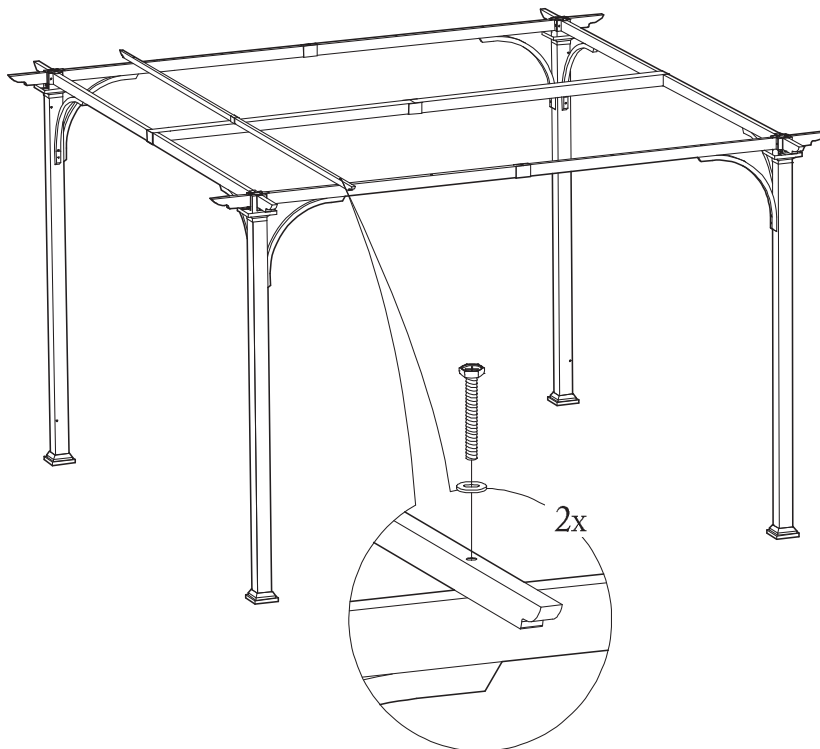  


37

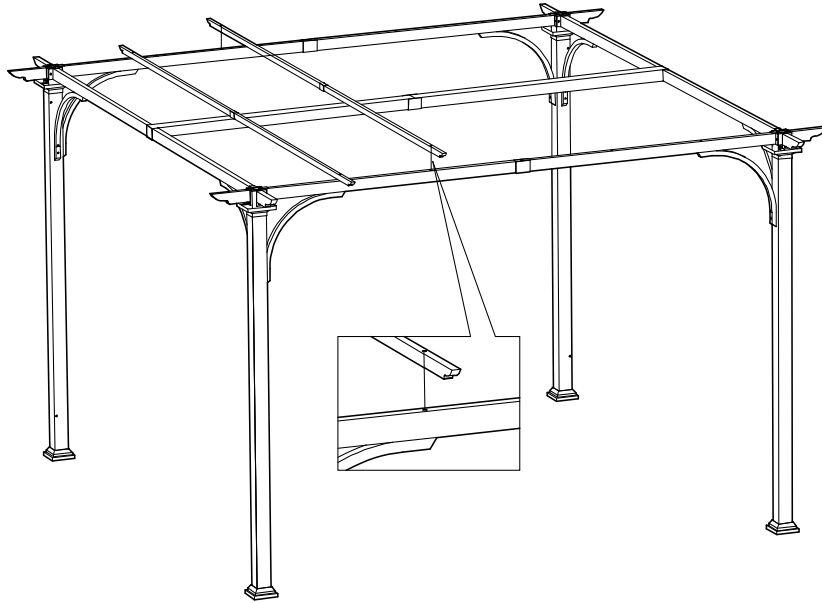 



38

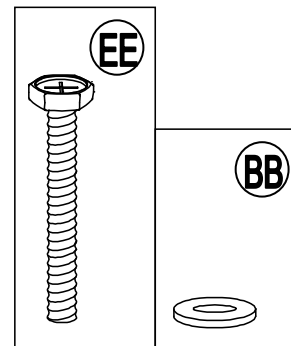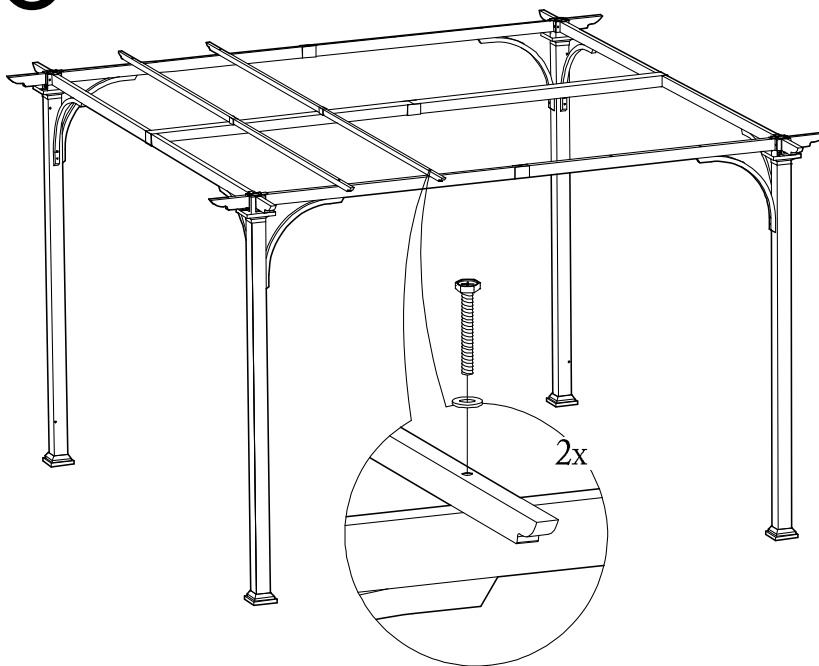  


39


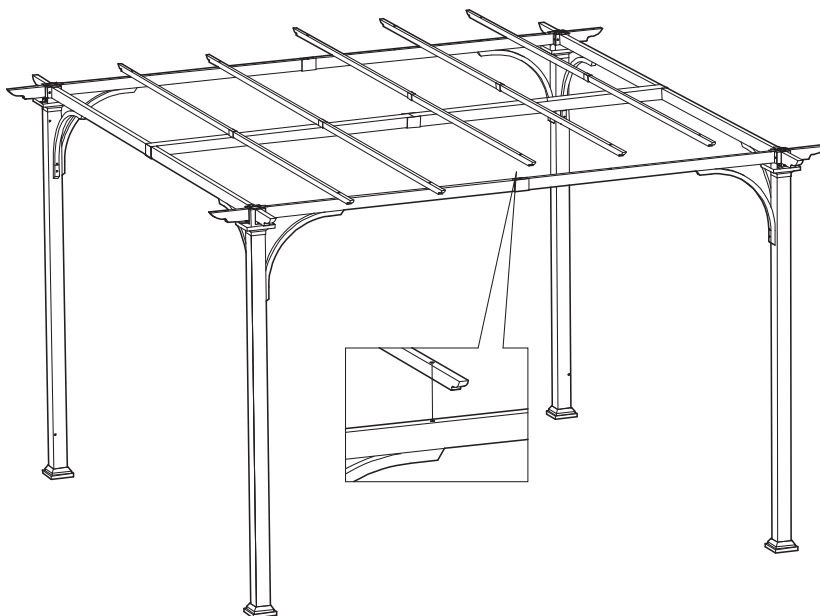 



40

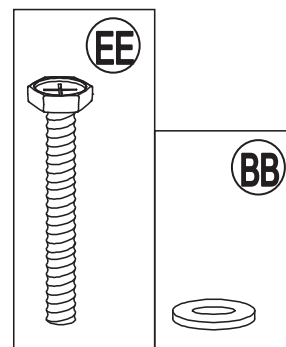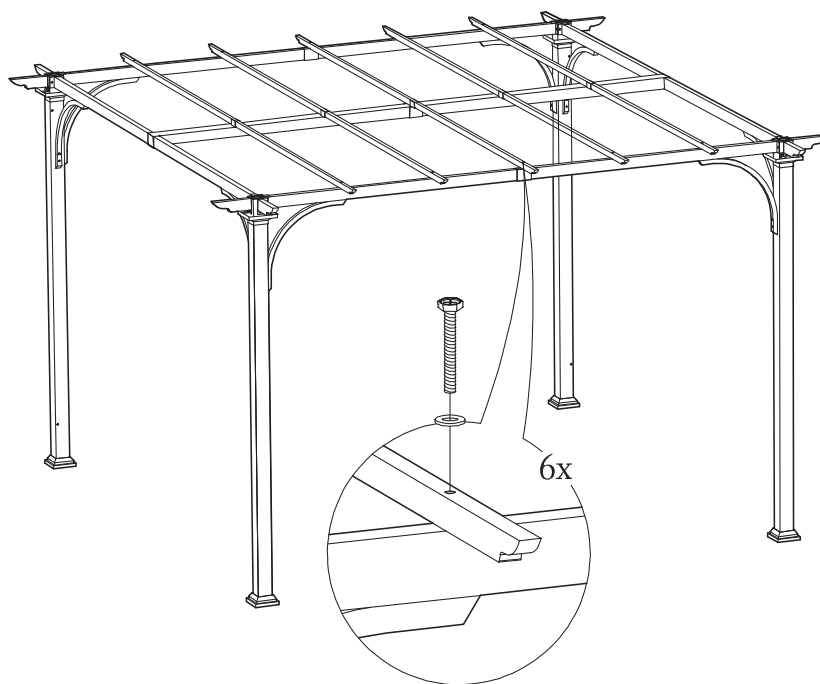  

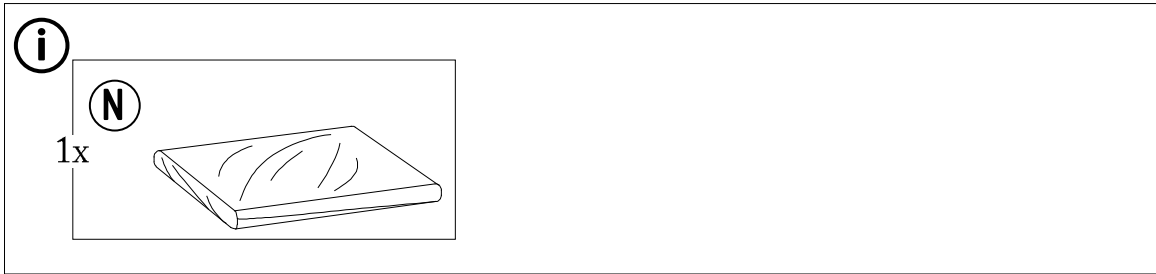 


41

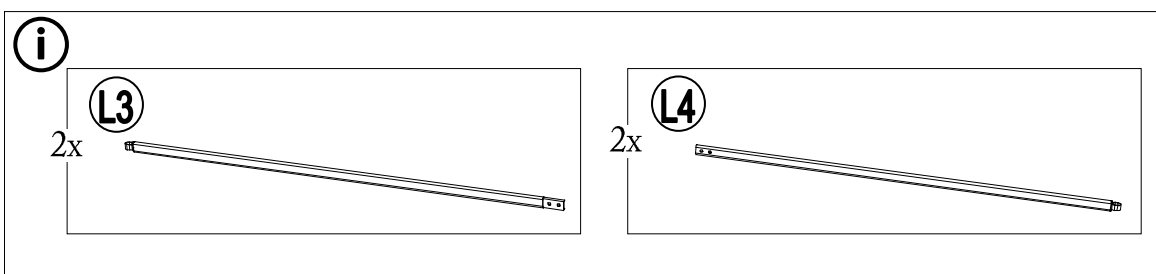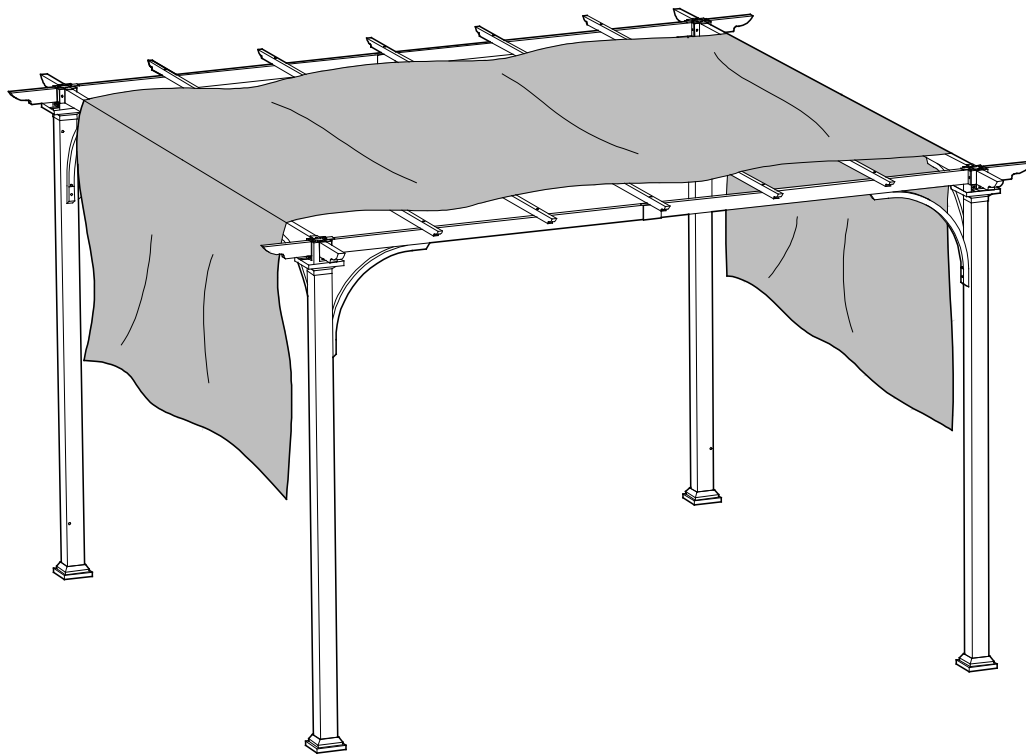  


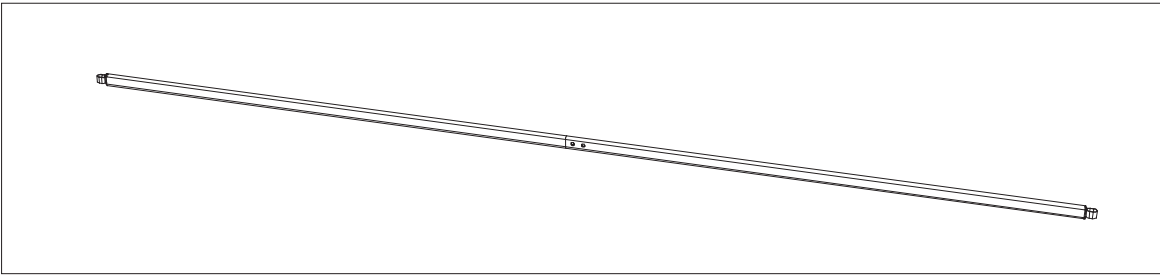 



42

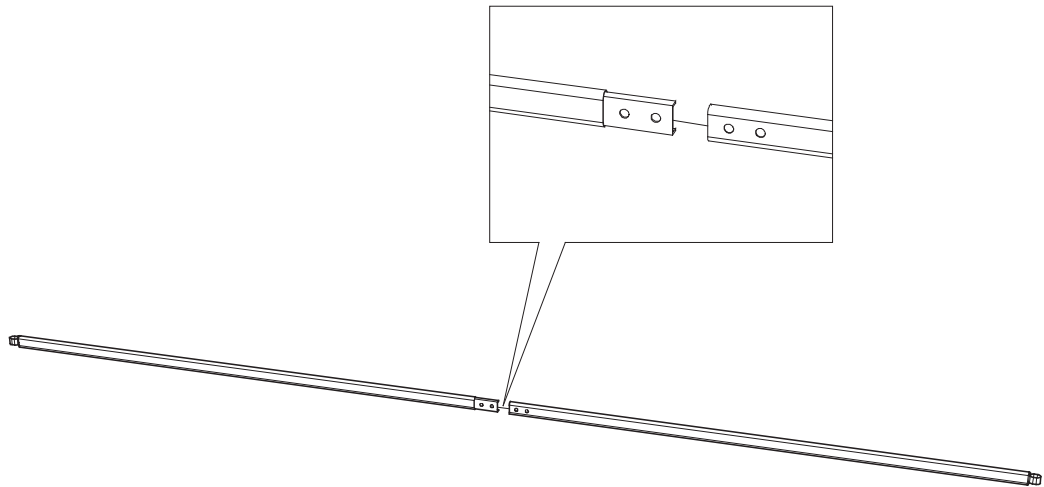 

43

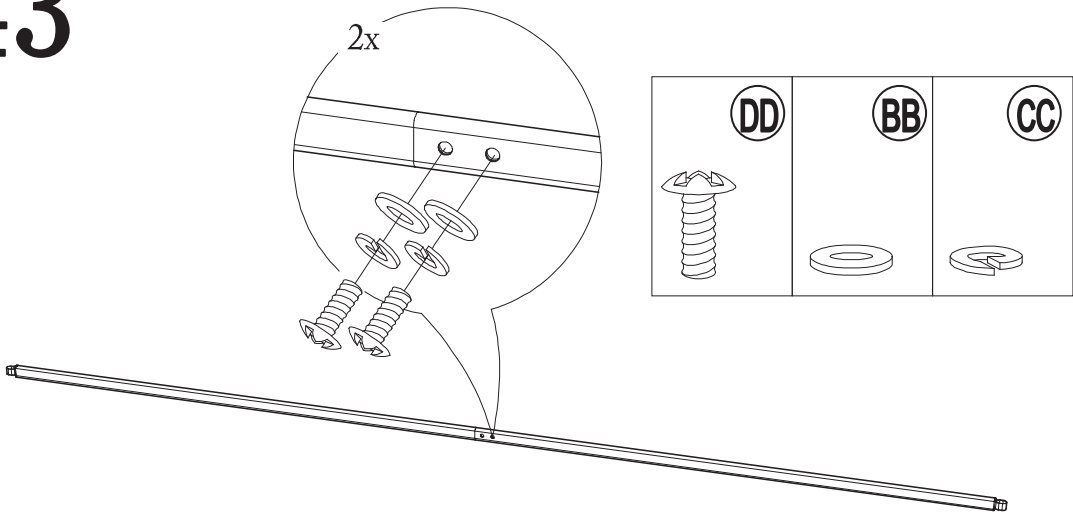 

44

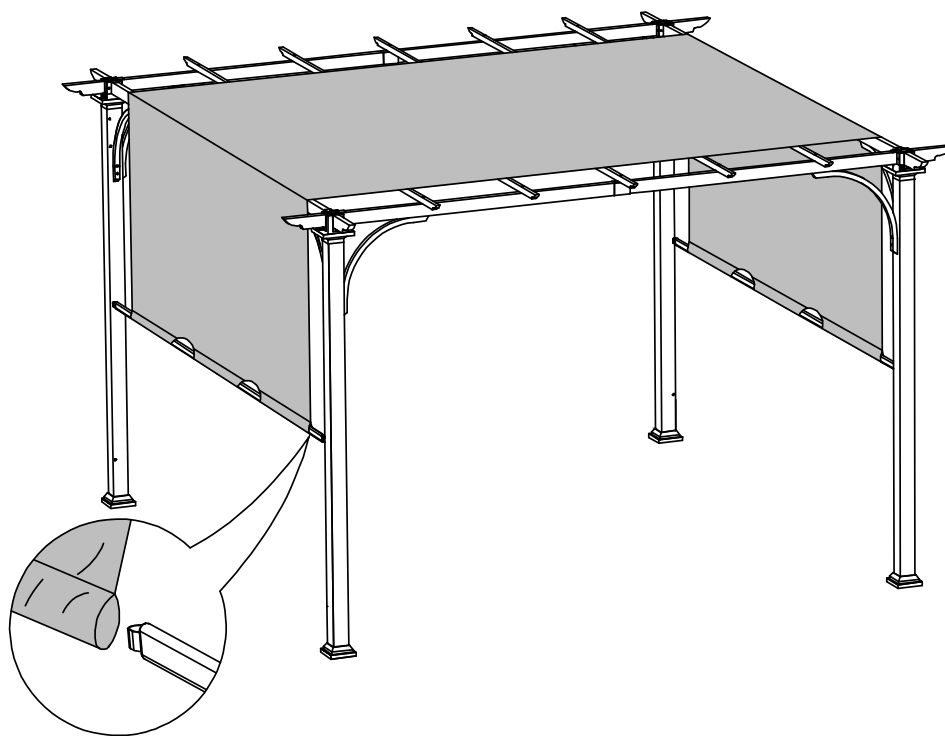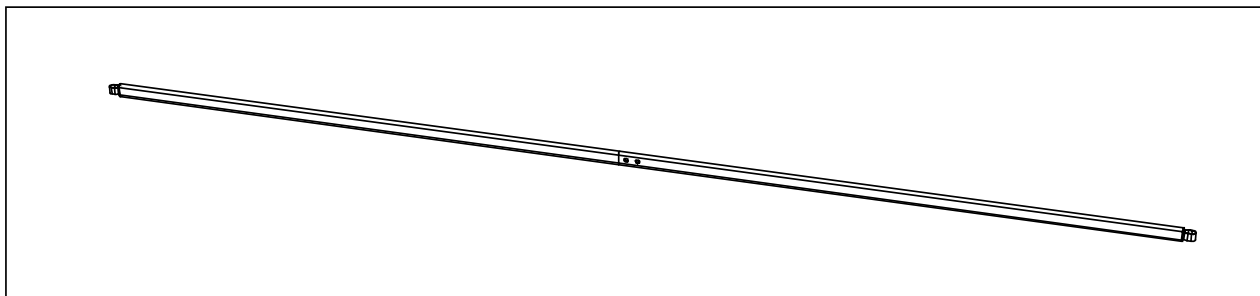  **i****(K)**


4x

**(M1)**



 
4x




45

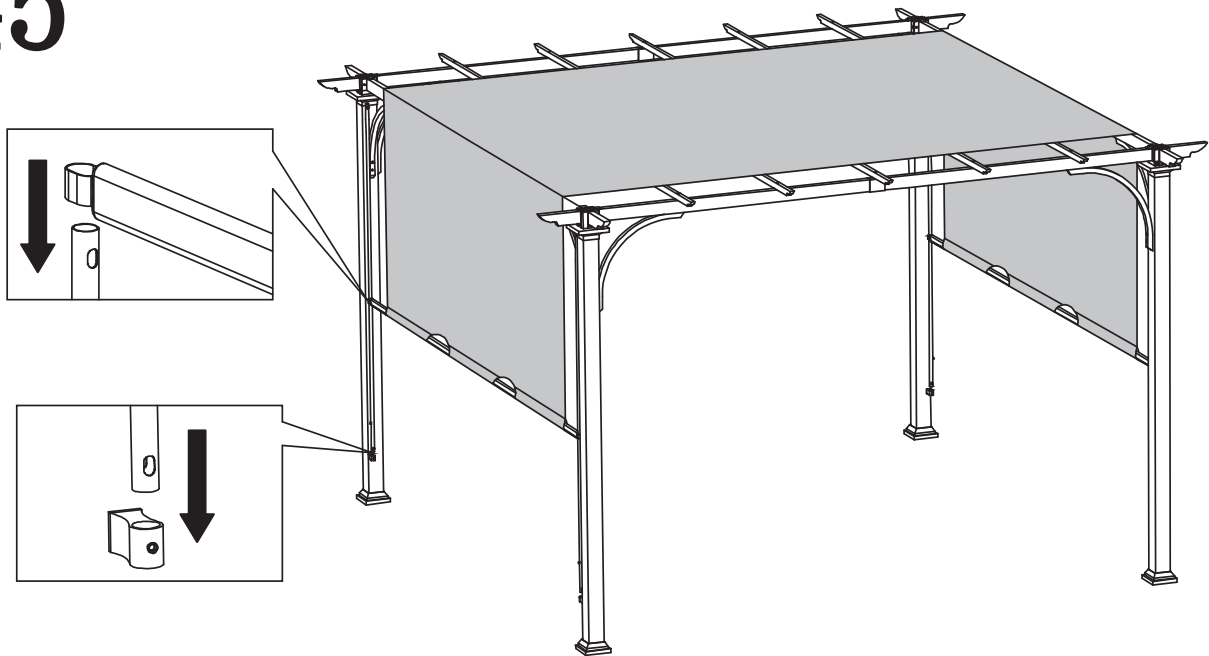



46

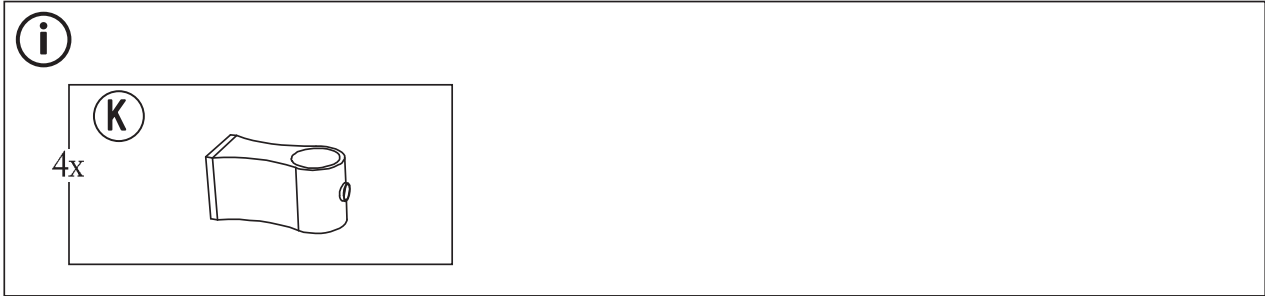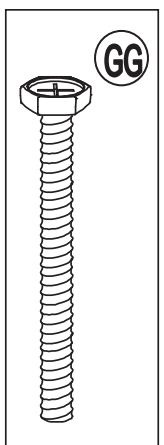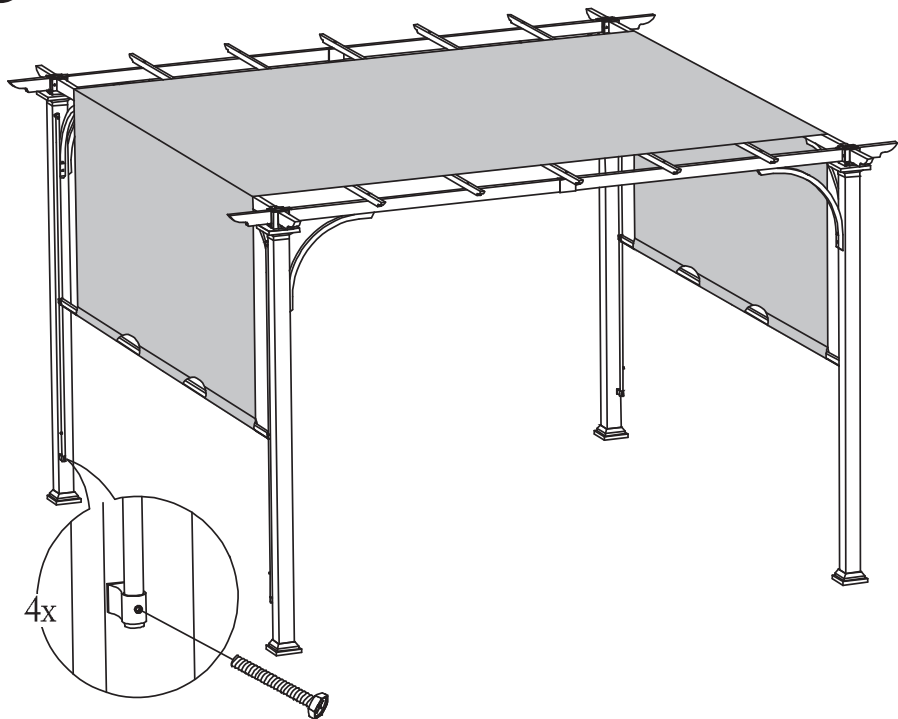   

47

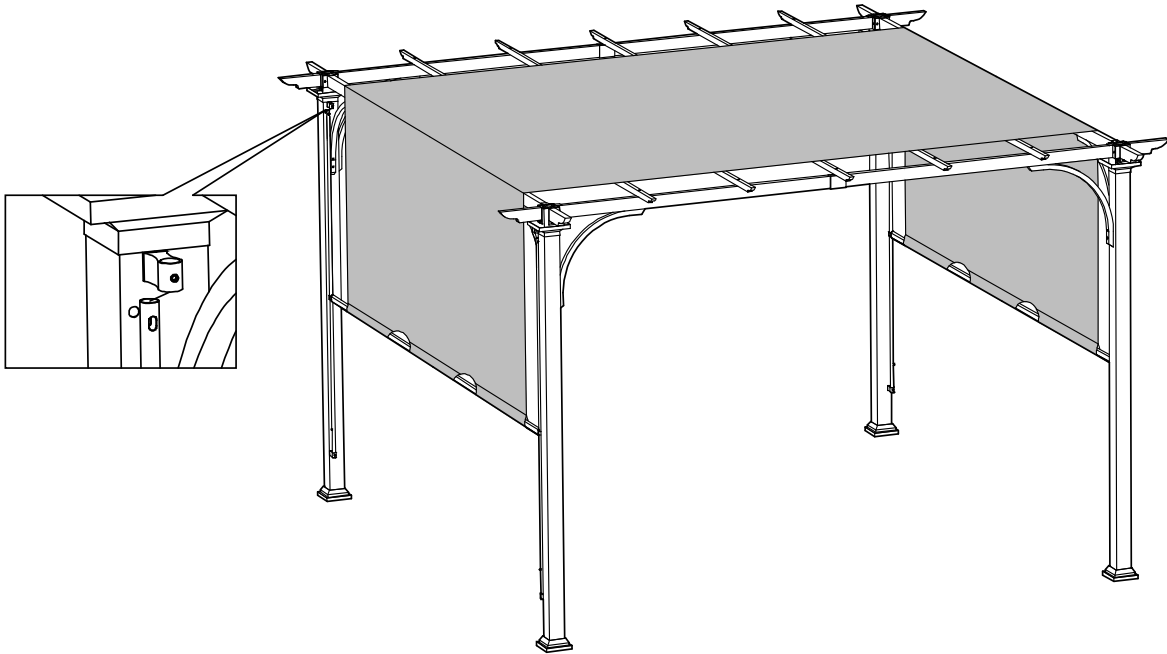 


48

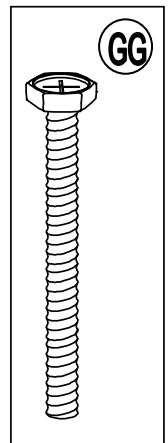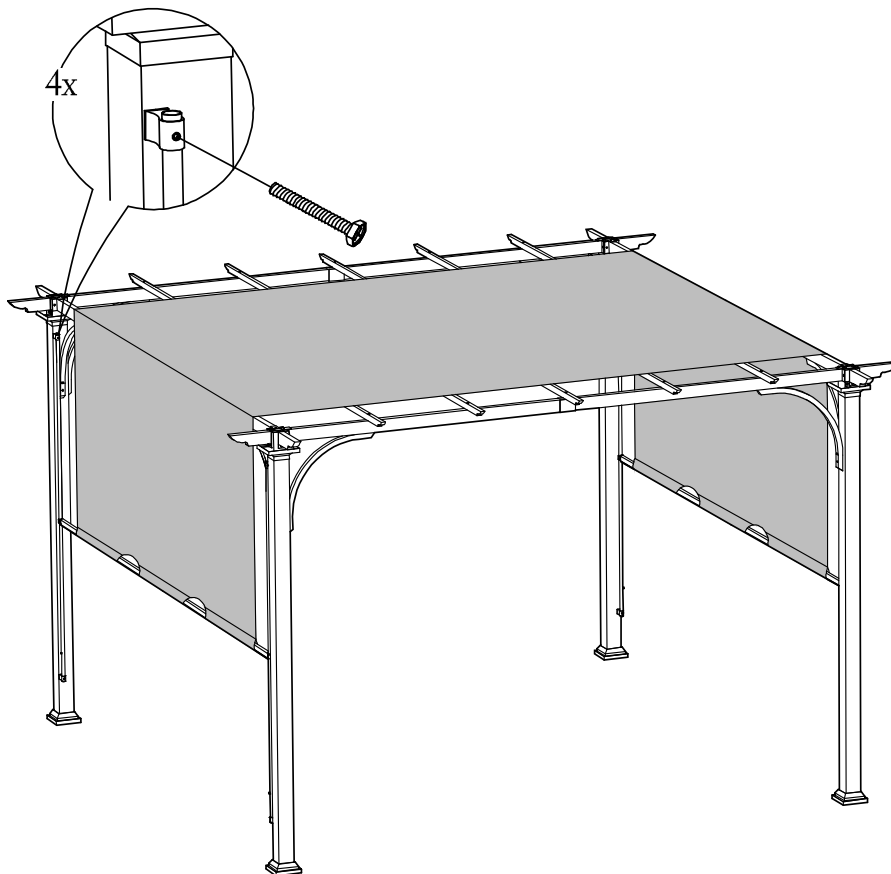  



49

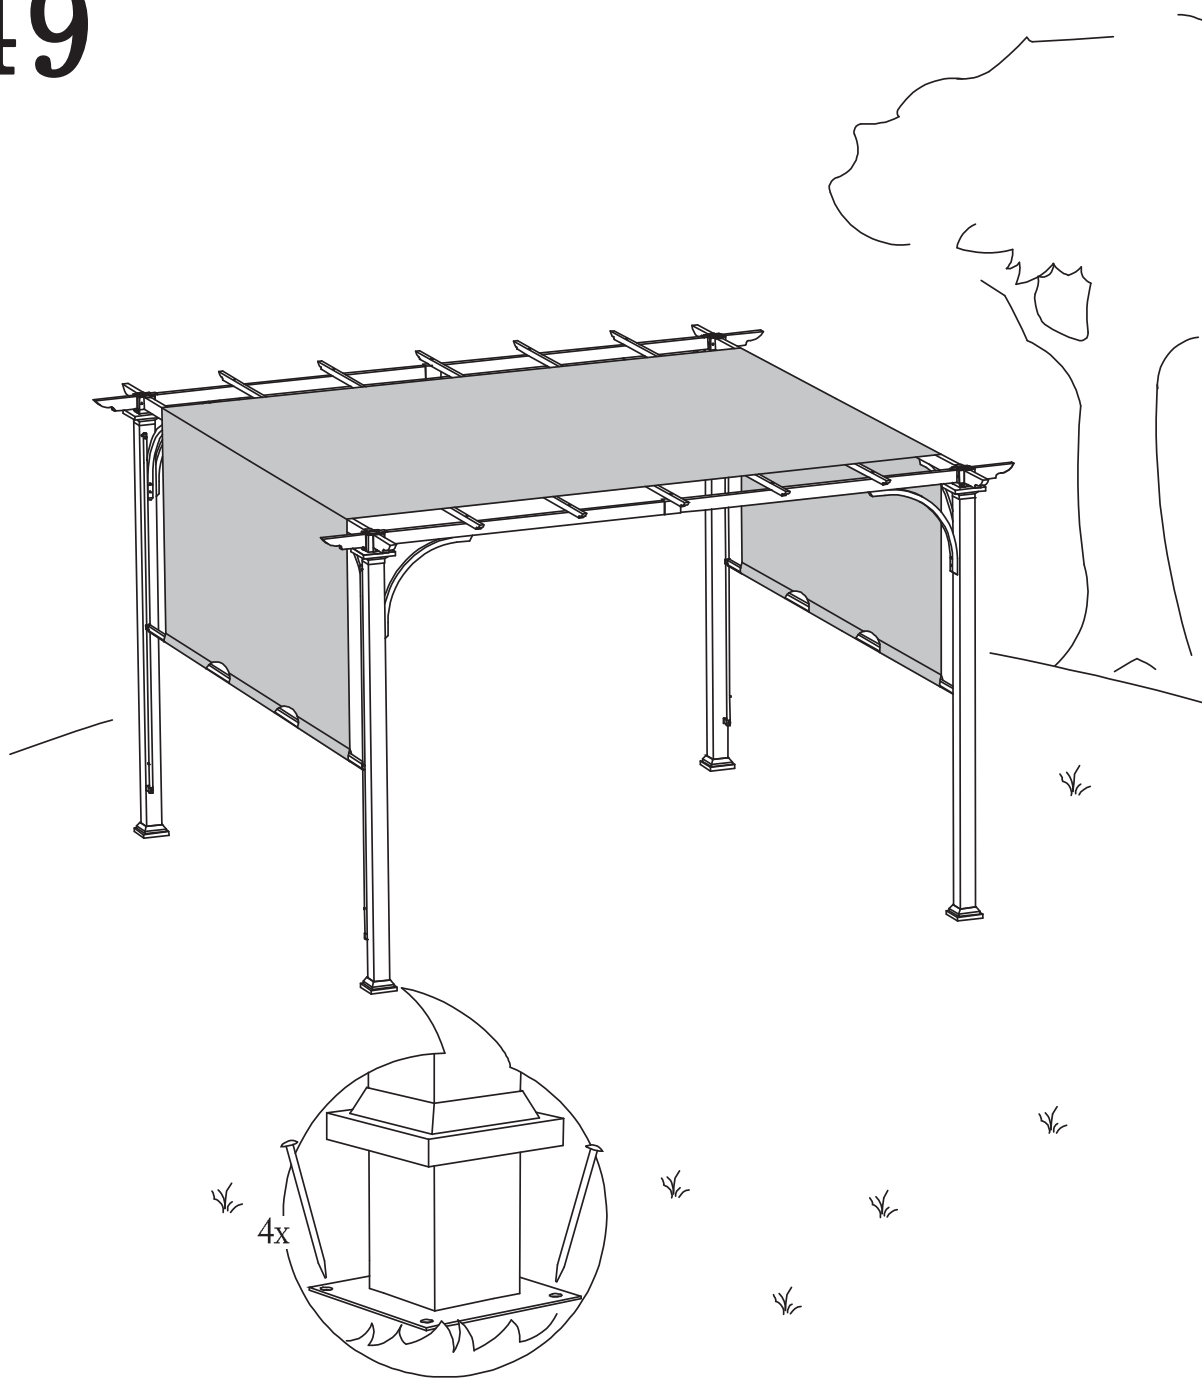 

**CAUTION!**

- Check all screws and nuts periodically for tightness; fasten them as required.
- Disassemble the gazebo in reverse order of the steps used to assemble. Always disassemble the gazebo completely. A partially-disassembled gazebo is not stable enough to resist wind and bad weather, and therefore can be damaged and/or cause damage.
- Keep all flame and heat sources away from the tent fabric. This tent is made with fabric that meets CPAI-84 specifications for flame resistance. It is not fire proof. The fabric will burn if left in continuous contact with any flame source. The application of any foreign substance to the tent fabric may render the flame-resistant properties ineffective.

- Clean the gazebo gently with water using a sponge.
- Do not use abrasive materials, wire brushes, chemicals, cleansers or bleach.
- Do not use a pressure washer.
- Rinse well. Allow it to air dry.
- Steel components of garden accessories and furniture are treated with rust-inhibiting paint. However, due to the nature of steel, surface oxidation (rusting) will occur if this protective coating is scratched. This is a natural process. To minimize this condition, it is recommended to carefully assemble/handle the product, in order to prevent the paint from being scratched. Surface rust can be removed easily using a very light application of common cooking oil. If surface oxidation (rusting) occurs and no measures are taken to correct it, the oxidation may start dripping onto the assembly surface, which may cause stains that may be difficult to remove.
- Keep instruction manual for future reference.
- Keep the original packaging to store the gazebo.

Dimensions (L x W x H)	10' x 10' x 7' 2"
	3.1 x 3.1 x 2.2m
Product weight	66 kg
	145 lbs

This CANVASTM product carries a one (1) year warranty against defects in workmanship and materials.

Trileaf Distribution agrees to replace the defective product free of charge within the stated warranty period, when returned by the original purchaser with proof of purchase. This product is not guaranteed against wear or breakage due to misuse and/or abuse.