 


CANVASTM

DASHLEY COLLECTION GAZEBO

MODEL NO. 088-2017-2

PRODUCT NO. L-GZ976PCO-D

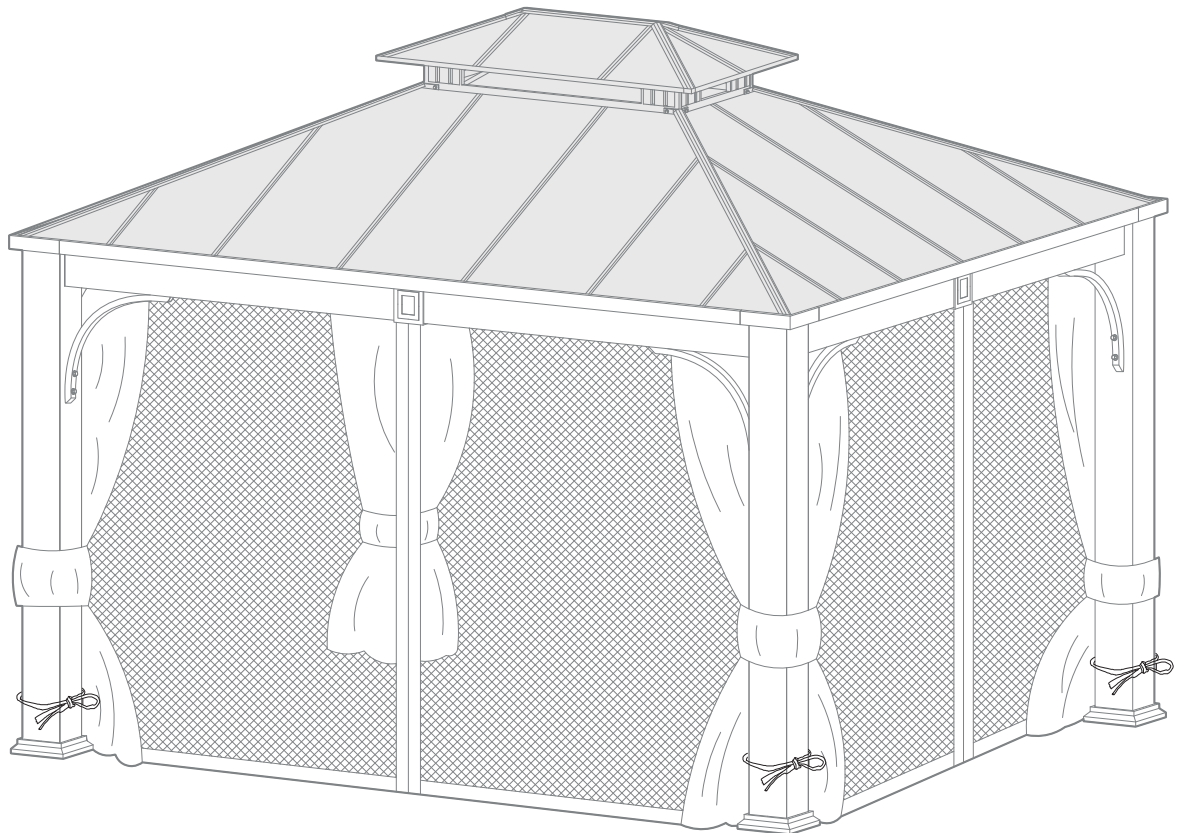

ASSEMBLY INSTRUCTIONS

Toll-free: 1-888-670-6684

IMPORTANT: Please read this manual carefully before beginning assembly of this product.
Keep this manual for future reference.

Production Number :xxxxxxx

Table of Contents	3
Important Safety Instructions	3
Parts List	4-6
General Requirements	7
Assembly	8-34
Cleaning and Maintenance	35
Technical Data	35
Warranty	35



Warning! To reduce the risk of serious injury, read the following safety instructions before assembling and using the gazebo.

 
Caution! Always keep children under close supervision while they are playing around this product. Never leave children unattended. Keep pets away while setting up the gazebo.


Caution! Check municipal by-laws prior to installing the gazebo.

- This product is intended for domestic outdoor use only.
- The product should be placed and assembled on flat, horizontal ground.
- Consult with your local governing authority/local municipal codes regarding installation of temporary structures before assembly.
- Ensure there is enough clearance around the product. Before assembling the gazebo, make sure to leave a distance of not less than 6' (1.8 m) from any structures or obstructions, such as fences, garages, houses, overhanging branches, laundry lines, or electrical wires.
- Anchor the gazebo to the ground with stakes for added safety. Stakes are provided to secure the gazebo to the ground. If you wish to secure the gazebo to a concrete or wood surface, use anchors suited for these surfaces (anchors not included). Do not assemble the gazebo on sandy, muddy or loose soil, as stakes do not have enough anchorage in these types of soil.
- If more than one gazebo is set up, keep a minimum distance of 10' (3 m) between the gazebos.
- Any assembly or maintenance of the product must be carried out by adults only.
- Make sure there is sufficient manpower when assembling or moving the product.
- Some parts may contain sharp edges. Wear protective gloves if necessary.
- Check all nuts and bolts periodically for tightness. When required, tighten them.
- Repairing and replacing parts should be done by a qualified technician.
- This gazebo is intended for decorative and sunshade purposes only.
- The gazebo is not designed to withstand harsh weather, including high winds, rain and snow. Always remove the gazebo in such heavy weather conditions, otherwise it might tip over and cause damage to the product or injuries to bystanders.
- During snow days, remove the snow at the top when the snow is thicker than 4" (10 cm).
- After a period of time, usually in 2-3 months, tighten all the bolts.
- After a period of use, rinse the ash on top of the gazebo using water. Avoid using acid or alkali wash lotion.
- Do not hang any weights on the roof frame.
- Do not climb onto the roof of the gazebo. Falling off the gazebo can result in serious injury.
- After a few years, if the paint peels off, use paint of similar colour. It is recommended to use outdoor paint.
- Retain the original packaging to store the gazebo.
- If the product will not be used for a long period of time (e.g. winter time), it should be disassembled and stored in a clean, dry environment.

IMPORTANT: RETAIN FOR FUTURE REFERENCE, AND READ CAREFULLY.

A P11160A01107 
Post - 4

B P11622A01107 
Base - 4

 
C P11521A01107 
Base cover - 4


D1 P11015B01107 
Beam for long side - 2

D2 P11016B01107 
Beam for short side - 2


E4 P11081E01107 
Decorative groove for long side - 2

 
E5 P11082E01107 
Decorative groove for short side - 2

 E6 P11083E01107 
Decorative groove for corner - 4

F1 P10343A01107 
Slanting bar for large roof - 4

 F2 P10224A01107 
Slanting bar for small roof - 4

 G P10438A01107 
Middle bar for large roof - 4

H1 P10713A01107 
Lower beam connector 1 - 4

H2 P10714A01107 
Lower beam connector 2 - 4

I P10814A01107 
Lower middle beam connector - 4

J1 P10153A01107 
Frame for long side under big roof - 2

J2 P10154A01107 
Frame for short side under big roof - 2

K1 P13043A01107 
Small roof top beam (long side) - 2

K2 P13044A01107 
Small roof top beam (short side) - 2

L1 P13045A01107 
Big roof top short beam (short side) 1 - 2

L2 P13046A01107 
Big roof top short beam (short side) 2 - 2

L3 P13047A01107 
Big roof top long beam (short side) 1 - 2

L4 P13048A01107 
Big roof top long beam (short side) 2 - 2

 
M1 P13049A01107 
Big roof top short beam (long side) 1 - 2


M2 P13050A01107 
Big roof top short beam (long side) 2 - 2

M3 P13051A01107 
Big roof top long beam (long side) 1 - 2

M4 P13052A01107 
Big roof top long beam (long side) 2 - 2

N1 P12019A01107 
Small top roof cover - 1

 N2 P12020A01107 
Small top cover for slanting bar - 4

N3 P12021A01107 
Big top cover for slanting bar - 4

O P10155A01107 
Connector for small top - 1

P P12601C01107 
Hook - 1

Q P00207B08007 
Wall - 1

Q1 P10609A01107 
Small roof cover (long side) - 2

Q2 P10610A01107 
Small roof cover (short side) - 2

R P00310B02901 
Mosquito netting - 1

R1 P10611A01107 
Big roof left cover - 4

R2 P10612A01107 
Big roof right cover - 4

 
R3 P10613A01107 
Big roof middle cover - 2

S P11427A01107 
Lower middle beam connector - 4

T P10905A01107 
Cutting sleeve - 4

U P11306A01107 
Baffle - 4

V P11831A01107 
Arc support - 8

W1 P11941A01107 
Small top roof panel (short side) - 2

W2 P11942A01107 
Small top roof panel (long side) - 2

X1 P11943A01107 
Big cover (long side) - 2

X2 P11944A01107 
Big top roof left big panel - 4

X3 P11945A01107 
Big top roof right big panel 2 - 4

X4 P11946A01107 
Big top roof left middle panel - 4

X5 P11947A01107 
Big top roof right middle panel - 4

X6 P11948A01107 
Big top roof left small panel - 4

X7 P11949A01107 
Big top roof right small panel - 4

Y1 P12130A01107 
Left long pipe - 2

Y2 P12131A01107 
Right long pipe - 2

Y3 P12132A01107 
Left short pipe - 2

Y4 P12133A01107 
Right short pipe - 2

6 MODEL NO. 088-2017-2 | PRODUCT NO. L-GZ976PCO-D

Spare Parts List

AA H02015C11
M6X15 bolt - **236**



 
BB H19001C11
M6 washer - **374***




DD H09025C11
M6X25 screw - **16**



EE H02045C11
M6X45 bolt - **82**




FF H09055C11
M6X55 screw - **28**

 

GG H14001C11
M6 nut - **28**



 II P12401A01001
Φ8X260 stake - **16**



JJ P90701A07001
Ring - **104**



KK H13001C11
Spring Washer M6 - **64**



Z H00001C12
M6 wrench - **2**



AA H02015C11
M6X15 bolt - **12**



 
BB H19001C11
M6 washer - **19**




DD H09025C11
M6X25 screw - **2**



EE H02045C11
M6X45 bolt - **4**



FF H09055C11
M6X55 screw - **1**

 

GG H14001C11
M6 nut - **1**



JJ P90701A07001
Ring - **5**



KK H13001C11
Spring Washer M6 - **3**



* Cumulative numbers of the hardware are listed in the manual.

**CAUTION!**

- Proper placement of the gazebo is essential. Do not place the product underneath electrical lines.
- Keep children under close supervision while they are playing around this product. This product contains small parts which can be swallowed by children.
- Keep fingers away from places where they can be pinched or trapped.
- Do not attempt to assemble the gazebo if any part is missing.
- Do not light any fires inside or near the product!
- Stay calm if fire breaks out. Search for the nearest exit. Do not return to the gazebo before firemen allow you to do so.

**Let us help you!**

 
**DO NOT RETURN YOUR PRODUCT TO THE STORE. CALL US FIRST!
1-888-670-6684**

If you have questions regarding your product, require warranty assistance, or have damaged or missing parts, please call our customer service toll-free helpline. Contact us for assistance; we're here to help.

IMPORTANT: Please read and understand this manual before any assembly. Before beginning the assembly of product, make sure all parts are available. Compare parts list with packaging contents. If any part is missing, or if you have any questions, contact the service centre at 1-888-670-6684(toll-free).

Unpack and place all the parts from the packaging box in an open area and position them on the floor. Remove all packing materials and place them back into the box. Do not dispose of the packing materials until assembly is complete. Read each step carefully before beginning any assembly and make sure you understand each step. If you are missing a part, please call our toll-free number for assistance:1-888-670-6684.


Needed for assembly: (The following tooling not included)



Hammer



 Screwdriver






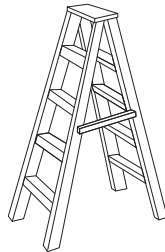







Ladder








5 people

           STEP 1

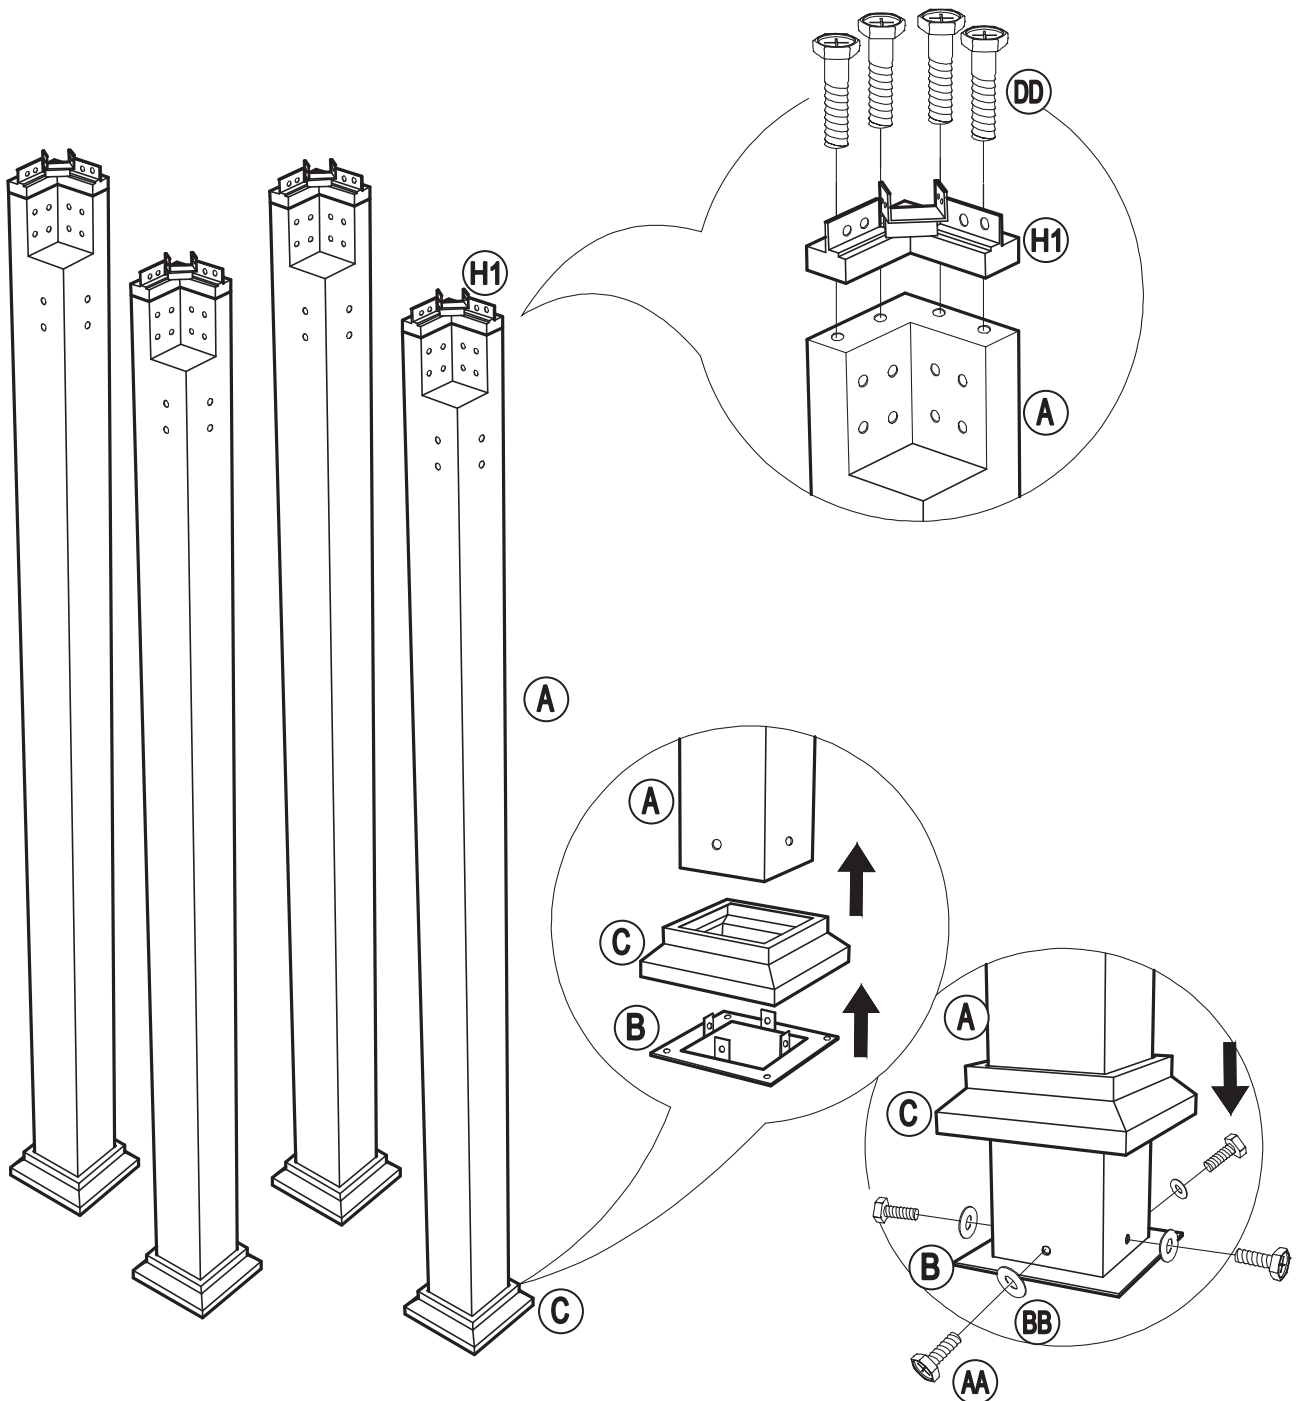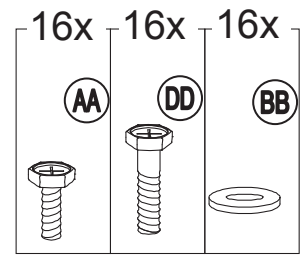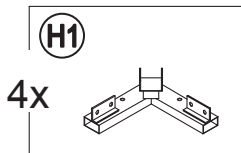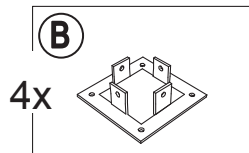
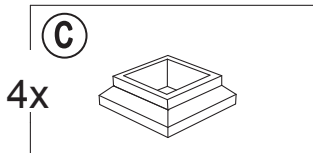
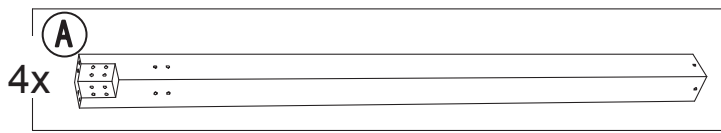


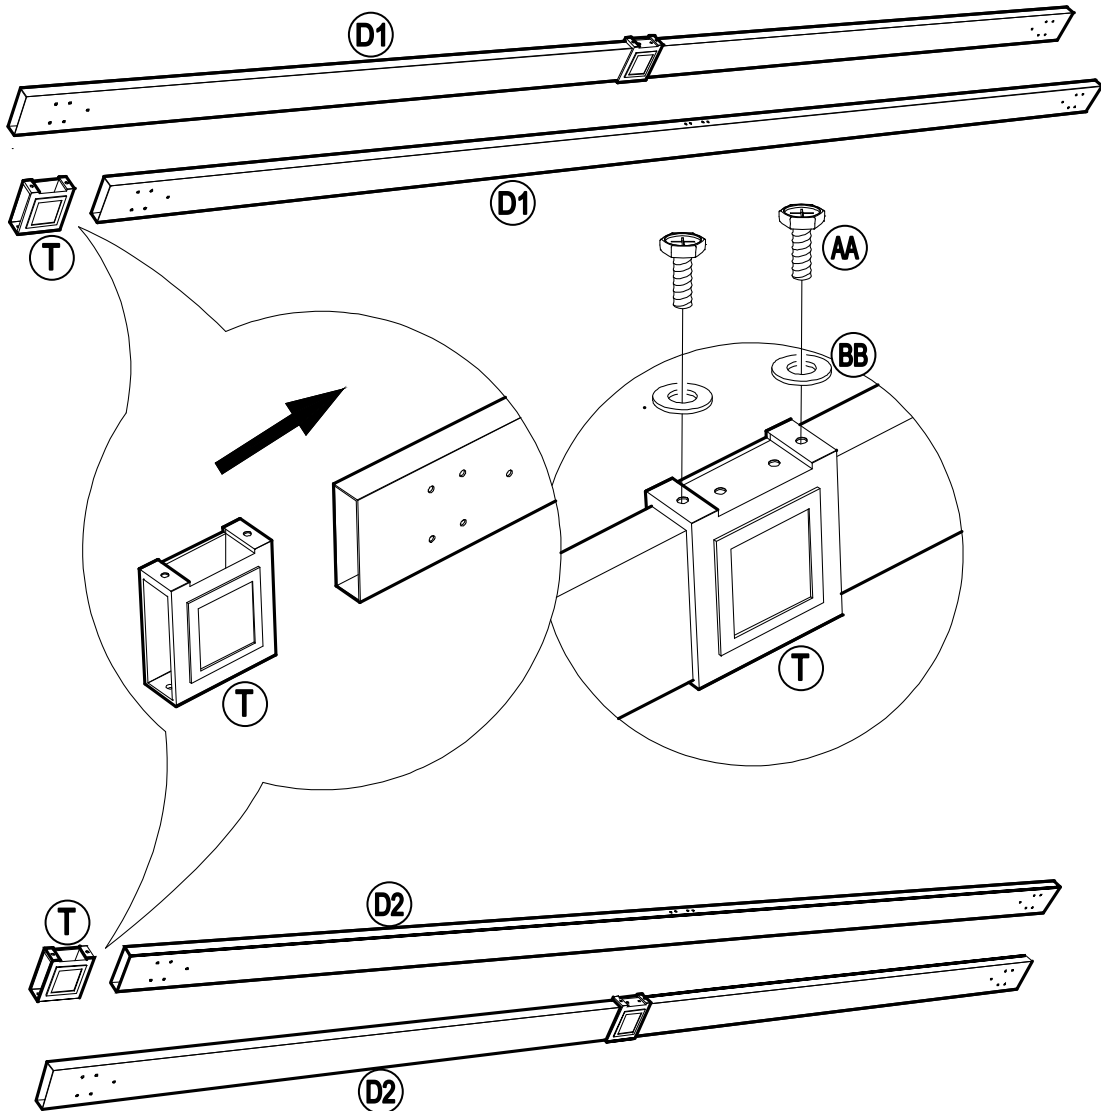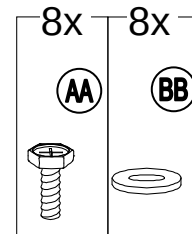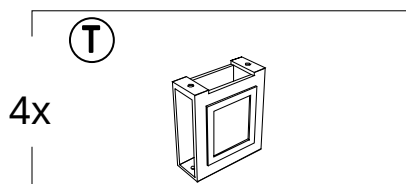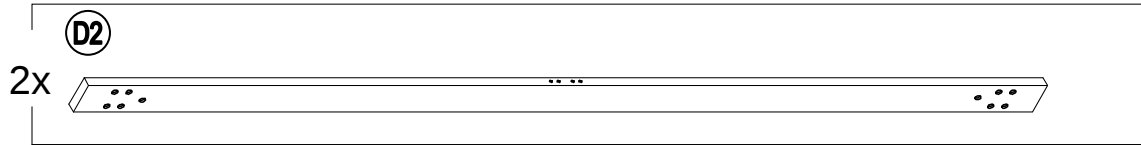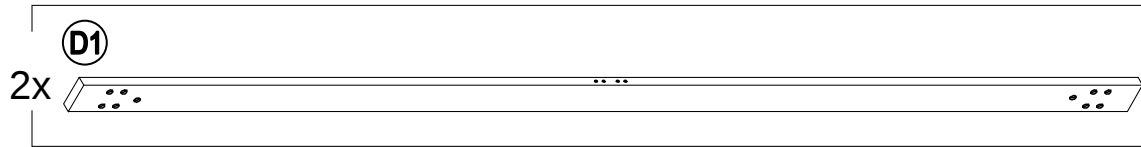STEP 2:


 
 
 
 
 
STEP 3:

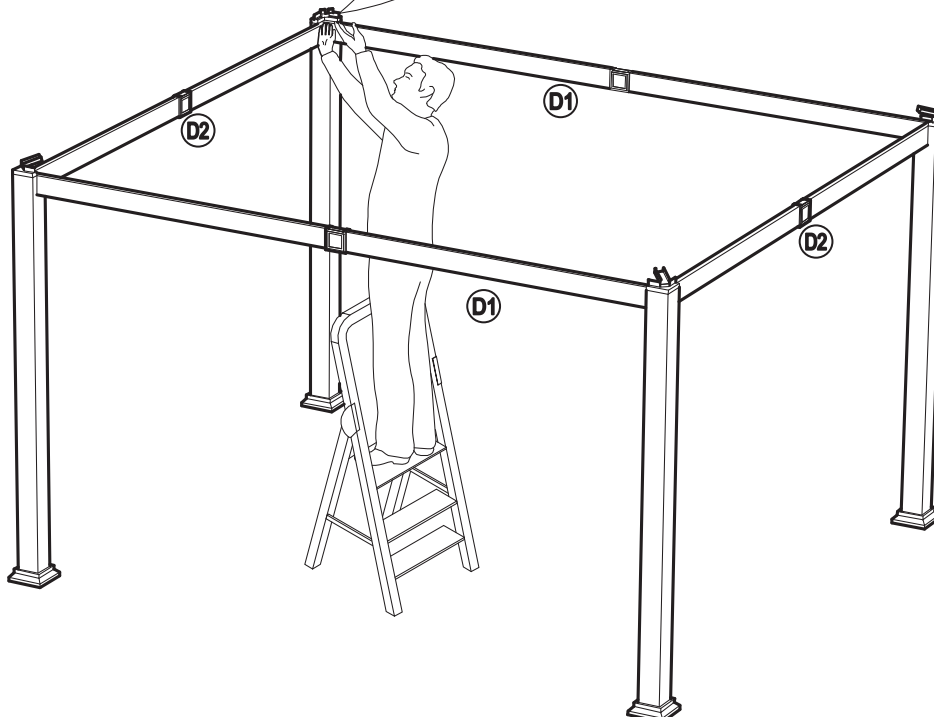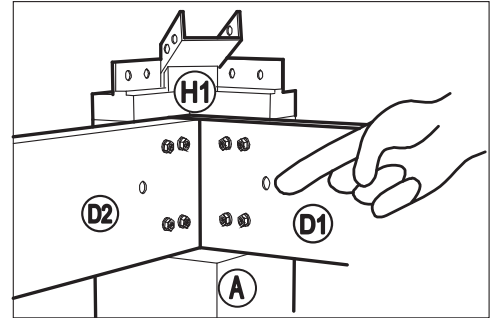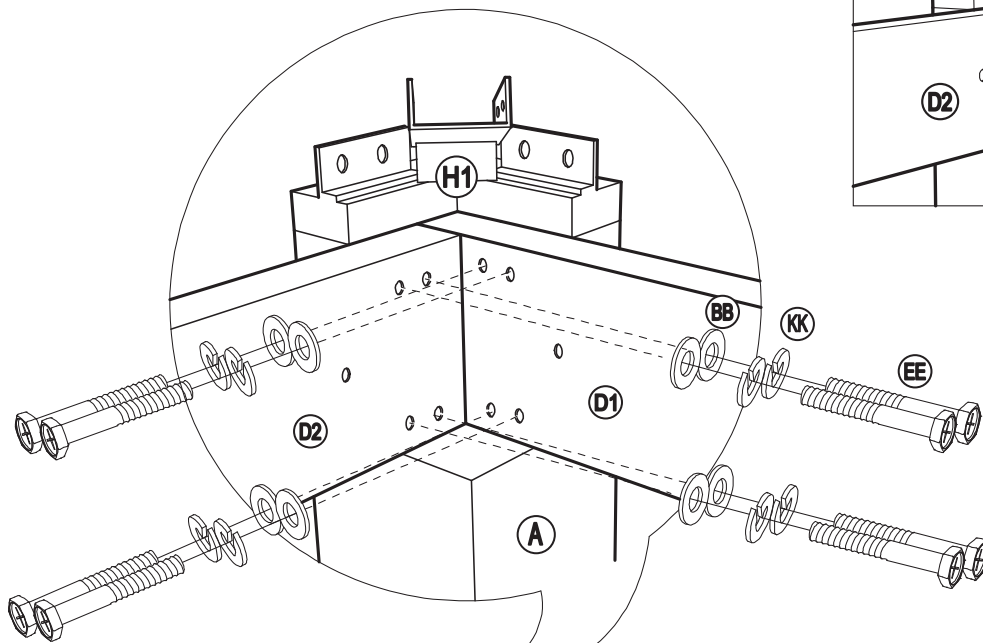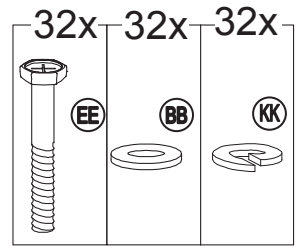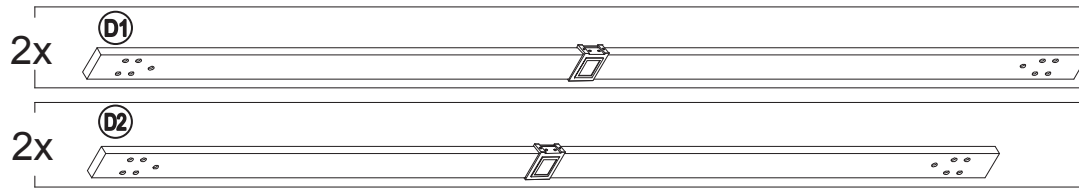


 
 
 
STEP 4:

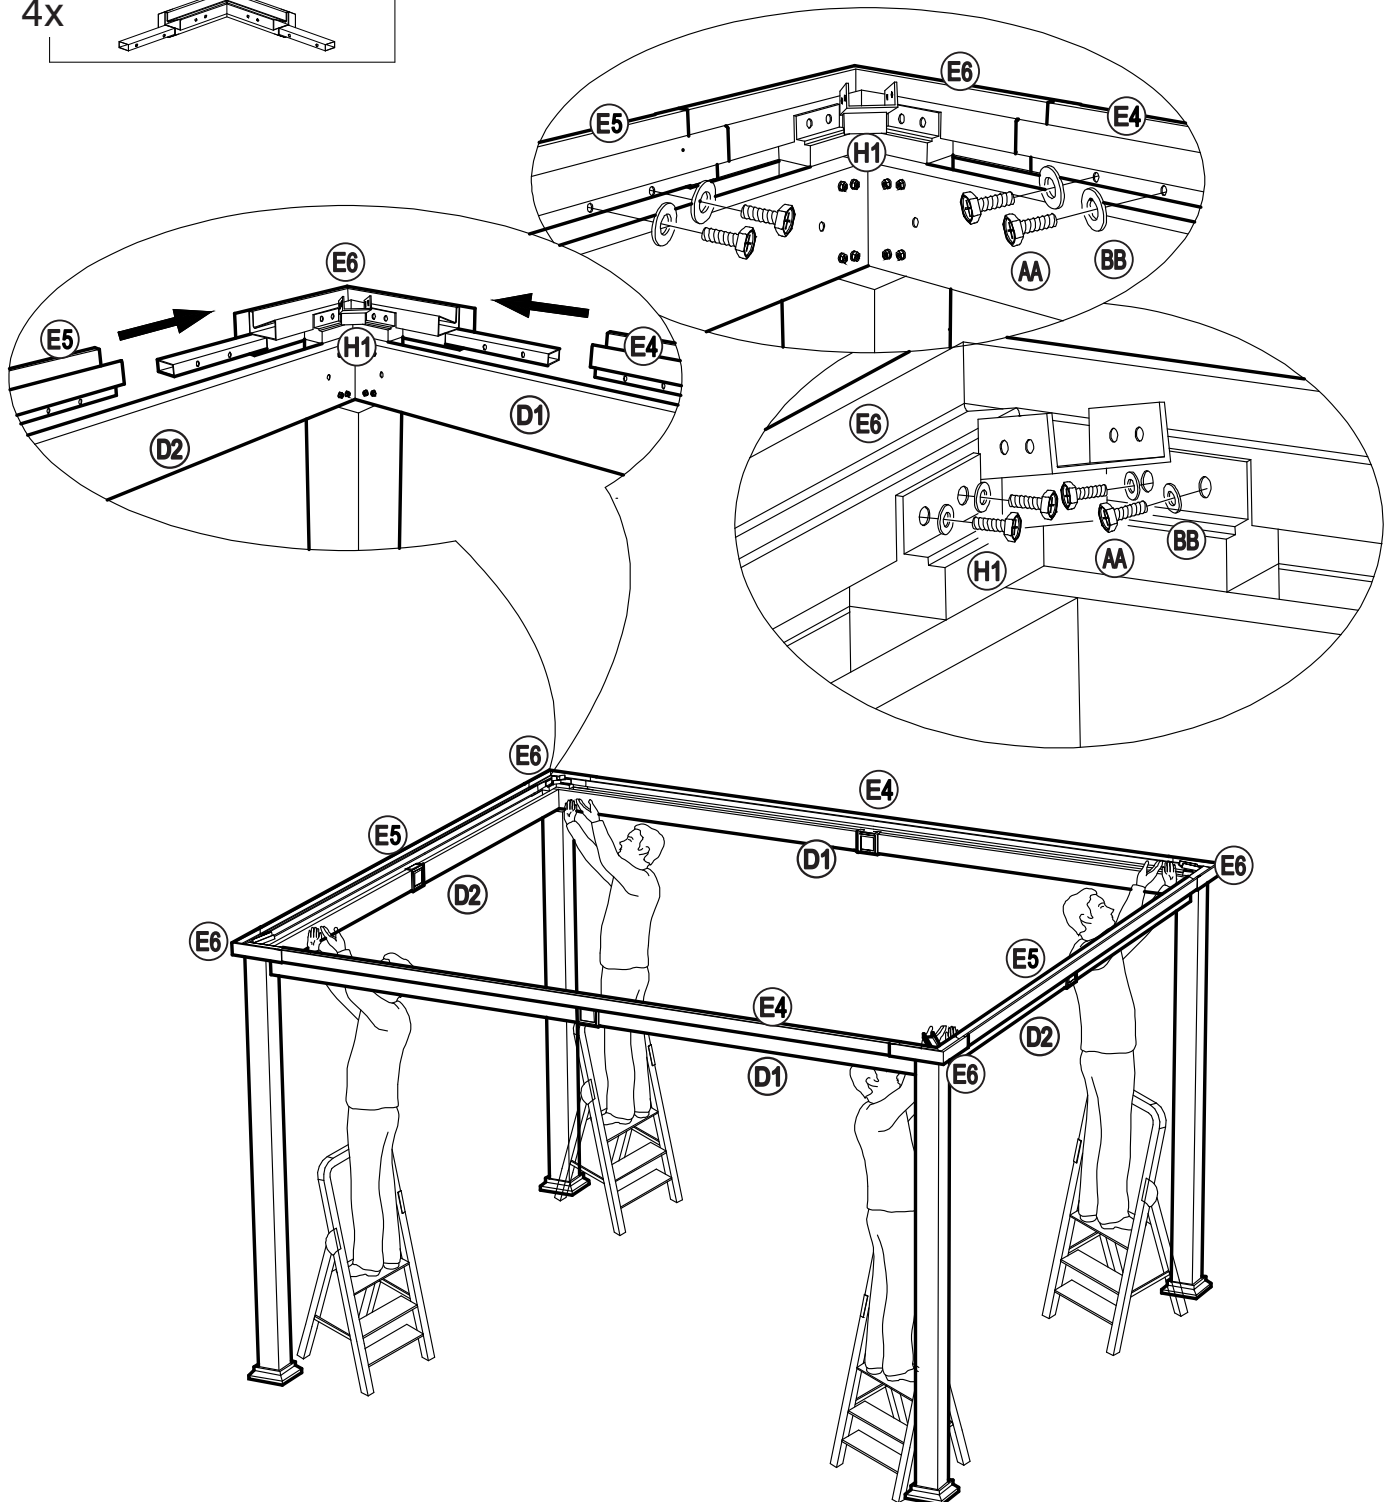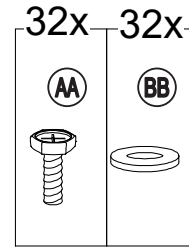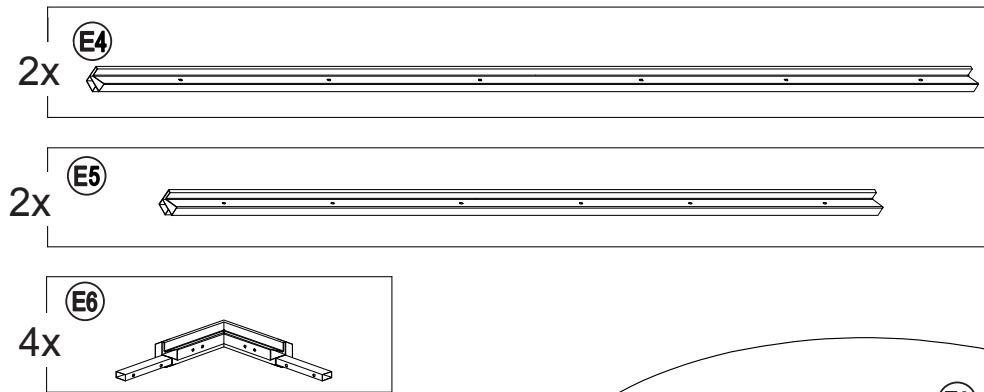

    
 
 
STEP 5:

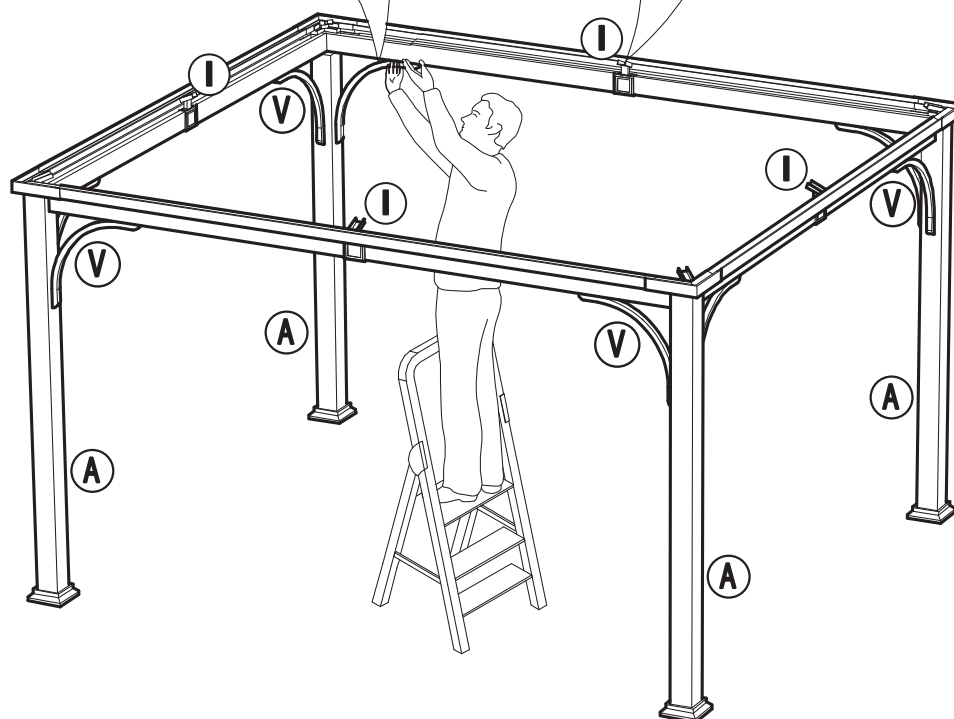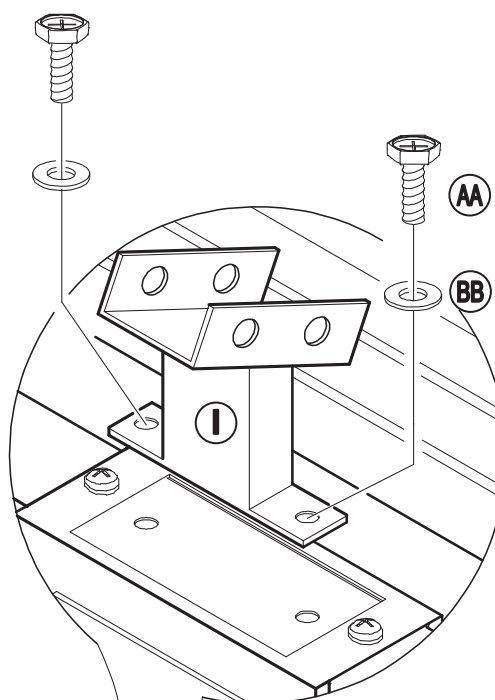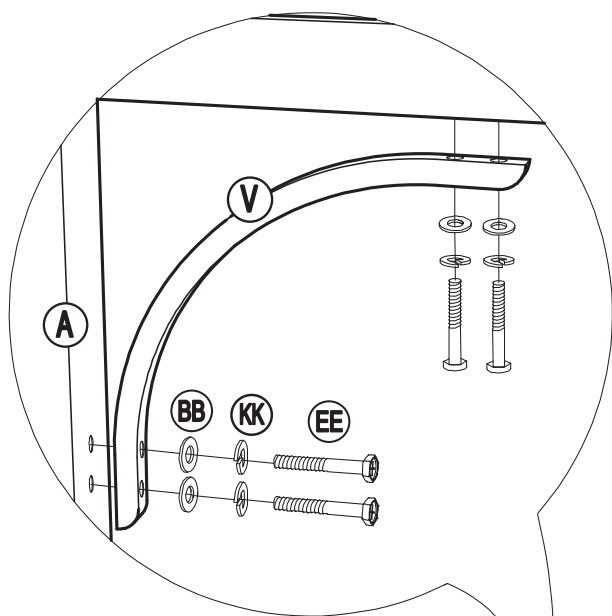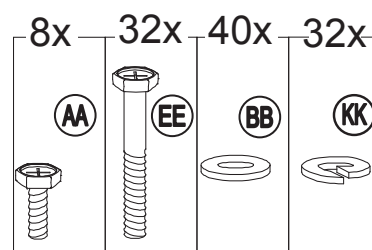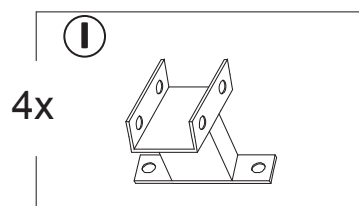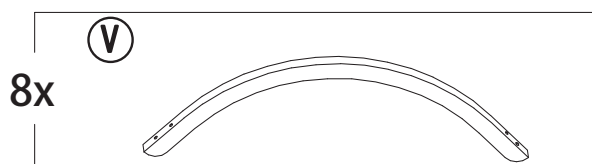

  
 
 
STEP 6:

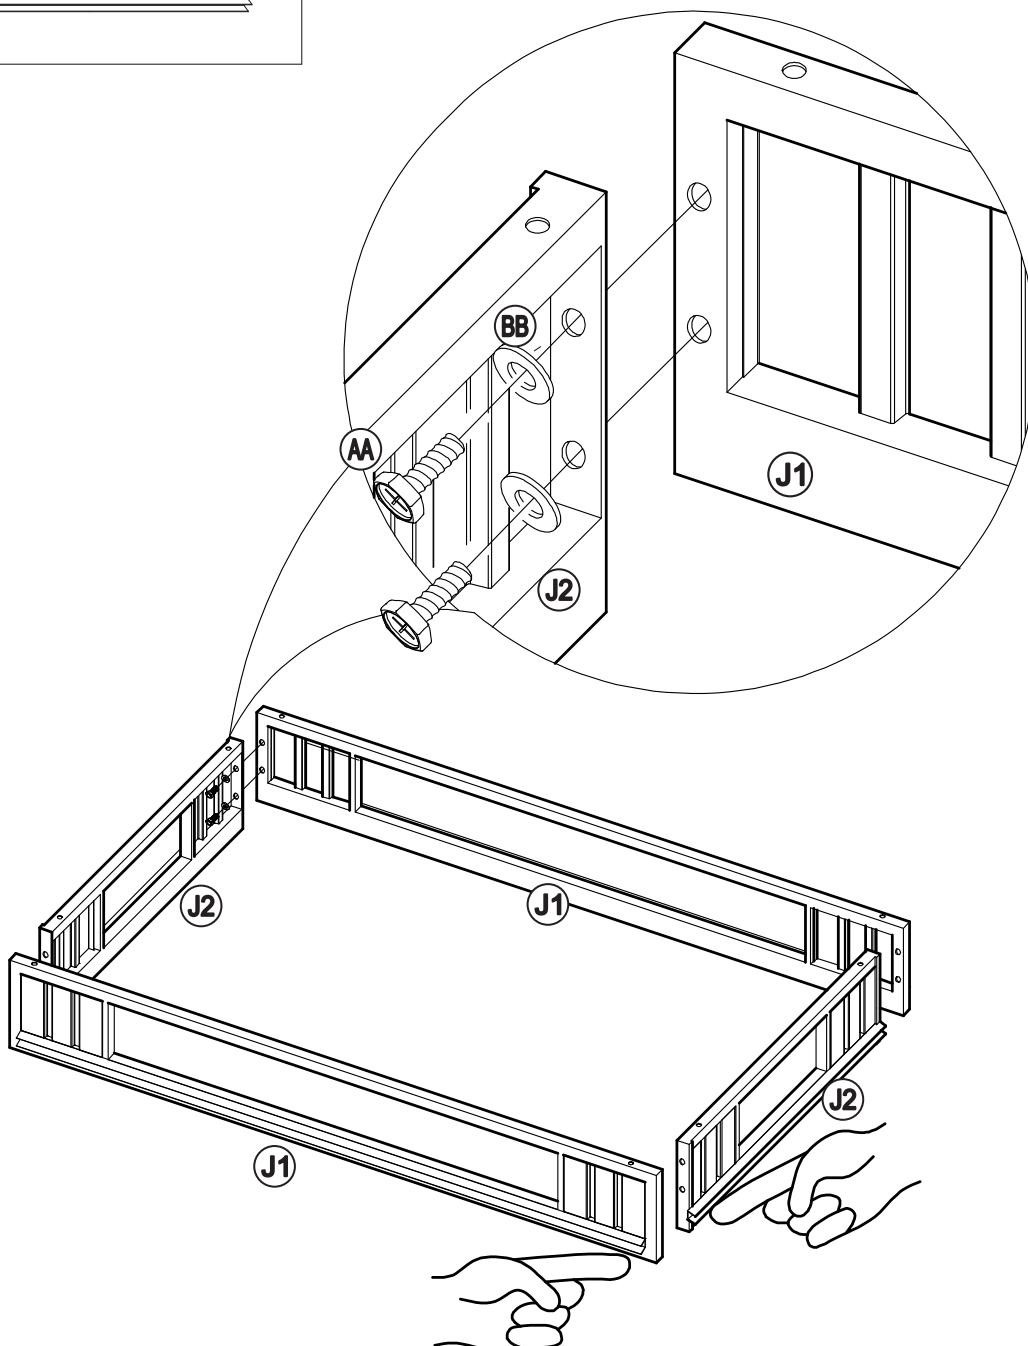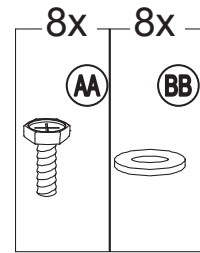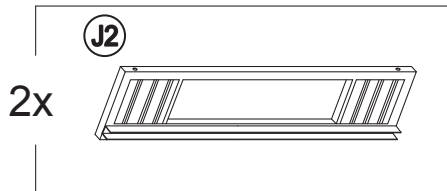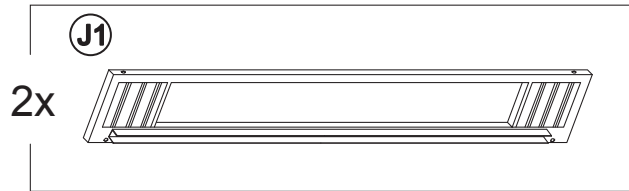


 
 
 
STEP 7:

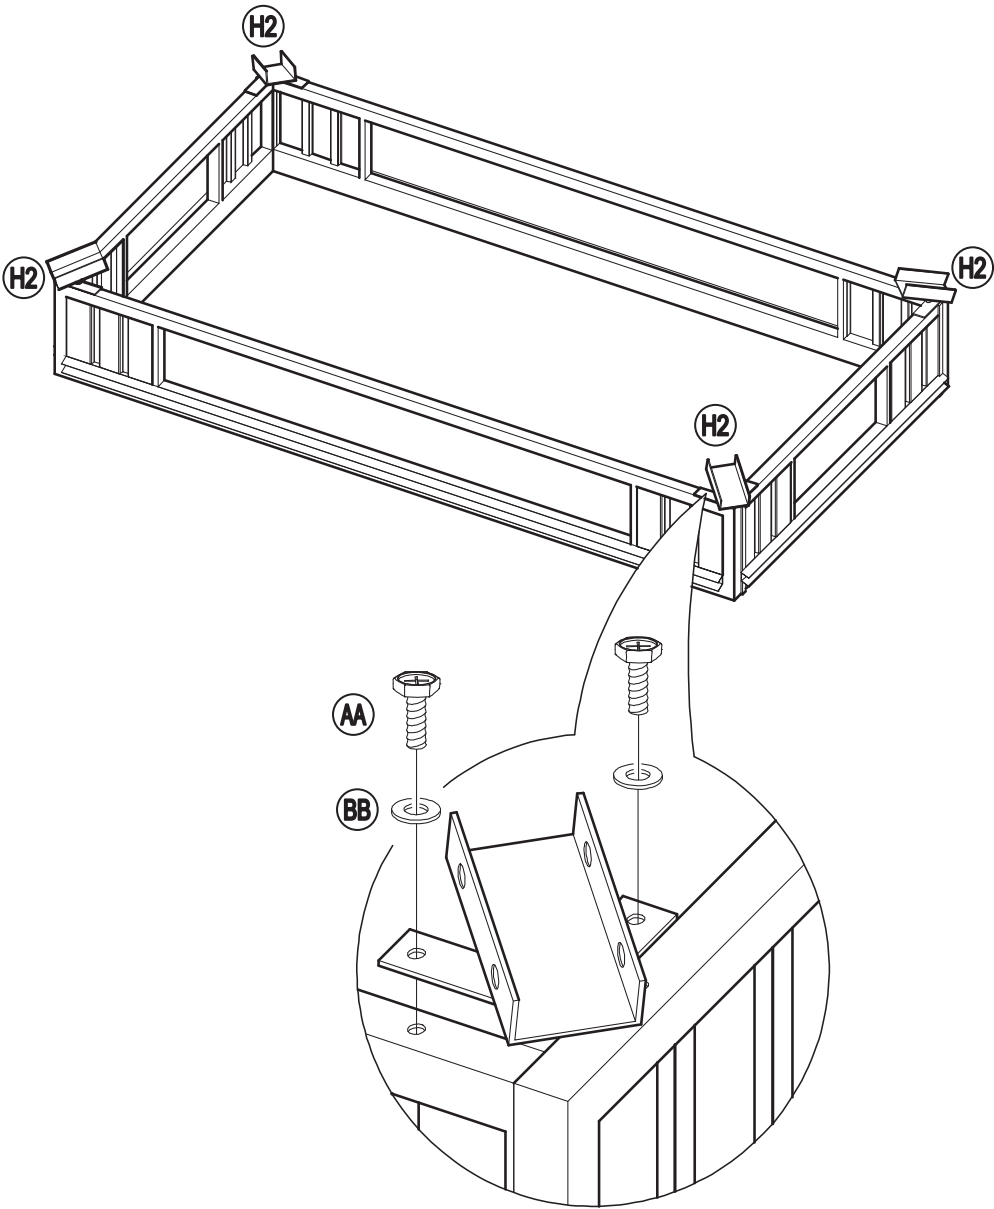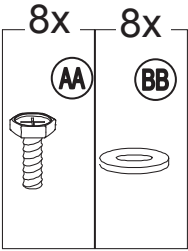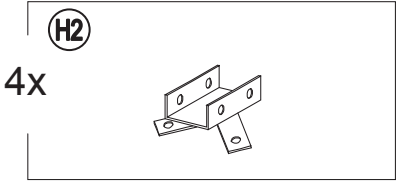



 
 
 
STEP 8:

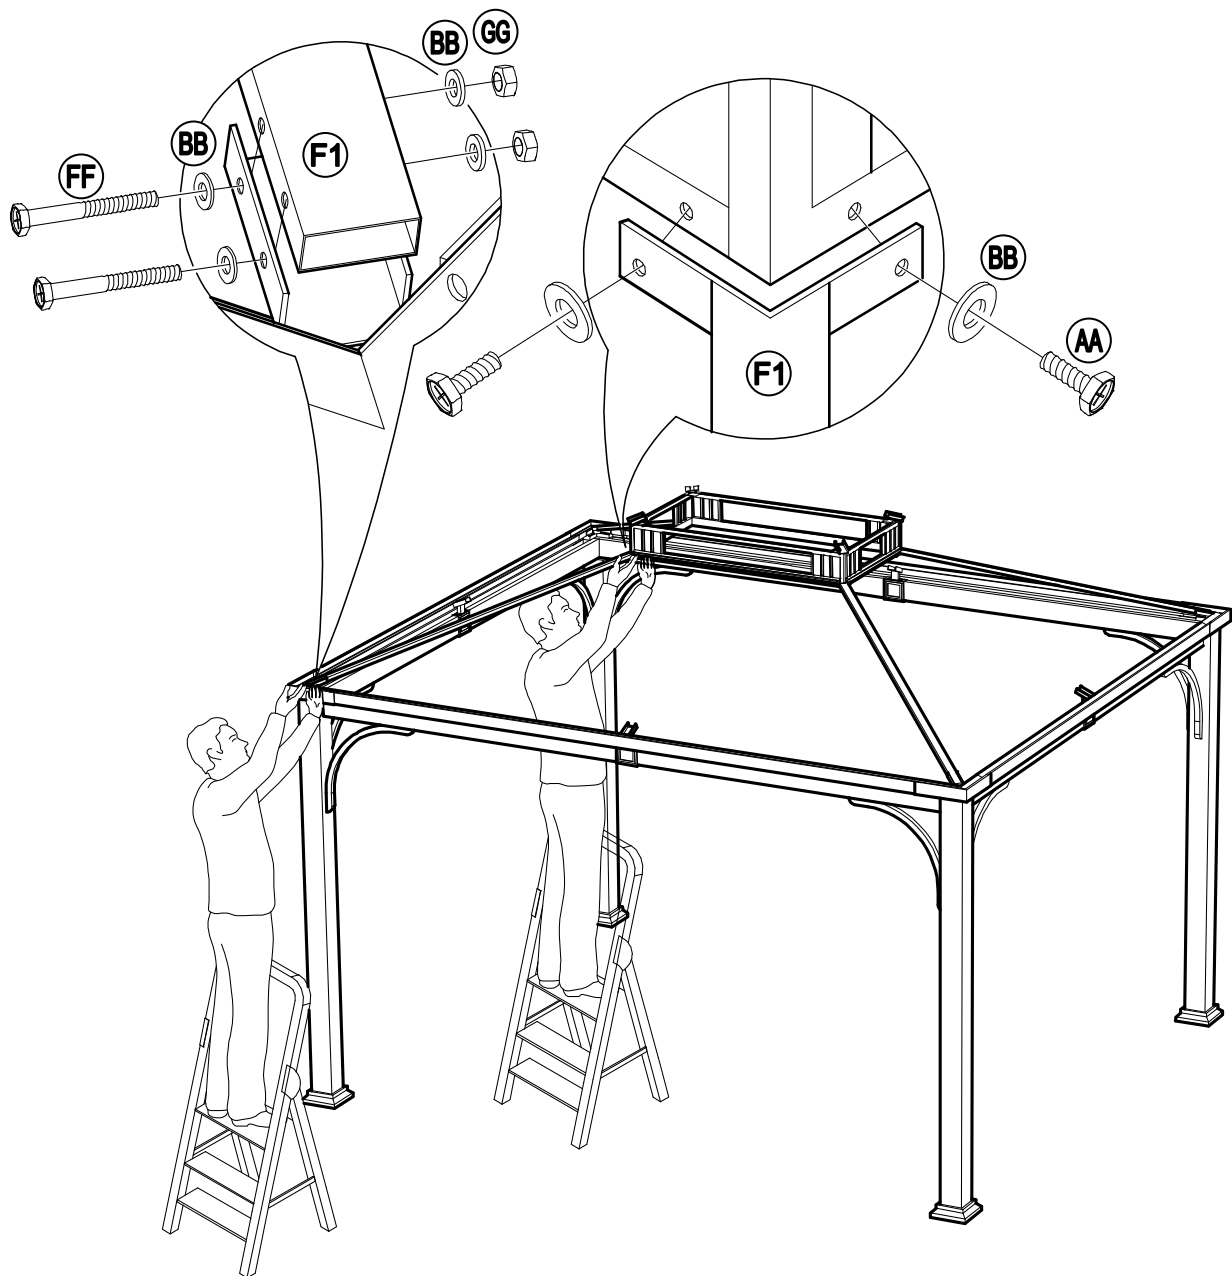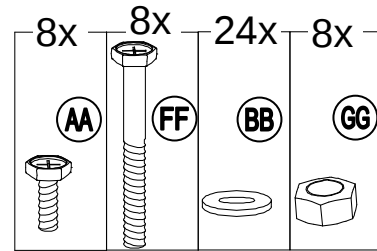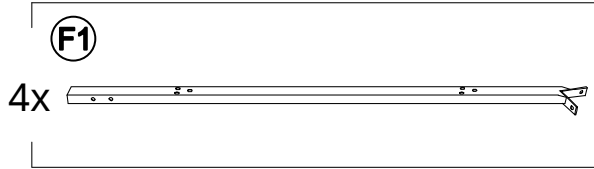

  
 
 
STEP 9:

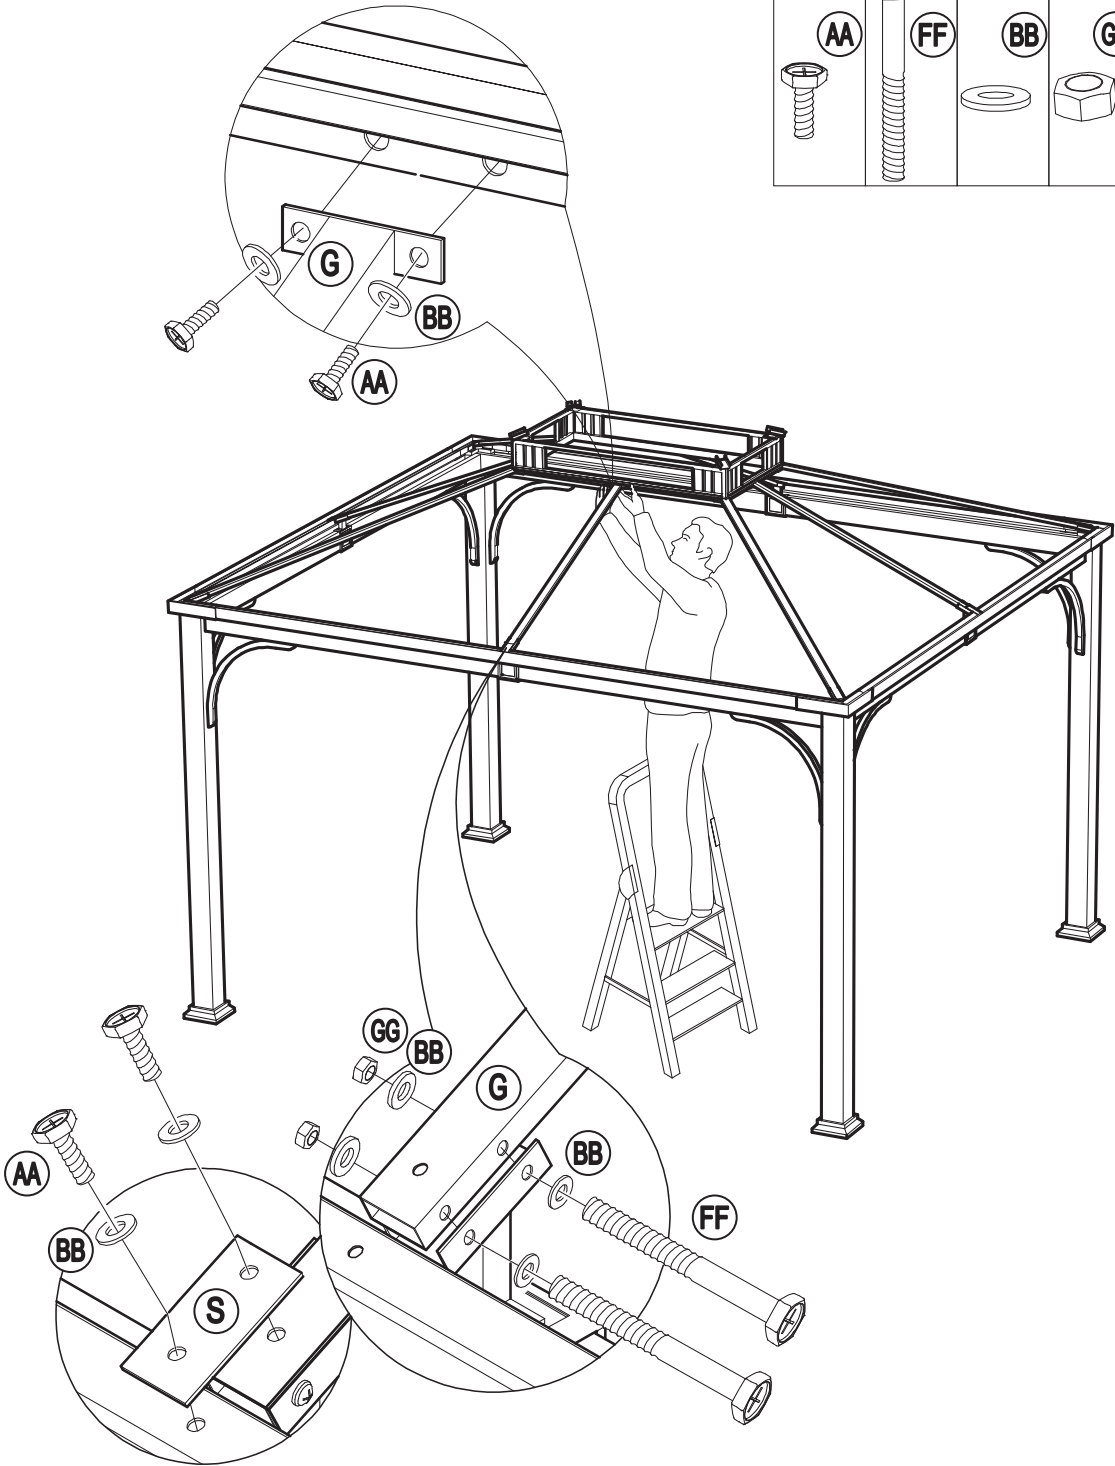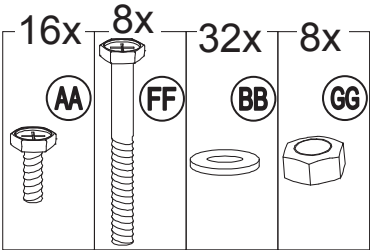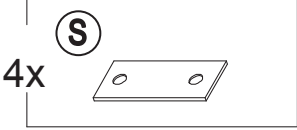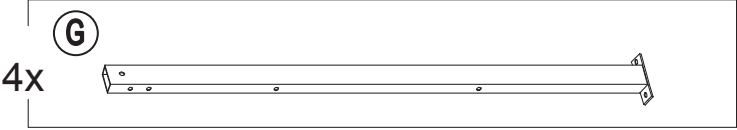

  
 
 
 
STEP 10:

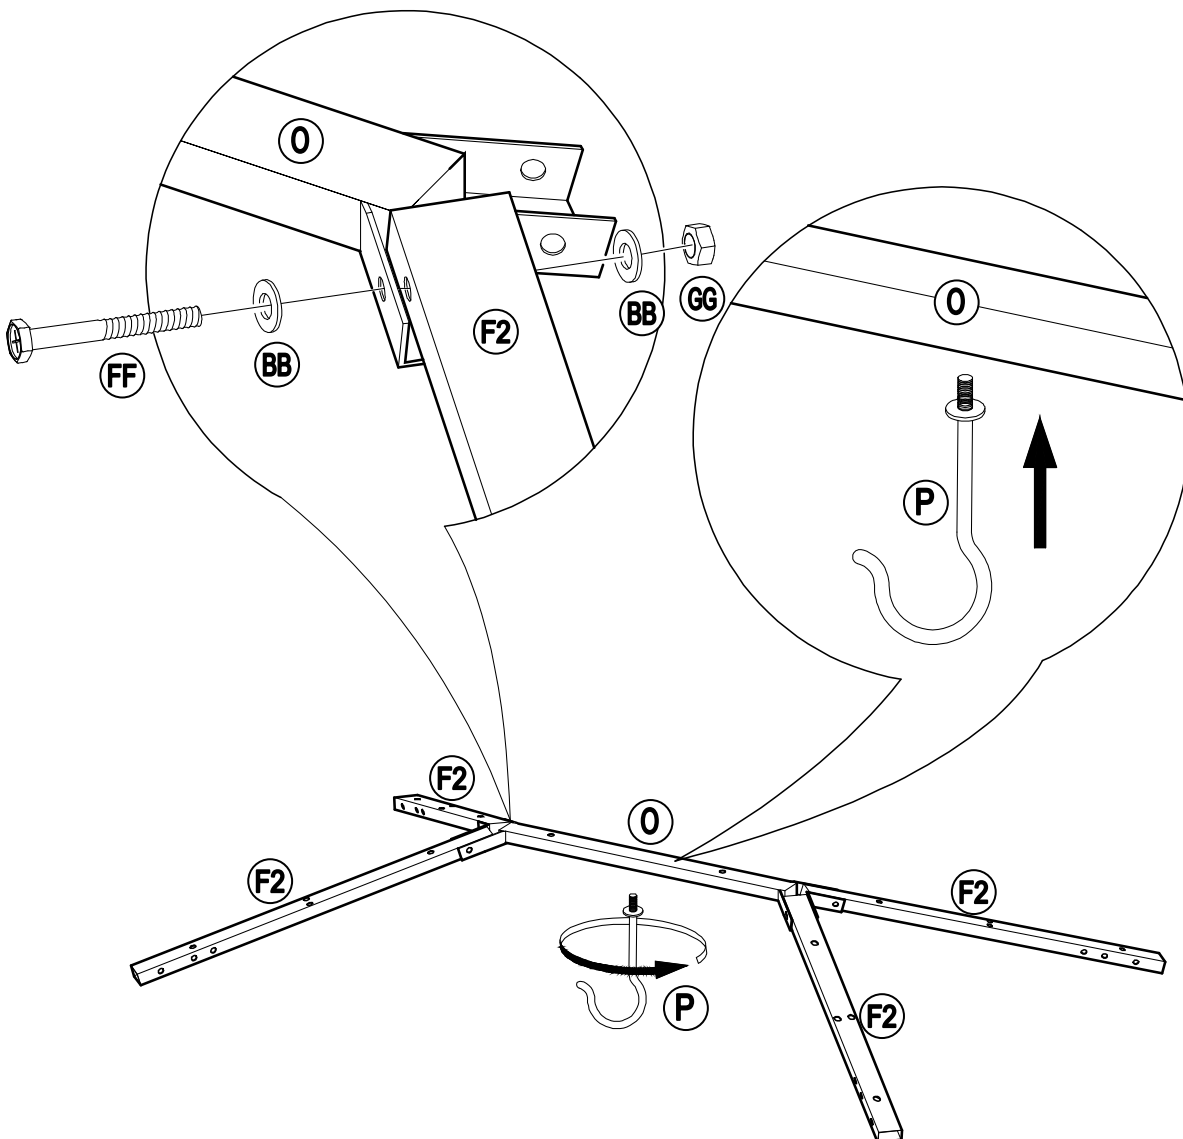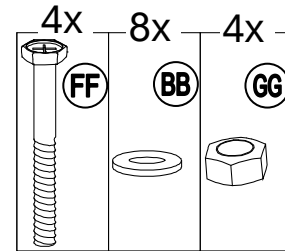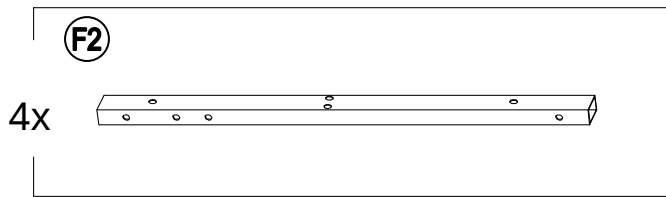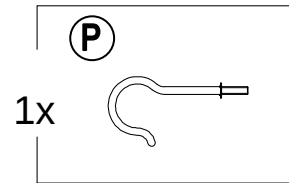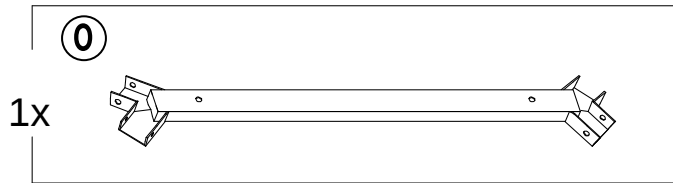




 
 
 
STEP 11:

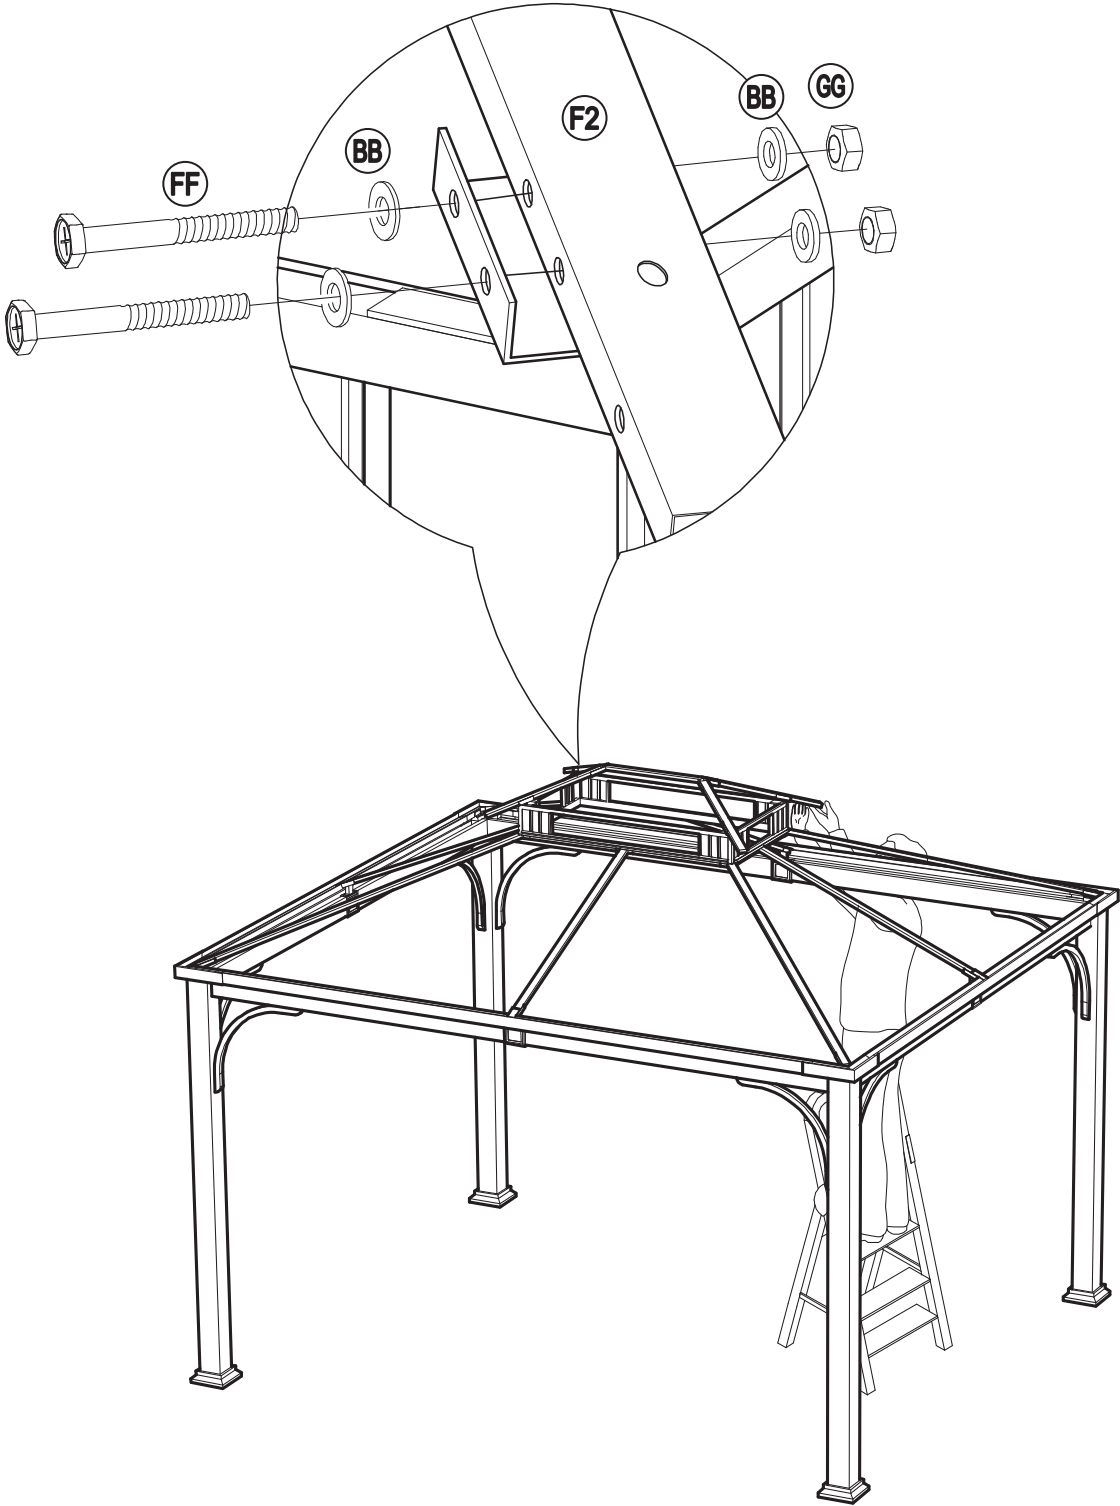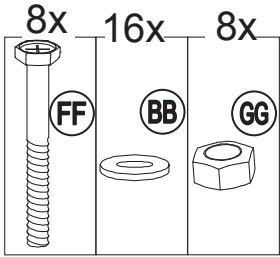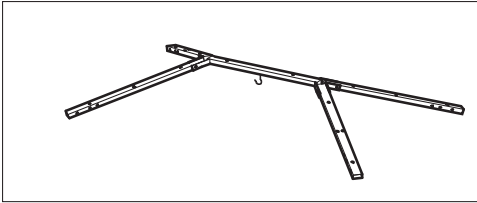

 
 
 
 
STEP 12:

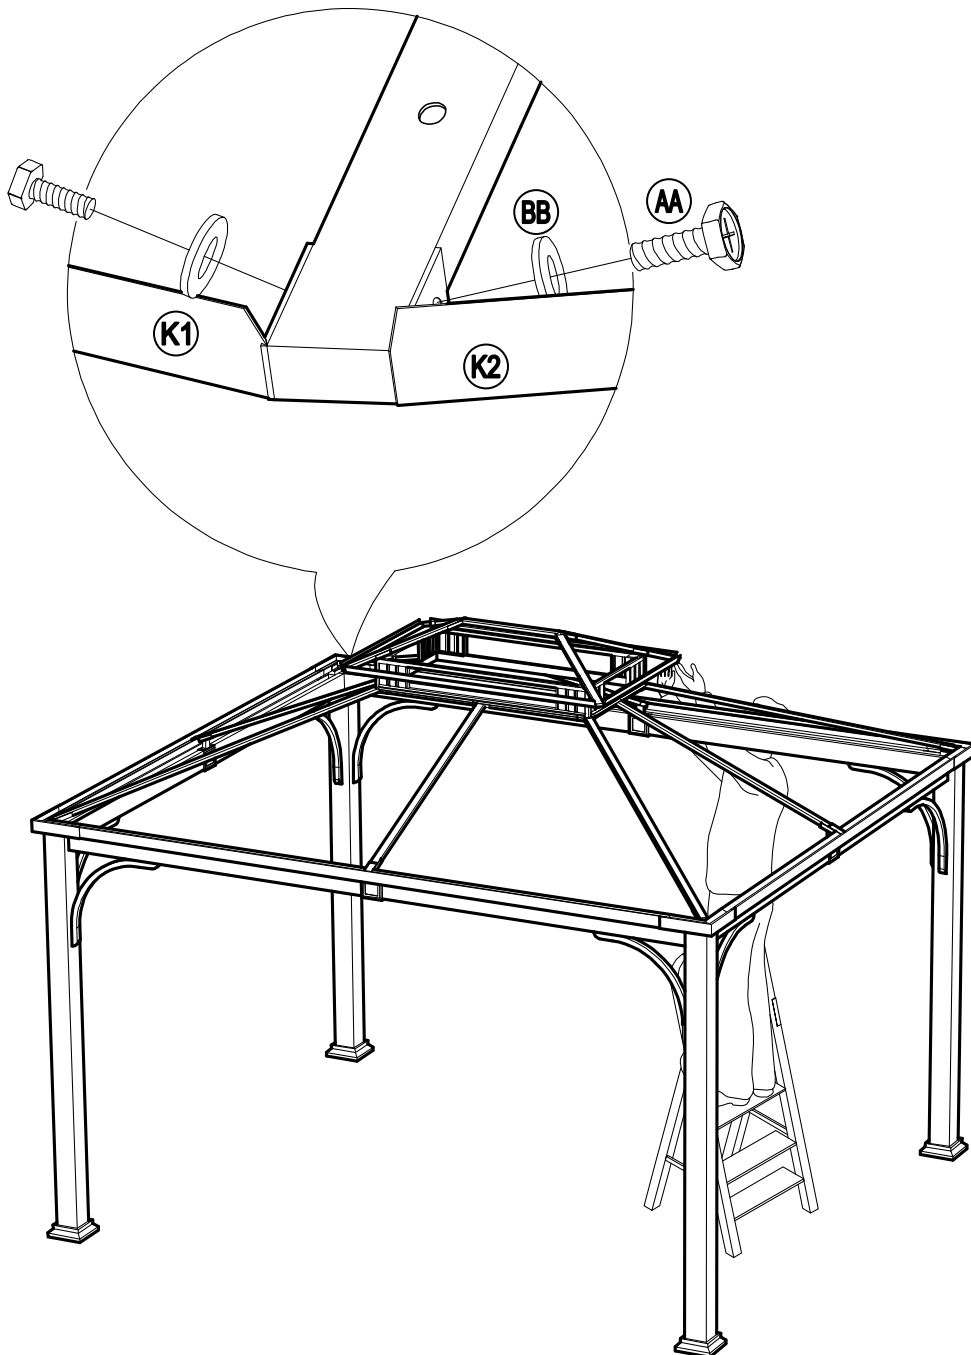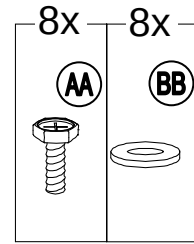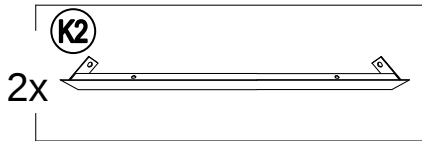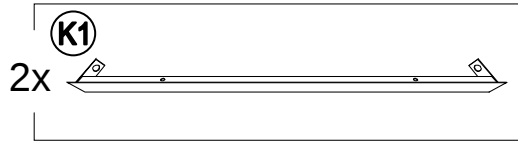

 
 
 
 
 
 
STEP 13:

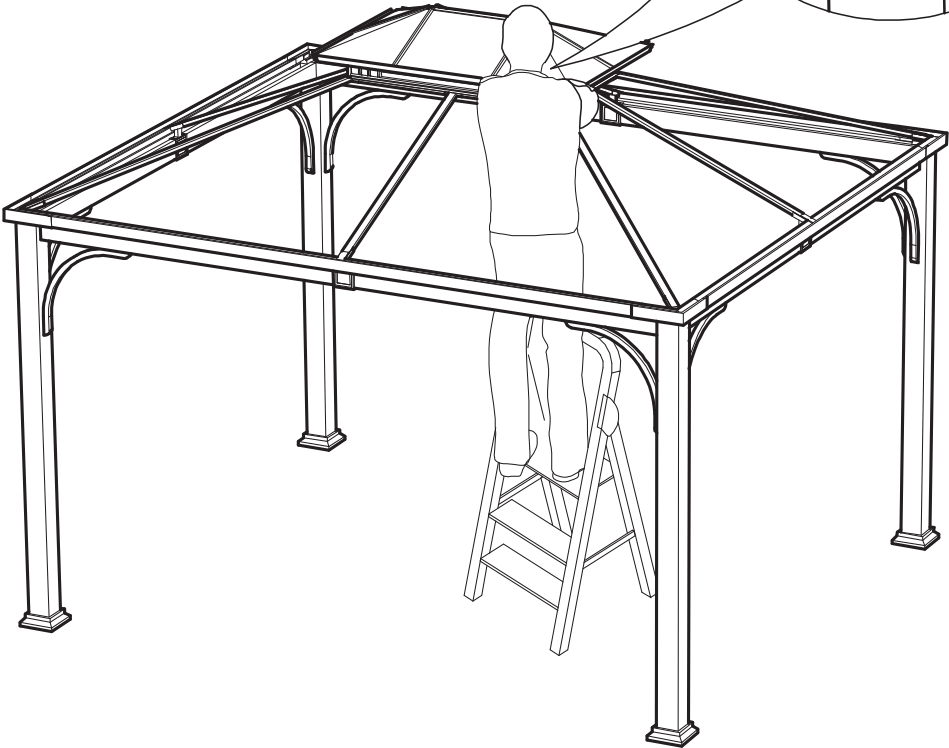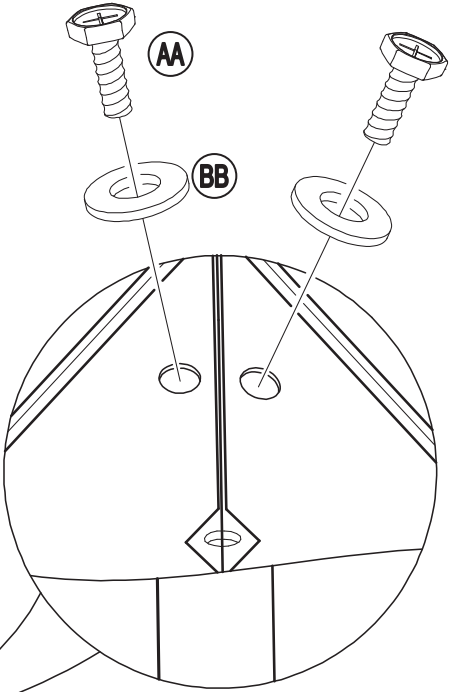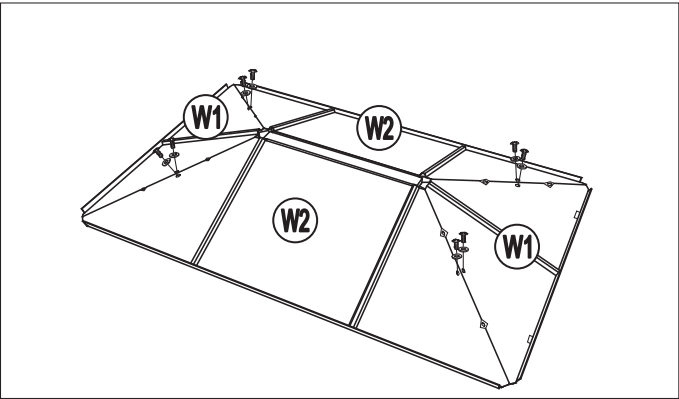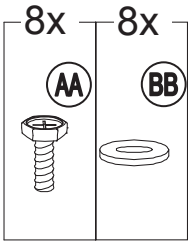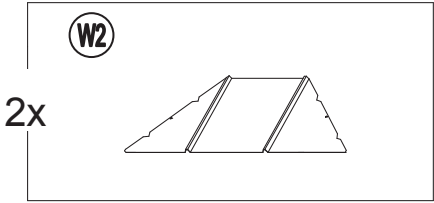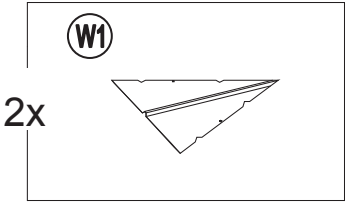

  
 
 
STEP 14:

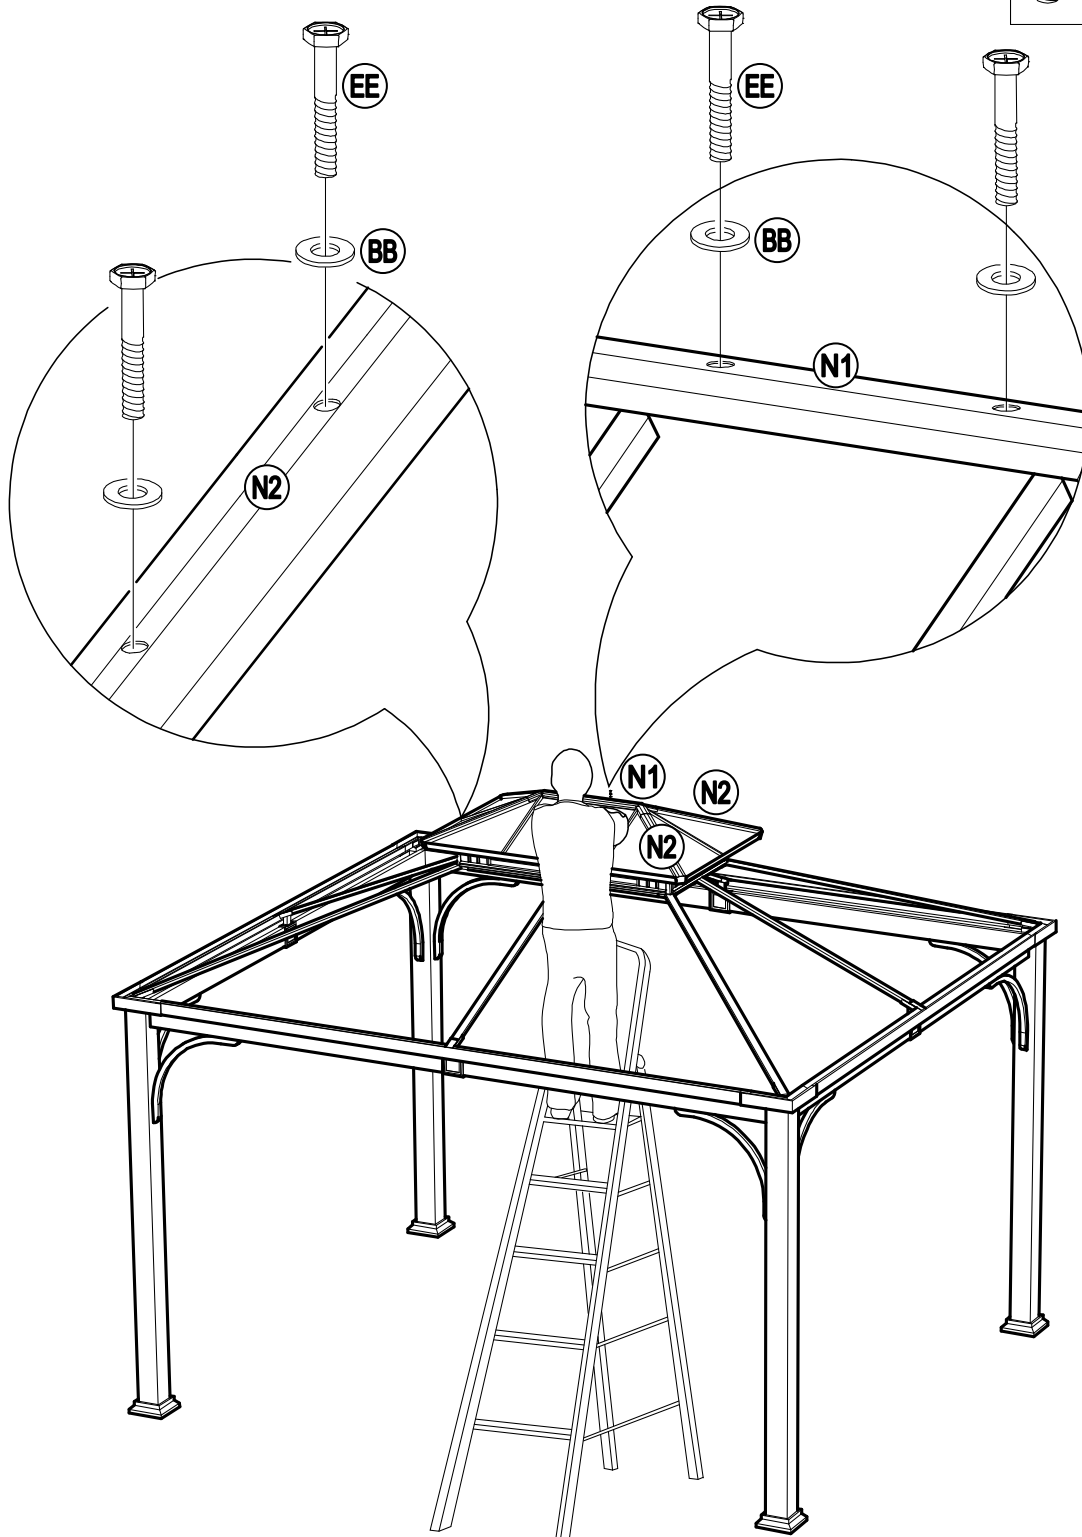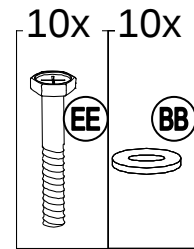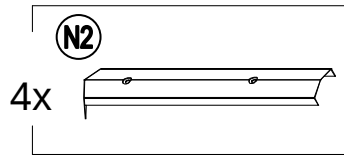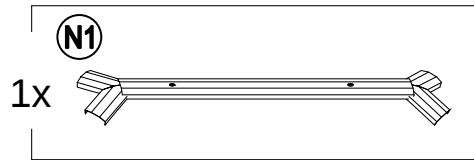

      
STEP 15:

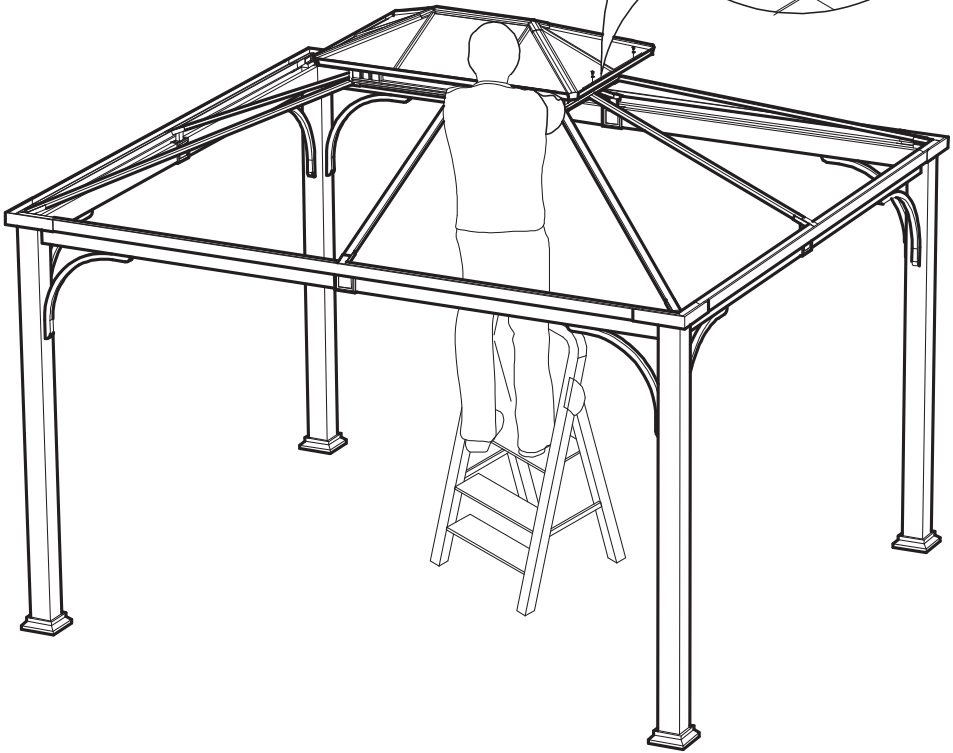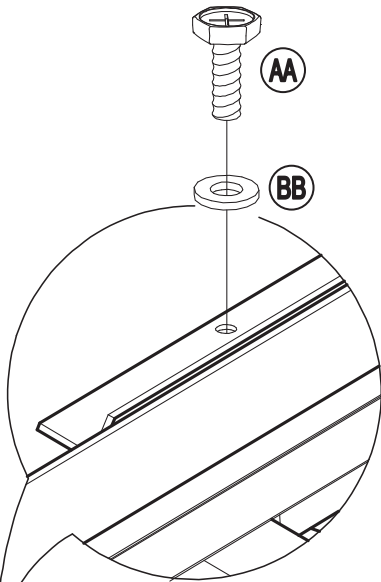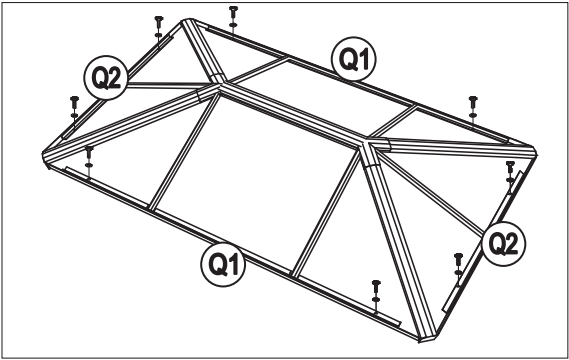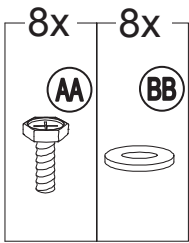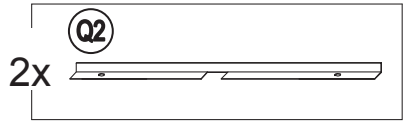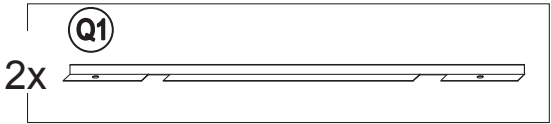

   
STEP 16:

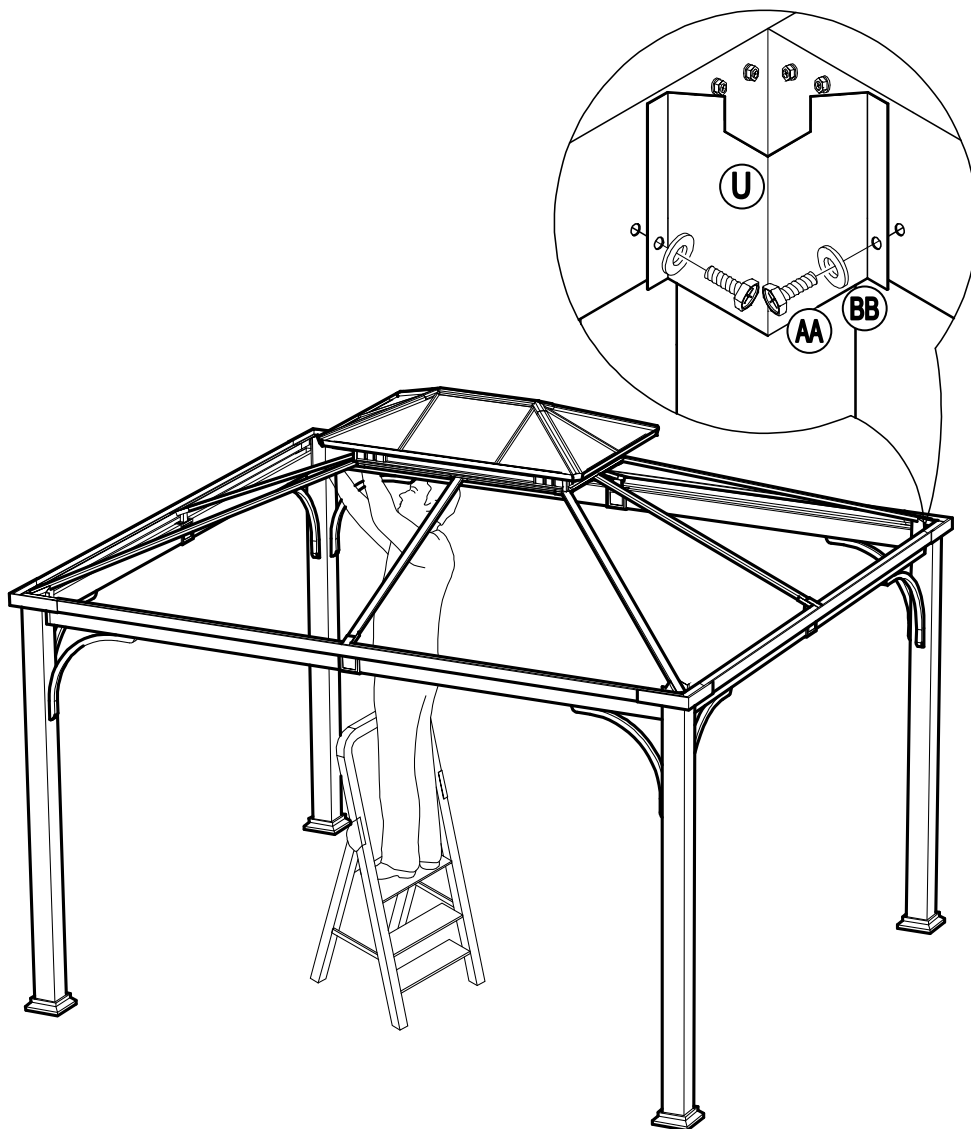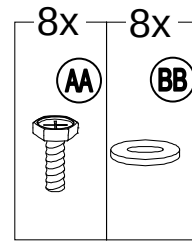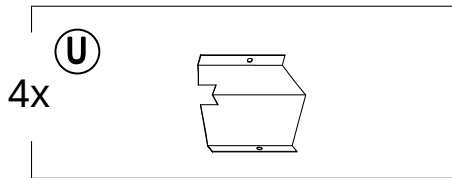

 
STEP 17:

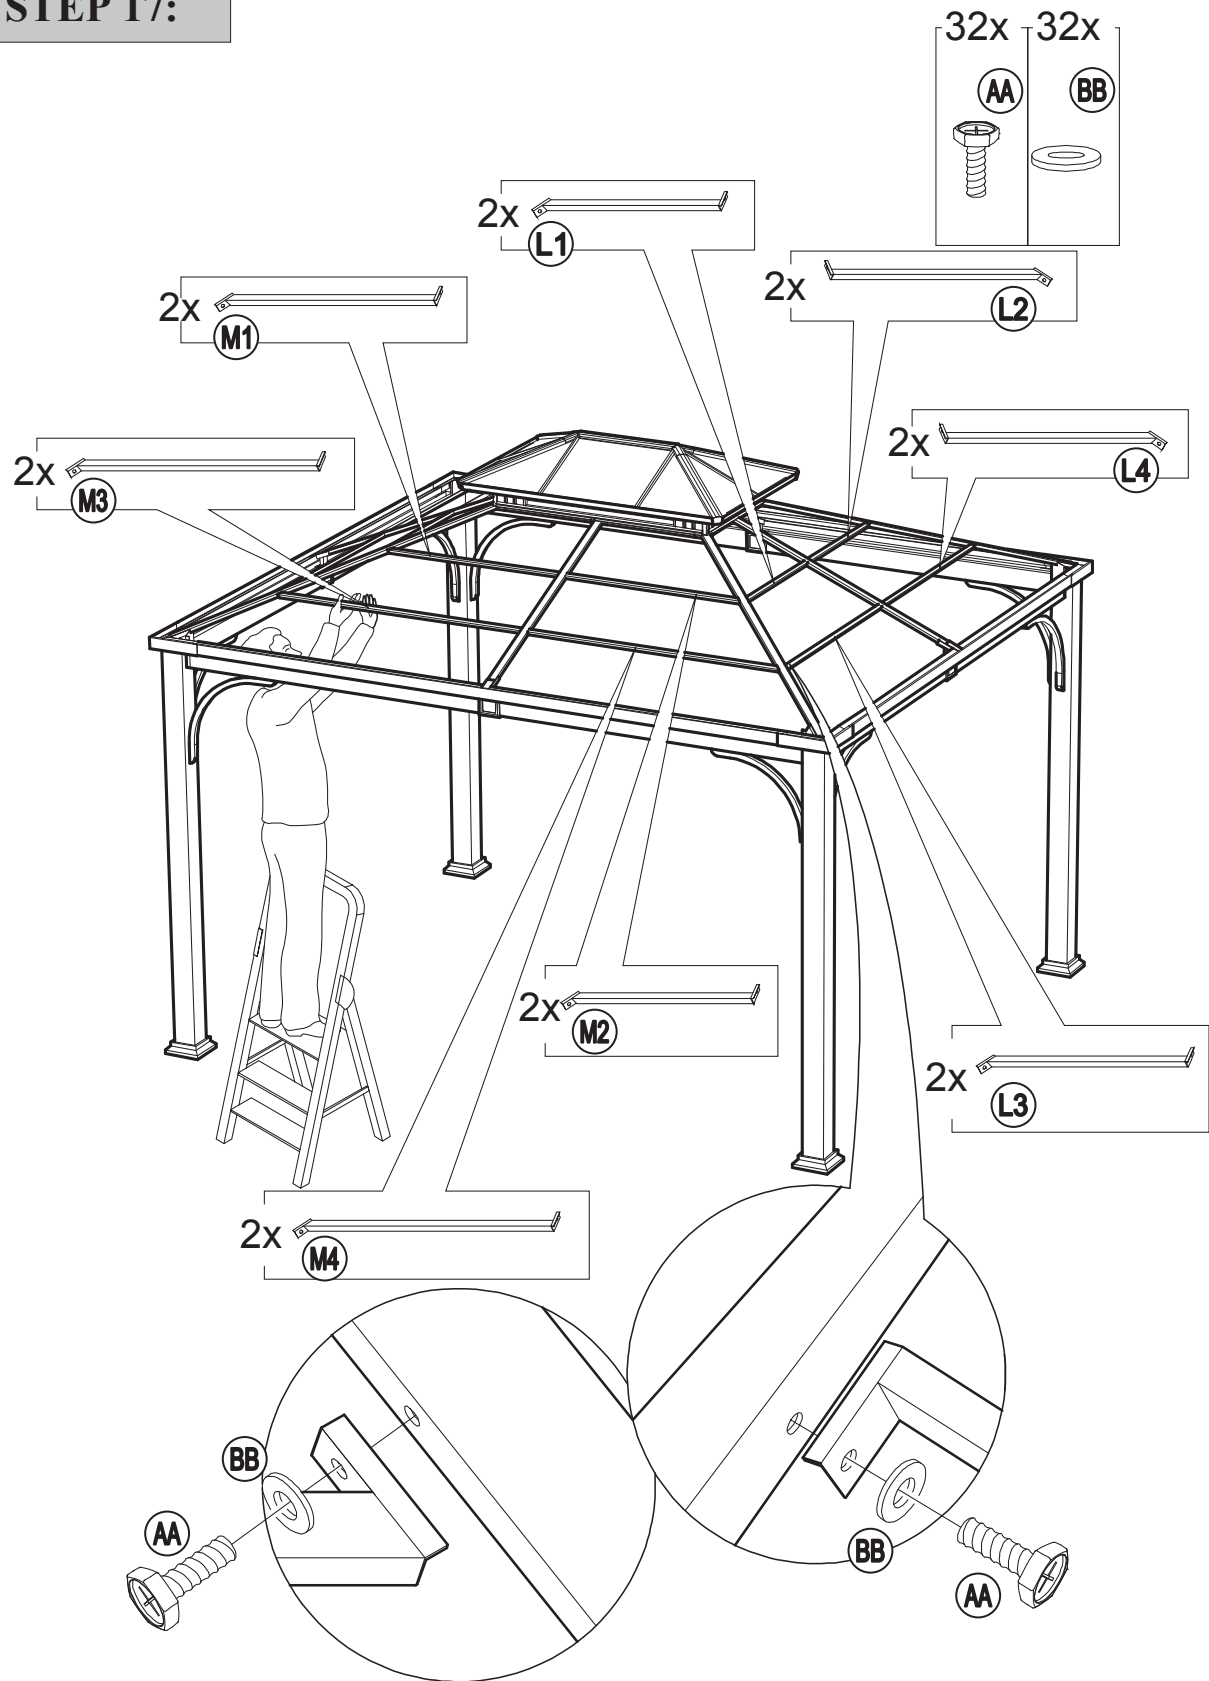


 
STEP 18:

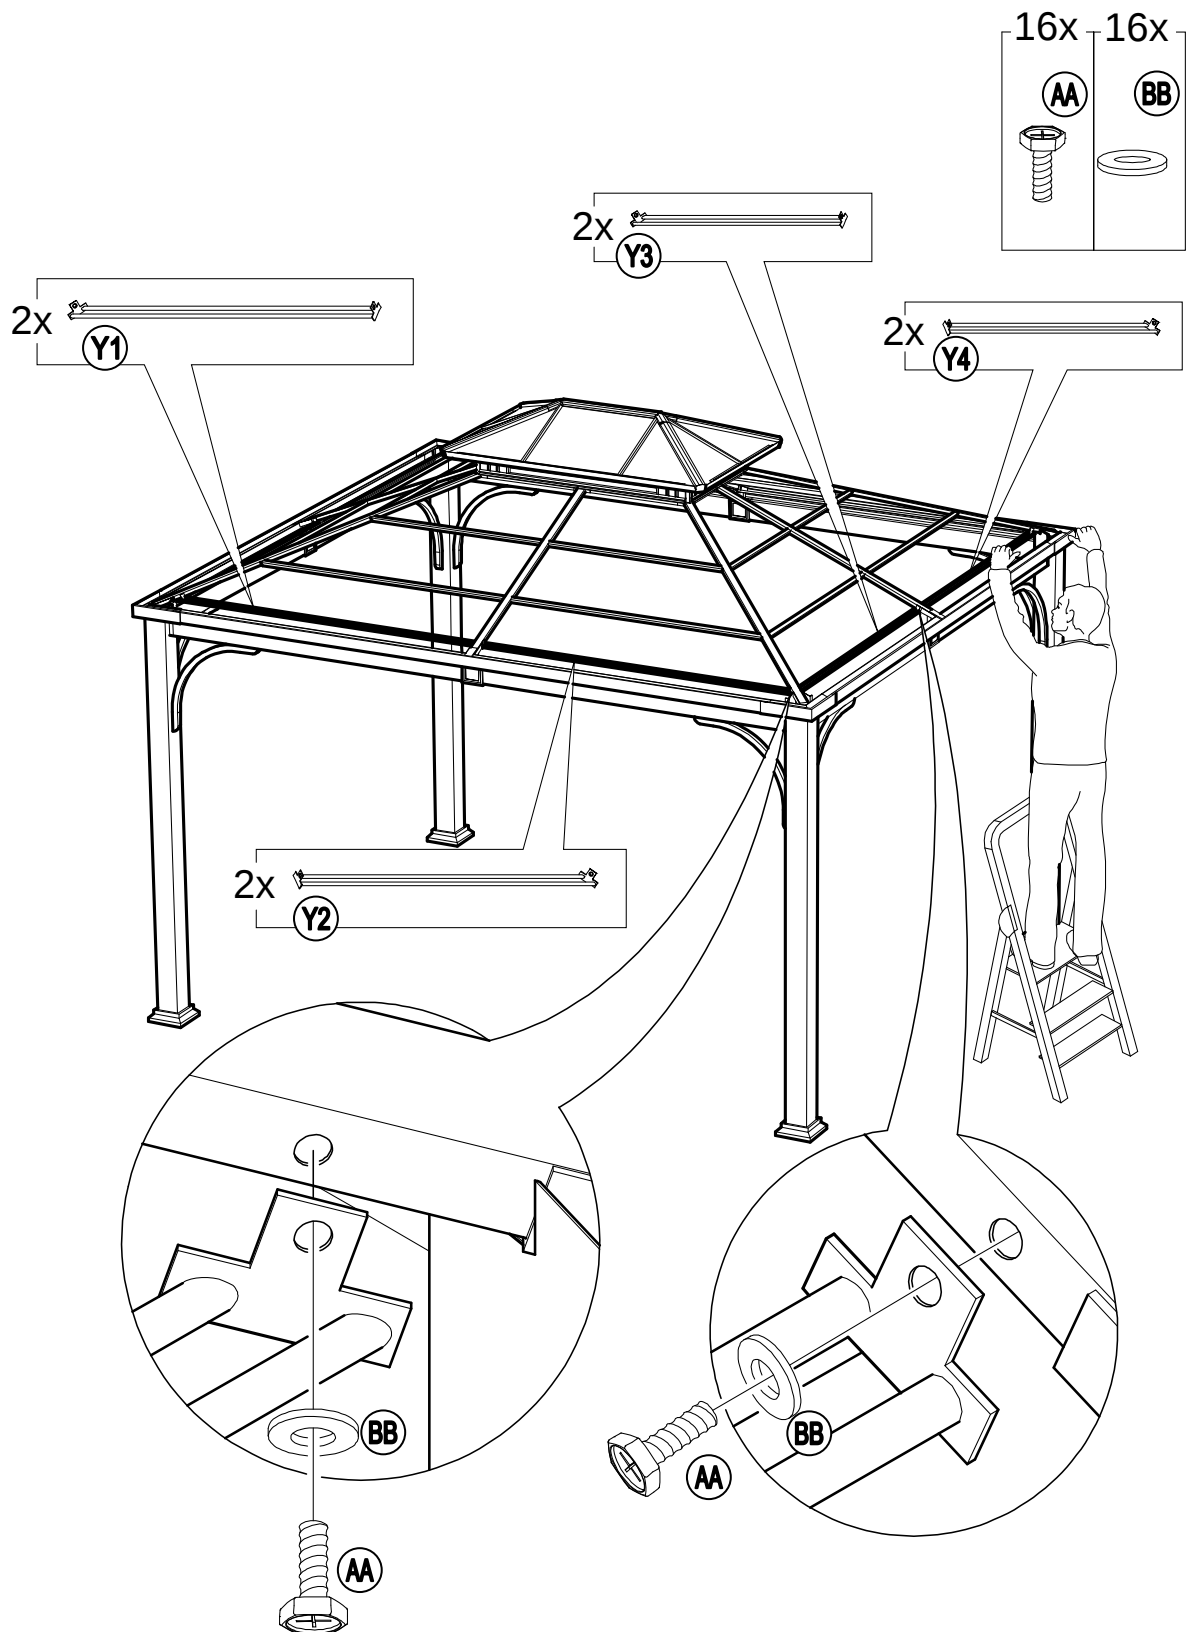




 
STEP 19:

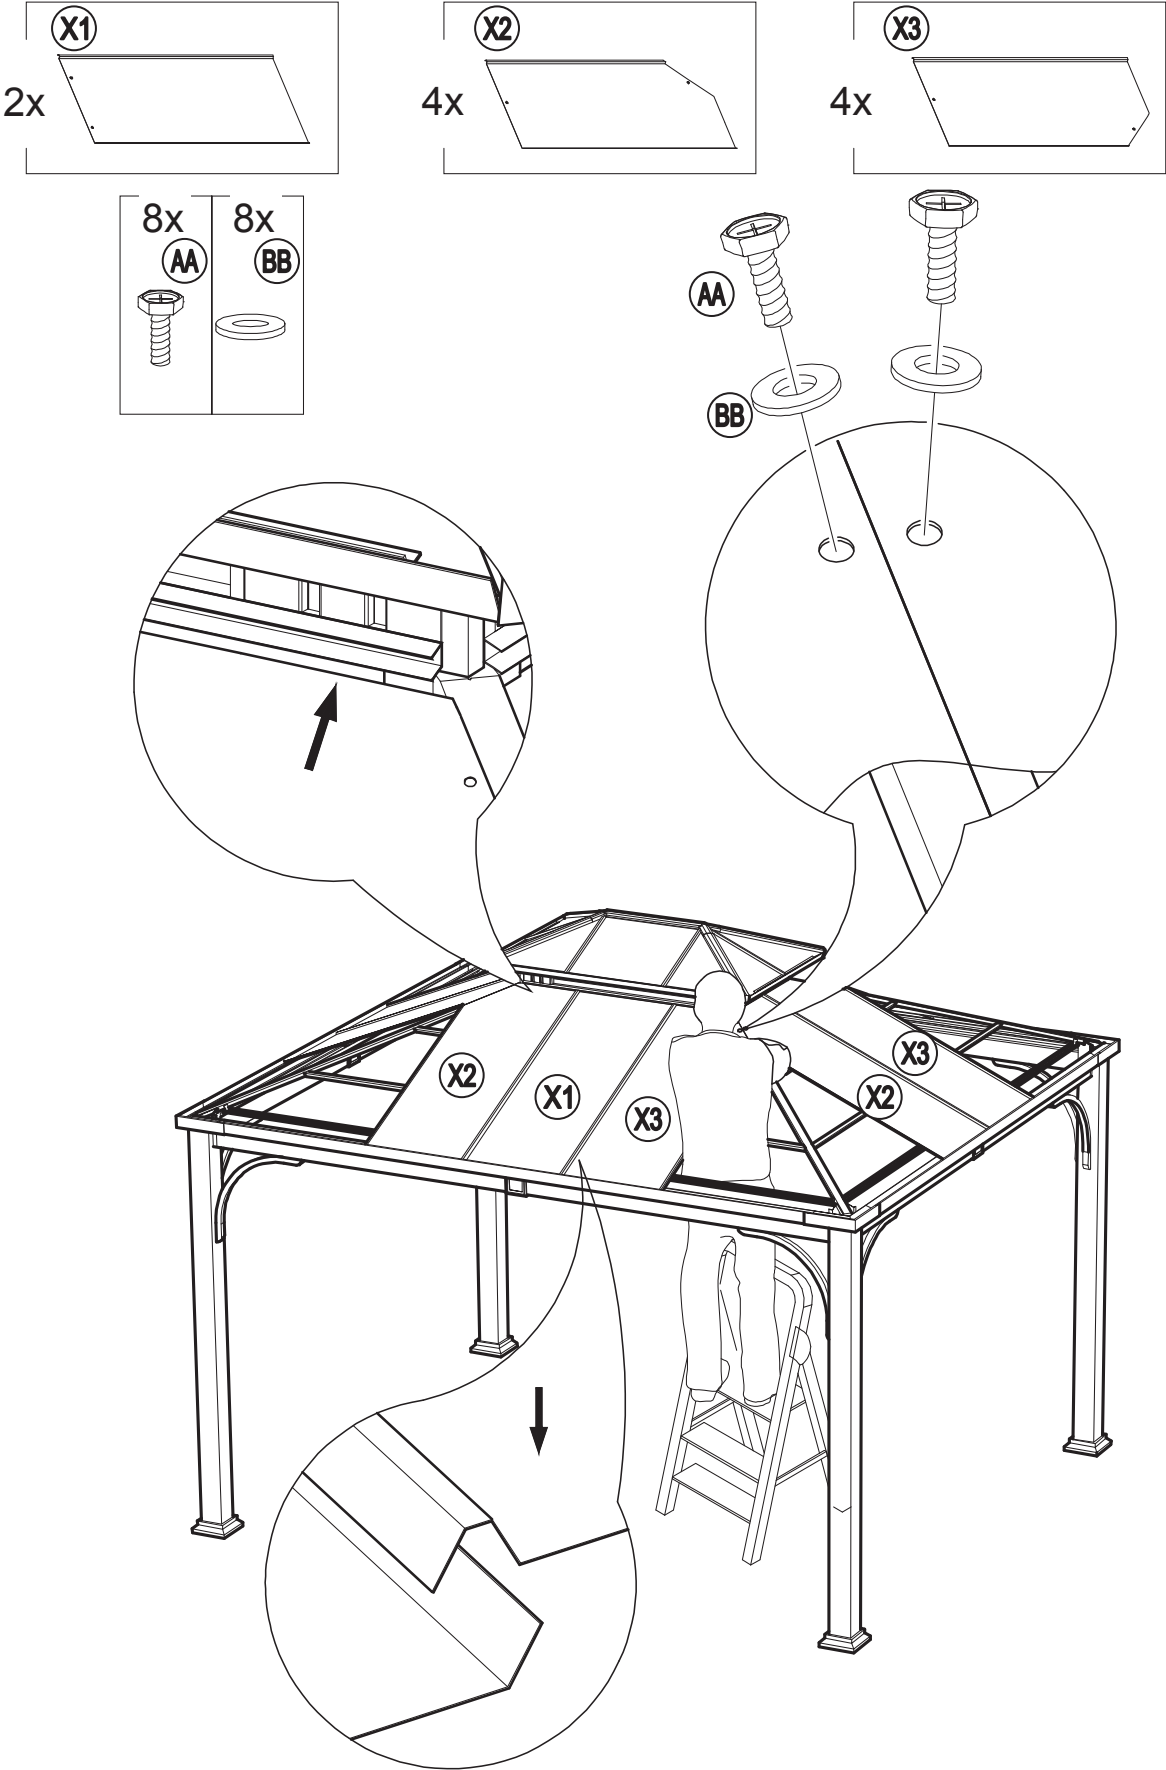

  
STEP 20:

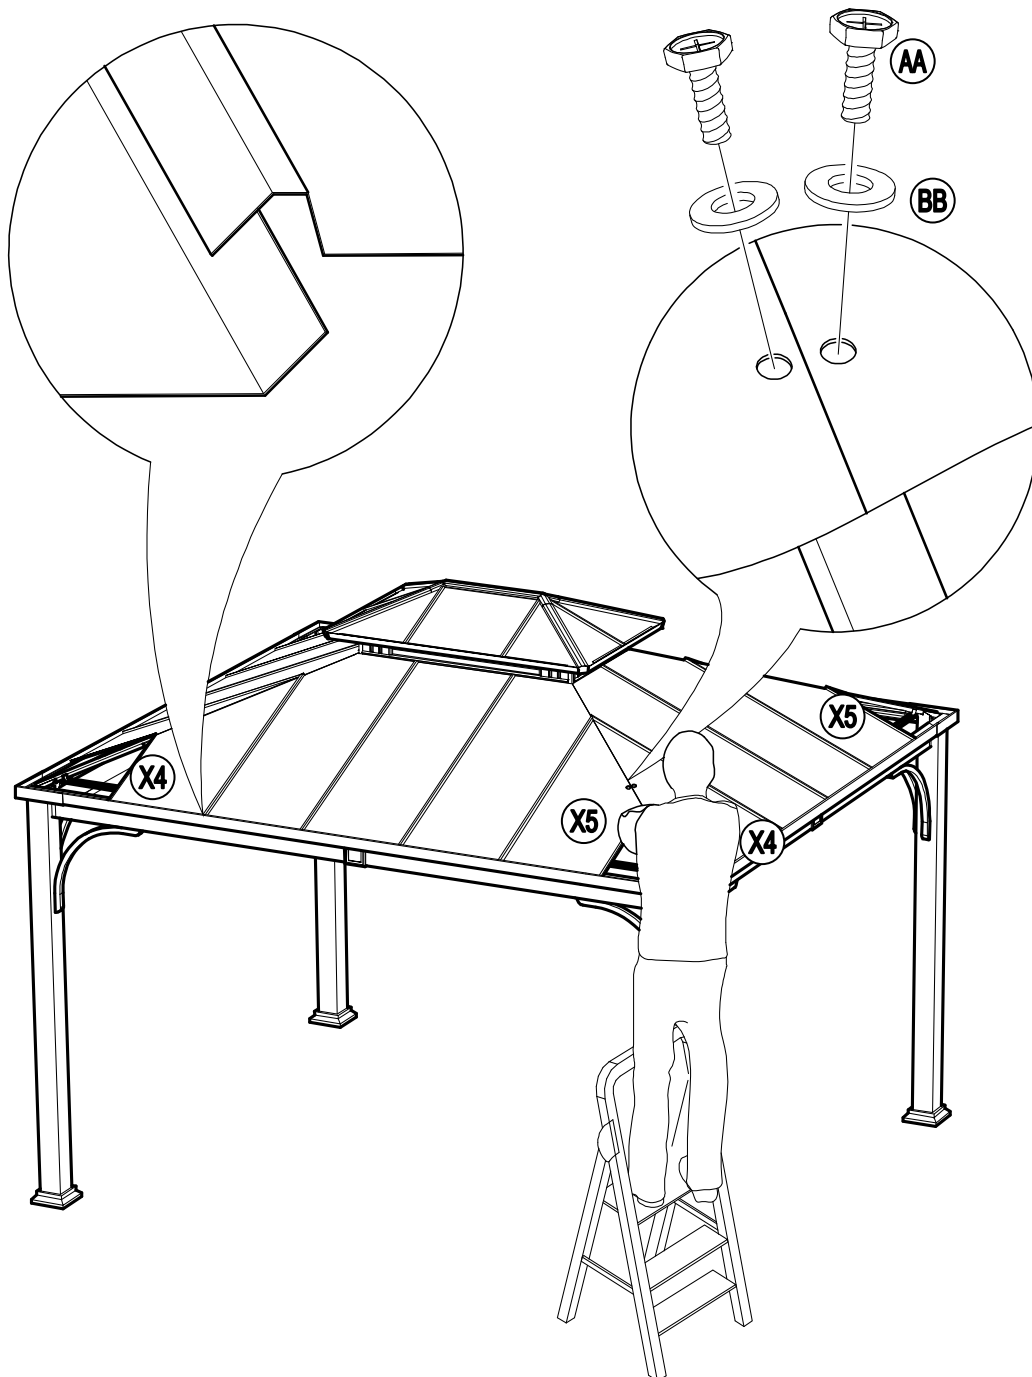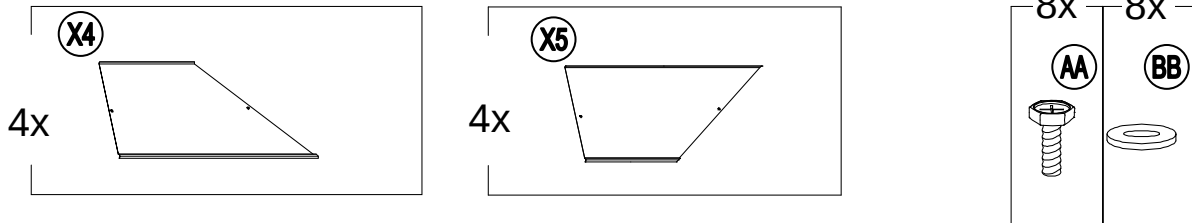

   
 
STEP 21:

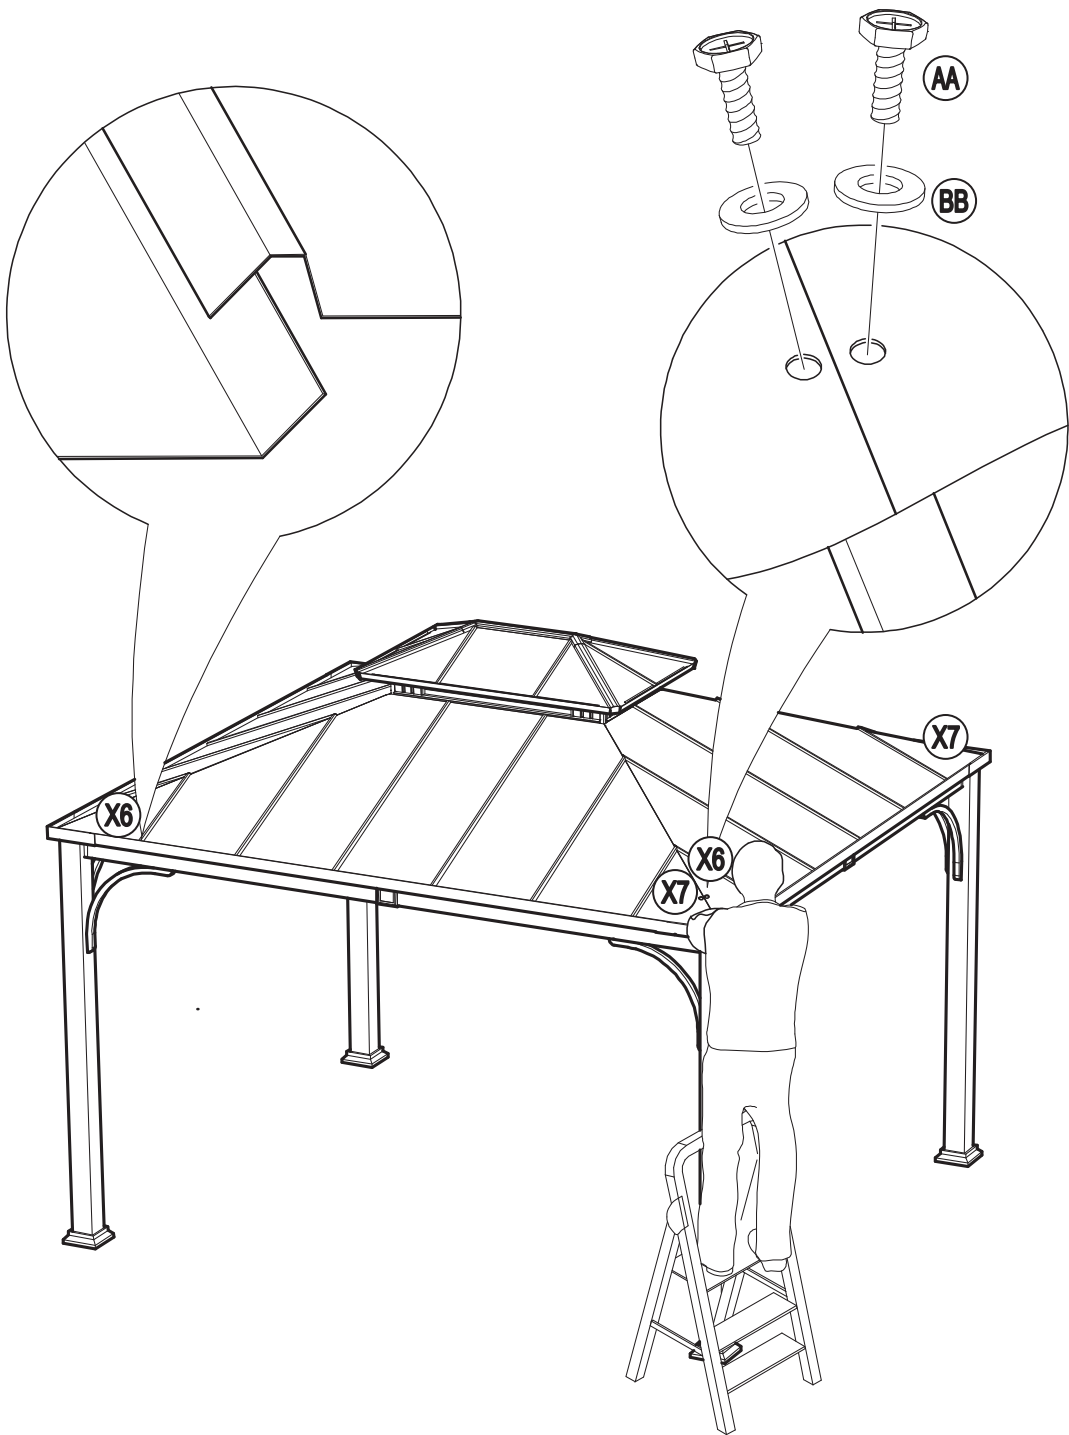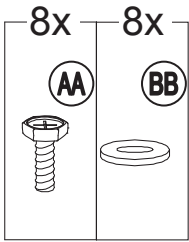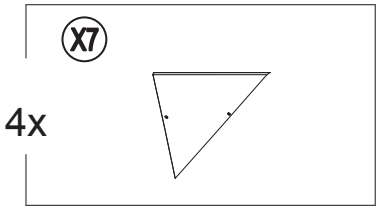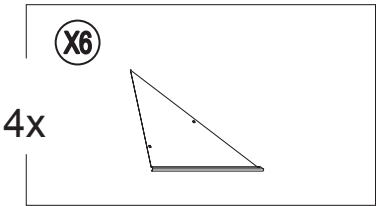

 
STEP 22:

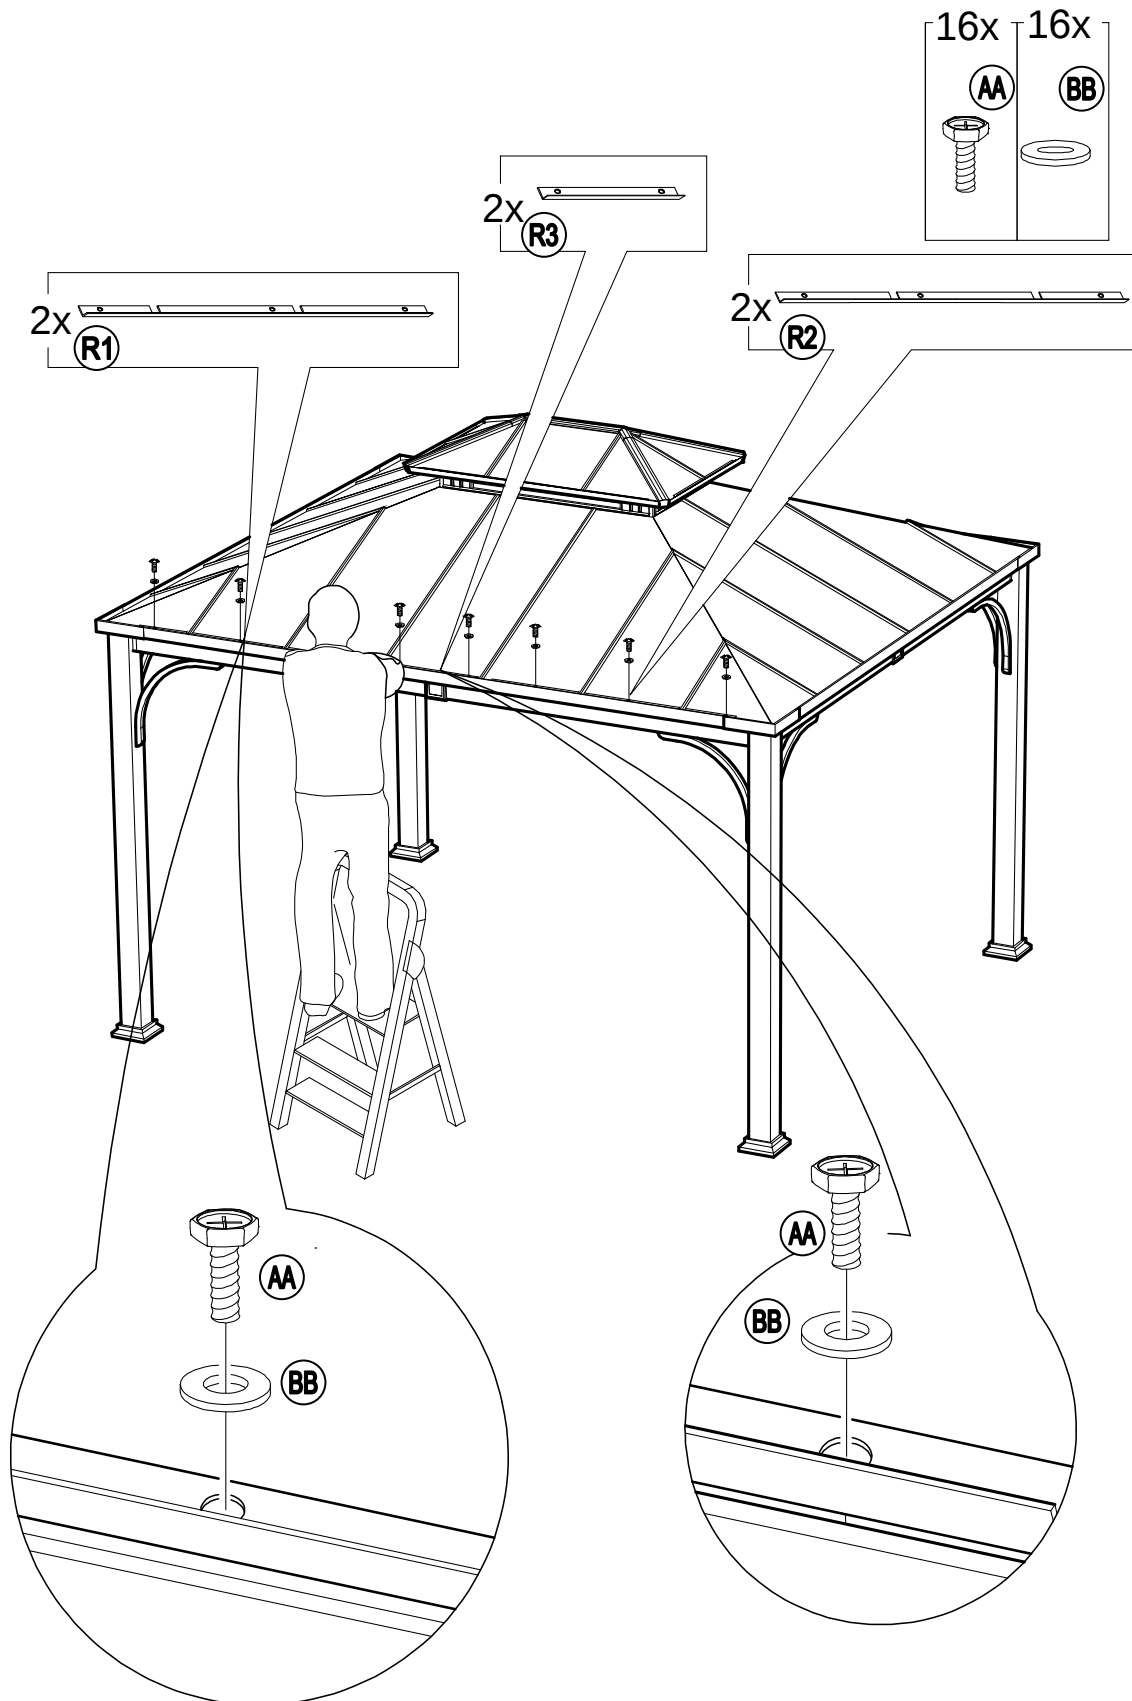





 
 
STEP 23:

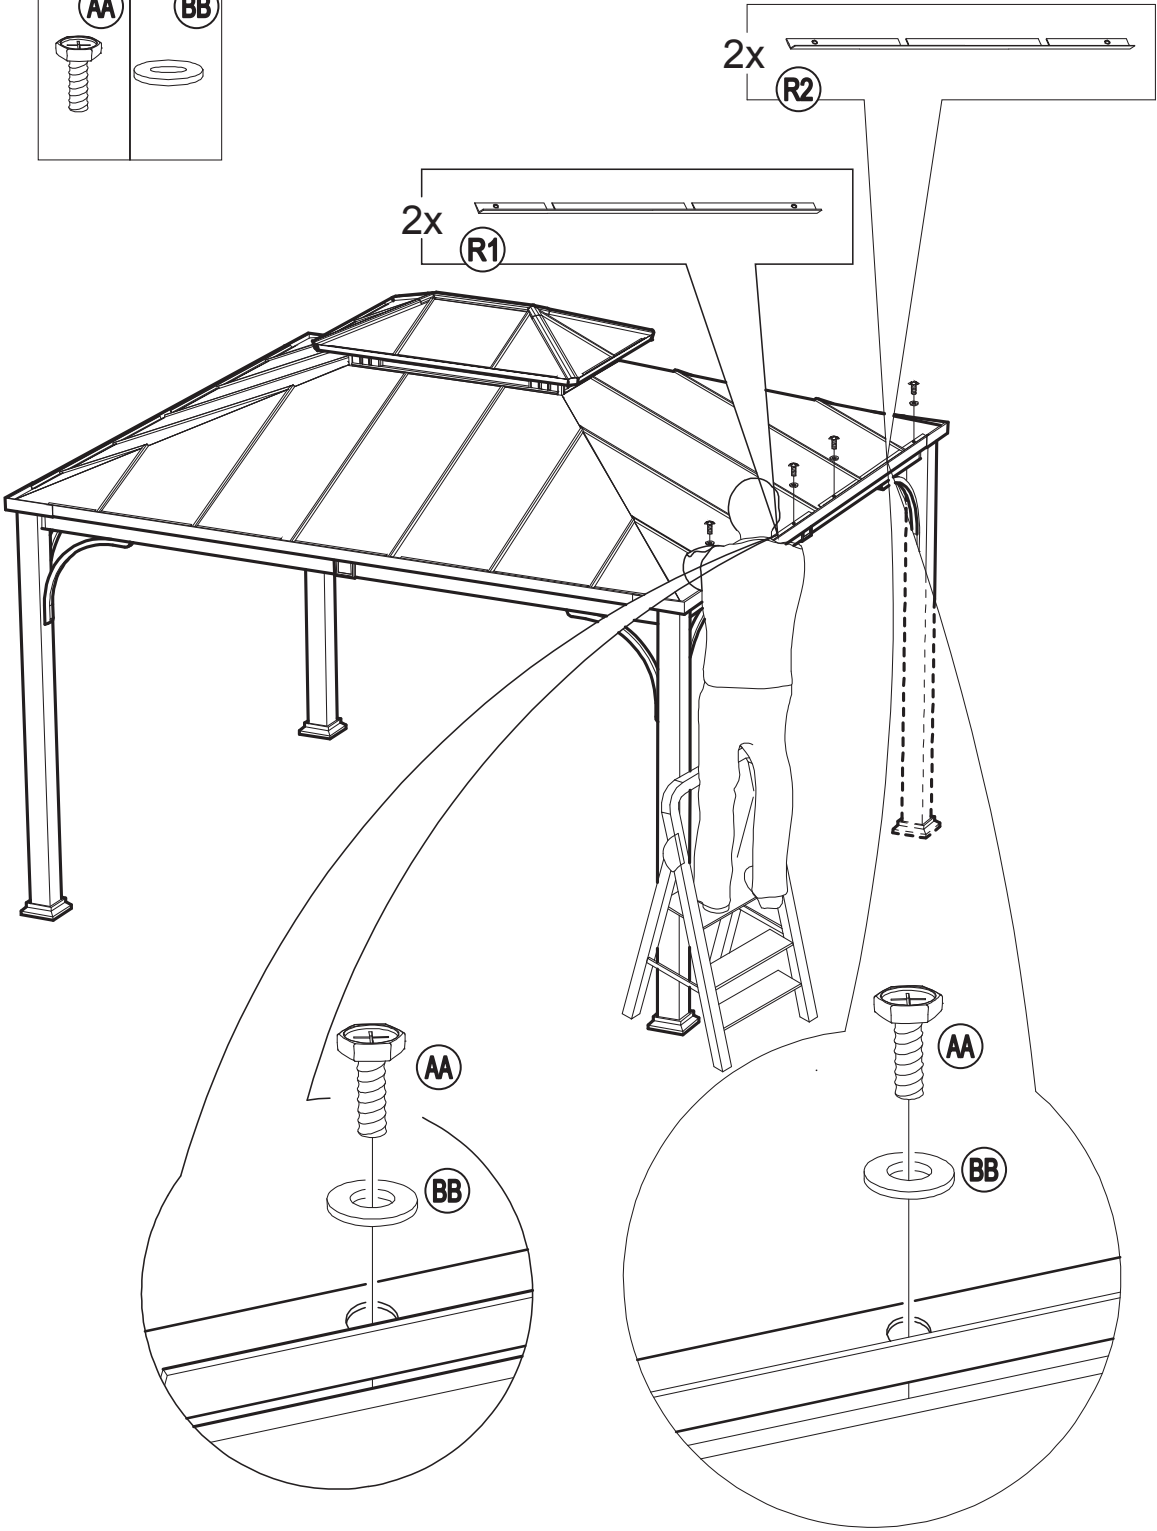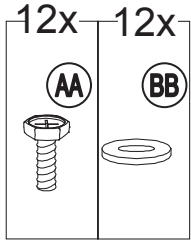

 STEP 24:

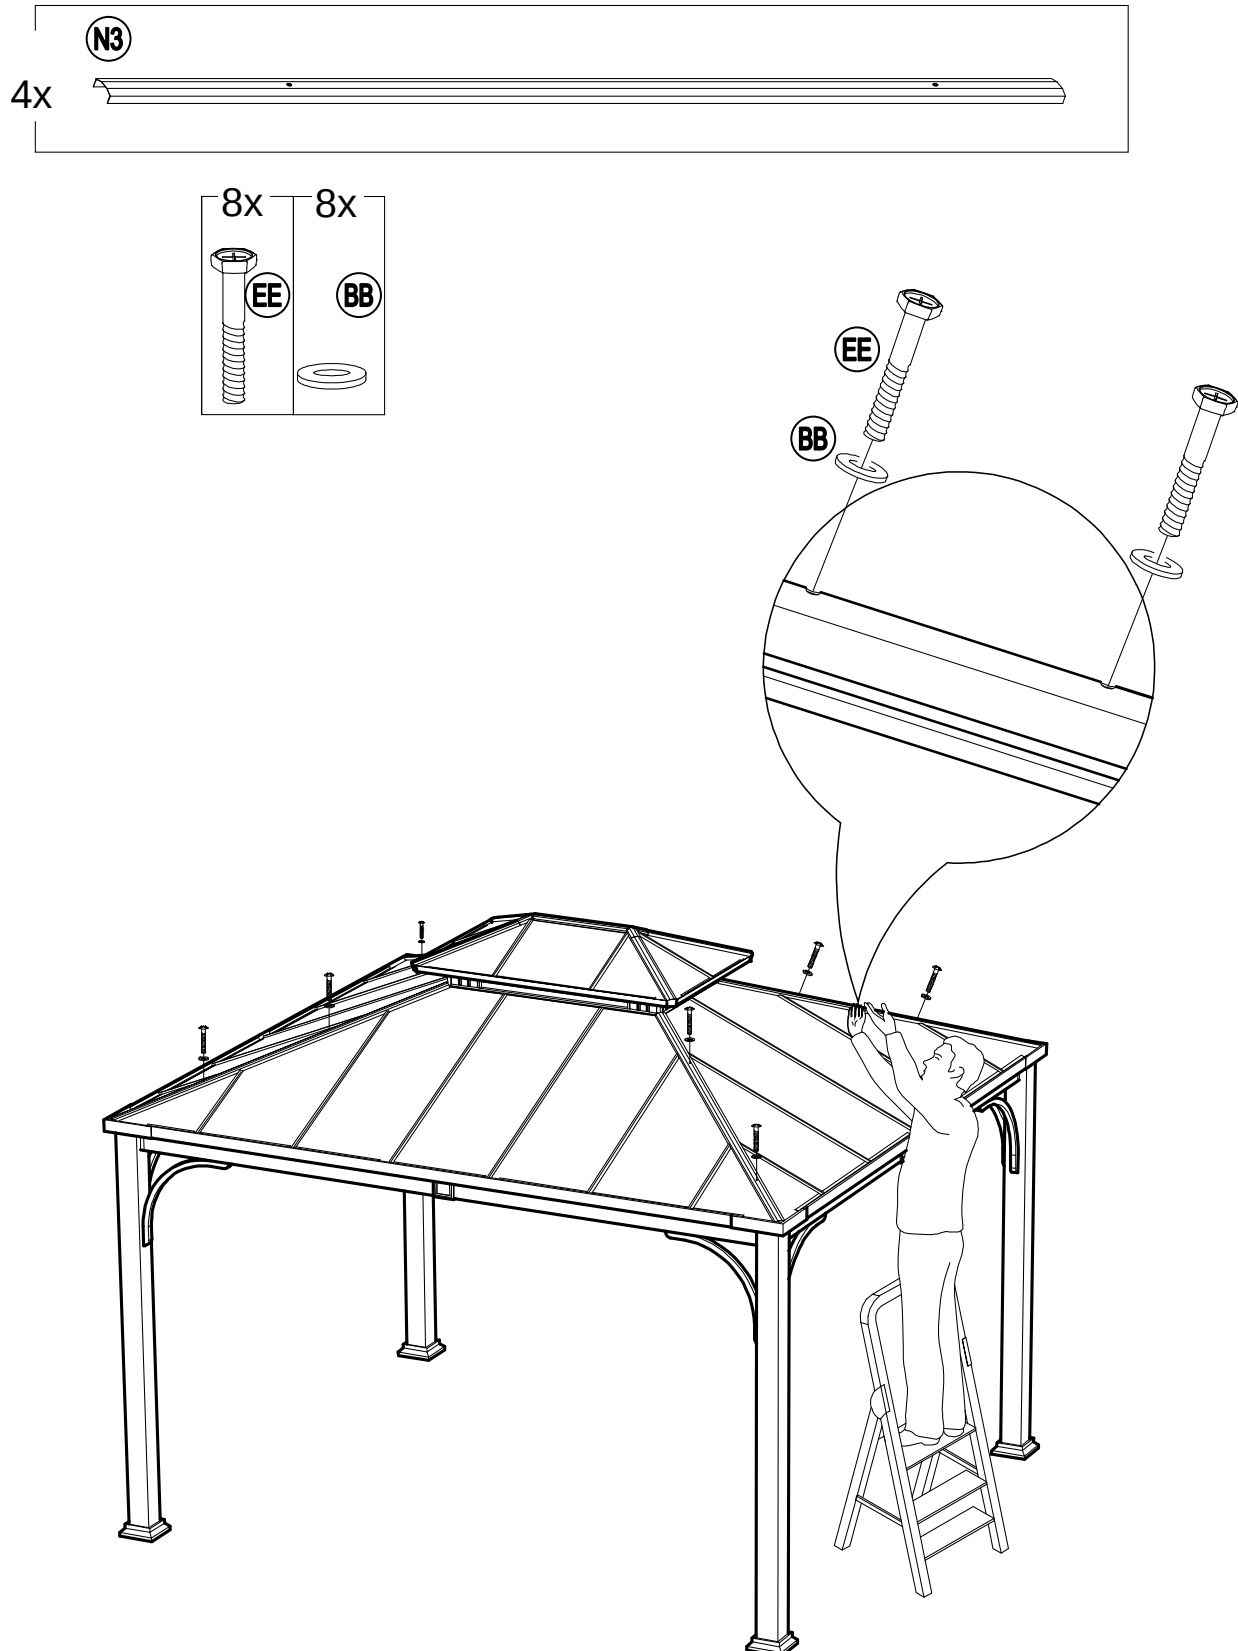


      STEP 25:

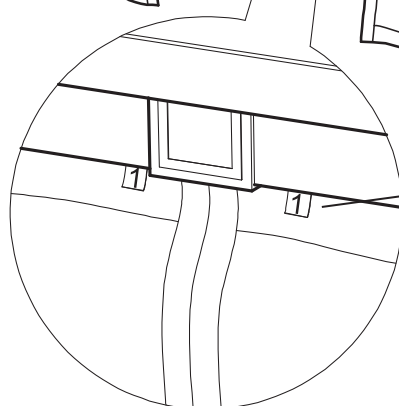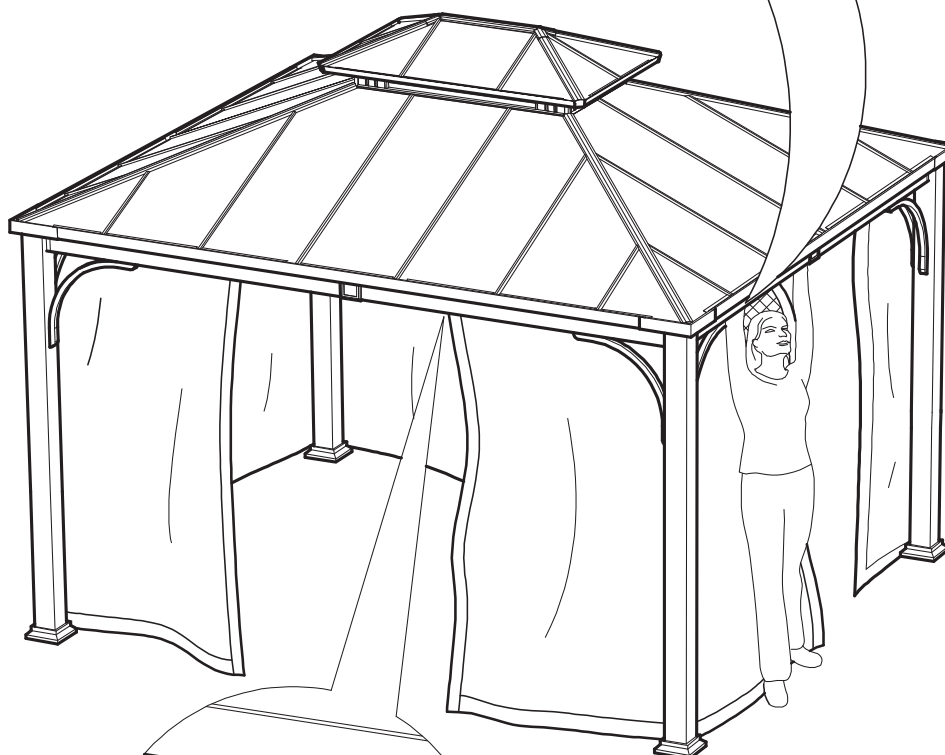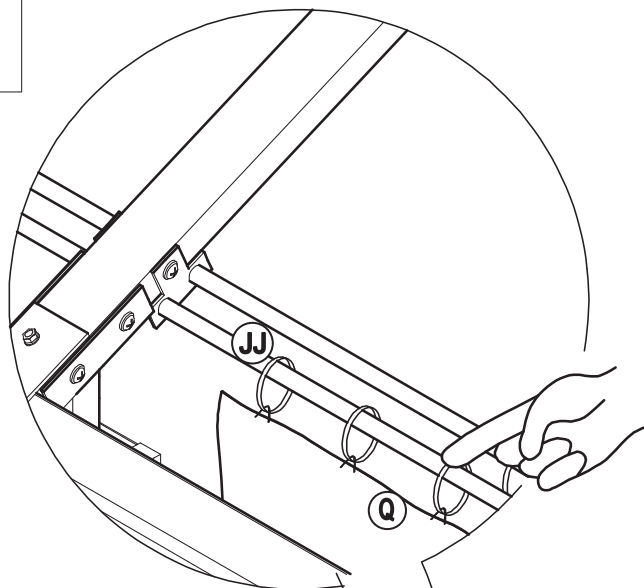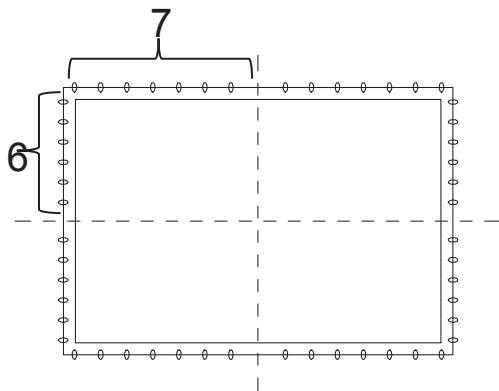
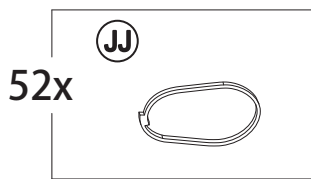
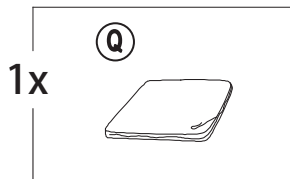


Please do the matching of zippers for different panels as showing the picture

 STEP 26:

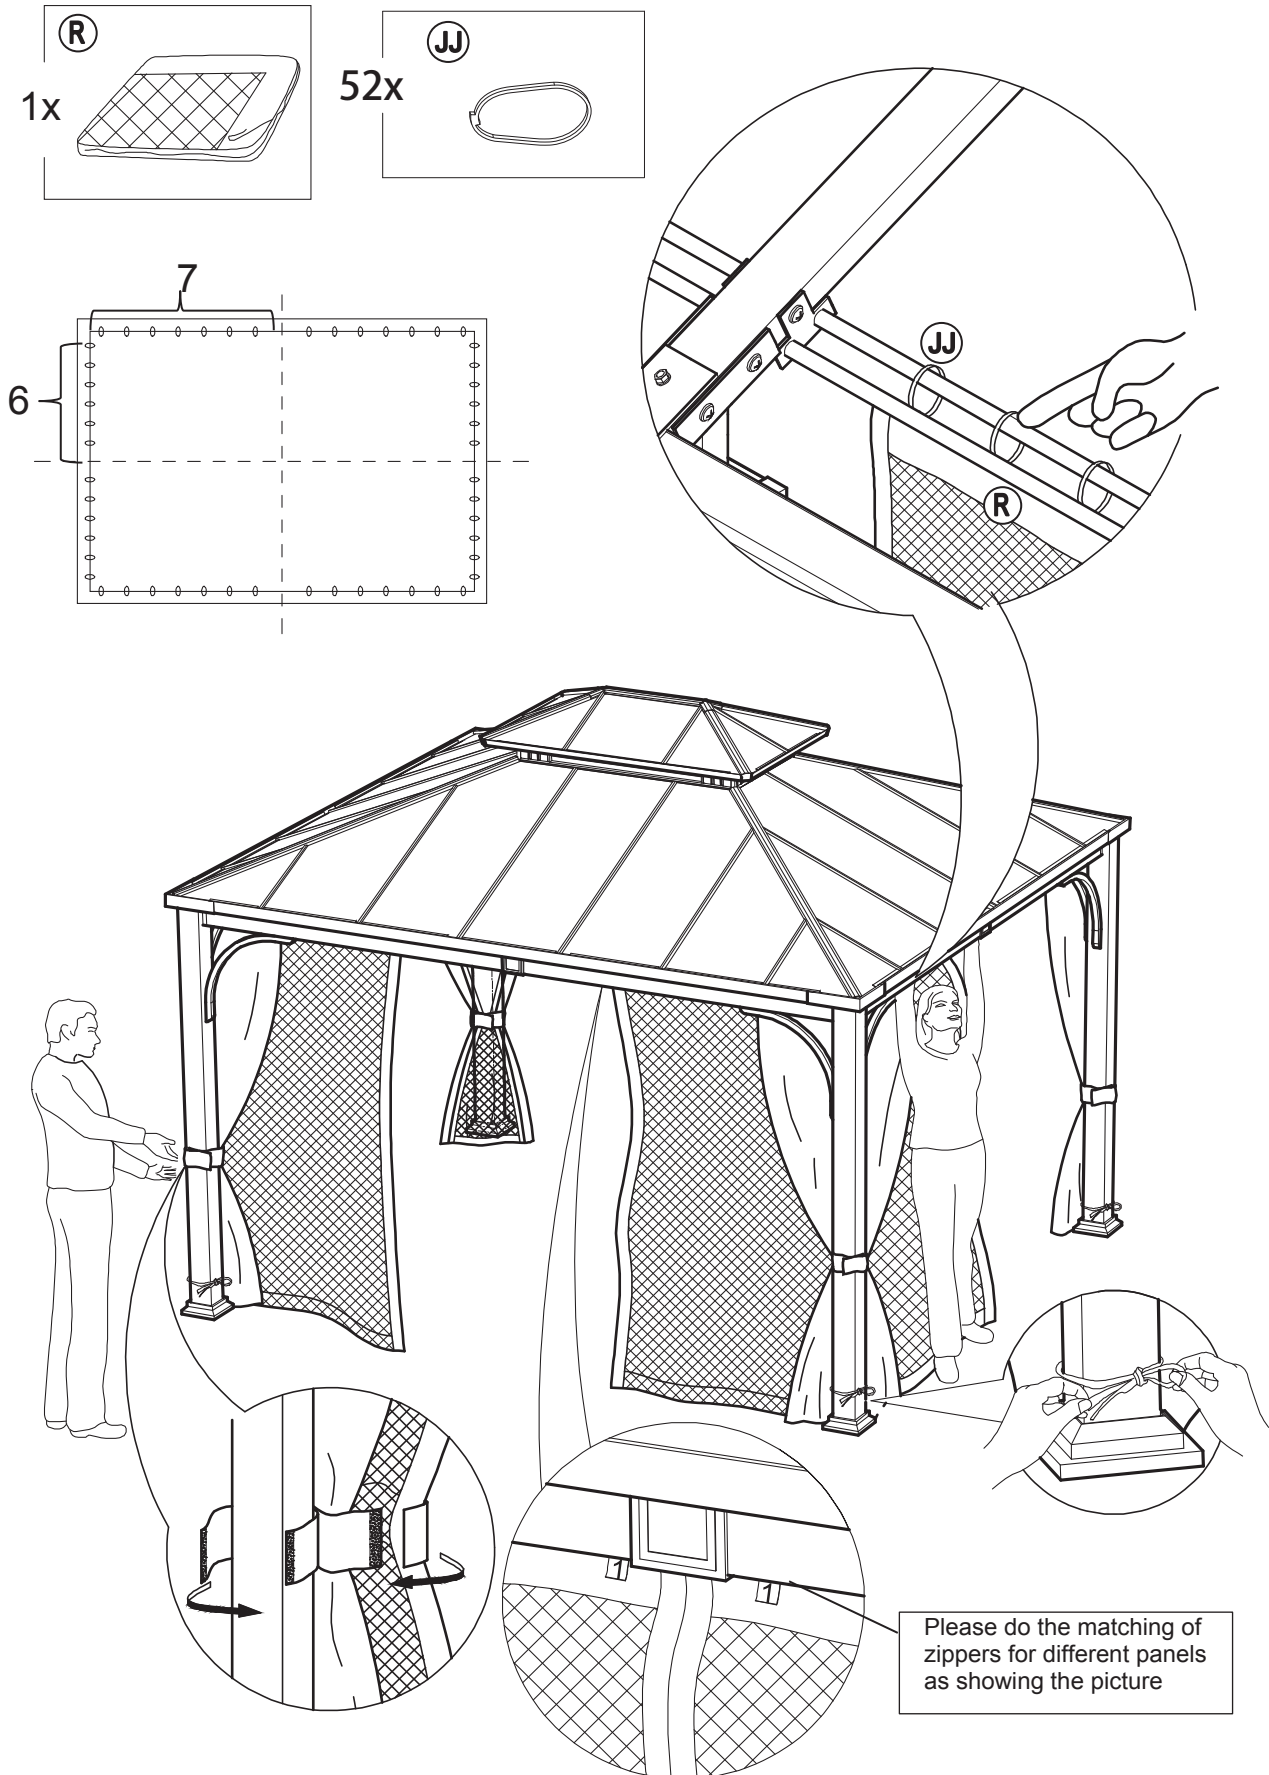

   STEP 27:

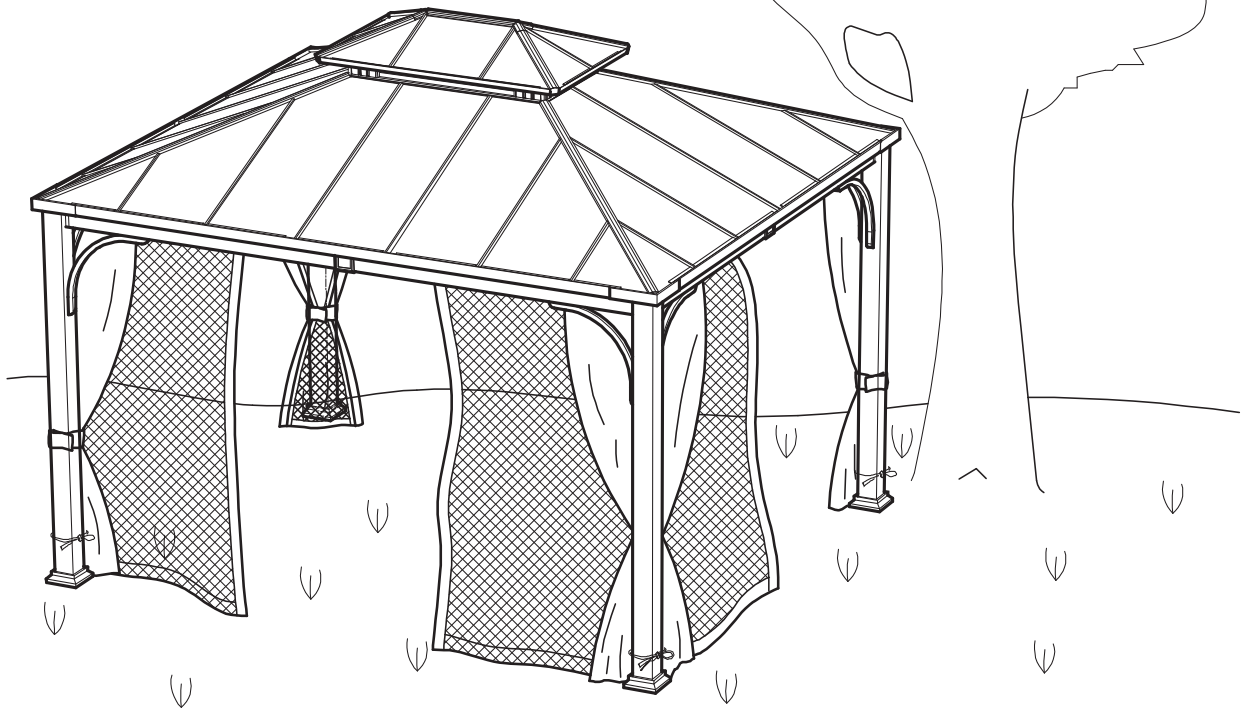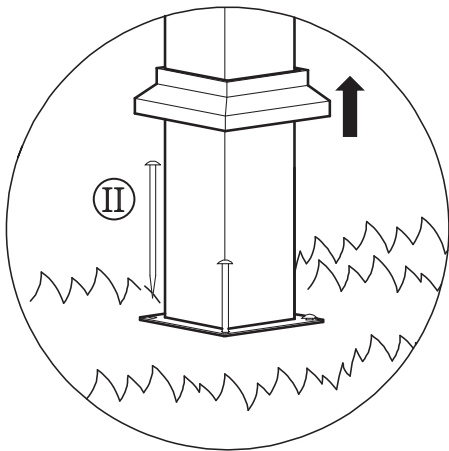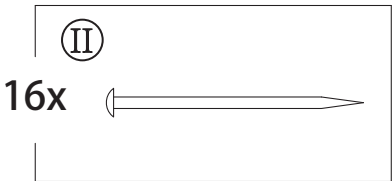

**CAUTION!**

- Check all screws and nuts periodically for tightness; fasten them as required.
- Disassemble the gazebo in reverse order of the steps used to assemble. Always disassemble the gazebo completely. A partially-disassembled gazebo is not stable enough to resist wind and bad weather, and therefore can be damaged and/or cause damage.

- Clean the gazebo gently with water using a sponge.
- Do not use abrasive materials, wire brushes, chemicals, cleansers or bleach.
- Do not use a pressure washer.
- Rinse well. Allow it to air dry.
- Steel components of garden accessories and furniture are treated with rust-inhibiting paint. However, due to the nature of steel, surface oxidation (rusting) will occur if this protective coating is scratched. This is a natural process. To minimize this condition, it is recommended to carefully assemble/handle the product, in order to prevent the paint from being scratched. Surface rust can be removed easily using a very light application of common cooking oil. If surface oxidation (rusting) occurs and no measures are taken to correct it, the oxidation may start dripping onto the assembly surface, which may cause stains that may be difficult to remove.

Dimensions (L x W x H)	12' x 10' x 10' 1"
	3.6 x 3 x 3.1 m
Product weight	177 kg
	390 lbs

This CANVAS™ product carries a three (3) year warranty against defects in workmanship and materials.

Trileaf Distribution agrees to replace the defective product free of charge within the stated warranty period, when returned by the original purchaser with proof of purchase. This product is not guaranteed against wear or breakage due to misuse and/or abuse.