




Summerland Gazebo

Product No. 088-2021-0

Model No. D-GZ136PST-P

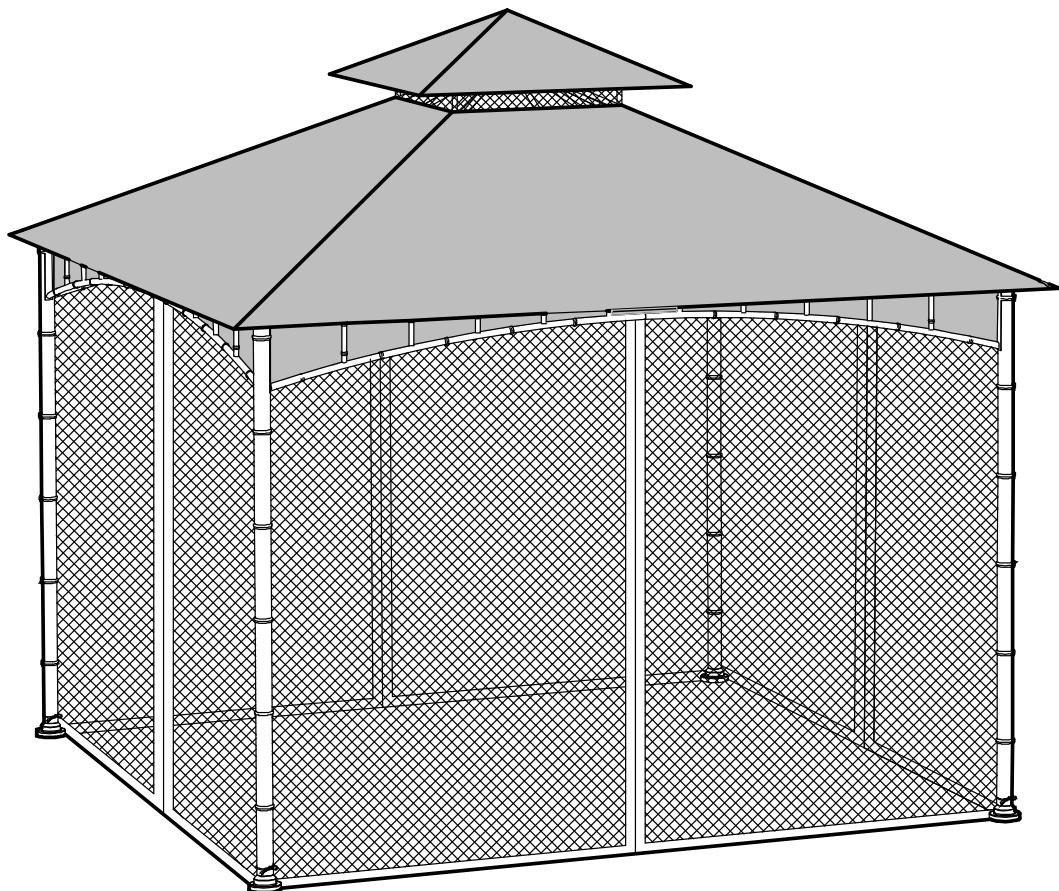

Assembly Instructions

Toll free: 1-877-483-6759

IMPORTANT: Please read this manual carefully before beginning assembly of this product. Keep this manual for future reference.

Production Number: xxxxxxxx

Table of Contents	3
Important Safety Instructions	3
Parts List	4
General Requirements	5
Assembly	6-17
Cleaning and Maintenance	18
Technical Data	18
Warranty	18



Warning! To reduce the risk of serious injury, read the following safety instructions before assembling and using the gazebo.

 
 
 
 
 
 
 
 
Caution! Always keep children under close supervision while they are playing around this product.

Never leave children unattended. Keep pets away while setting up the gazebo.

Caution! Check municipal by-laws prior to installing the gazebo.

- This product is intended for domestic outdoor use only.
- The product should be placed and assembled on flat, horizontal ground.
- Consult with your local governing authority/local municipal codes regarding installation of temporary structures before assembly.
- Ensure there is enough clearance around the product. Before assembling the gazebo, make sure to leave a distance of not less than 6' (1.8 m) from any structures or obstructions, such as fences, garages, houses, overhanging branches, laundry lines, or electrical wires.
- Anchor the gazebo to the ground with stakes for added safety. Stakes are provided to secure the gazebo to the ground. If you wish to secure the gazebo to a concrete or wood surface, use anchors suited for these surfaces (anchors not included). Do not assemble the gazebo on sandy, muddy or loose soil, as stakes do not have enough anchorage in these types of soil.
- If more than one gazebo is set up, keep a minimum distance of 10' (3 m) between the gazebos.
- Any assembly or maintenance of the product must be carried out by adults only.
- Make sure there is sufficient manpower when assembling or moving the product.
- Some parts may contain sharp edges. Wear protective gloves if necessary.
- Check all nuts and bolts periodically for tightness. When required, tighten them.
- Repairing and replacing parts should be done by a qualified technician.
- This gazebo is intended for decorative and sunshade purposes only.
- The gazebo is not designed to withstand harsh weather, including high winds, rain and snow. Always remove the gazebo in such heavy weather conditions, otherwise it might tip over and cause damage to the product or injuries to bystanders.
- During snow days, use the support post to make the roof stronger, remove the snow at the top when the snow is thicker than 4' (10 cm).
- After a period of time, usually in 2-3 months, tighten all the bolts.
- After a period of use, rinse the ash on top of the gazebo using water. Avoid using acid or alkali wash lotion.
- Do not hang any weights on the roof frame.
- Do not climb onto the roof of the gazebo. Falling off the gazebo can result in serious injury.
- After a few years, if the paint peels off, use paint of similar colour. It is recommended to use outdoor paint.
- Retain the original packaging to store the gazebo.
- If the product will not be used for a long period of time (e.g. winter), it should be disassembled and stored in a clean, dry environment.

IMPORTANT: RETAIN FOR FUTURE REFERENCE AND READ CAREFULLY

1A	P11003C01102		AA	H02020C11	
	Left Frame - 4			Bolt M6*20 - 28+2 Spare	
1B	P11004C01102		BB	H19001C11	
	Right Frame - 4			Flat Washer M6 - 44+3 Spare	
1C	P11125B01102		CC	H02040C11	
	Post - 4			Bolt M6*40 - 8	
2A	P11467A01102		DD	H14001C11	
	Big Top Connector - 1			Nut M6 - 8	
2B	P12601A01102		EE	P91204A07001	
	Hook - 1			Plastic Cap M6 - 16+1 Spare	
2C	P10392A01102		FF	H13001C11	
	Slant Beam For Big Roof - 4			M6 Spring Washer - 28+2 Spare	
2D	P10461A01102		GG	P12401A01001	
	Middle Beam For Big Roof - 4			Stake Dia. 8*180 - 12	
3A	P00101A08010		WW	H00001C12	
	Large Canopy - 1			Wrench M6 - 2	
3B	P11468A01102		F	P90701A07001	
	Small Top Connector - 1			Ring - 48+3 Spare	
3C	P10241A01102				
	Slant Beam For Small Roof - 4				
3D	P00102A08010				
	Small Canopy - 1				
E	P00301A03901				
	Mosquito Netting - 1				


Caution!

- Proper placement of the gazebo is essential. Do not place the product underneath electrical lines.
- Keep children under close supervision while they are playing around this product. This product contains small parts which can be swallowed by children.
- Keep fingers away from places where they can be pinched or trapped.
- Do not attempt to assemble the gazebo if any part is missing.
- Do not light any fires inside or near the product!
- Stay calm if fire breaks out. Search for the nearest exit. Do not return to the gazebo before firemen allow you to do so.

 

Let us help you!
DO NOT RETURN YOUR PRODUCT TO THE STORE. CALL US FIRST!
1-877-483-6759

If you have questions regarding your product, require warranty assistance, or have damaged or missing parts, please call our customer service toll-free helpline. Contact us for assistance, we're here to help.

IMPORTANT: Please read and understand this manual before any assembly. Before beginning the assembly of product, make sure all parts are available. Compare parts list with packaging contents. If any part is missing, or if you have any questions, contact the service centre at 1-877-483-6759 (toll free).

Unpack and place all the parts from the packaging box in an open area and position them on the floor. Remove all packing materials and place them back into the box. Do not dispose of the packing materials until assembly is complete. Read each step carefully before beginning any assembly and make sure you understand each step. If you are missing a part, please call our toll-free number for assistance: 1-877-483-6759.


Needed for assembly: (The following tooling not included in the package)



Hammer



Screwdriver

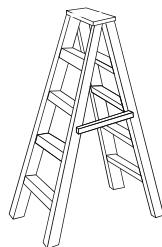




Ladder





2 people

Assembly




1

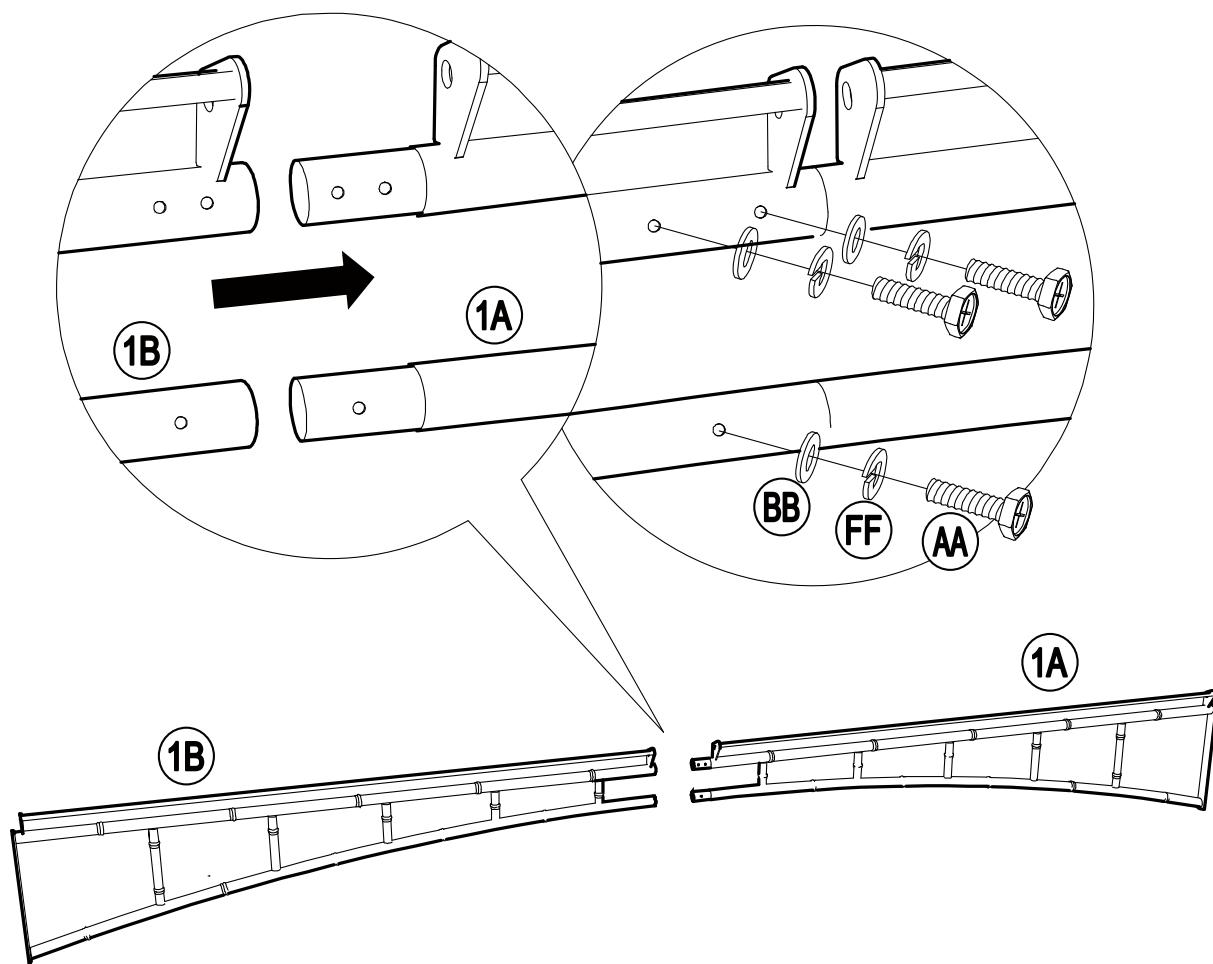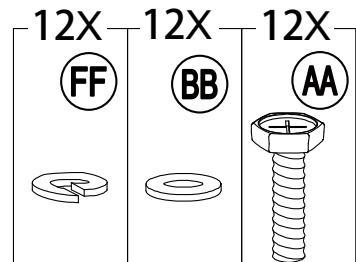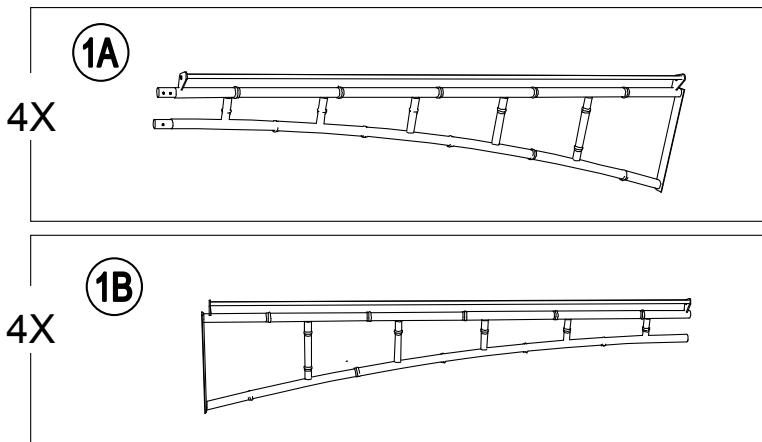



2

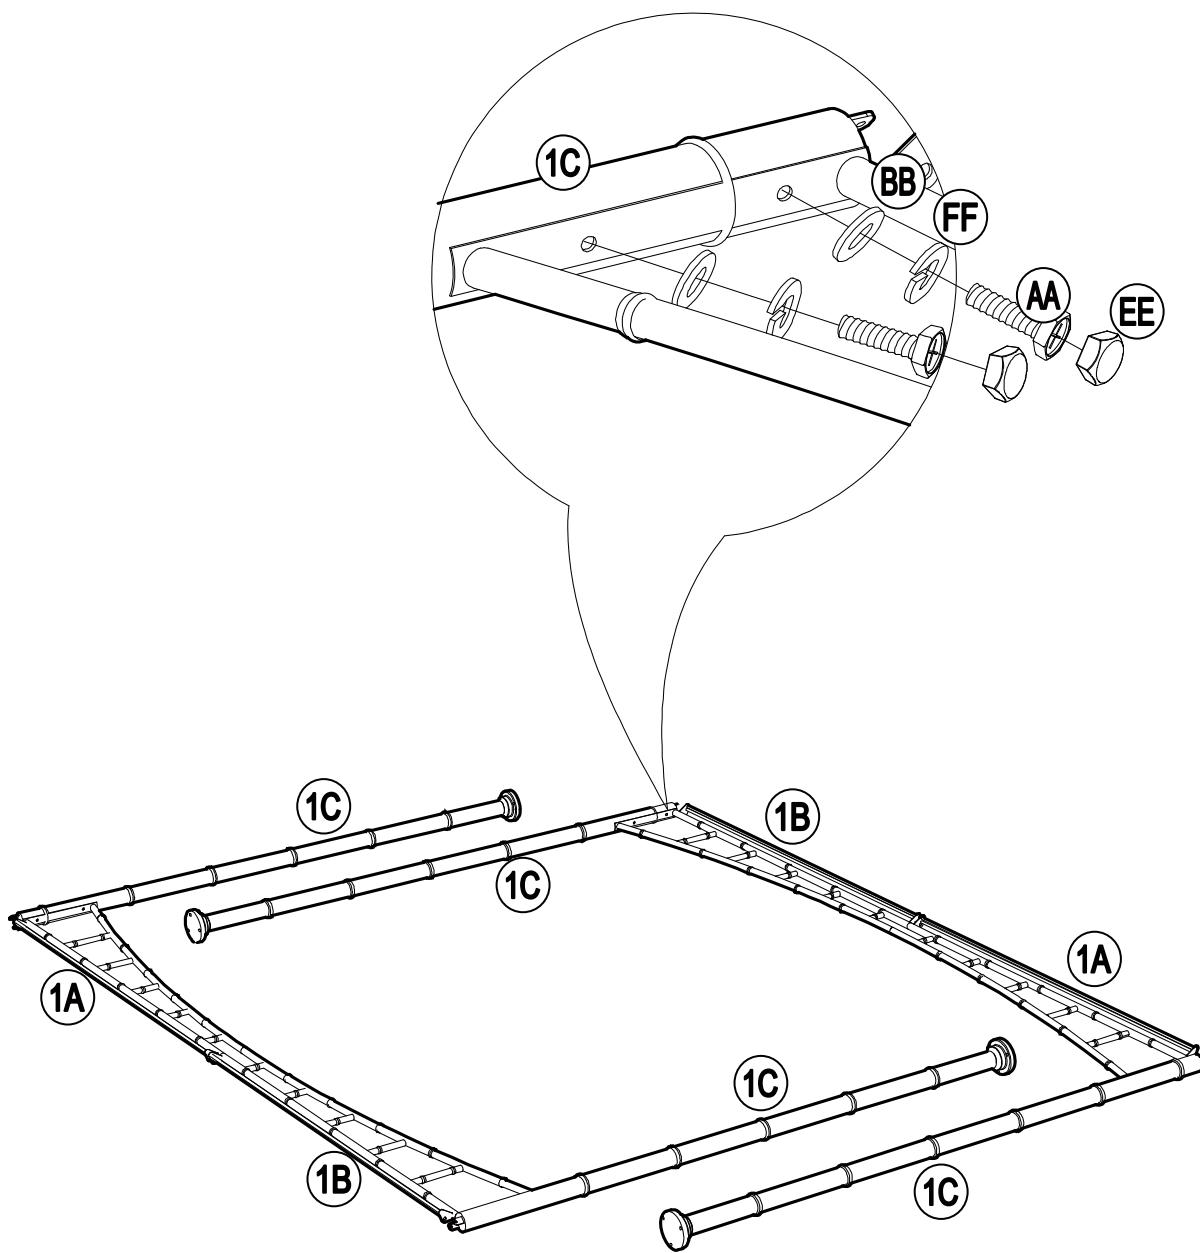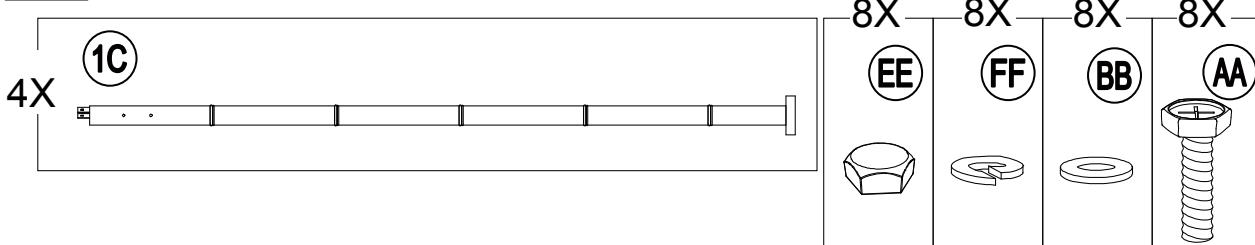





3

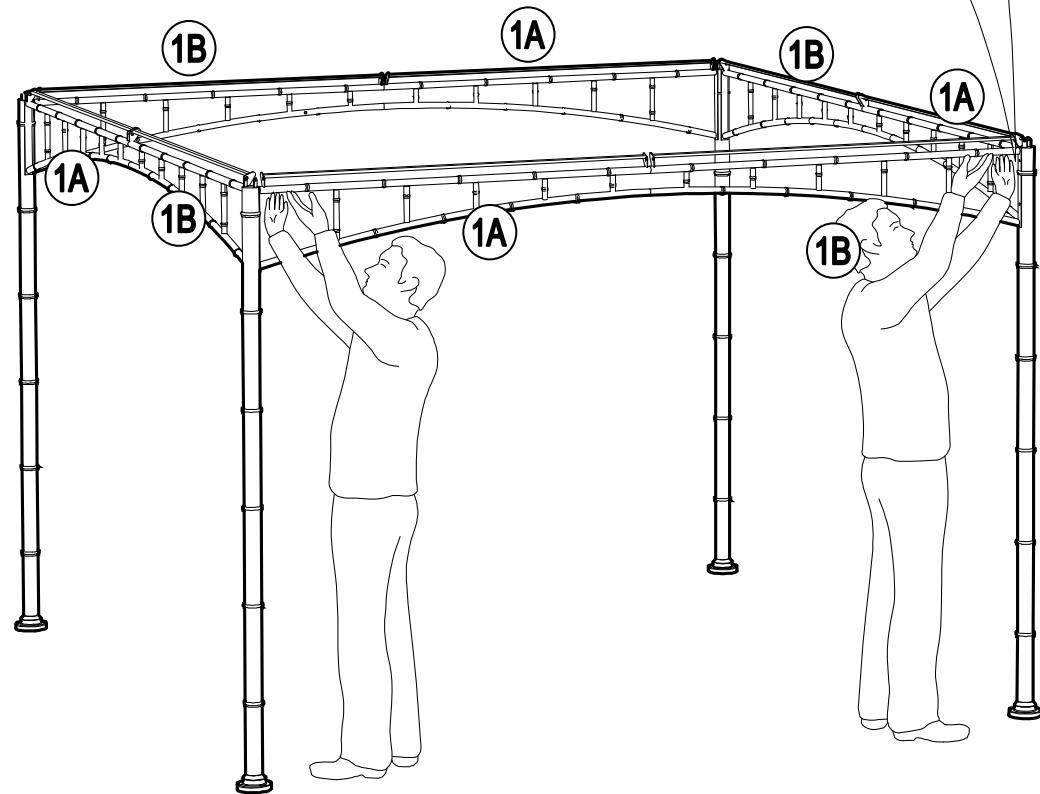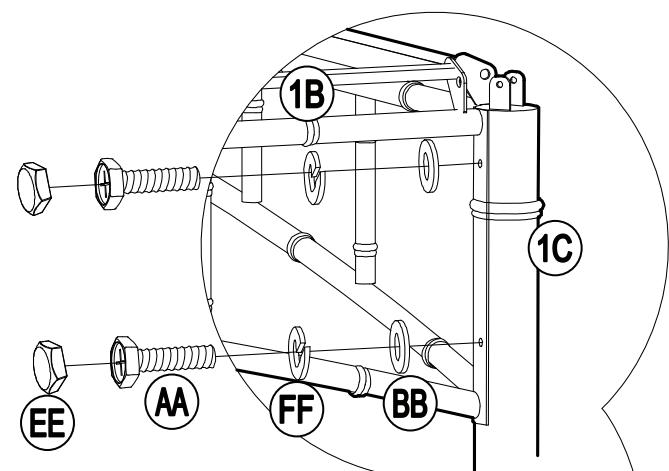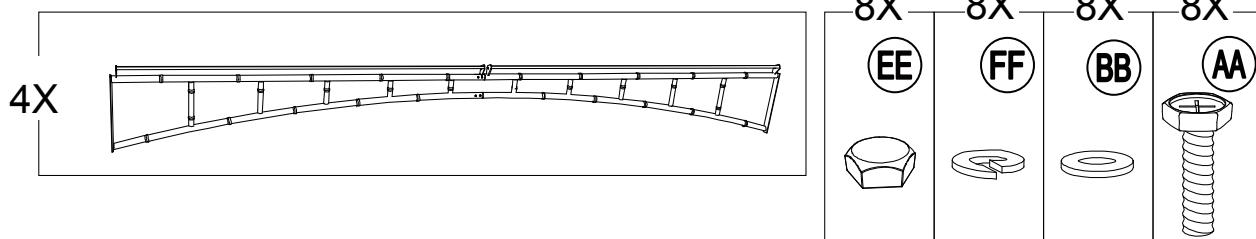


4

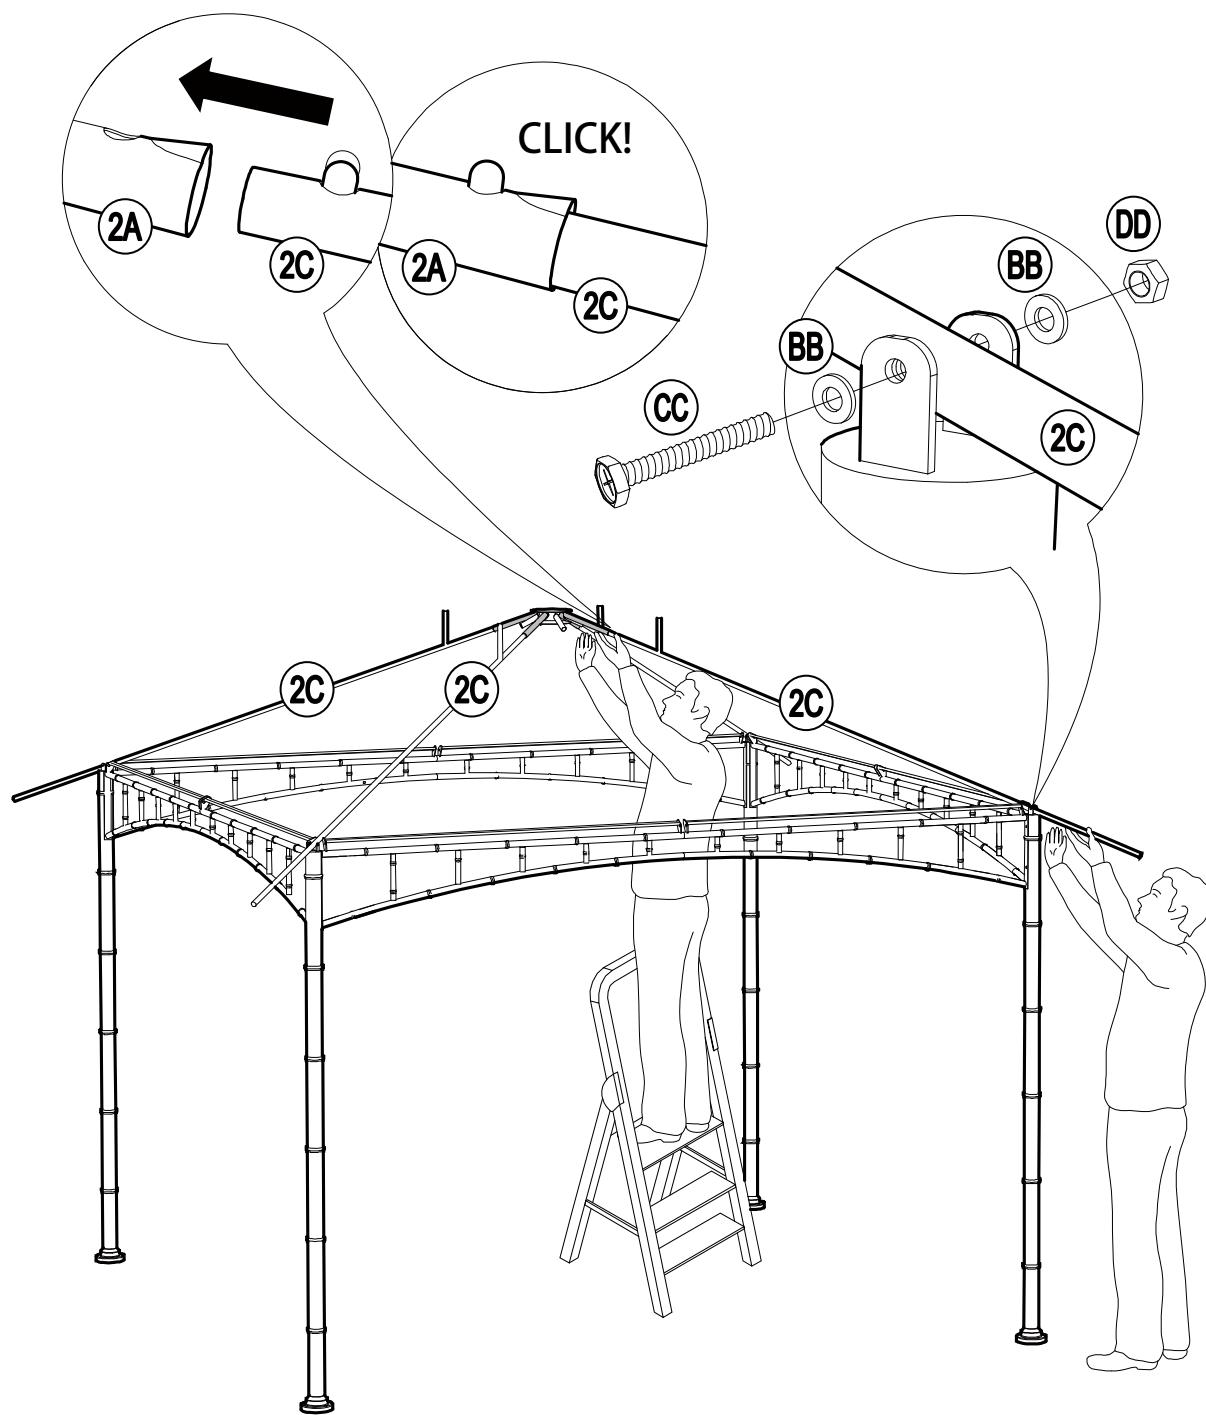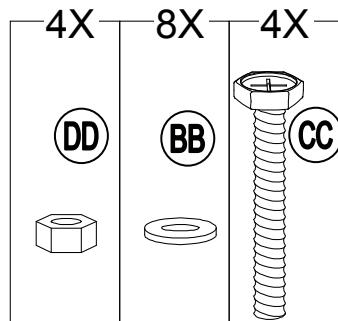


5

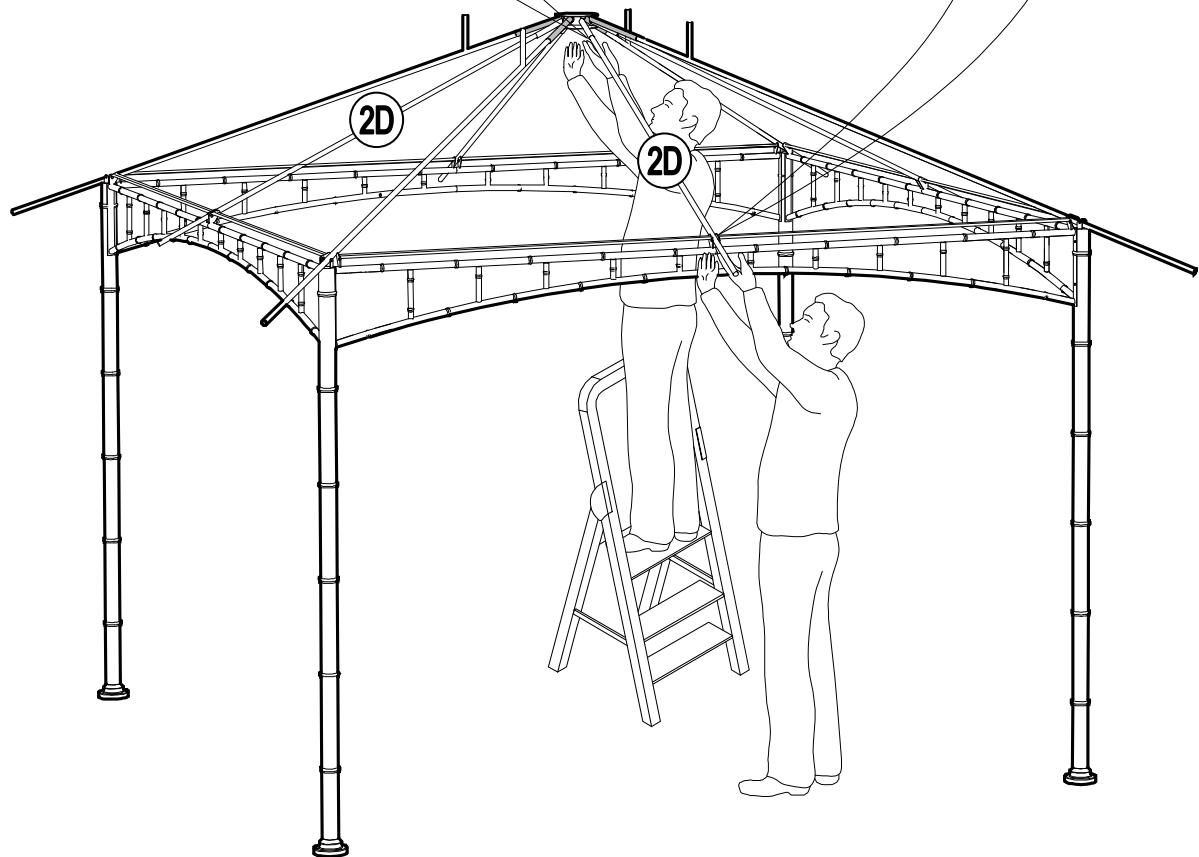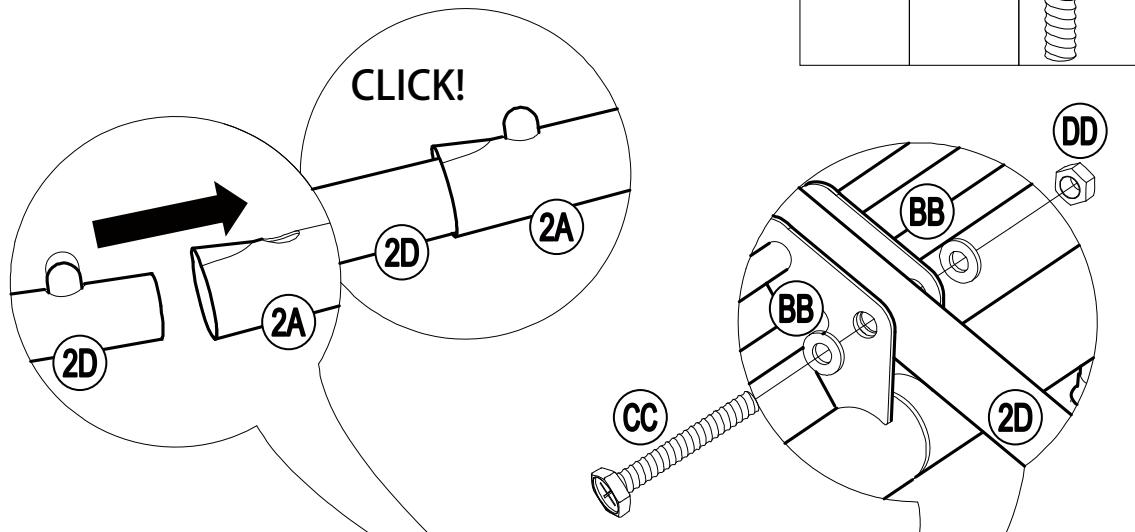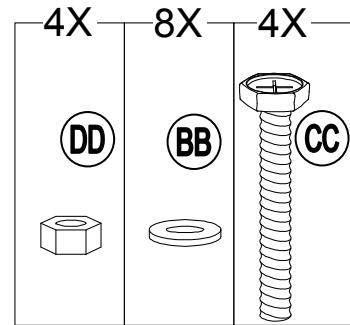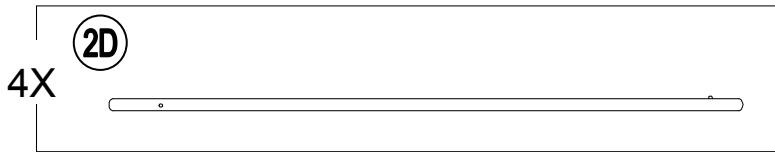




6

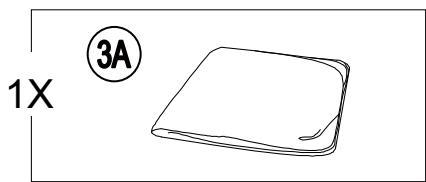


Assembly

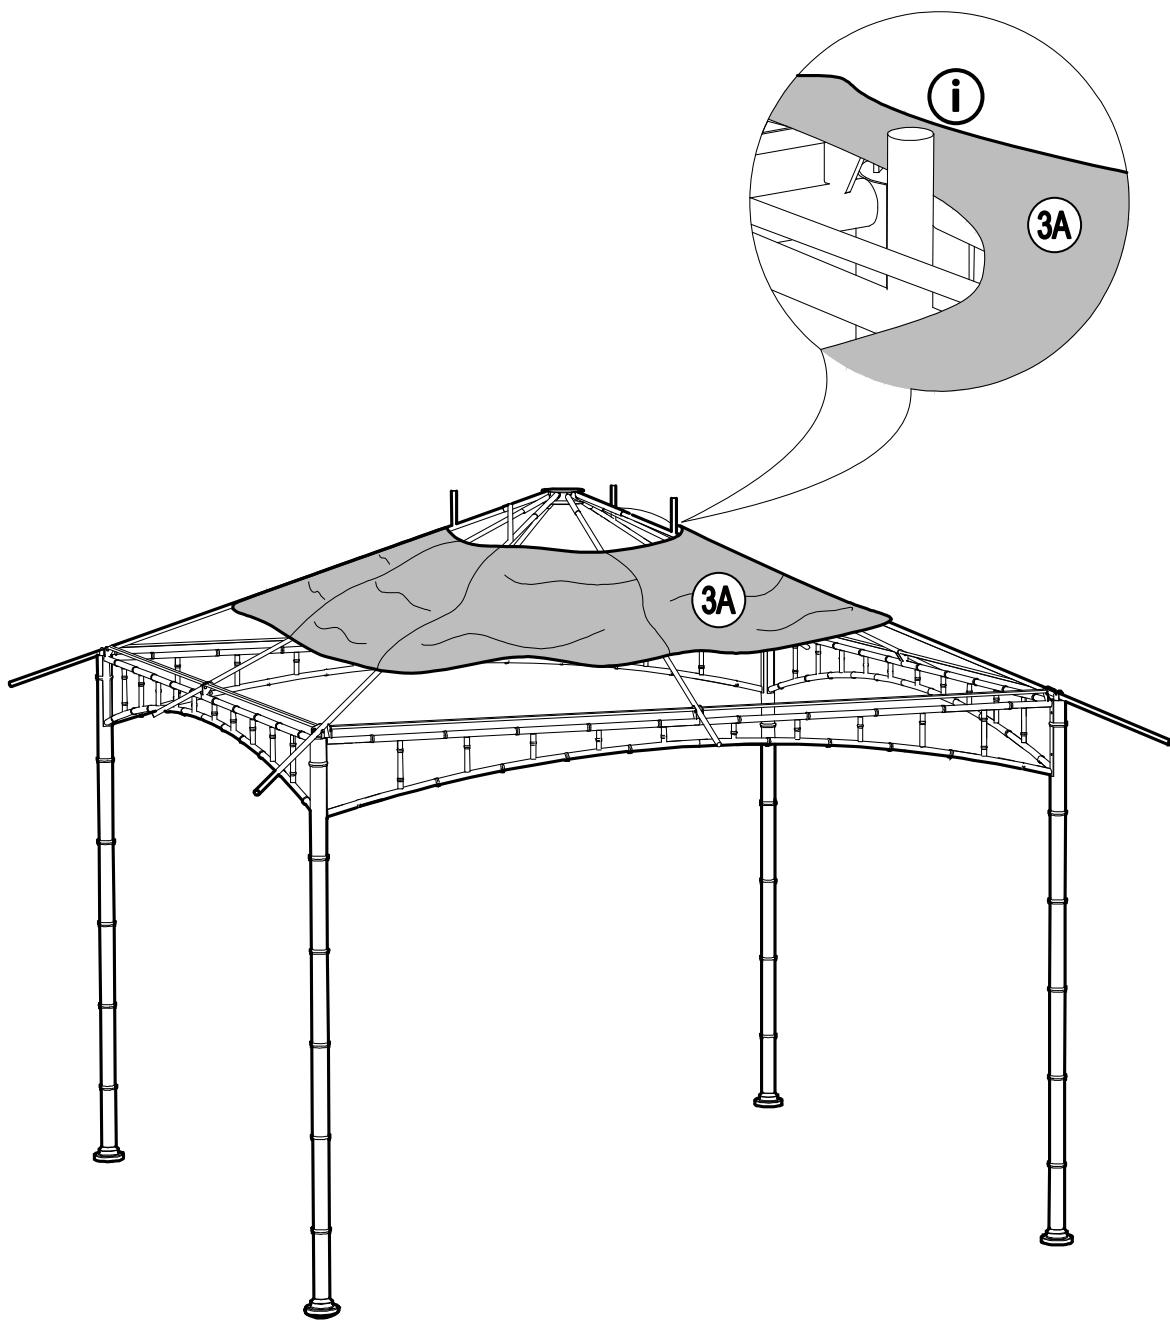


7

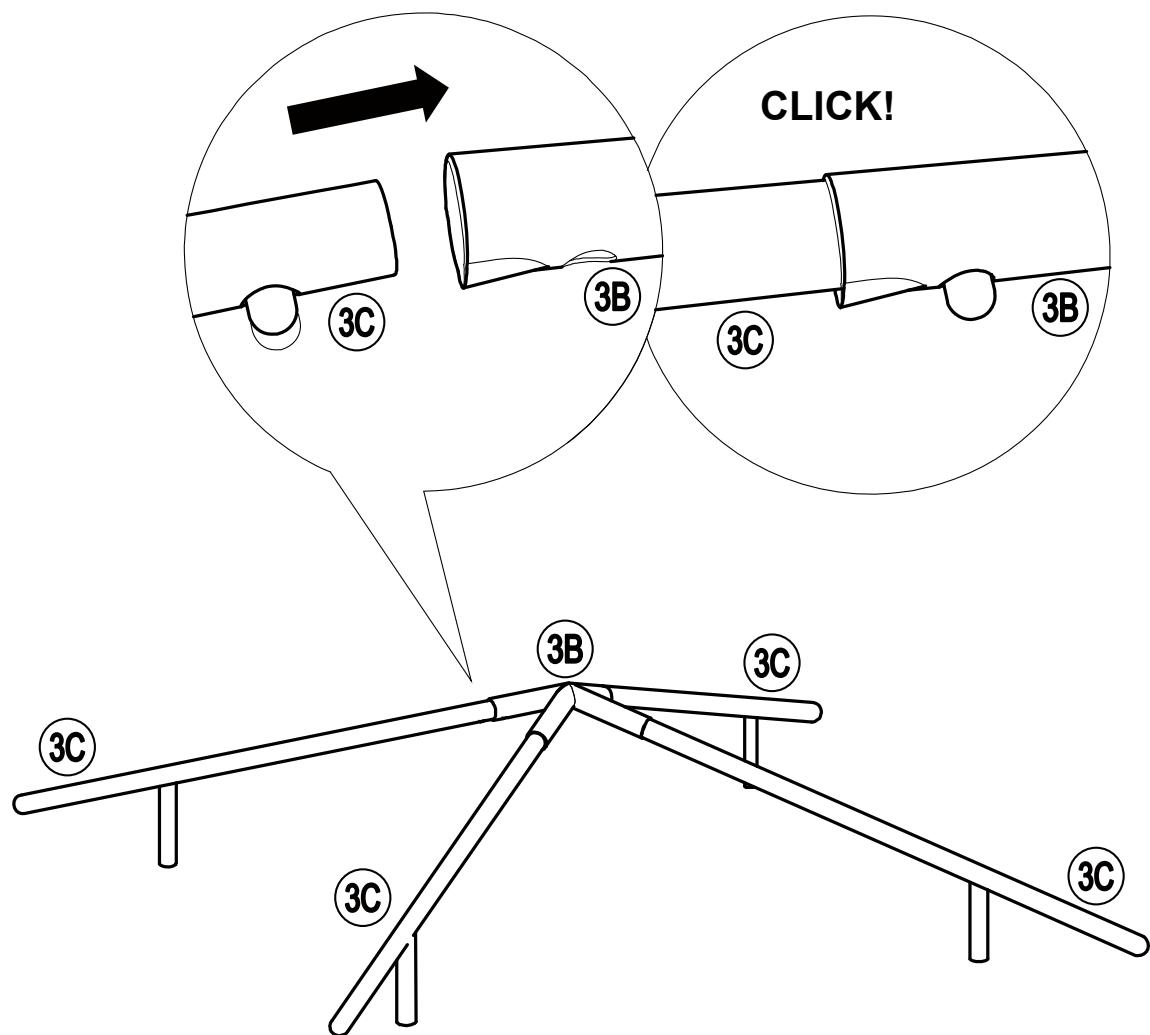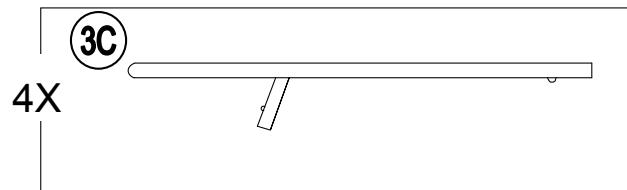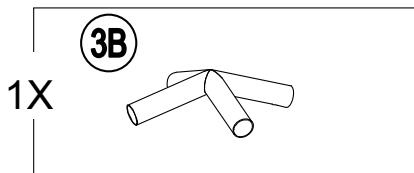



8

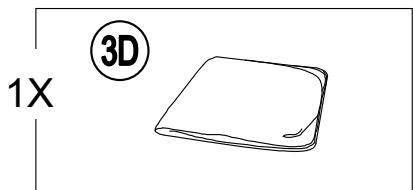


Assembly

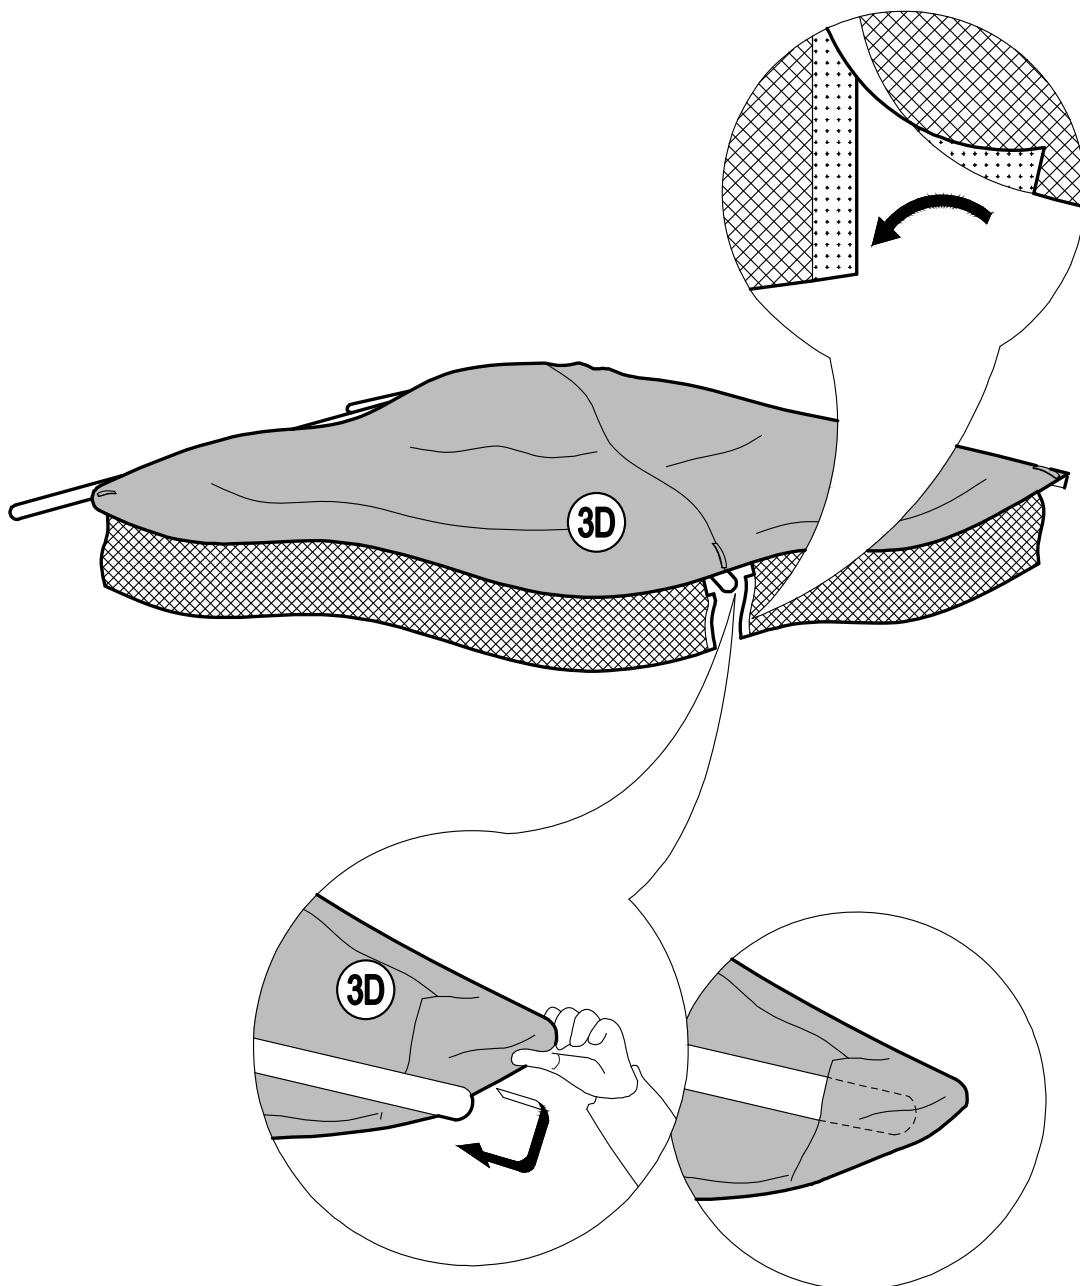




9

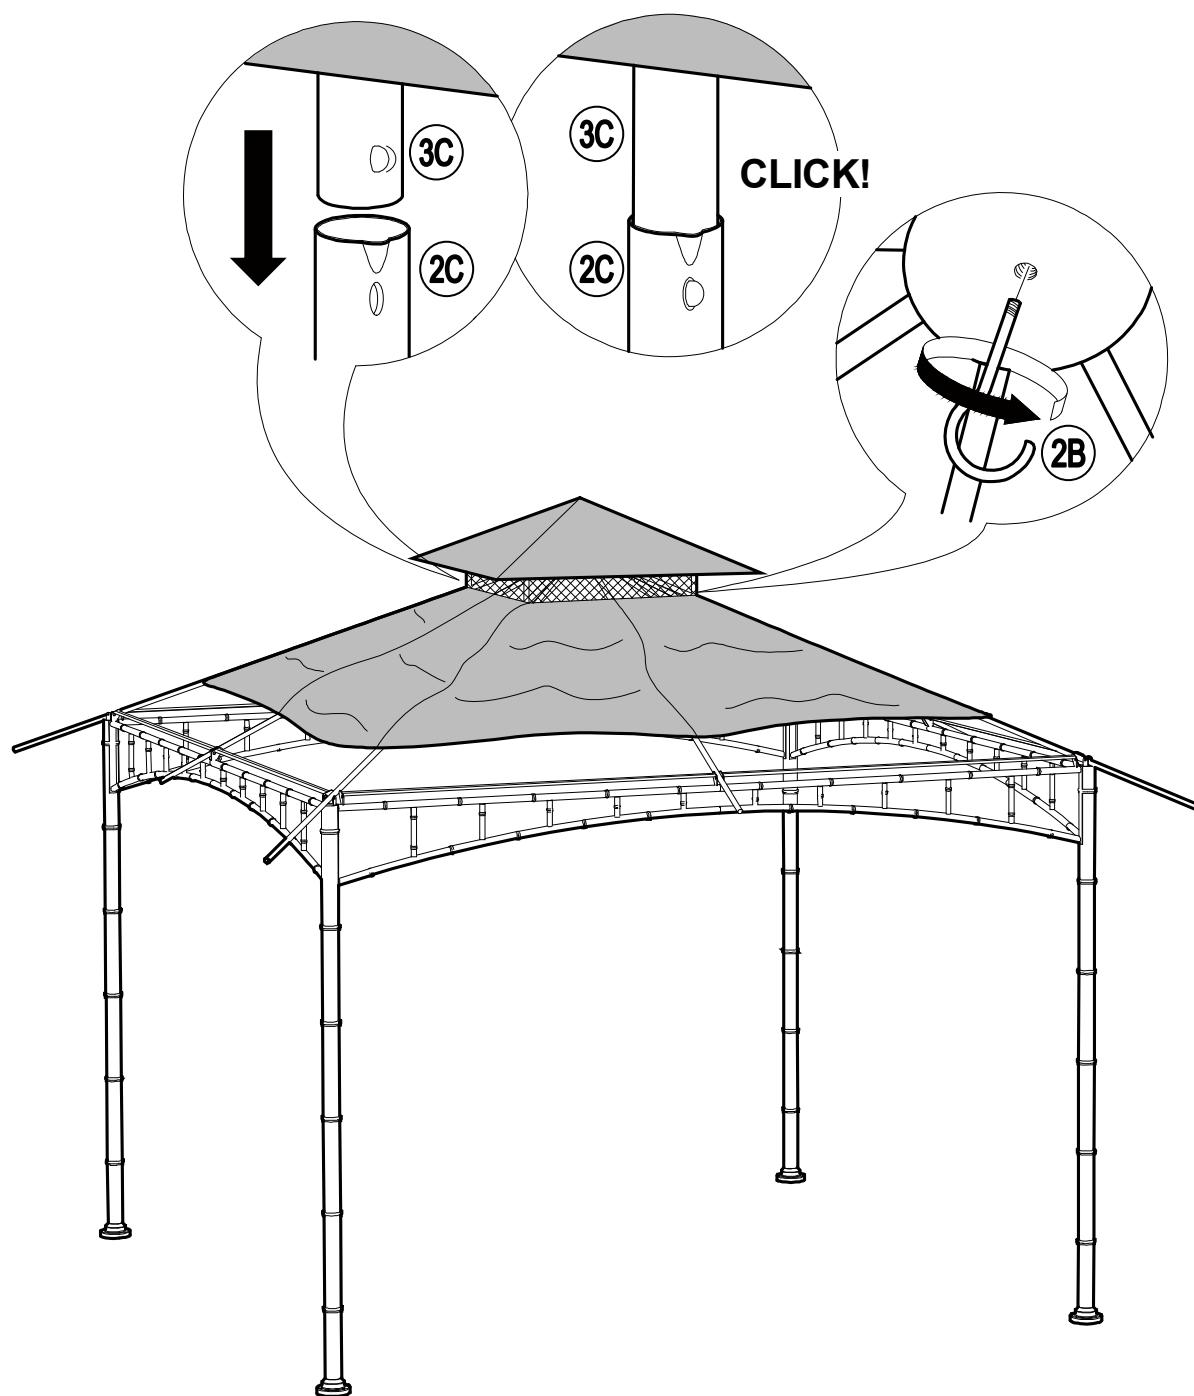
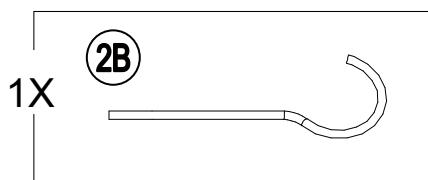


10

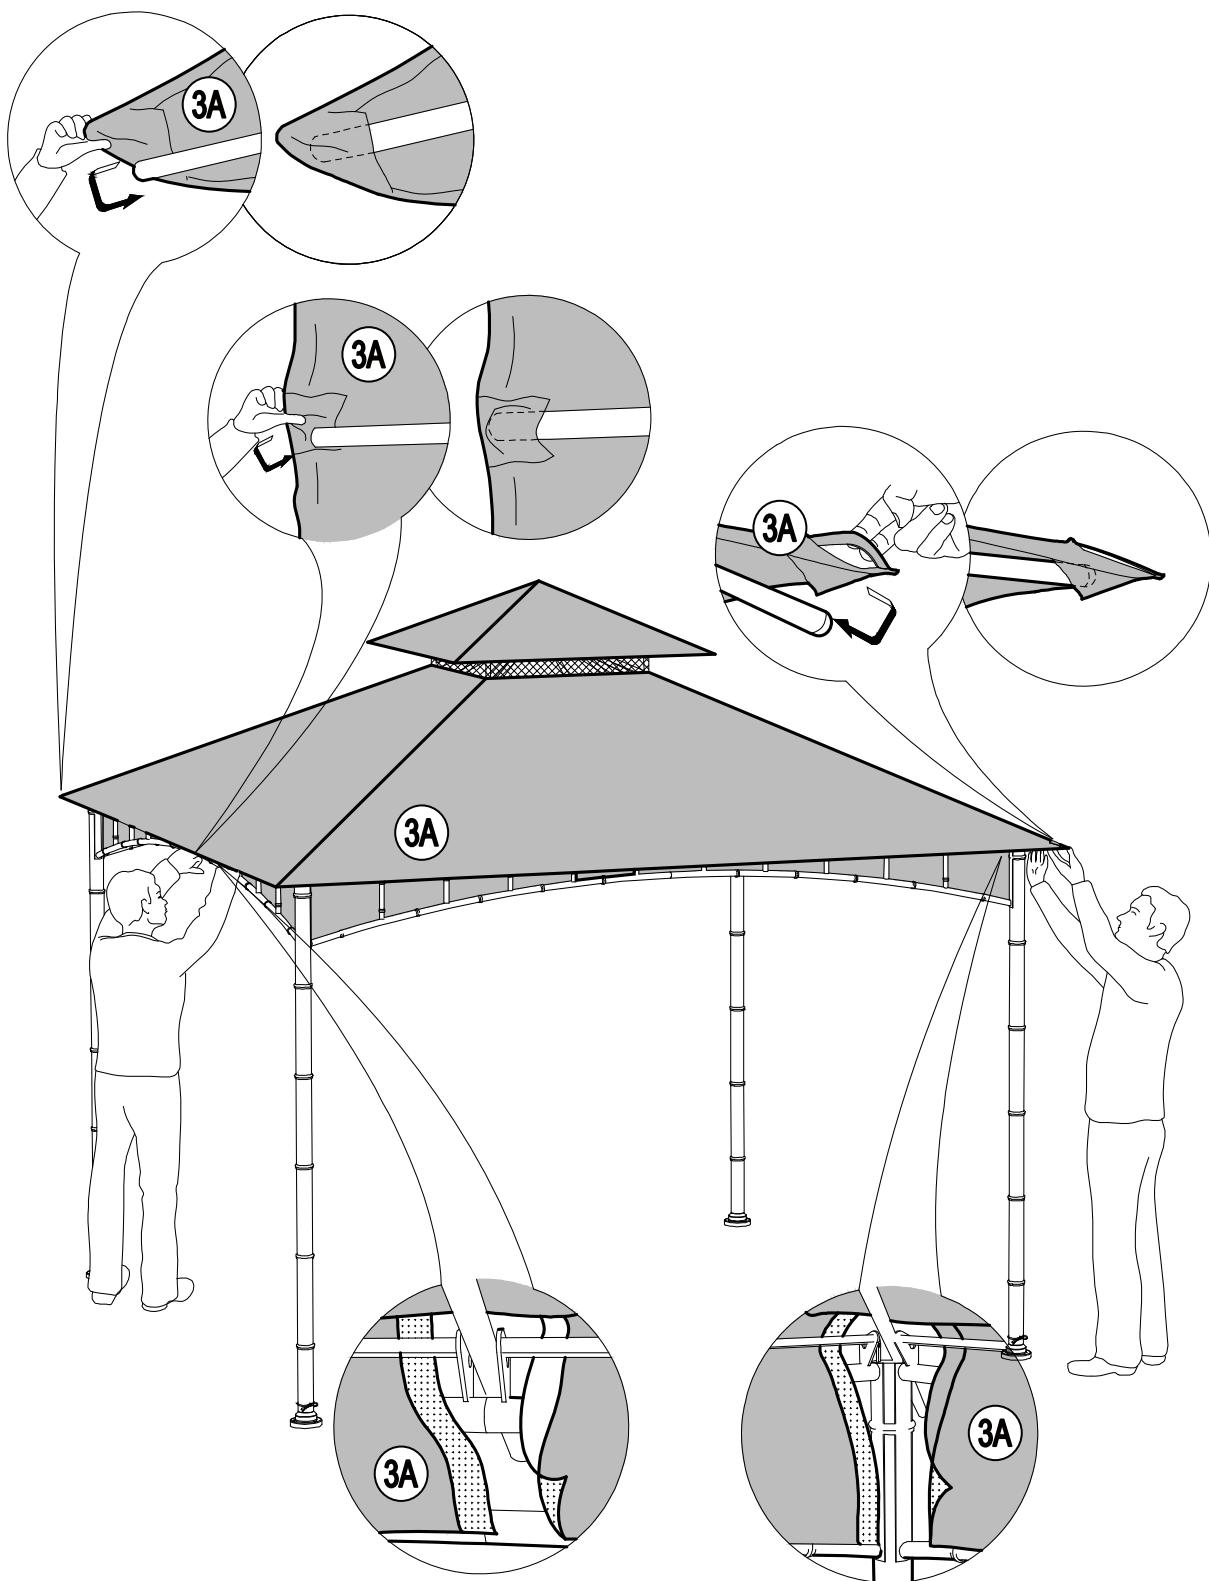

11

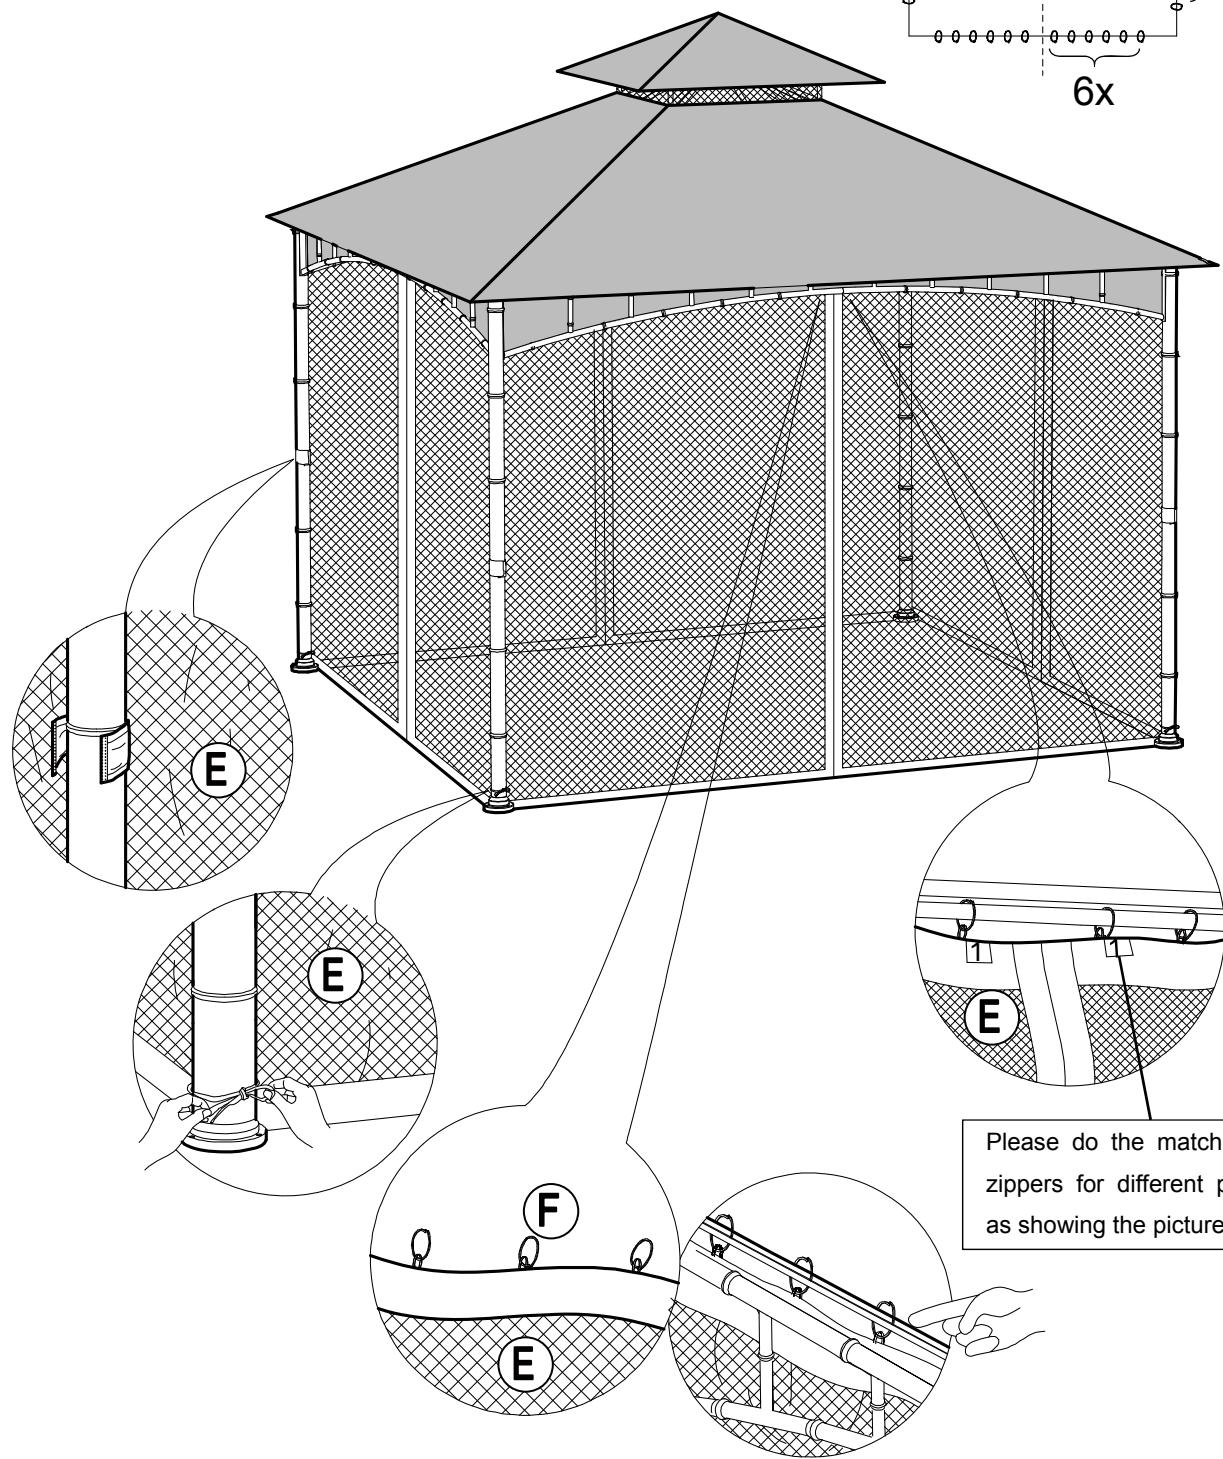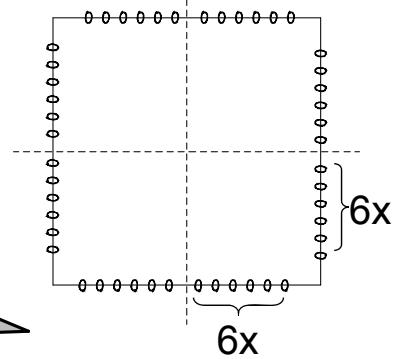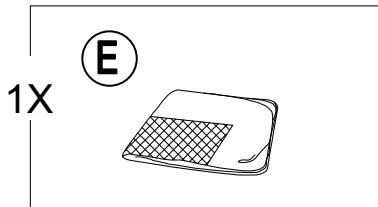

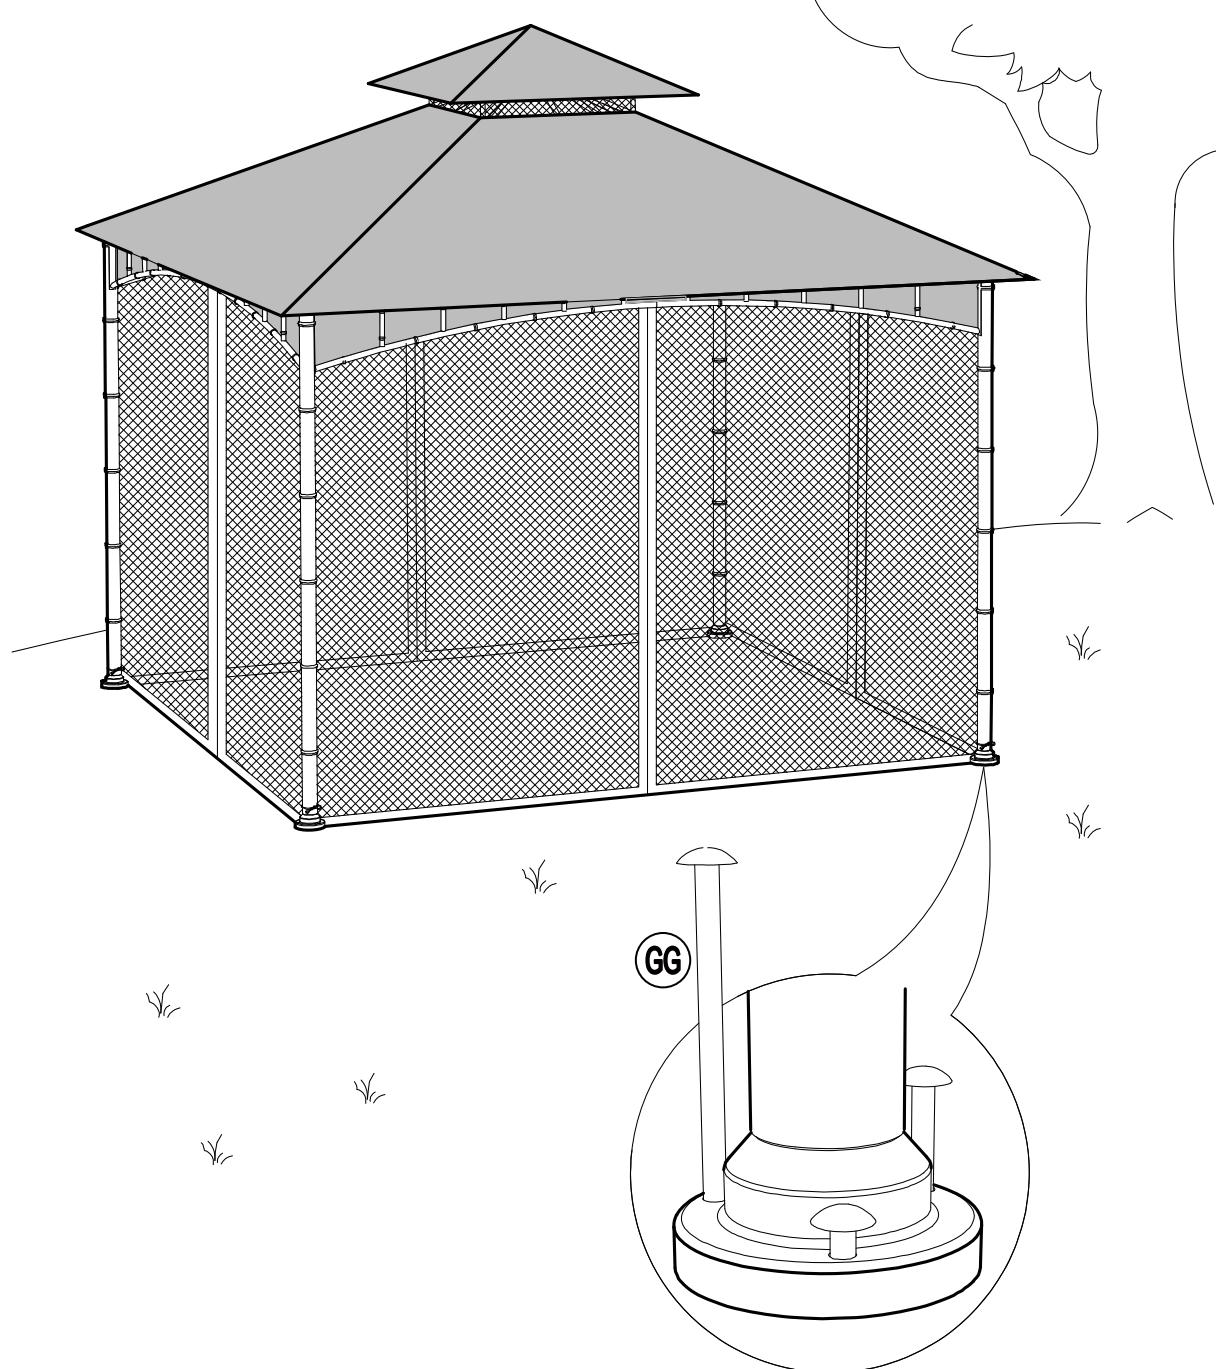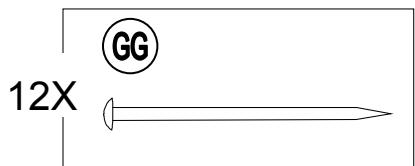12

**Caution!**

- Check all screws and nuts periodically for tightness; fasten them as required.
- Disassemble the gazebo in reverse order of the steps used to assemble.
- Always disassemble the gazebo completely. A partially-disassembled gazebo is not stable enough to resist wind and bad weather, and therefore can be damaged and/or cause damage.

- Clean the gazebo gently with water using a sponge.
- Do not use abrasive materials, wire brushes, chemicals, cleansers or bleach.
- Do not use a pressure washer.
- Rinse well. Allow it to air dry.
- Steel components of garden accessories and furniture are treated with rust-inhibiting paint. However, due to the nature of steel, surface oxidation (rusting) will occur if this protective coating is scratched. This is a natural process. To minimize this condition, it is recommended to carefully assemble/handle the product, in order to prevent the paint from being scratched. Surface rust can be removed easily using a very light application of common cooking oil. If surface oxidation (rusting) occurs and no measures are taken to correct it, the oxidation may start dripping onto the assembly surface, which may cause stains that may be difficult to remove.

Dimensions (L x W x H)

10.13' x 10.13' x 9.97'

3.09 x 3.09 x 3.04 m

Product weight

142 lb

64 kg

This For Living™ product carries a one (1) year warranty against defects in workmanship and materials. Trileaf Distribution agrees to replace the defective product free of charge within the stated warranty period, when returned by the original purchaser with proof of purchase. This product is not guaranteed against wear or breakage due to misuse and/or abuse.