


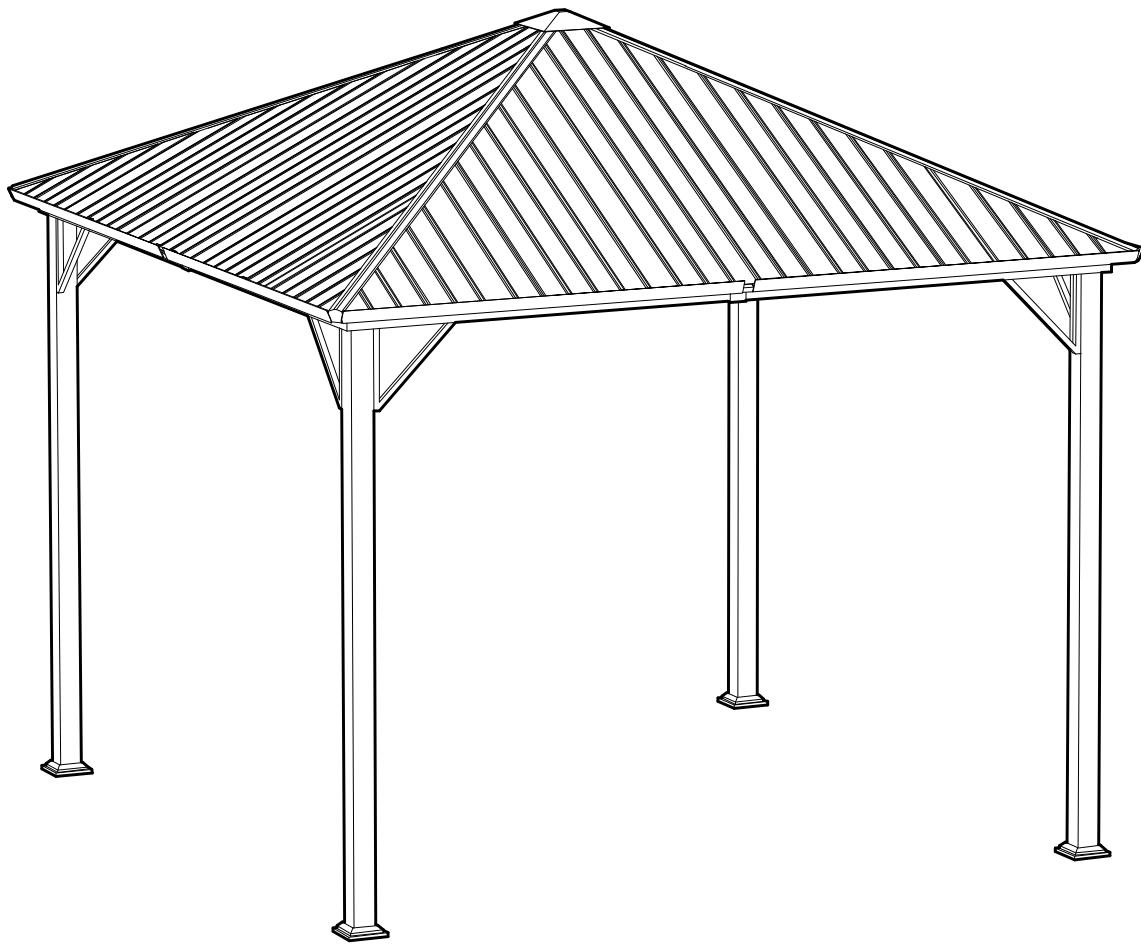

Rockport Gazebo

Product No. 088-2026-0

Model No. L-GZ919PST-1



Assembly Instructions

Toll free: 1-877-483-6759

IMPORTANT: Please read this manual carefully before beginning assembly of this product. Keep this manual for future reference.

Production Number: 20191812

Made in China

Imported for Trileaf Distribution Trifeuil Toronto, Canada M4S 2B8

Important Safety Instructions	3
Parts List	4-5
Assembly	6-22
Cleaning and Maintenance	23
Technical Data	23
Warranty	24



 
 
 
 
 
Warning! To reduce the risk of serious injury, read the following safety instructions before assembling and using the gazebo.





Caution! Always keep children under close supervision while they are using or around this product. Never leave children unattended.

- This product is intended for domestic outdoor use only.
- The product should be placed on a flat horizontal ground.
- Ensure there is enough clearance around the product. Before assembling the product, make sure to leave a distance of not less than 1.8 m (6 ft) away from any structures or obstructions, such as fences, garages, houses, overhanging branches, laundry lines, or electrical wires.
- The gazebo must be anchored with stakes to the ground for added safety. It cannot be permanently attached to a concrete floor or platform. Do not assemble the gazebo on sandy, muddy or loose soil, as stakes do not have enough anchorage in these types of soil.
- In case you set up more than one gazebo, keep a minimum distance of 3 m (10 ft) between the gazebos.
- Any assembly or maintenance of the product must be carried out by adults only.
- Arrange necessary manpower when assembling or moving the product.
- Some parts may contain sharp edges. Wear protective gloves if necessary.
- Keep children and pets away while setting up the gazebo.
- Check all nuts and bolts periodically for tightness. When required, tighten them again.
- Repairing and replacing parts should be done by a qualified technician.
- This gazebo is intended for decorative and sunshade purposes only, and is not designed to withstand harsh weather, including high winds, rain, and snow.
- Always remove the canopy in heavy wind conditions, otherwise it might tip over and cause damage to the product or injuries to passersby.
- Always ensure that the roof canvas is tensioned, so as to avoid water accumulation on the roof.
- Remove accumulated water on the roof immediately, or disassemble the gazebo in order to avoid damages.
- If the product will not be used for a longer period (e.g. winter), it should be stored in a clean, dry environment.
- Do not light any fires inside or near the product!
- Stay calm if fire breaks out. Search for the nearest exit. Do not return to the gazebo before firefighters allow you to do so.
- Do not hang any weights on the roof frame.
- Do not climb onto the roof of the gazebo. Falling off the gazebo can result in serious injury.
- Retain the original packaging to store the gazebo.

IMPORTANT: RETAIN FOR FUTURE REFERENCE AND READ CAREFULLY

Parts List

A	P11183A01193		N2	P13078A01108	
	Post - 4			Lower Tube - 4	
B	P11528A01108		O	P12032A01108	
	Base Cover - 4			Small Roof Cover - 1	
C	P11631A01108		P	P12601E01108	
	Base - 4			Hook - 1	
D	P11852A01108		Q1	P11999C05108	
	Support Bar - 8			Roof Panel - 4	
E1	P10537A01108		Q2	P11901B05108	
	Long Gutter - 4			Middle Roof Panel 1 - 4	
E2	P10538A01108		Q3	P11902B05108	
	Short Gutter - 4			Middle Roof Panel 2 - 4	
F	P11853A01108		Q4	P11903B05108	
	Sloping Beam Connector - 4			Small Roof Panel 1 - 4	
H	P10819A01108		Q5	P11904B05108	
	Middle Beam Connector - 4			Small Roof Panel 2 - 4	
I	P12140A01108		R	P12033A01108	
	Netting Tube - 8			Sloping Beam Panel - 4	
J	P10164A01108		S1	P10620A01108	
	Roof Connector - 1			Press Panel - 4	
K1	P10367B05108		S2	P10621A01108	
	Sloping Beam - 4			Press Panel - 4	
K2	P10446A01108		AA	H02020C11	
	Middle Beam - 4			Bolt M6x20 - 80+4	
L	P13073A01108		BB	H19001C11	
	Short Small Beam - 8			Flat washer - 248+13	
M	P13075A01108		CC	H13001C11	
	Long Small Beam - 8			Spring Washer - 56+3	
N1	P13077A01108		DD	H02060C11	
	Lower Tube - 4			Bolt M6x60 - 8+1	

    EE	H14001C11		
	Bolt M6 - 8+1		
FF	H02015C11		
	Bolt M6x15 - 112+6		
HH	H02035C11		
	Bolt M6x35 - 32+2		
II	H02040C11		
	Bolt M6x40 - 8+1		
KK	P12401A01001		
	Stake $\Phi 8 \times 180$ - 8		
Z1	H00001C12		
	Wrench - 2		

For use with For Living® Rockport Walls (088-2061-4) and Rockport Netting (088-2062-2) both sold separately.

**Caution!**

 
- Proper placement of your gazebo is essential.
Do not place the product underneath electrical lines.
- Keep children away during assembly.
This product contains small parts which can be swallowed by children.
- Keep fingers away from the places where they can be pinched or trapped.
- Do not attempt to assemble the gazebo if any parts are missing.

**Let us help you!****DO NOT RETURN YOUR PRODUCT TO THE STORE. CALL US FIRST!****1-877-483-6759**


If you have questions regarding your product, require warranty assistance, or have damaged or missing parts, please call our customer service toll-free helpline. Contact us for assistance, we're here to help.

IMPORTANT: Please read and understand this manual before any assembly. Before beginning assembly of product, make sure all parts are present. Compare parts with packaging contents list. If any part is missing, or if you have any questions, contact the service centre at 1-877-483-6759 (toll free).

Place all parts from the box in a cleared area and position them on the floor in front of you. Remove all packing materials and place them back into the box. Do not dispose of the packing materials until assembly is complete. Read each step carefully before beginning any assembly and make sure you understand each step. If you are missing a part, please call our toll-free number for assistance 1-877-483-6759.

Needed for assembly:

 
Hammer



Screwdriver









Ladder



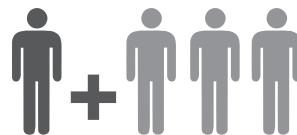


4 people

   


1

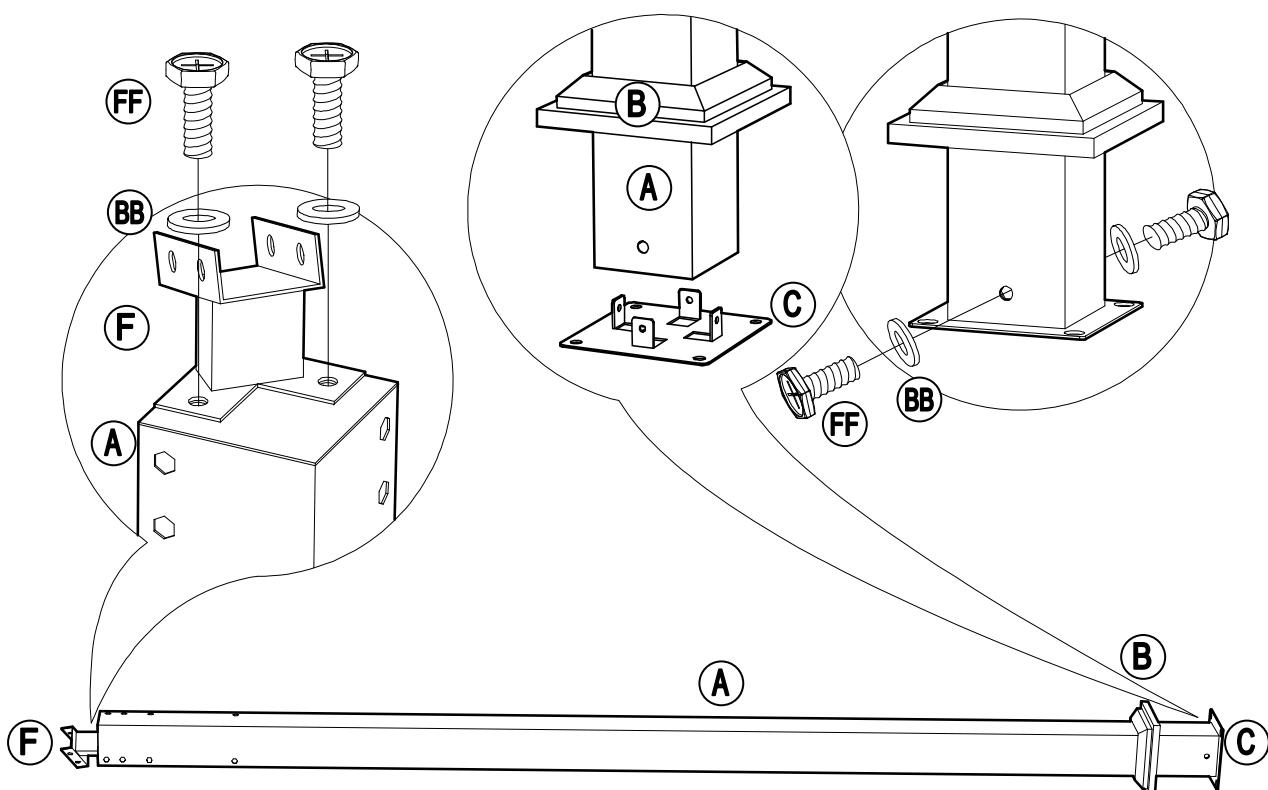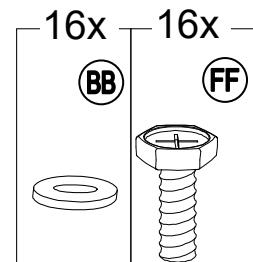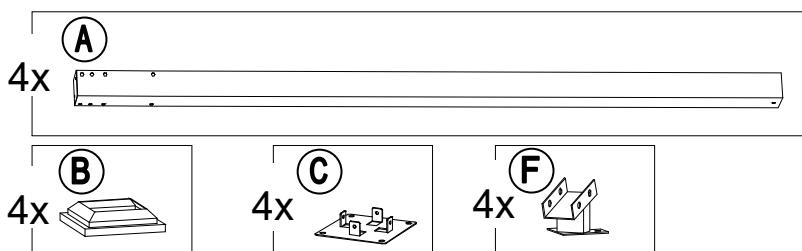



2

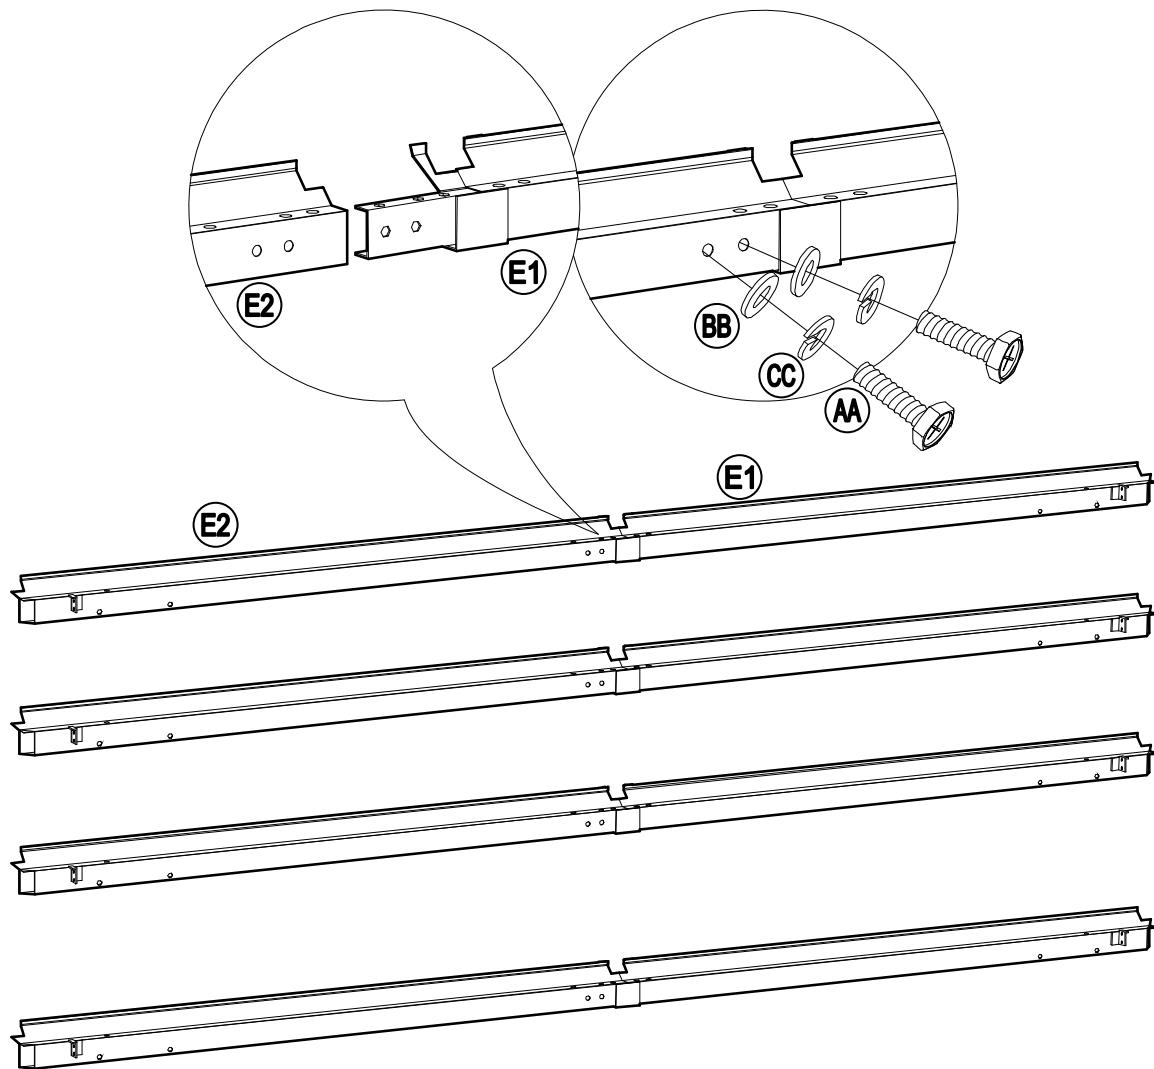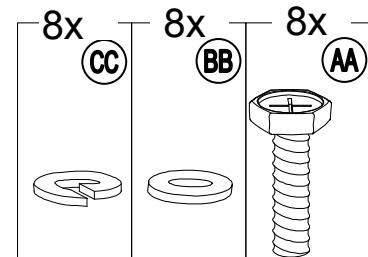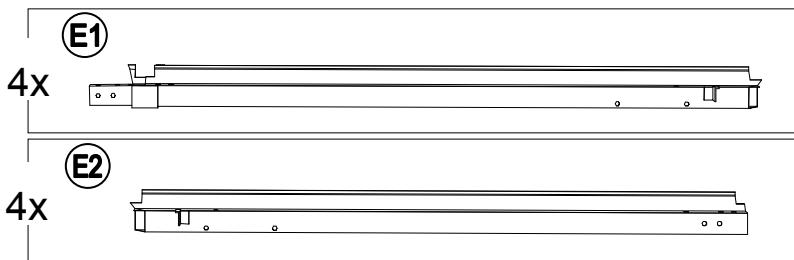




3

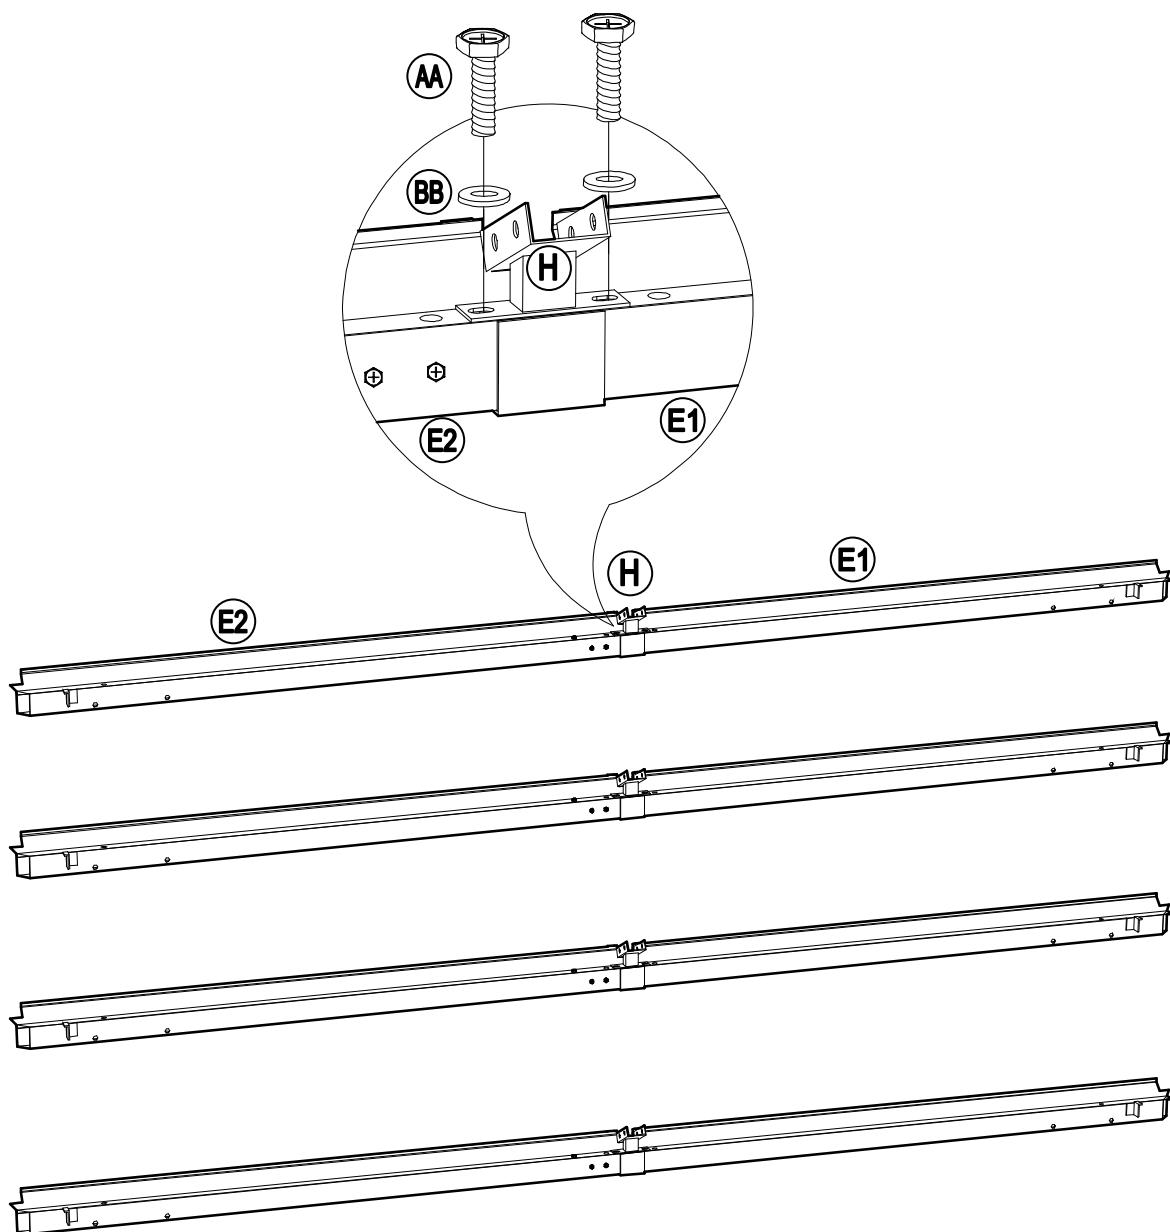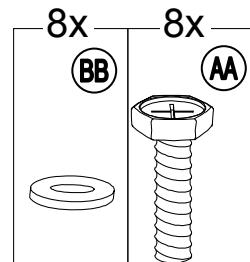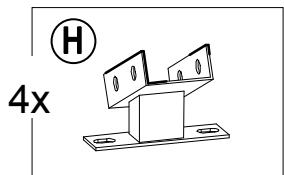




4

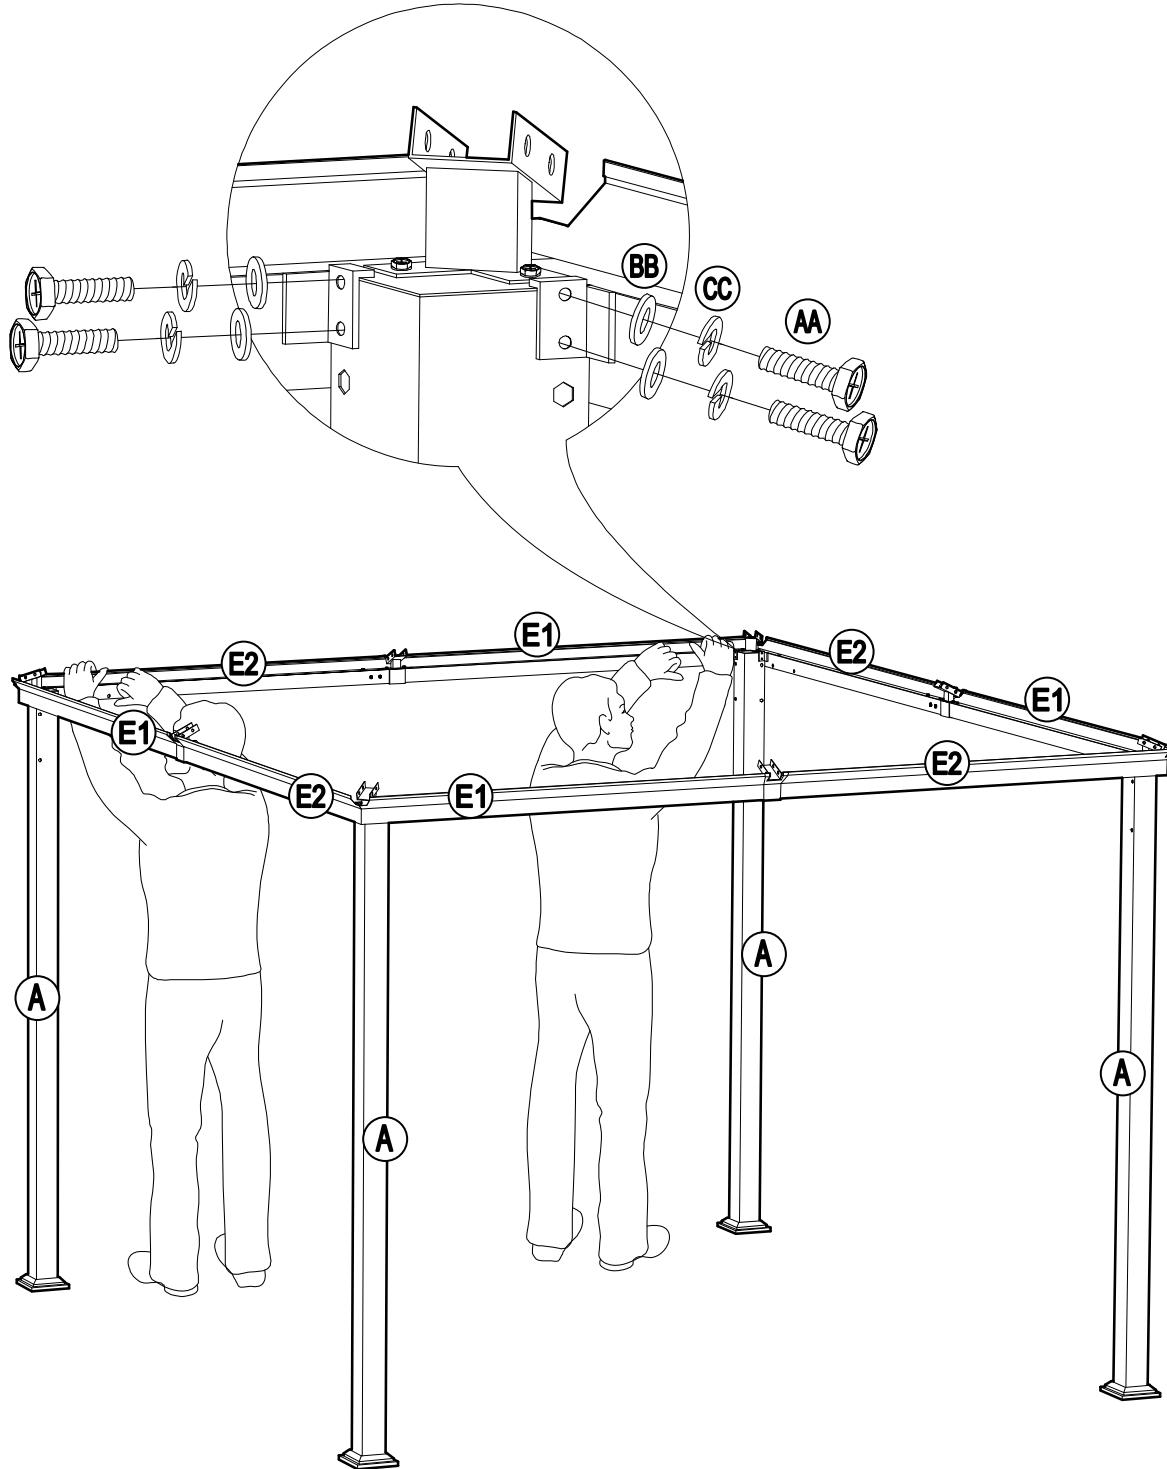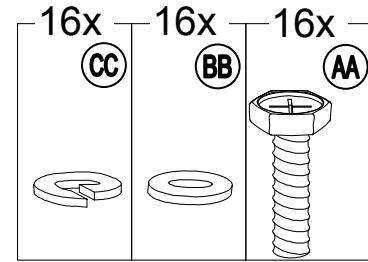



5

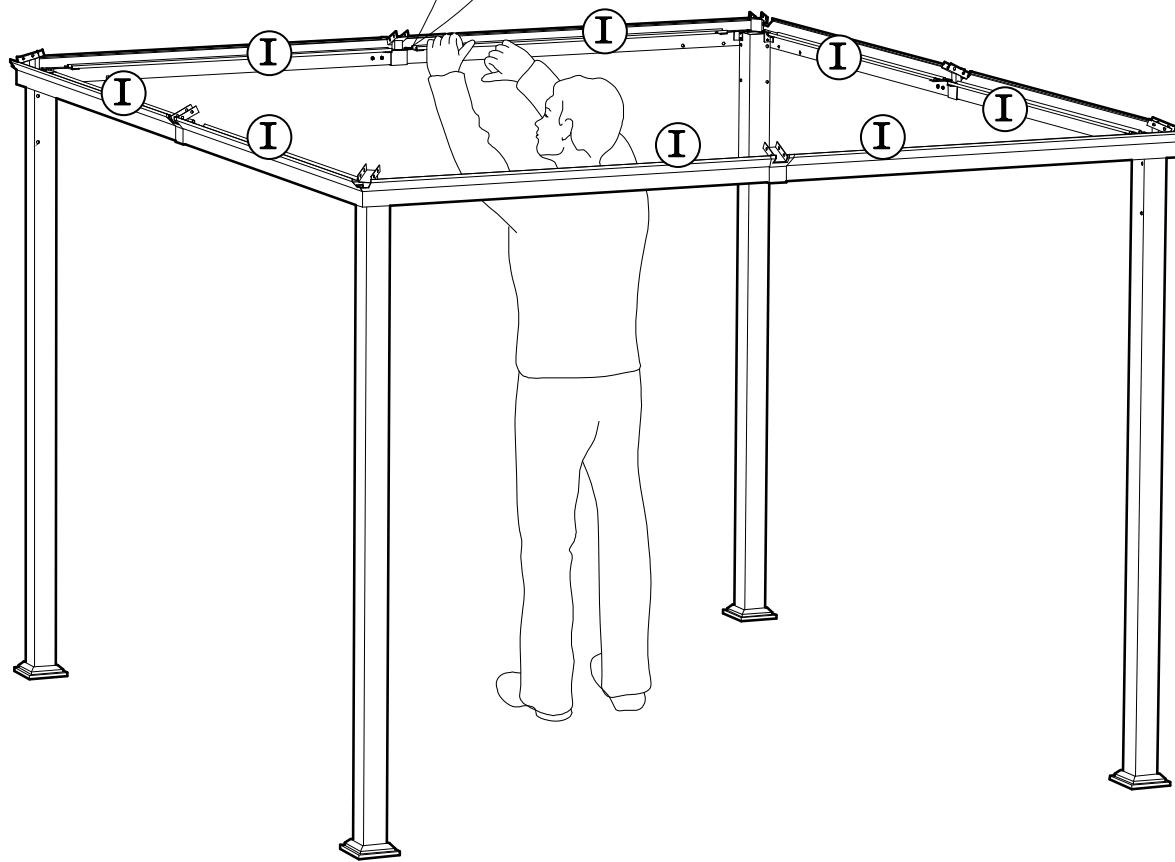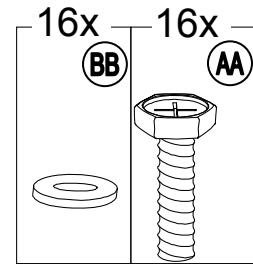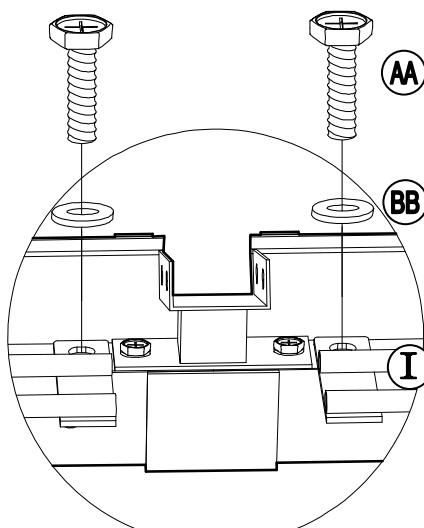8x 



6

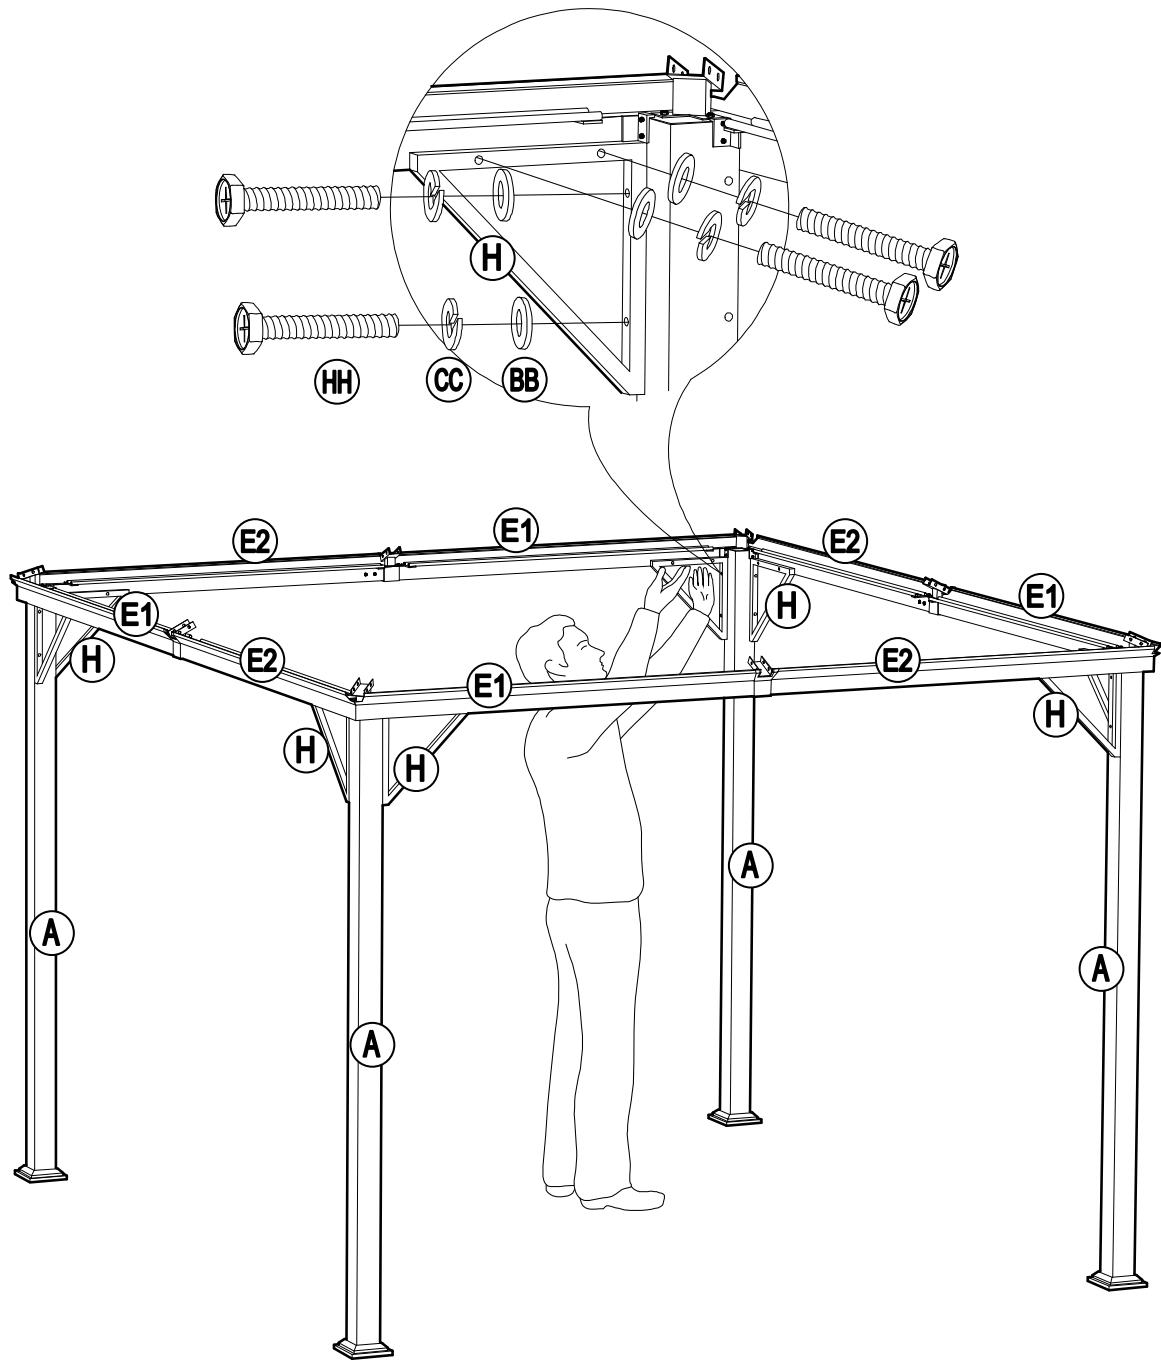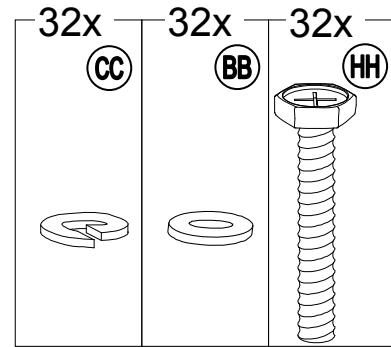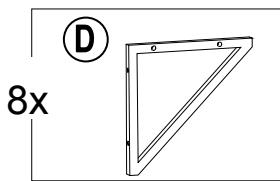




7

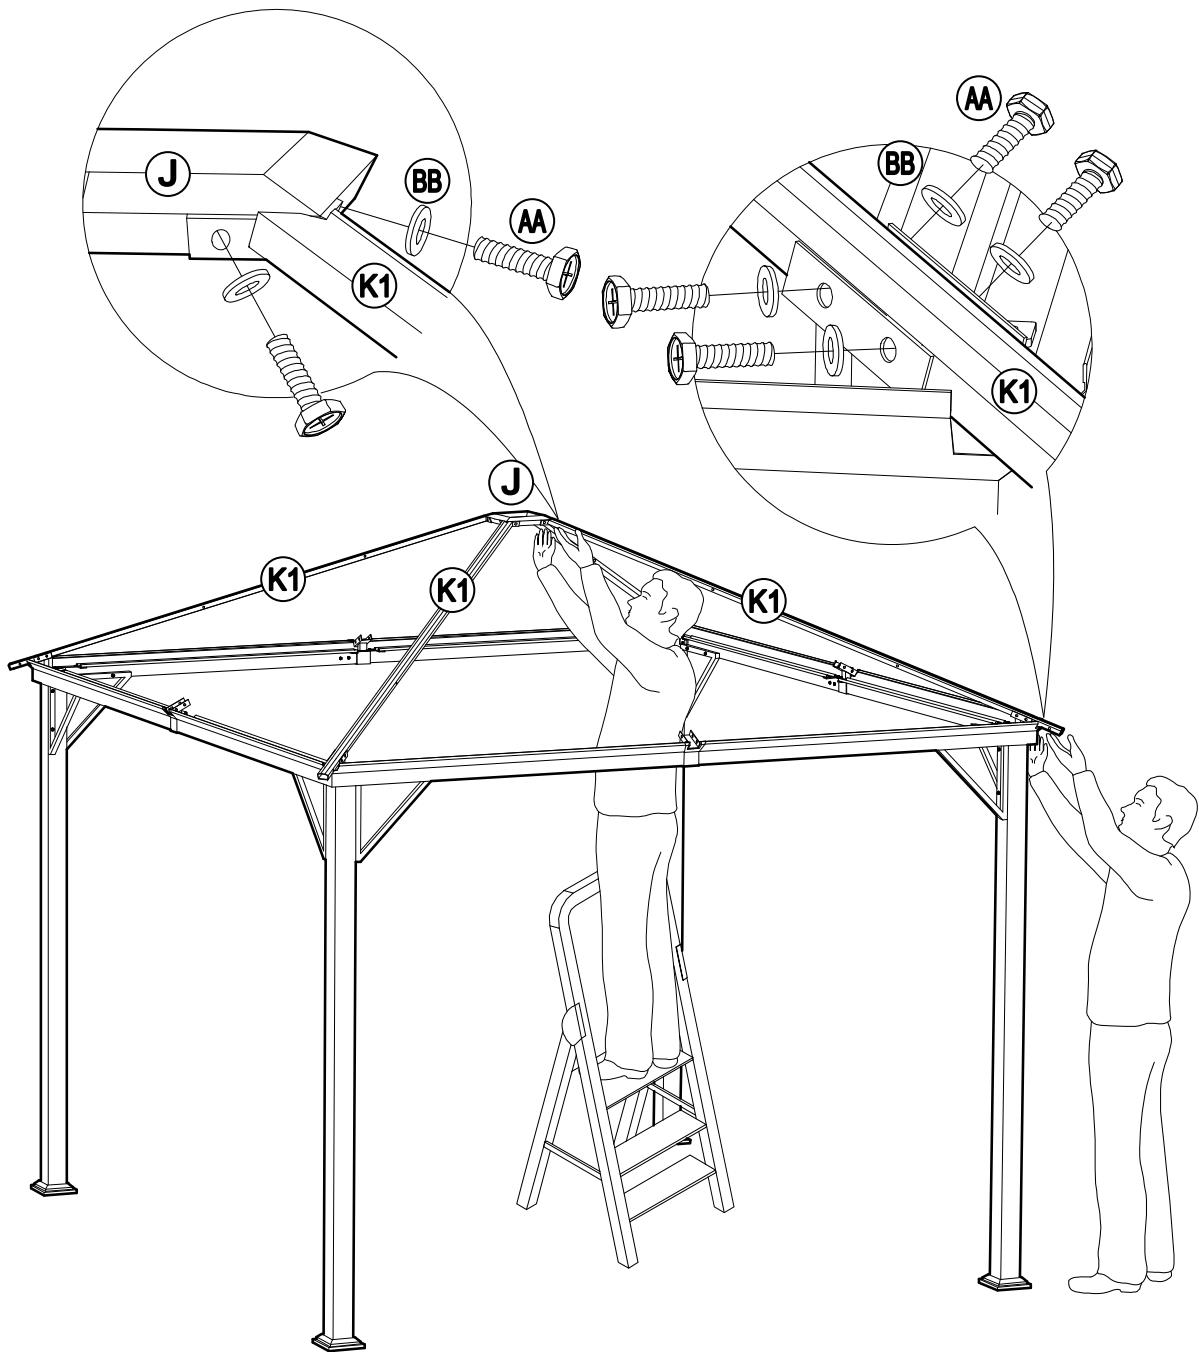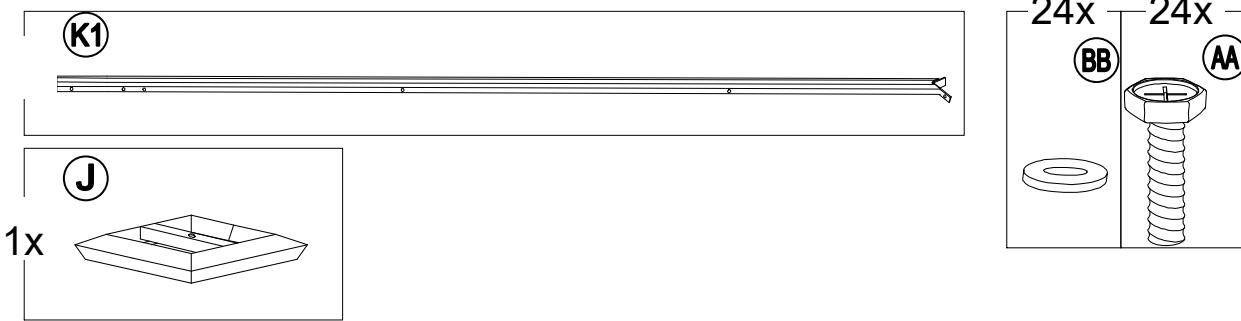




8

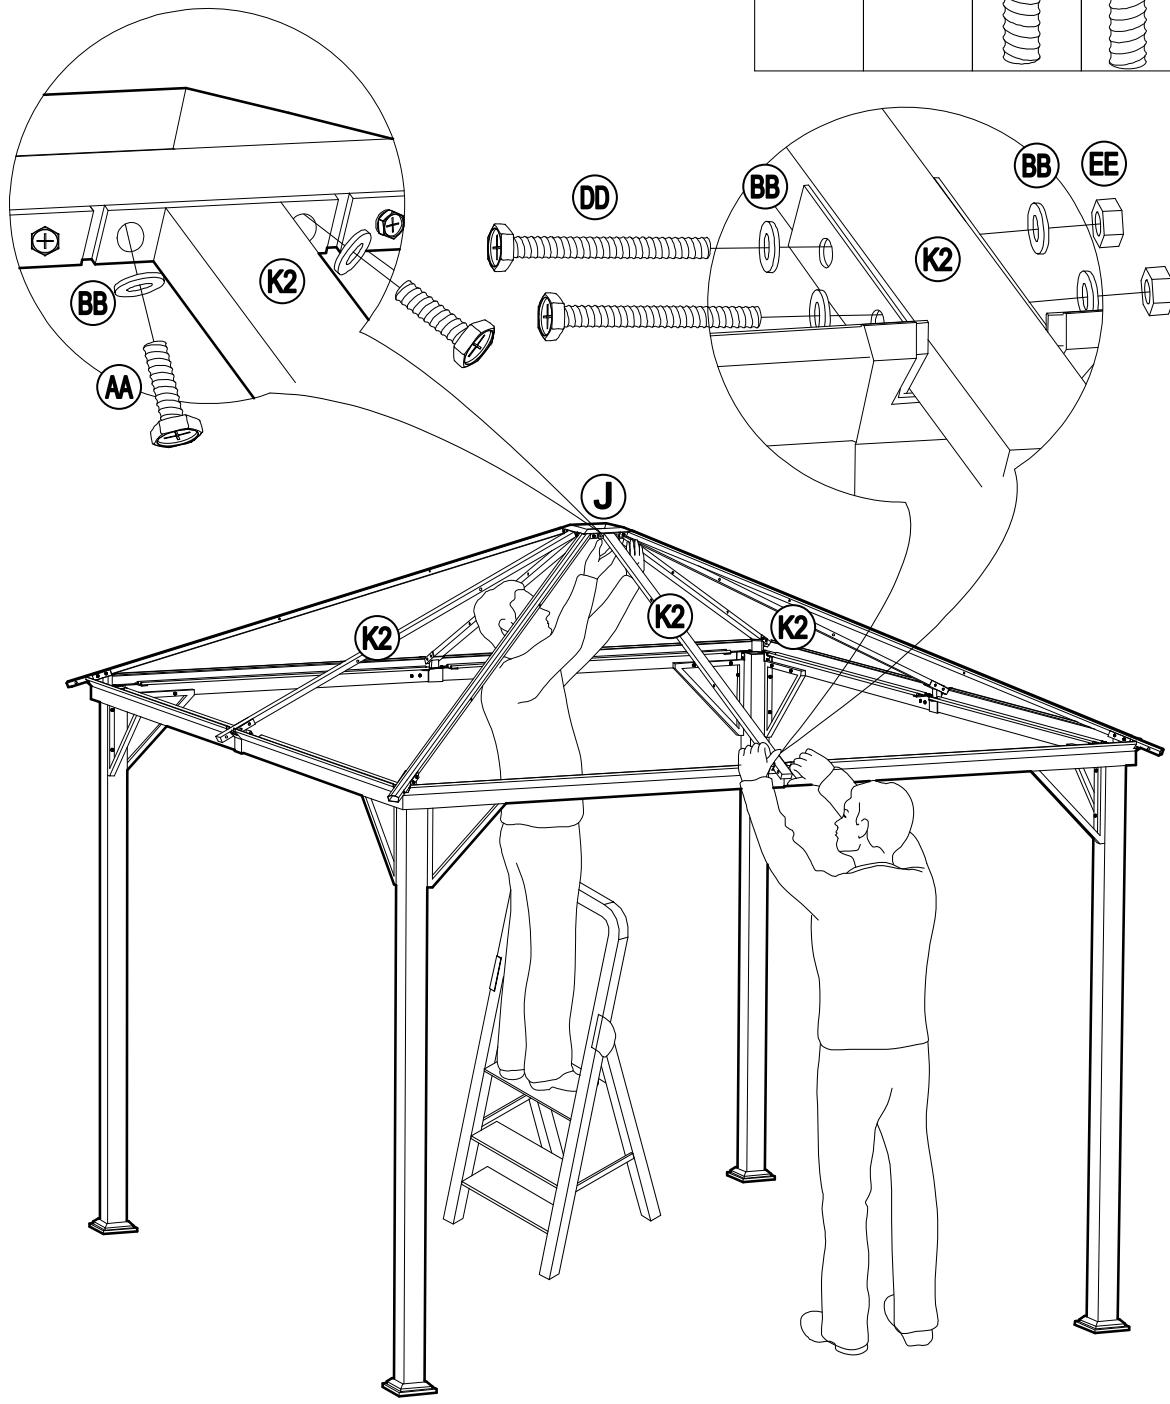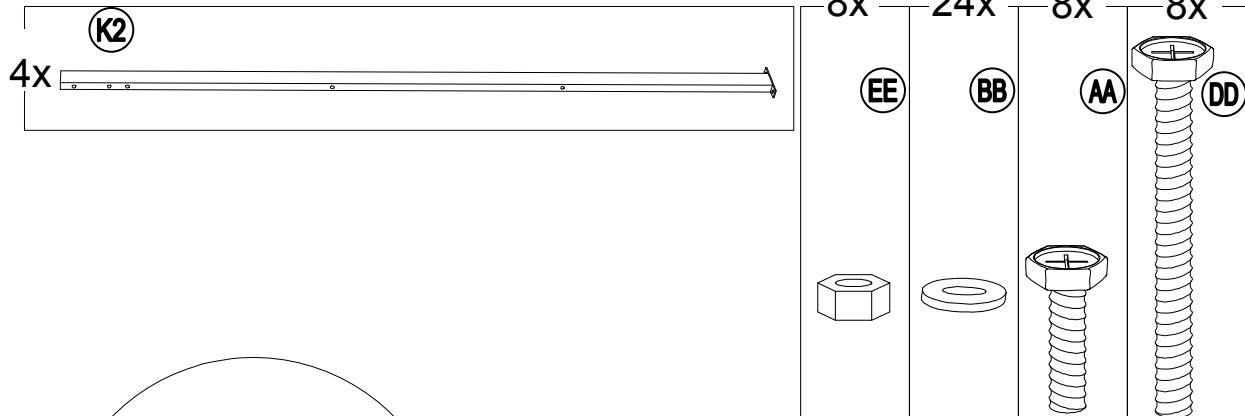





9

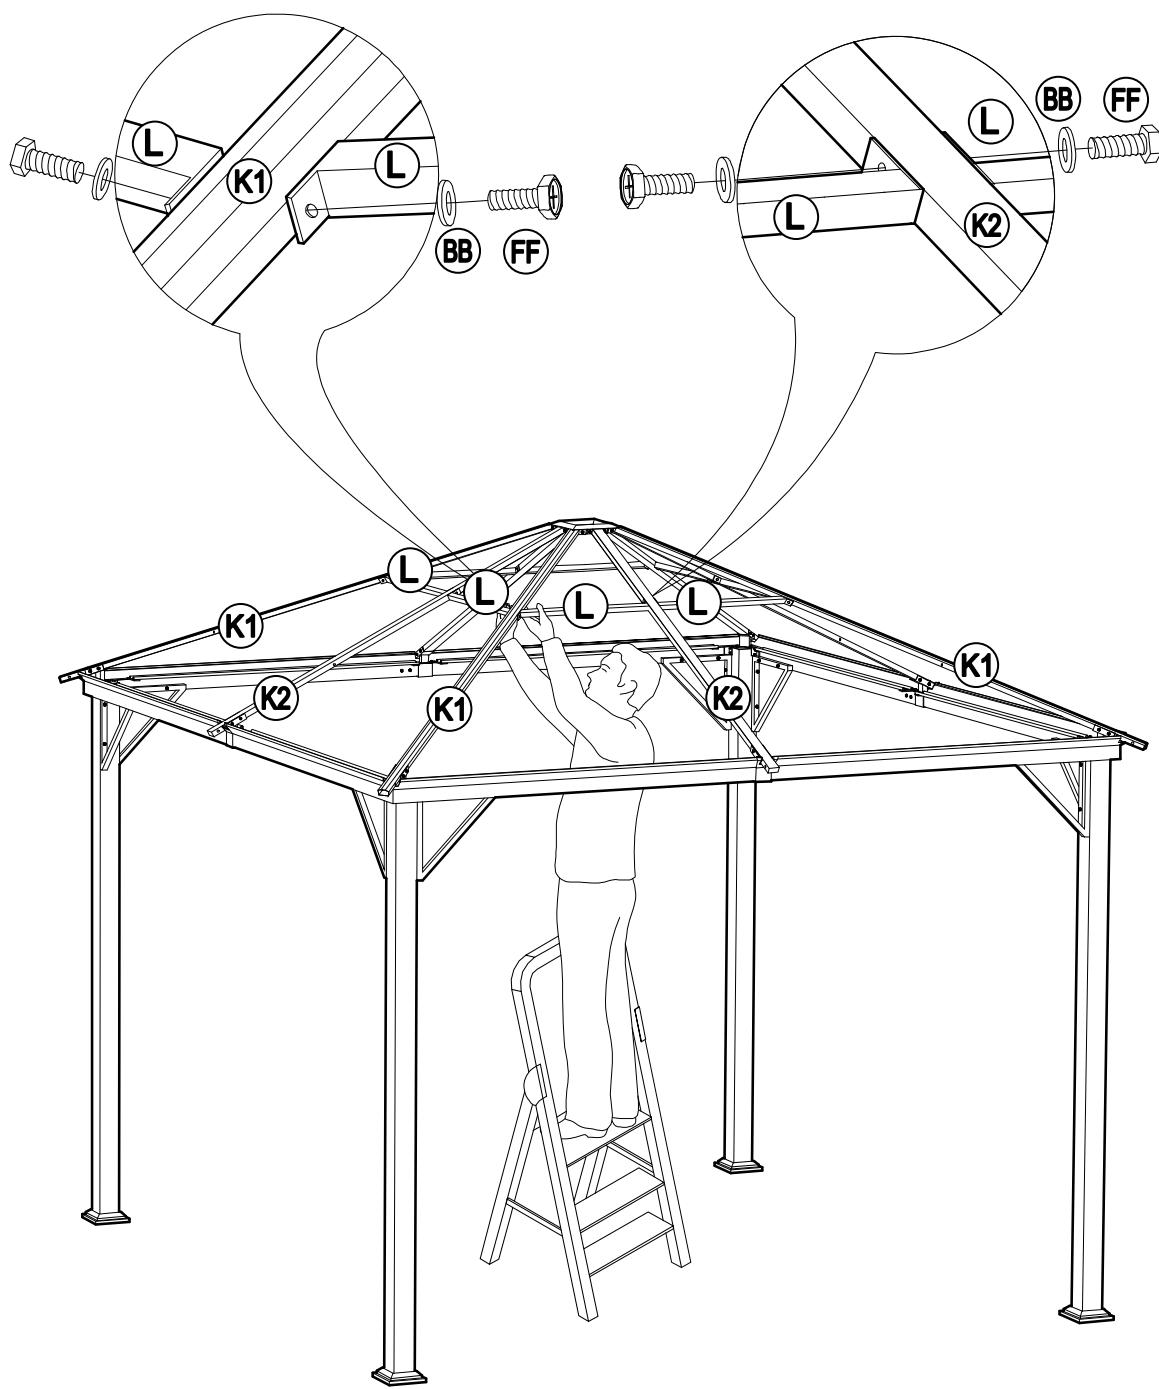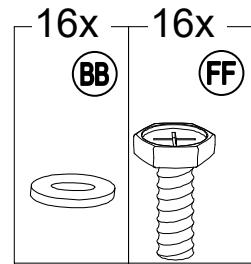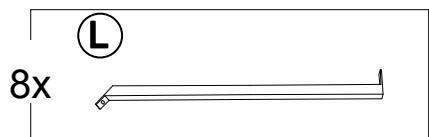




10







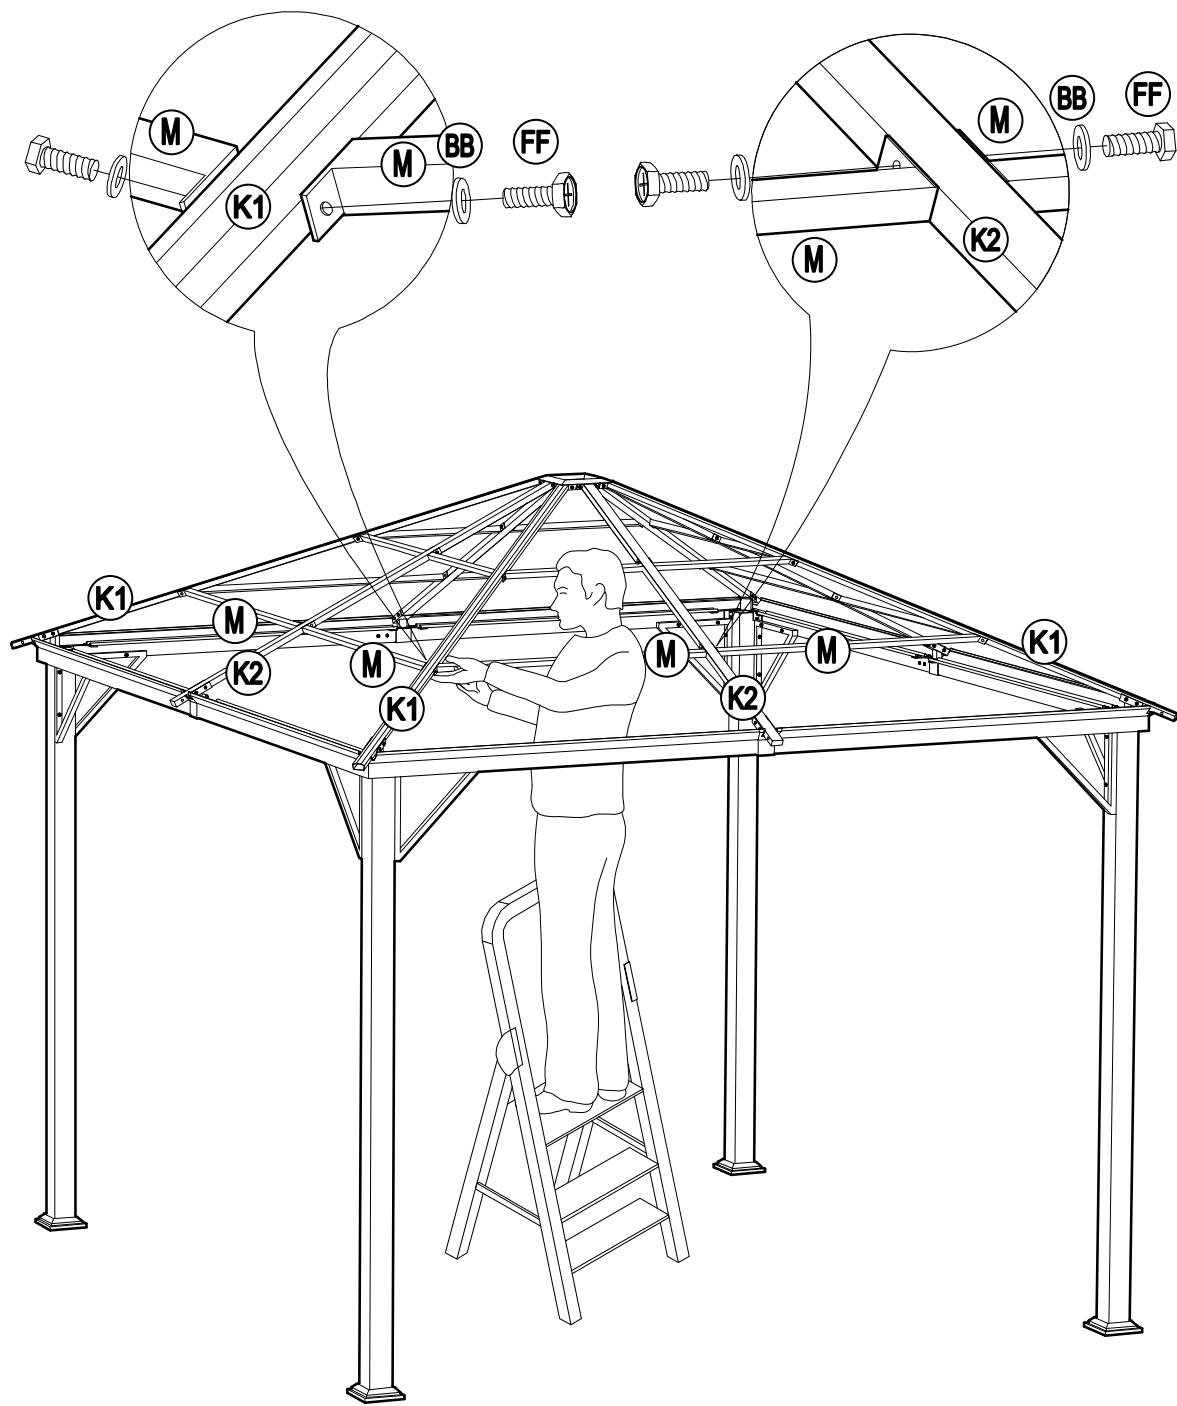
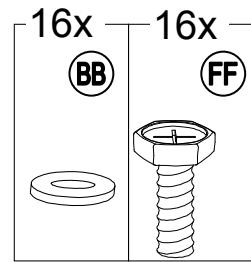
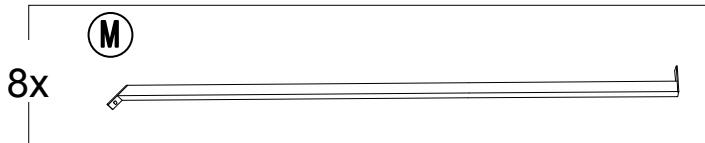


11

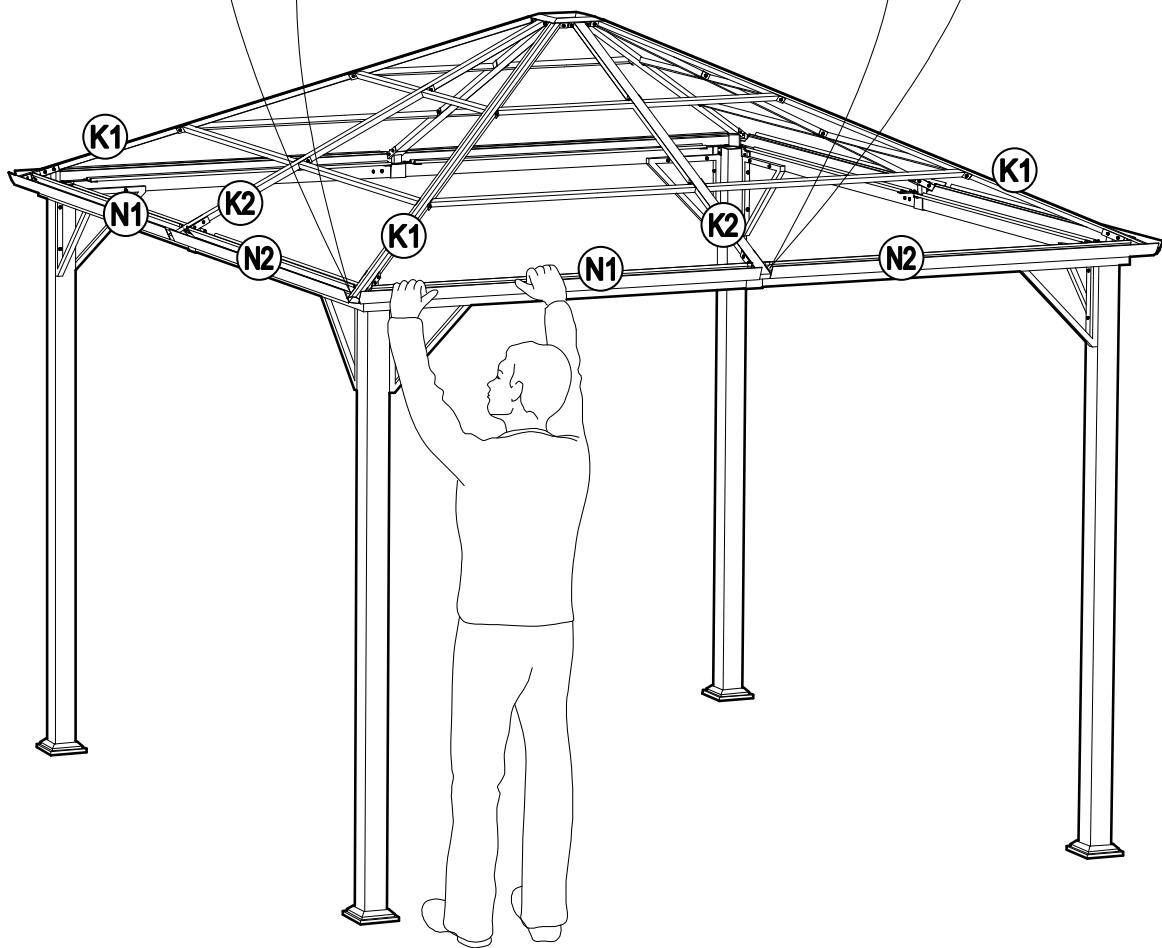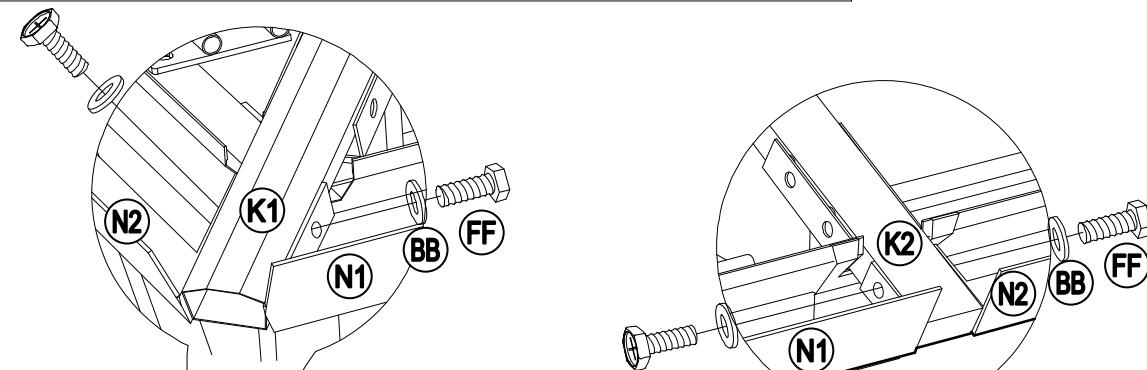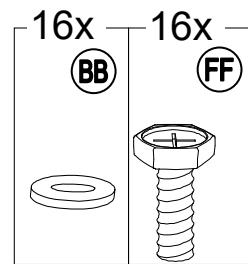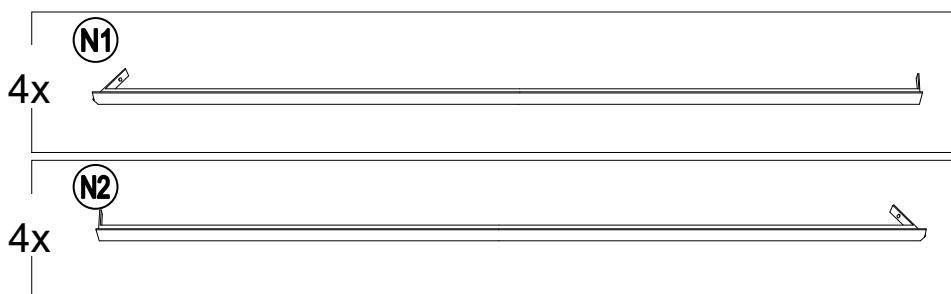

12

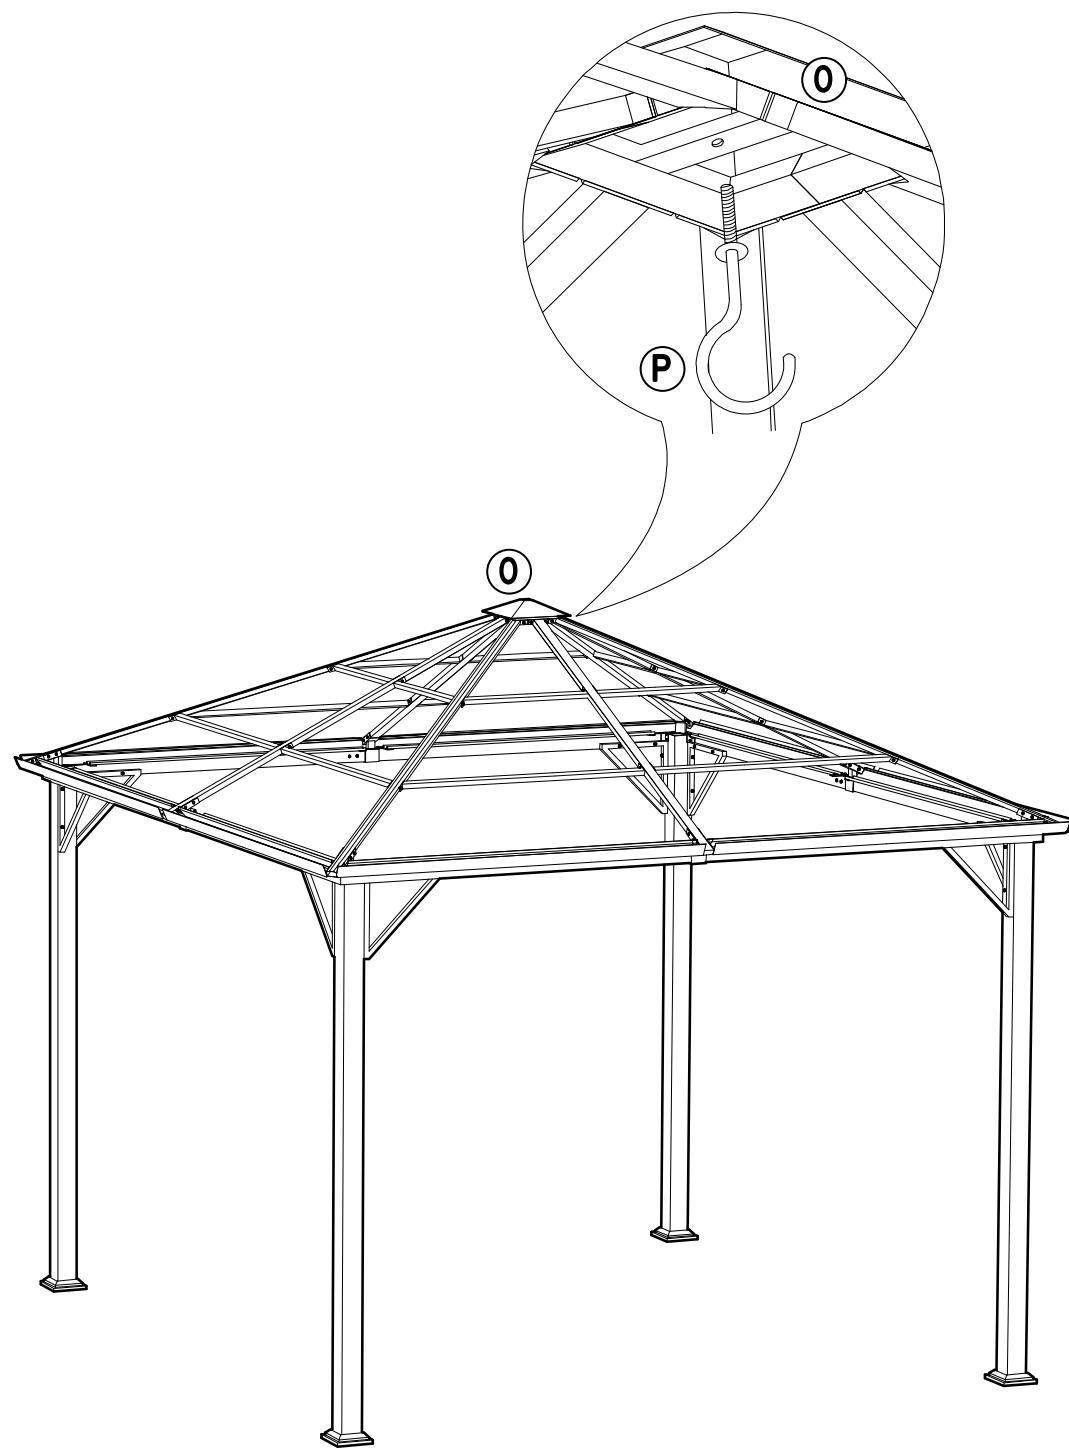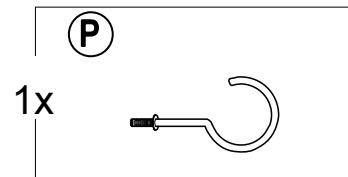
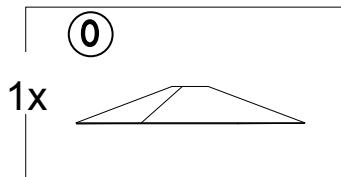


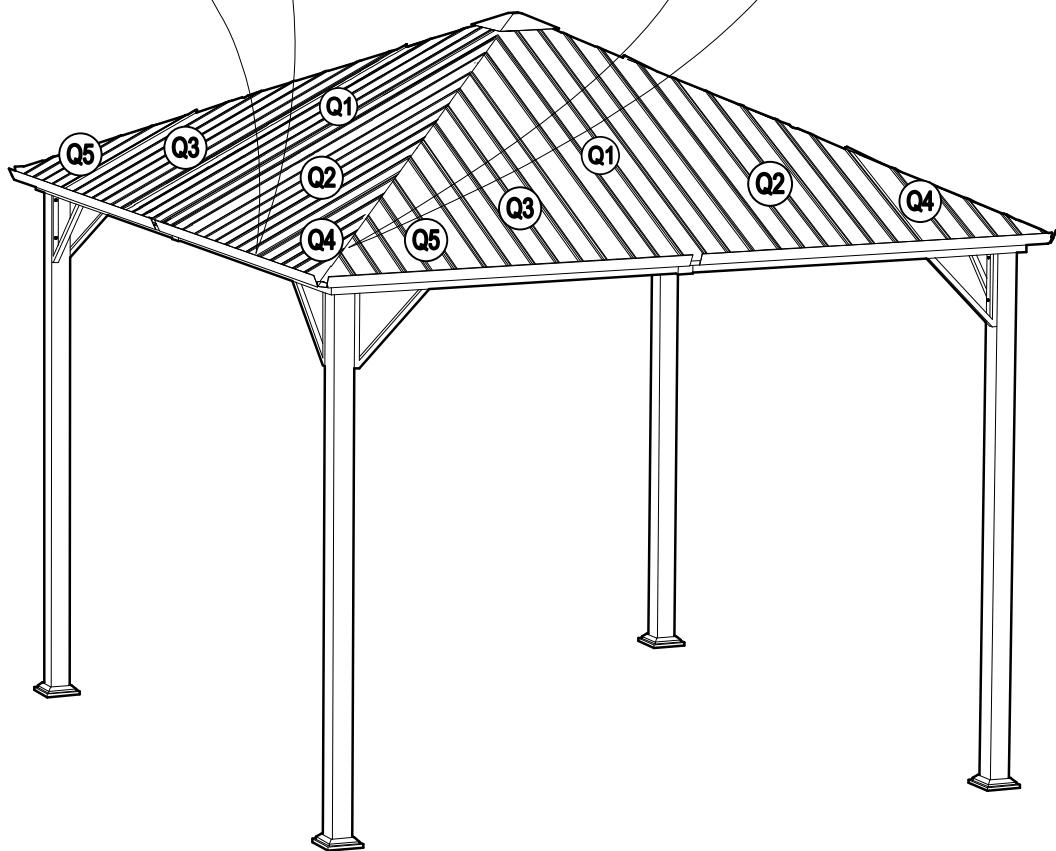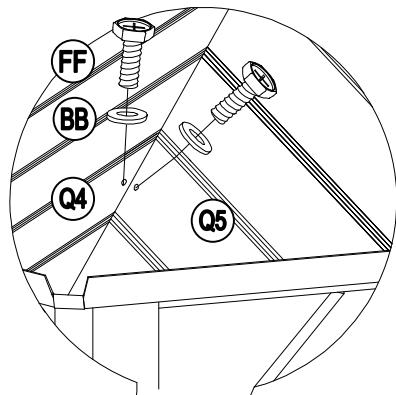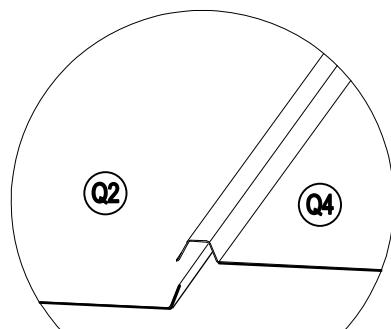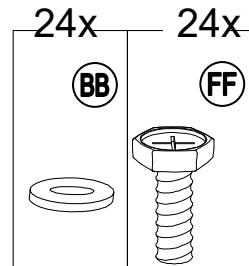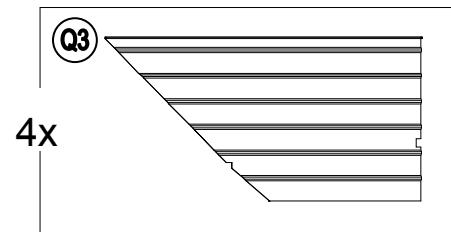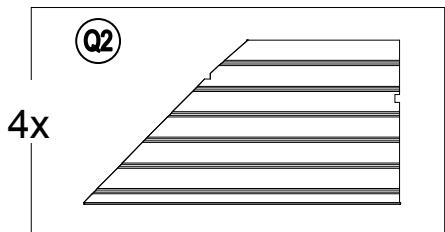
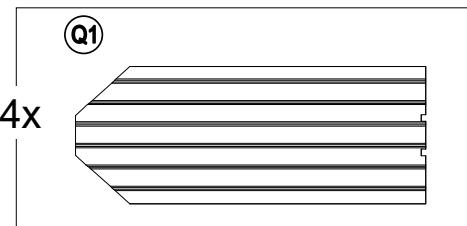
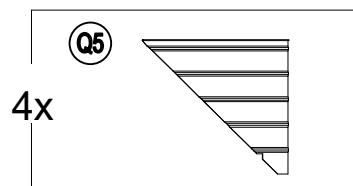
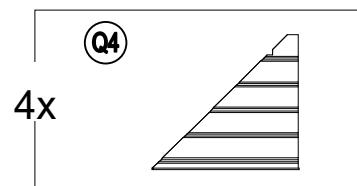


14



4x

R

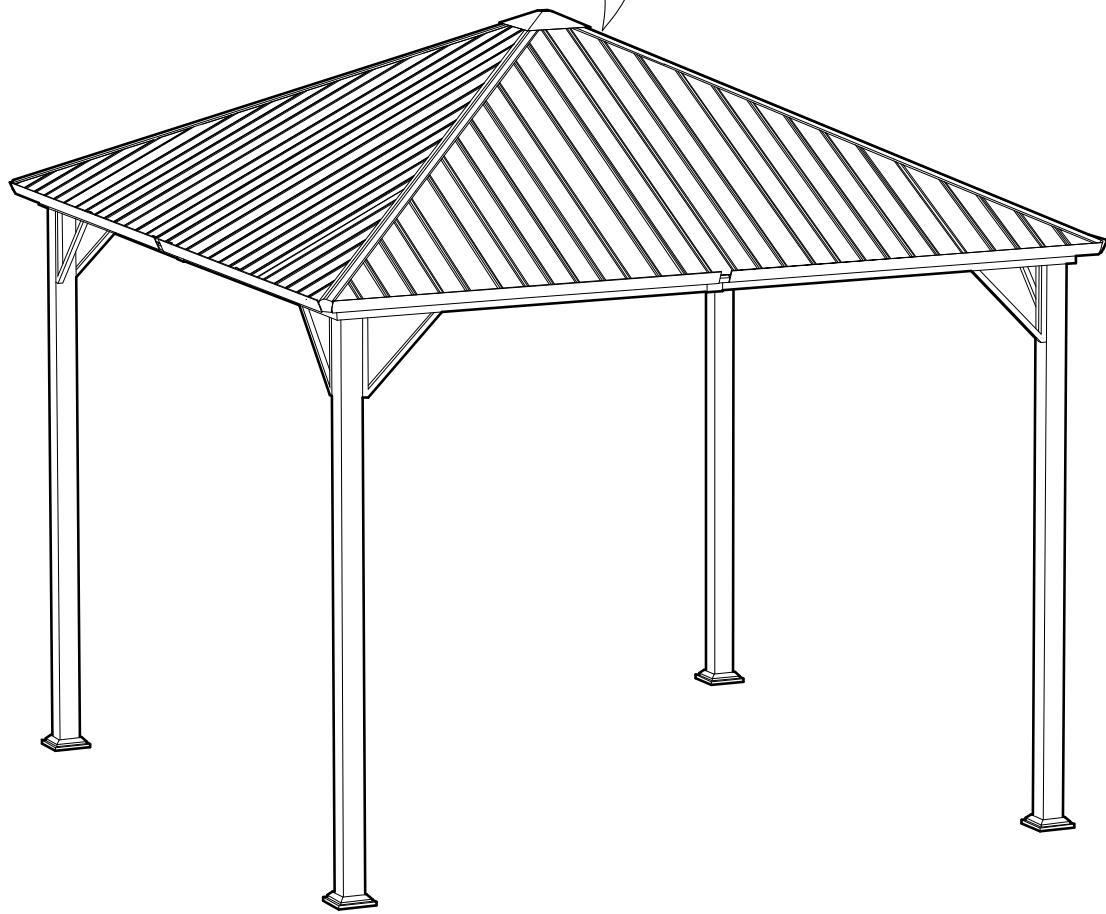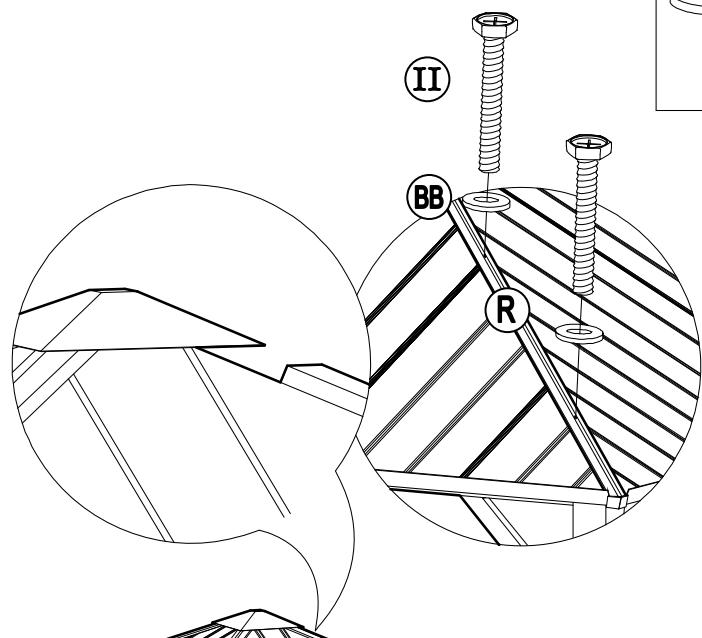

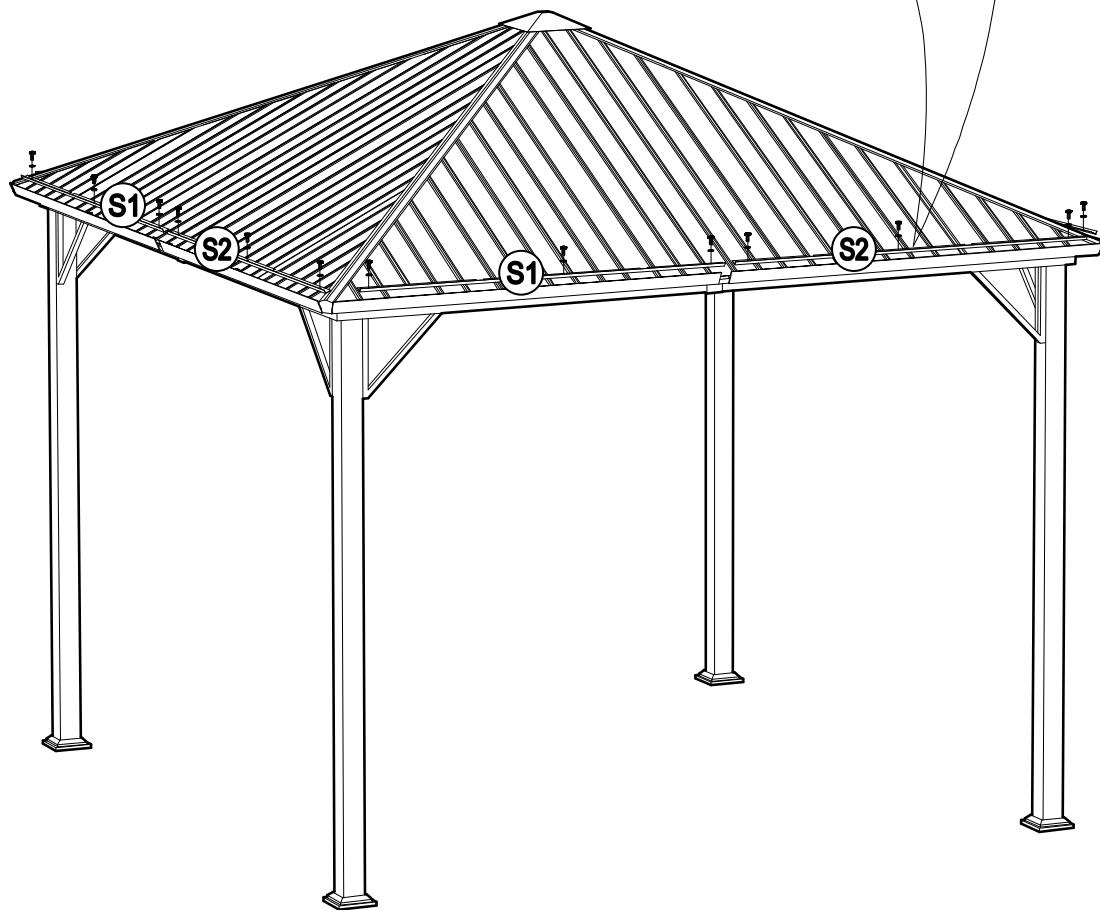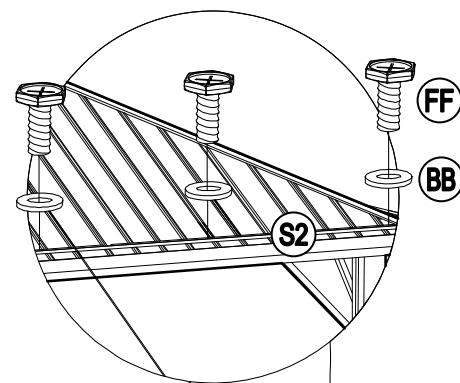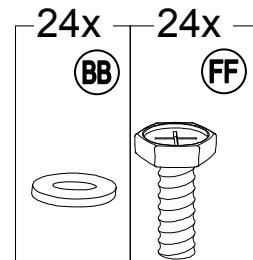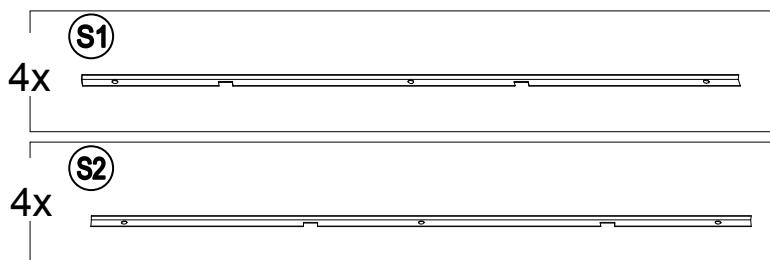15

16

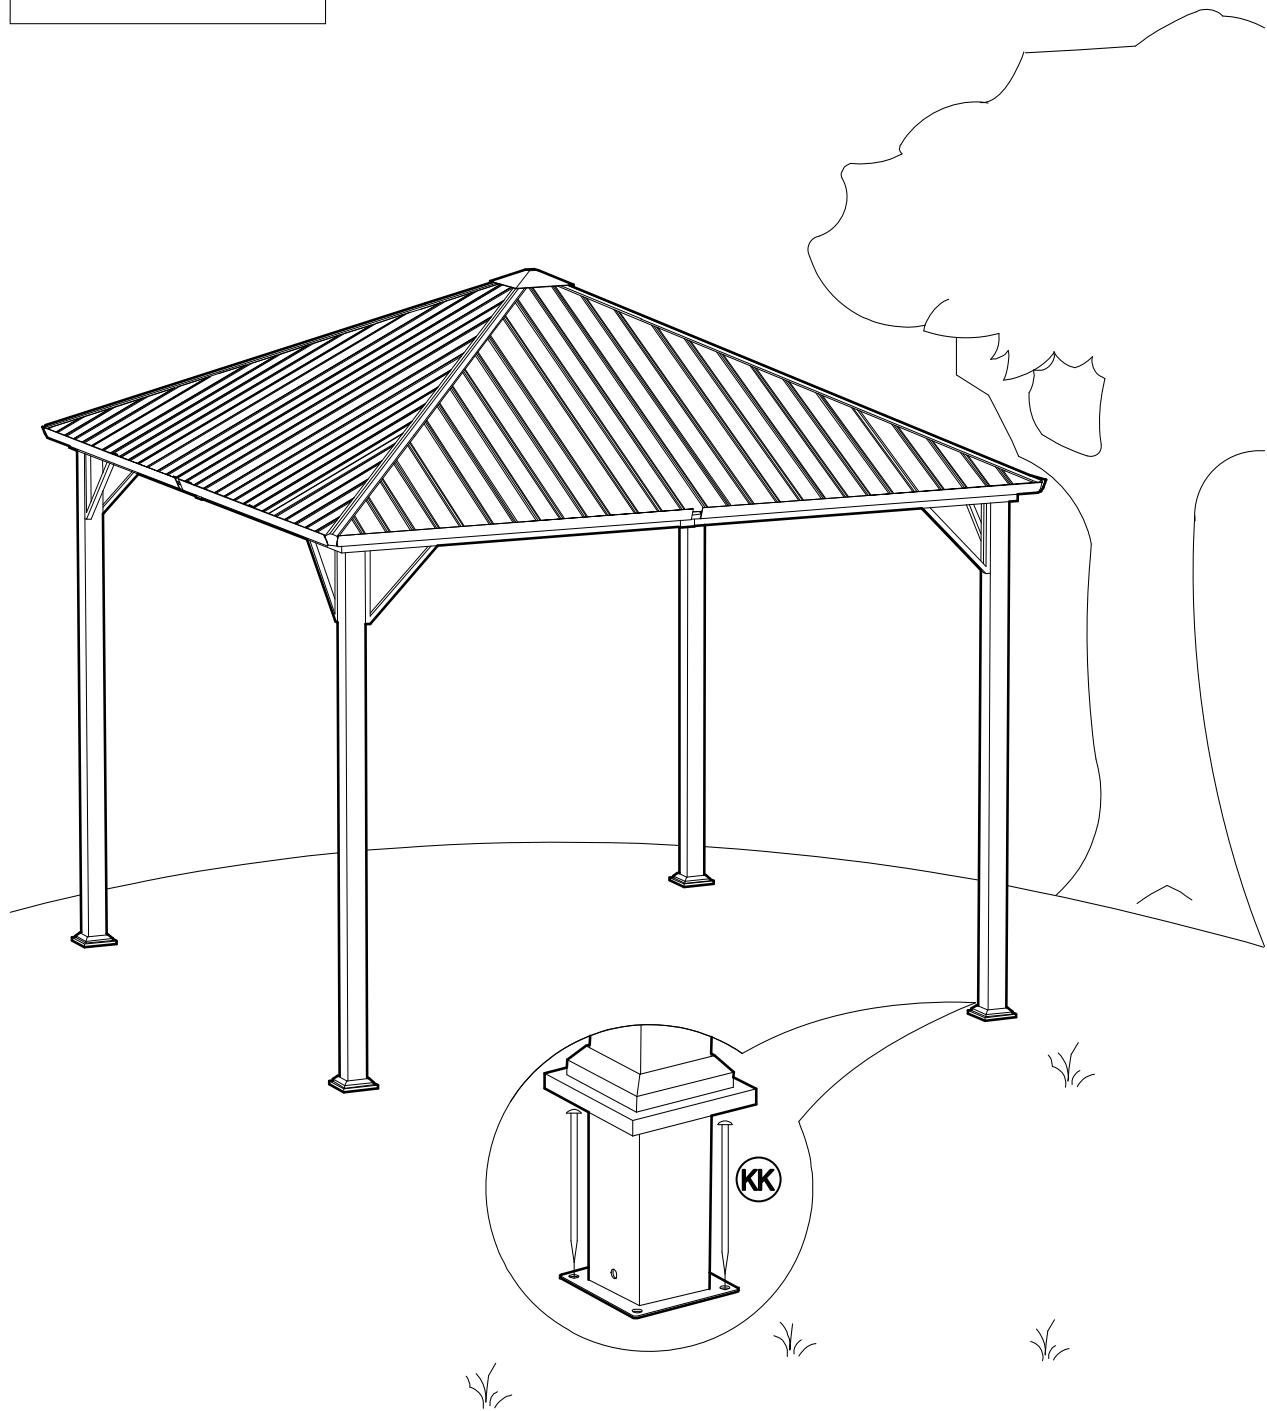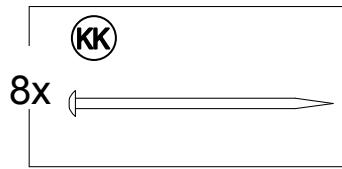

**Caution!**

- Check all screws and nuts periodically for tightness, fastening them again as required.
- Disassemble the gazebo in the reverse order of the assembly steps. Always disassemble the gazebo completely. A partially disassembled gazebo is not stable enough to resist wind and bad weather, and therefore can be damaged and/or cause damage.
- Clean the gazebo with mild soap and water. Rinse thoroughly, and wait until the product is dry before reassembling it.

- Steel components of garden accessories and furniture are treated with rust-inhibiting paint. However, due to the nature of steel, surface oxidation (rusting) will occur if this protective coating is scratched. This is a natural process. To minimize this condition, it is recommended that care be taken when assembling and handling the product in order to prevent the paint from being scratched. If scratching or damage occurs, it is recommended that the area be touched up immediately with the rust-inhibiting paint which is supplied with the product (DD). Surface rust can be removed easily using a very light application of common cooking oil. If surface oxidation (rusting) occurs and no measures are taken to correct it, the oxidation may start dripping onto the assembly surface, which may cause damaging stains that may be difficult to remove.

Dimensions (L x W x H)

10' x 10' x 9' 1"

3 x 3 x 2.78 m)

Product weight

115 kg

253 lb 8 oz

This For Living™ product carries a one (1) year warranty against defects in workmanship and materials. Trileaf Distribution agrees to replace the defective product free of charge within the stated warranty period, when returned by the original purchaser with proof of purchase. This product is not guaranteed against wear or breakage due to misuse and/or abuse.