


CANVAS^{TM/MC}

CV Camrose 7 PC Fire Dining-Table

Product No. 088-2208
Model No. A201002701

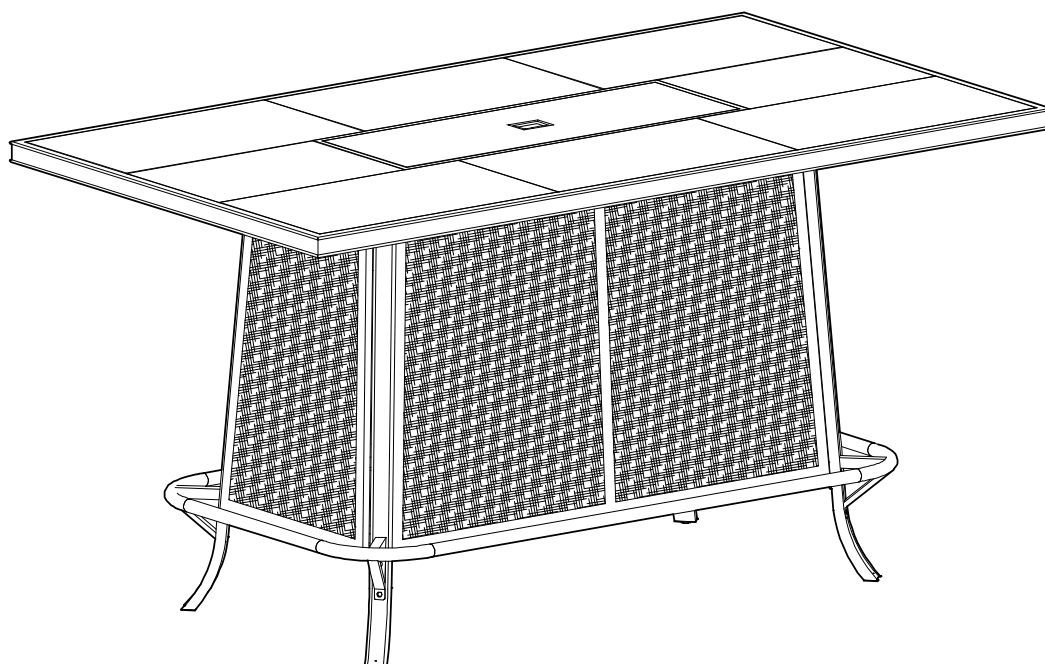

ASSEMBLY INSTRUCTIONS

Toll-free: 1-888-670-6684

IMPORTANT: Please read this manual carefully before beginning assembly of this product.
Keep this manual for future reference.

Production Number: xxxxxxxx

CV Camrose 7 PC Fire Dining




WARNING: For Outdoor Use Only.

Installation and service must be performed by a qualified installer, service agency, or the gas supplier.

INSTALLER: Leave this manual with the appliance.

CONSUMER: Retain this manual for future reference.

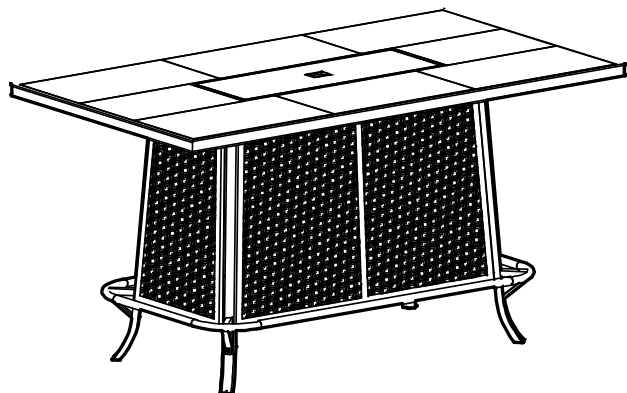

DANGER: FIRE OR EXPLOSION HAZARD

If you smell gas:

1. Shut off gas to the appliance.
2. Extinguish any open flame.
3. If odour continues, leave the area immediately
4. After leaving the area, call your gas supplier or fire department.

Failure to follow these instructions could result in fire or explosion, which could cause property damage, personal injury, or death.



Propane cylinder required (not included)
1 AA 1.5V battery required (not included)
Please dispose of or recycle the batteries according to municipal requirements.



WARNING: If the information in this manual is not followed exactly, a fire or explosion may result causing property damage, personal injury, or loss of life.



WARNING:

Do not store or use gasoline, or other flammable vapours and liquids, in the vicinity of this or any other appliance.

An LP-cylinder not connected for use shall not be stored in the vicinity of this or any other appliance.



DANGER



CARBON MONOXIDE HAZARD

This appliance can produce carbon monoxide which has no odour.

Using it in an enclosed space can kill you.

Never use this appliance in an enclosed space such as a camper, tent, car or home.

This appliance complies with "ANSI Z21.97-2017/CSA 2.41-2017, Outdoor Decorative Gas Appliances.

General information	3
Specifications	4
Important safety information and precautions	4
Expanded view	6
Parts list	7
Assembly	8
Location	10
Setup	10
Gas connection	10
Leak test	11
Lighting	11
Storage and maintenance	12
Troubleshooting	12
Limited warranty	13

WARNING: Failure to position the parts in accordance with these diagrams or use only parts specifically approved with this appliance may result in property damage or personal injury.

WARNING: This product can expose you to Carbon Monoxide, which is known to the State of California to cause birth defects or other reproductive harm. For more information go to www.P65Warnings.ca.gov

IMPORTANT


Please take time to read these instructions thoroughly and follow each step carefully for safe and easy operation. Keep this manual for installer and consumer future reference/use. We would like to hear from you with any comments or suggestions.

Product name	CV Camrose 7 PC Fire Dining
Model No.	088-2208 (A201002701)
Rated Heat Output	38,000 BTU/HR
Fuel	Propane—LP
Gas Supply	20 lb (9 kg) LP-Gas cylinder
Manifold Pressure	11" W.C.
Orifice Size (diameter)	1.9 mm
Gas Supply Pressure	25 PSI (minimum) to 250 PSI (maximum)


- The installation must comply with local codes, or in the absences of local codes with the National Fuel Gas Code, ANSI Z223.1/NF-PA54; The international Fuel Gas Code, Natural Gas and Propane Installation Code, CSA B149.1; or the Propane Storage and Handling Code, B149.2, as applicable.
- The LP gas supply cylinder to be used must be:
 - 1-Constructed and marked in accordance with the U.S. Department of Transportation (D.O.T.) Specifications for LP-Gas Cylinders, or the Standard for Cylinders, Spheres and Tubes for transportation of Dangerous Goods and Commission, CAN/CSA-B339 as applicable;
 - 2-Provided with a listed overfilling prevention device;
 - 3-Provided with a cylinder connection device compatible with the connection for the appliance.
- Always place the appliance on a firm and level surface.
- Solid fuels must not be burned in this gas appliance. When using decorative lava rocks, use only lava rocks (INCLUDED).
- The appliance must be used only outdoors in a well-ventilated space and shall not be used in a building, garage or any other enclosed area.
- When in use, keep the appliance area clear and at least 40" (101.6 cm) side, back and top clearance from combustible materials, gasoline and other flammable liquid and vapours. Do not use the appliance under overhead combustible surfaces. Certain items or materials, when stored under the appliance or nearby, will be subjected to radiant heat and could be damaged.






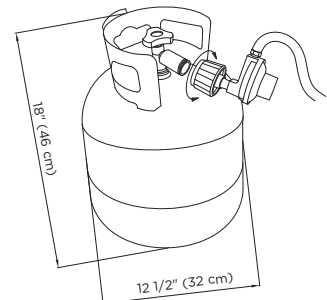



5 MODEL NO. 088-2208 | PRODUCT NO. A201002701



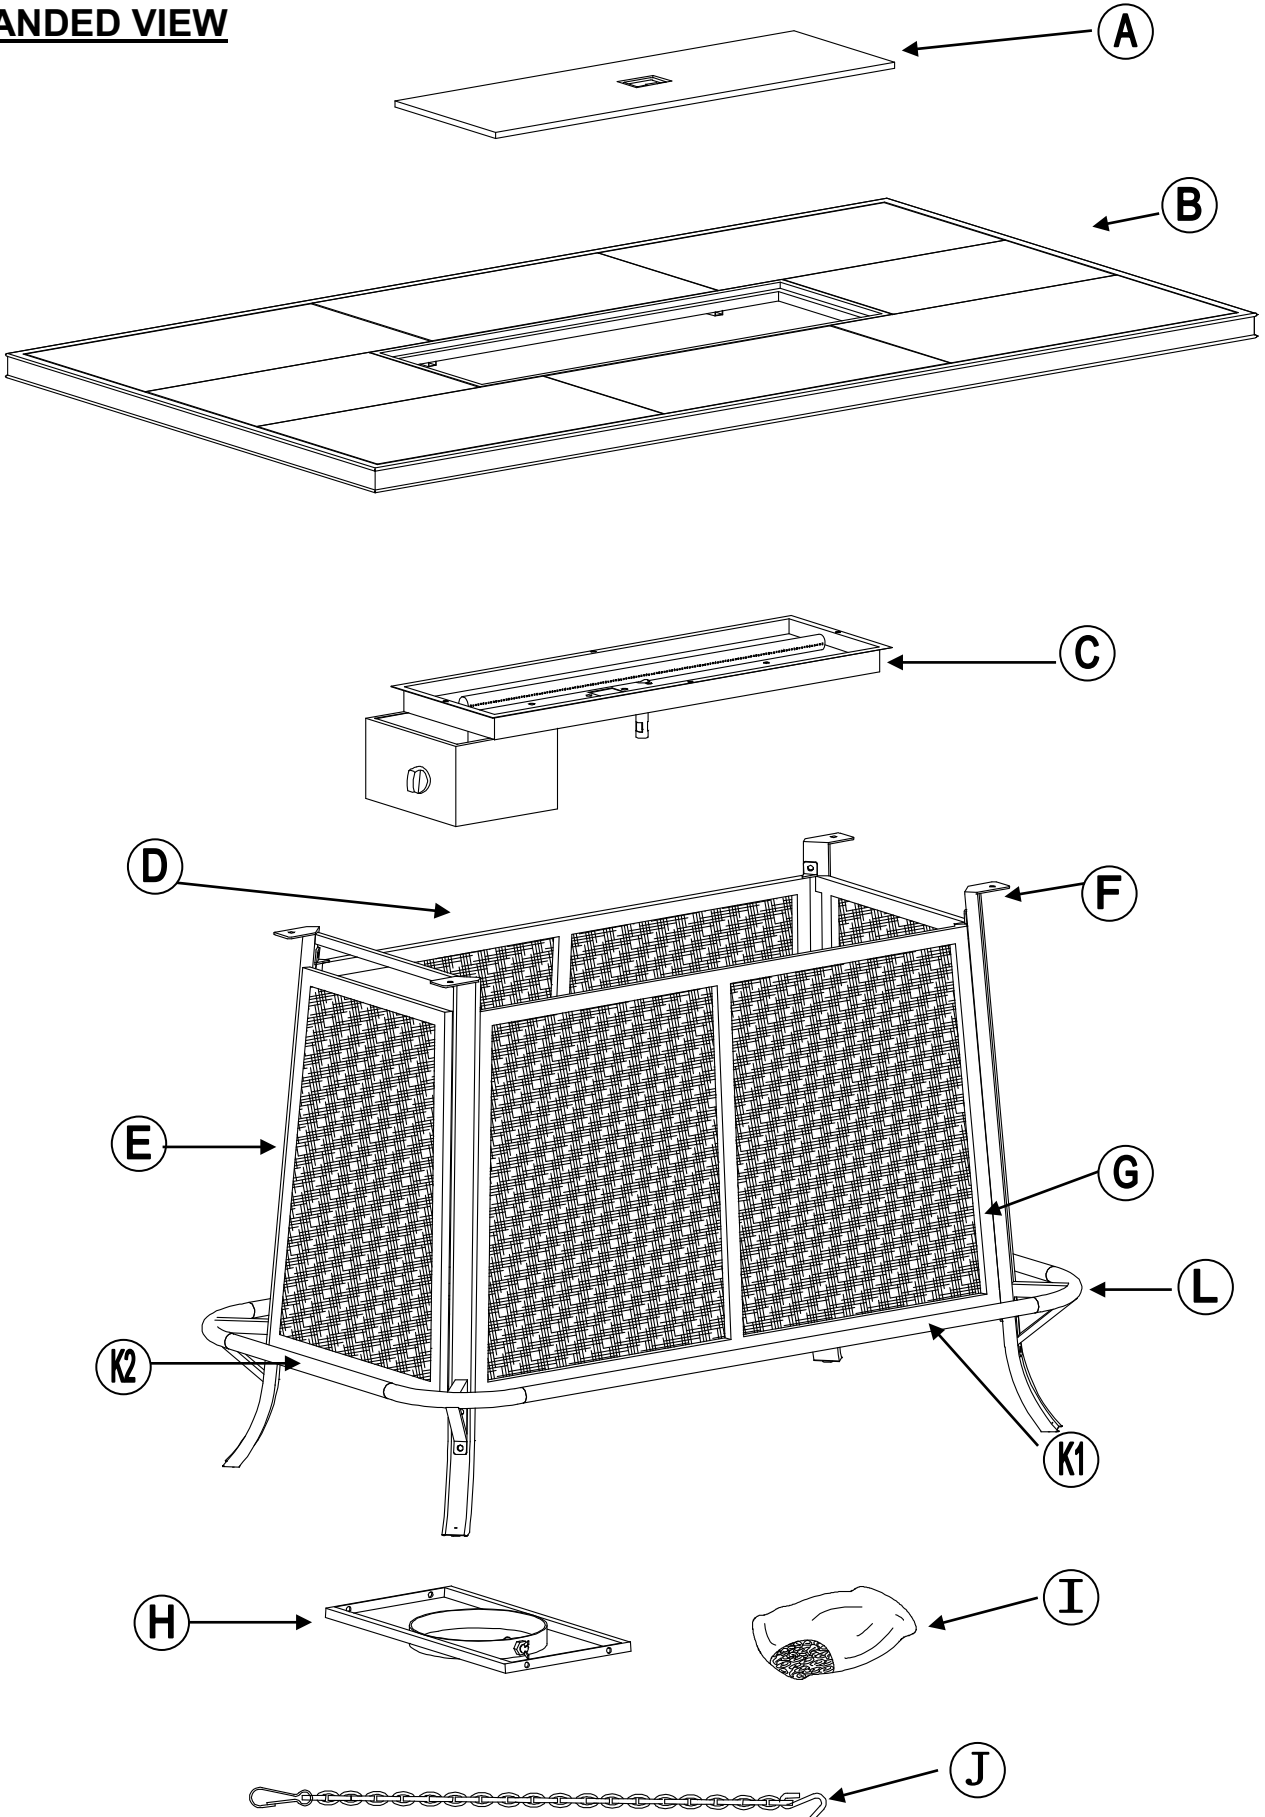

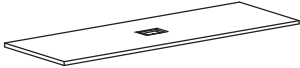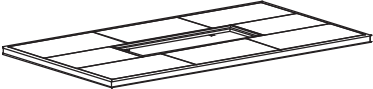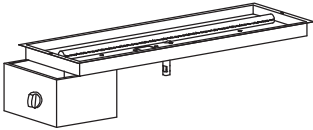- Open the door and inspect the hose assembly and burner prior to each use. If there is evidence of excessive abrasion or wear or if the hose or burner is damaged, it must be replaced by an appropriate part from the manufacturer.
- Inspect the gas connections of the appliance prior to each use. Do not operate the unit if there is a gas leak. Have the appliance inspected annually by a qualified service person.
- The pressure regulator and hose assembly provided with the appliance must be used. The replacement part must be the same as the part specified by manufacturer.
- For instructions on how to connect the LP-Gas tank and check for leaks, please refer to the “Gas Connection” on page 18 and “Leak Test” on page 19.
- **Children and adults should be alerted to the hazards of high surface temperatures and should stay away to avoid burns and prevent clothing ignition.**
- **Young children and pets should be carefully supervised when they are in the area of the appliance.**
- **Any guard or other protective device removed for servicing the appliance must be replaced prior to operation.**
- **Clothing or other flammable materials should not be hung from the appliance or placed on or near the appliance.**
- Do not use this appliance if any part has been under water. Immediately call a service technician to inspect the appliance and to replace any part of the control system which has been under water.
- LP-Gas supply cylinder to be used must be constructed and marked in accordance with the specifications for LP-Gas cylinders of the U.S. Department of Transportation (DOT).
- The cylinder supplies system must be arranged for vapour withdrawal and the cylinder must include a collar to protect the cylinder valve.
- Use only 20 lb (9 kg) LP-Gas cylinders.
- Do not burn wood or any other materials in this appliance.
- The appliance must be isolated from the gas supply piping system by closing its individual manual
- The appliance must be isolated from the gas supply piping system by closing its individual manual shutoff valve during any pressure testing of the gas supply piping system at test pressure equal to or less than 1/2psi (3.5kPa).
- Other cylinders may be acceptable for use with the appliance provided they are compatible with the appliance retention means and accompanied by illustration(s) depicting the cylinder mounted on the appliance using the cylinder retention means and the point of contact between the cylinder and the retention means.
- Properly place the hose out of pathways where people may trip over it or in areas where they may be subject to accidental damage.
- The burner must be replaced prior to the appliance being put into operation if it is clear that the burner is damaged. The replacement burner must be the same as the part specified by the manufacturer.
- To clean the appliance, including the burner, please refer to “Storage and Maintenance” on page 20 .



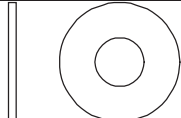


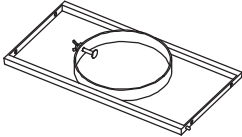
EXPANDED VIEW




Parts List				
Label	Part Number	Description	Qty	Part Image
A	P003100067	Lid	1	
B	P002100225	Top	1	
C	P002500092	Bowl	1	
D	P002400030	Back panel	1	
E	P004100085	Accessory for door	1	
F	P002400032	Side panel	1	
G	P002400031	Panel	1	
H	P006700047	Cylinder rack	1	
I	P006600020	Lava rock (1KG)	4	








J	P005100108	Chain	2	
K1	P005700317	Long foot tube	2	
K2	P005700318	Short foot tube	2	
L	P005000292	Support	4	

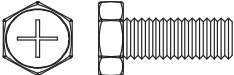Hardware Pack					
Label	Part Number	Description	Qty	Add	Part Image
AA	H010020001	Bolt M6*15	32	3	
BB	H090010002	Bolt M6*15	4	1	
CC	H050010023	Flat washer M6	36	3	
DD	H090010002	Wrench M6	1	0	





If you want to replace the parts listed, please contact Customer Service Centre: 1-888-670-6684

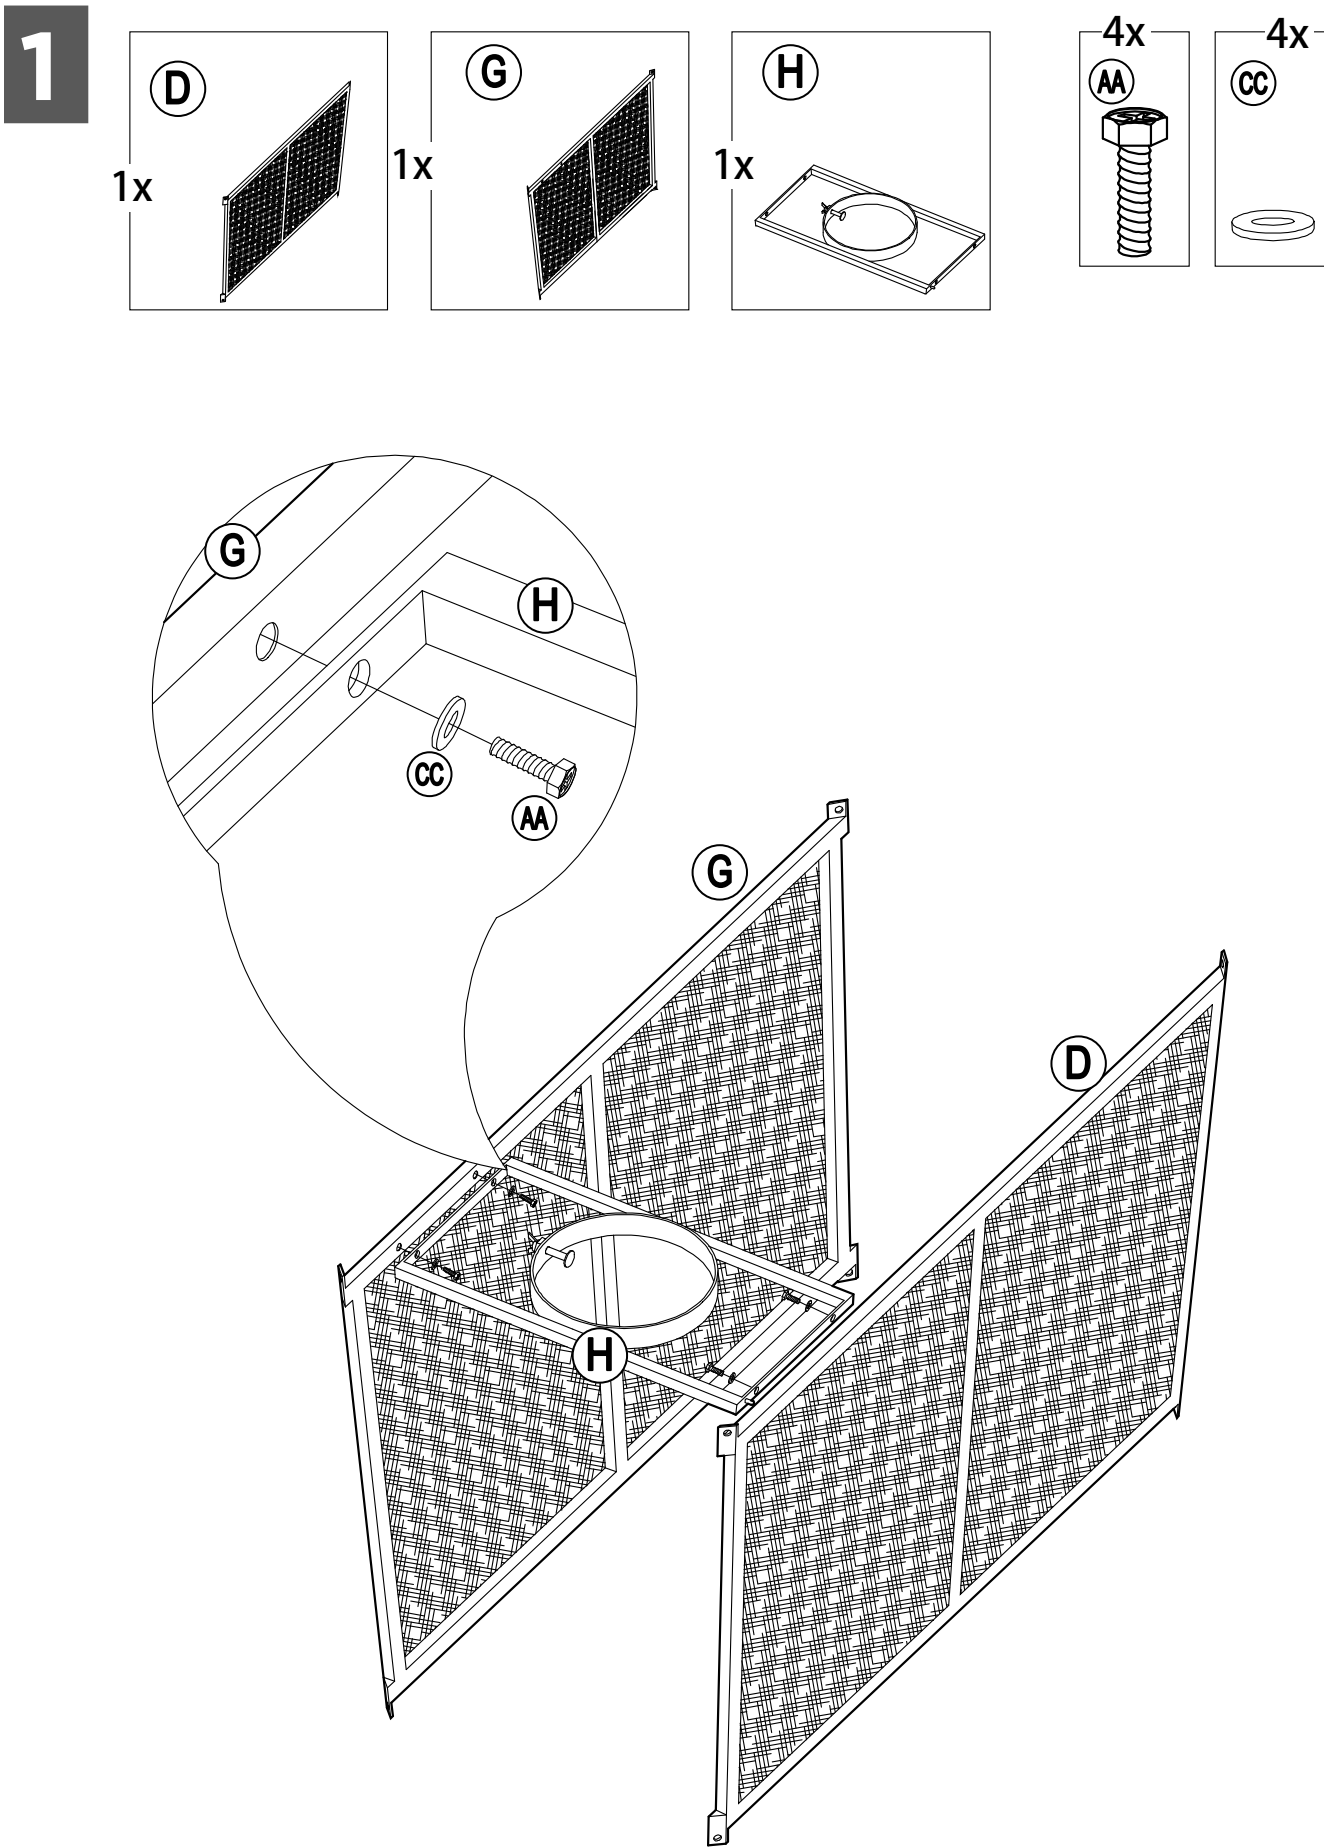






2

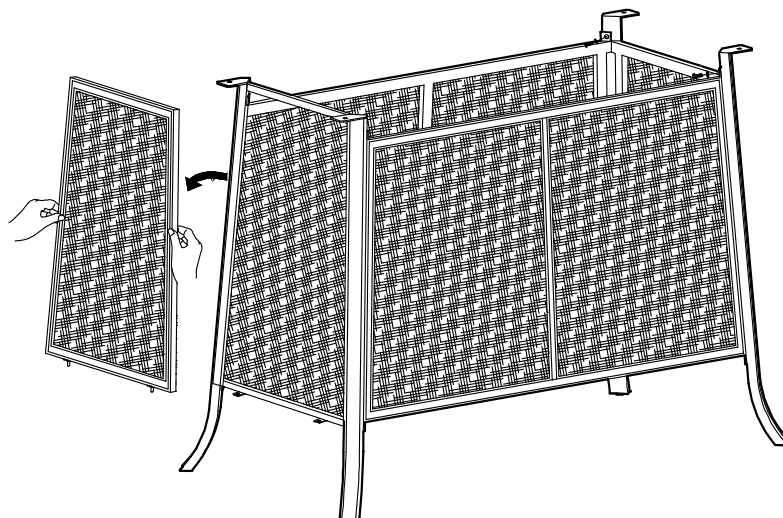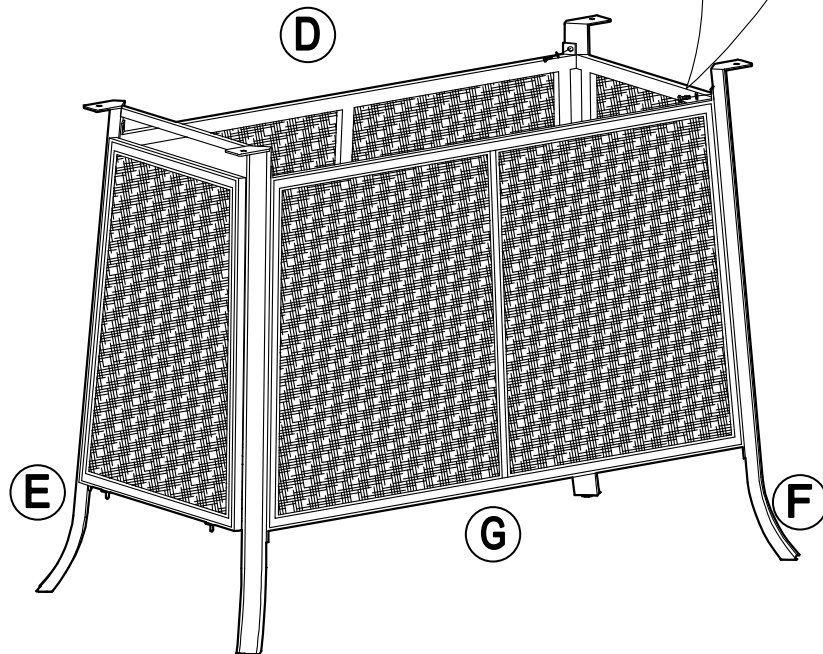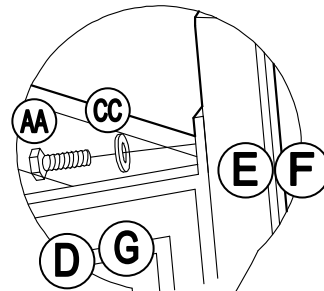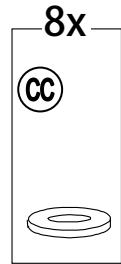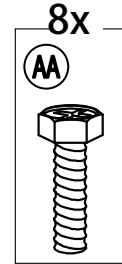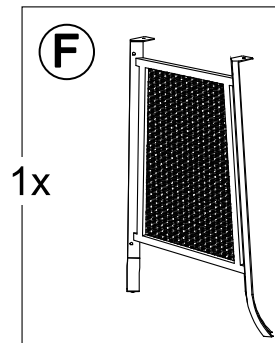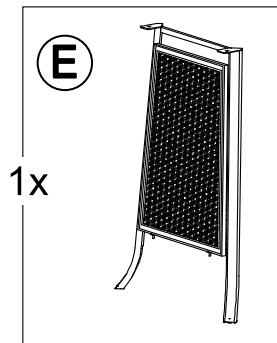



3

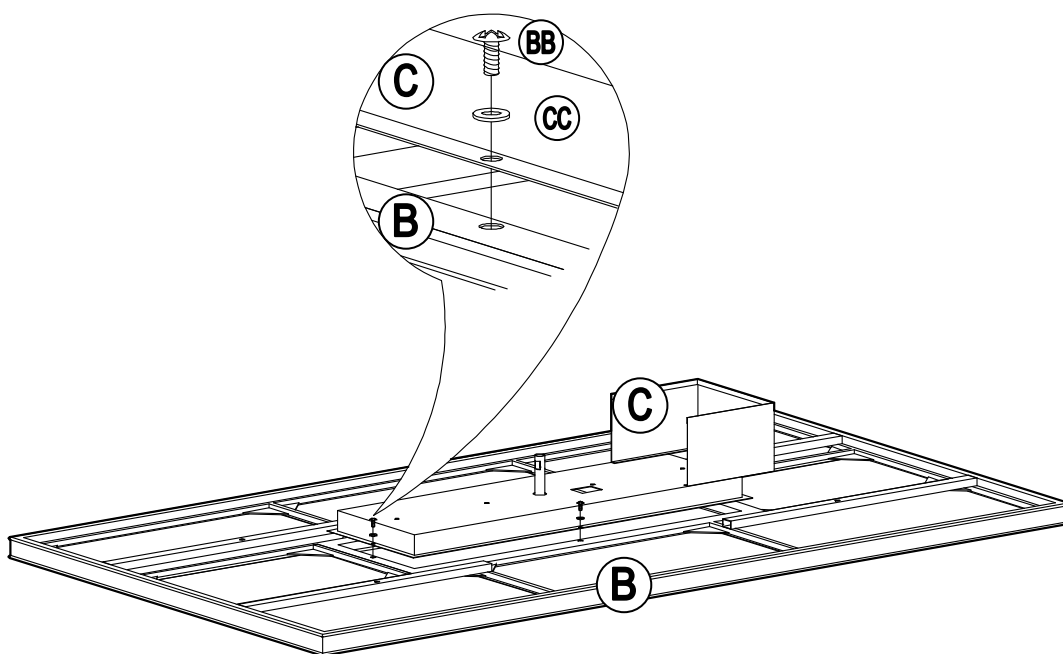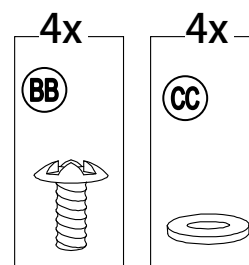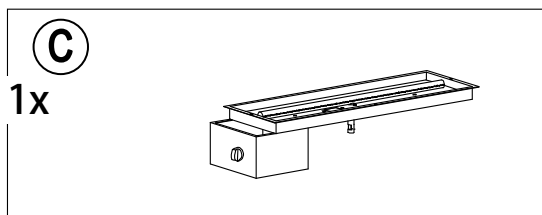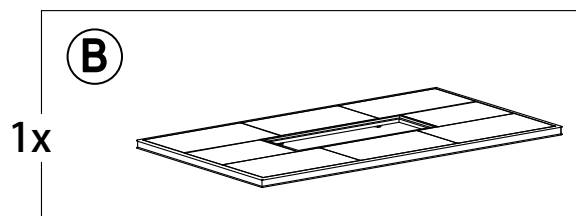



4

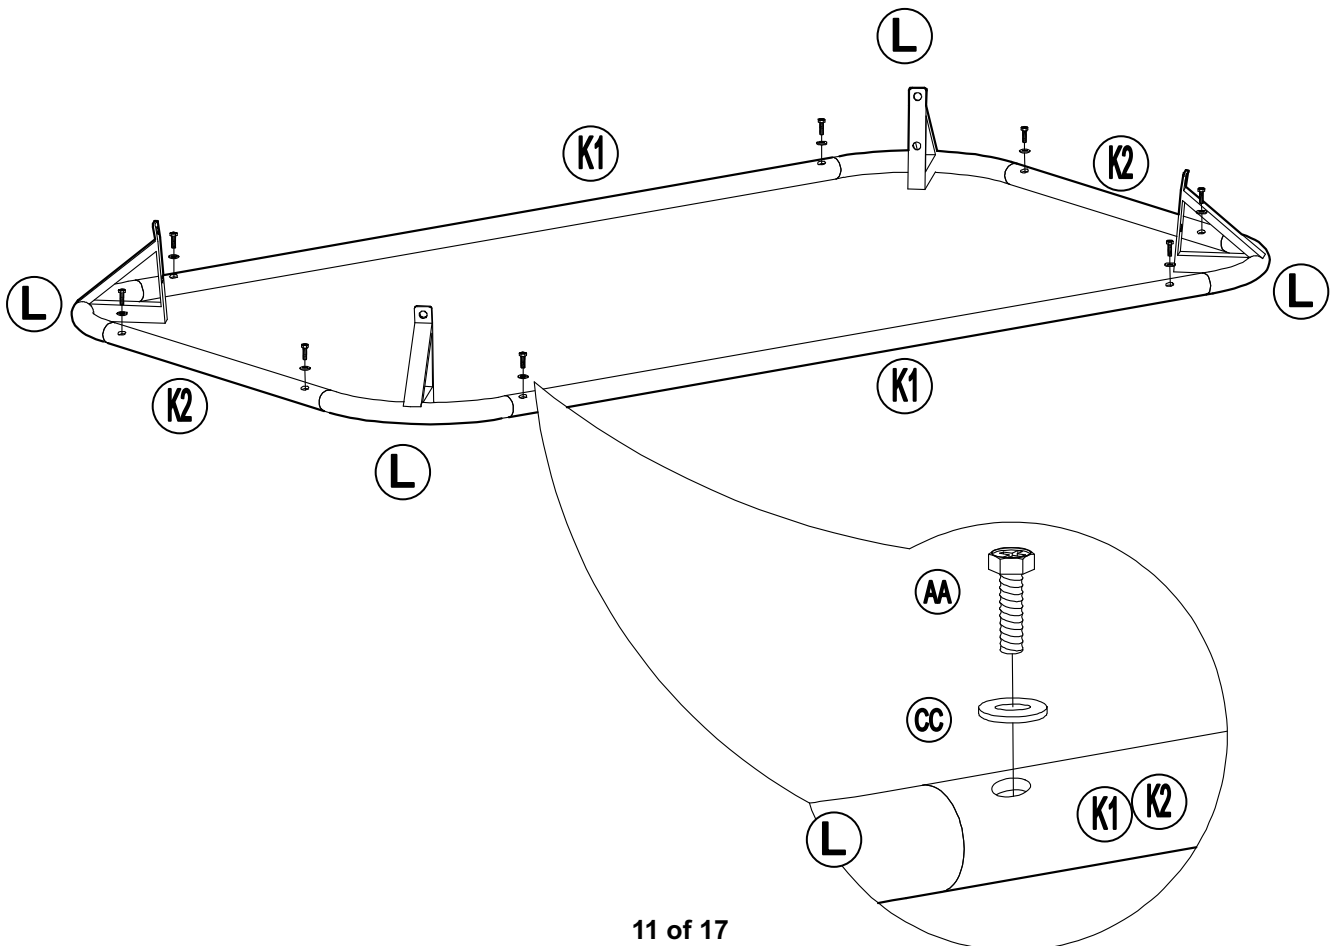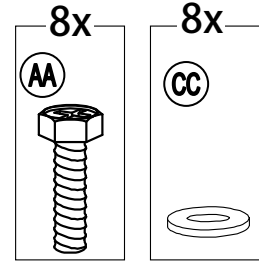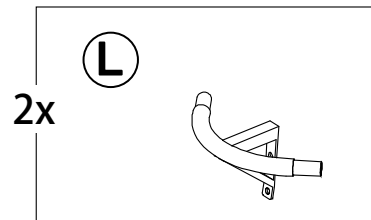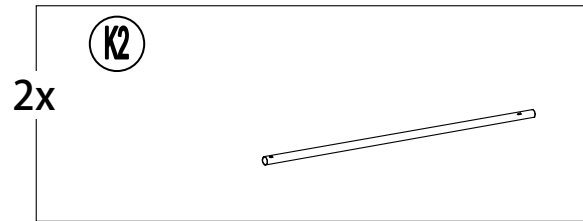
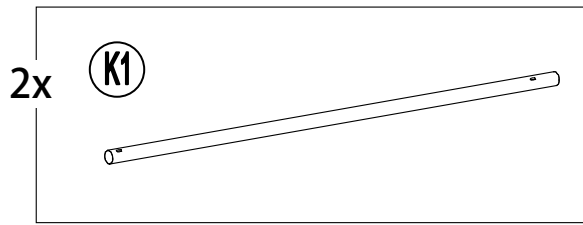


5


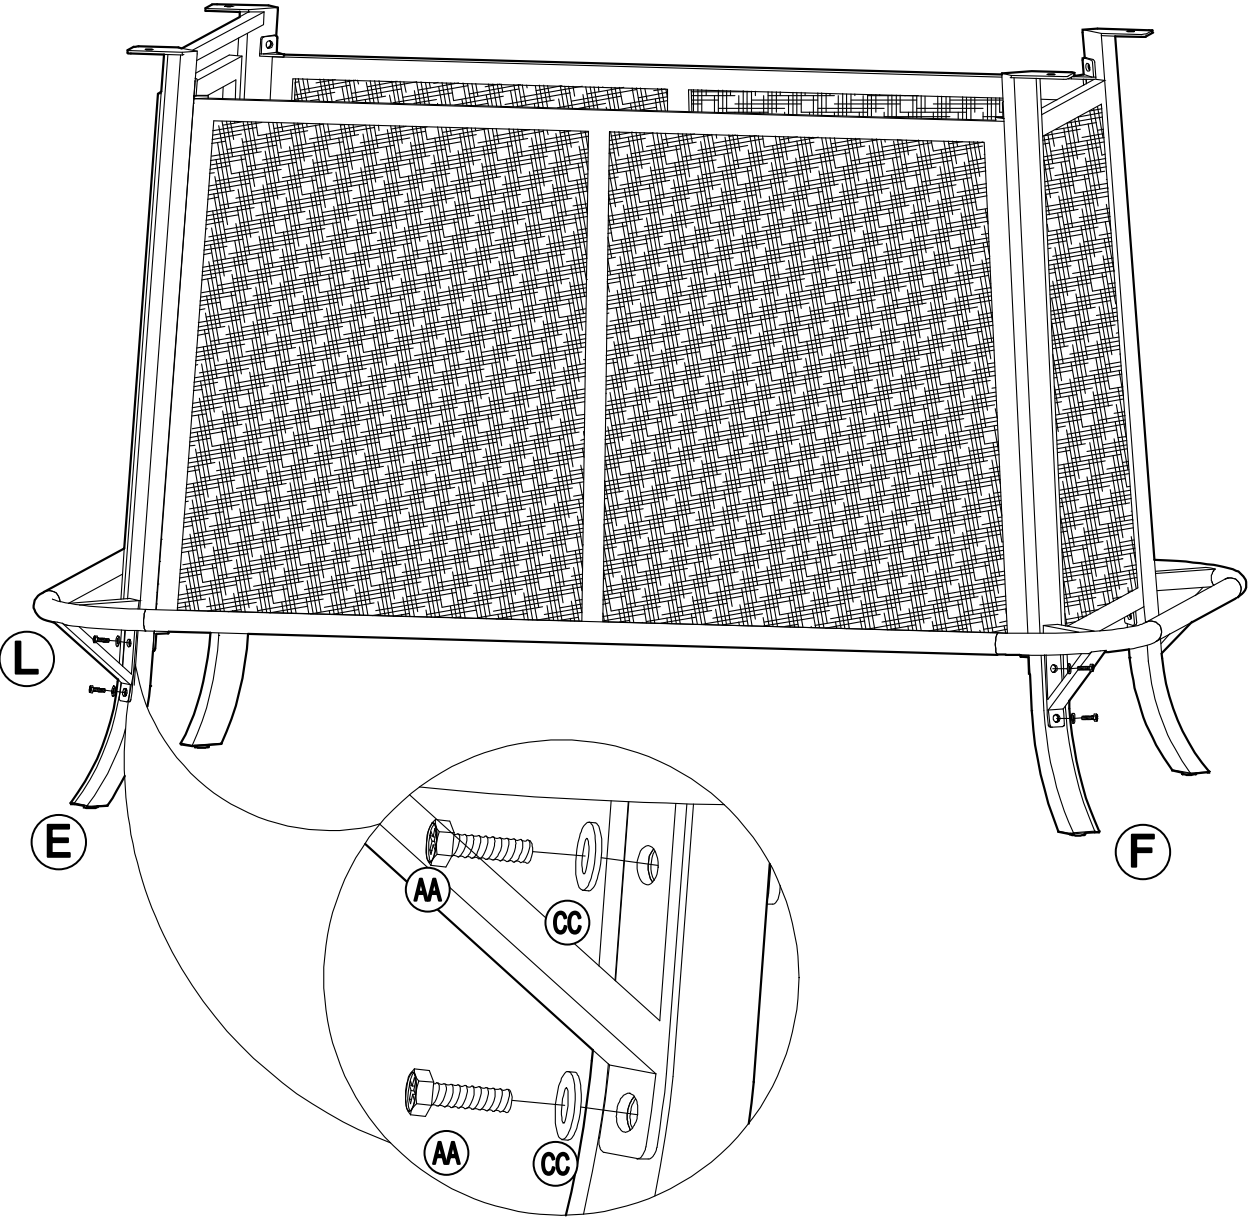
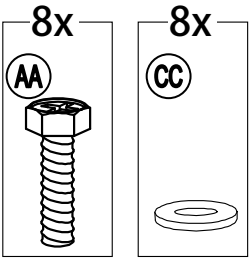


6

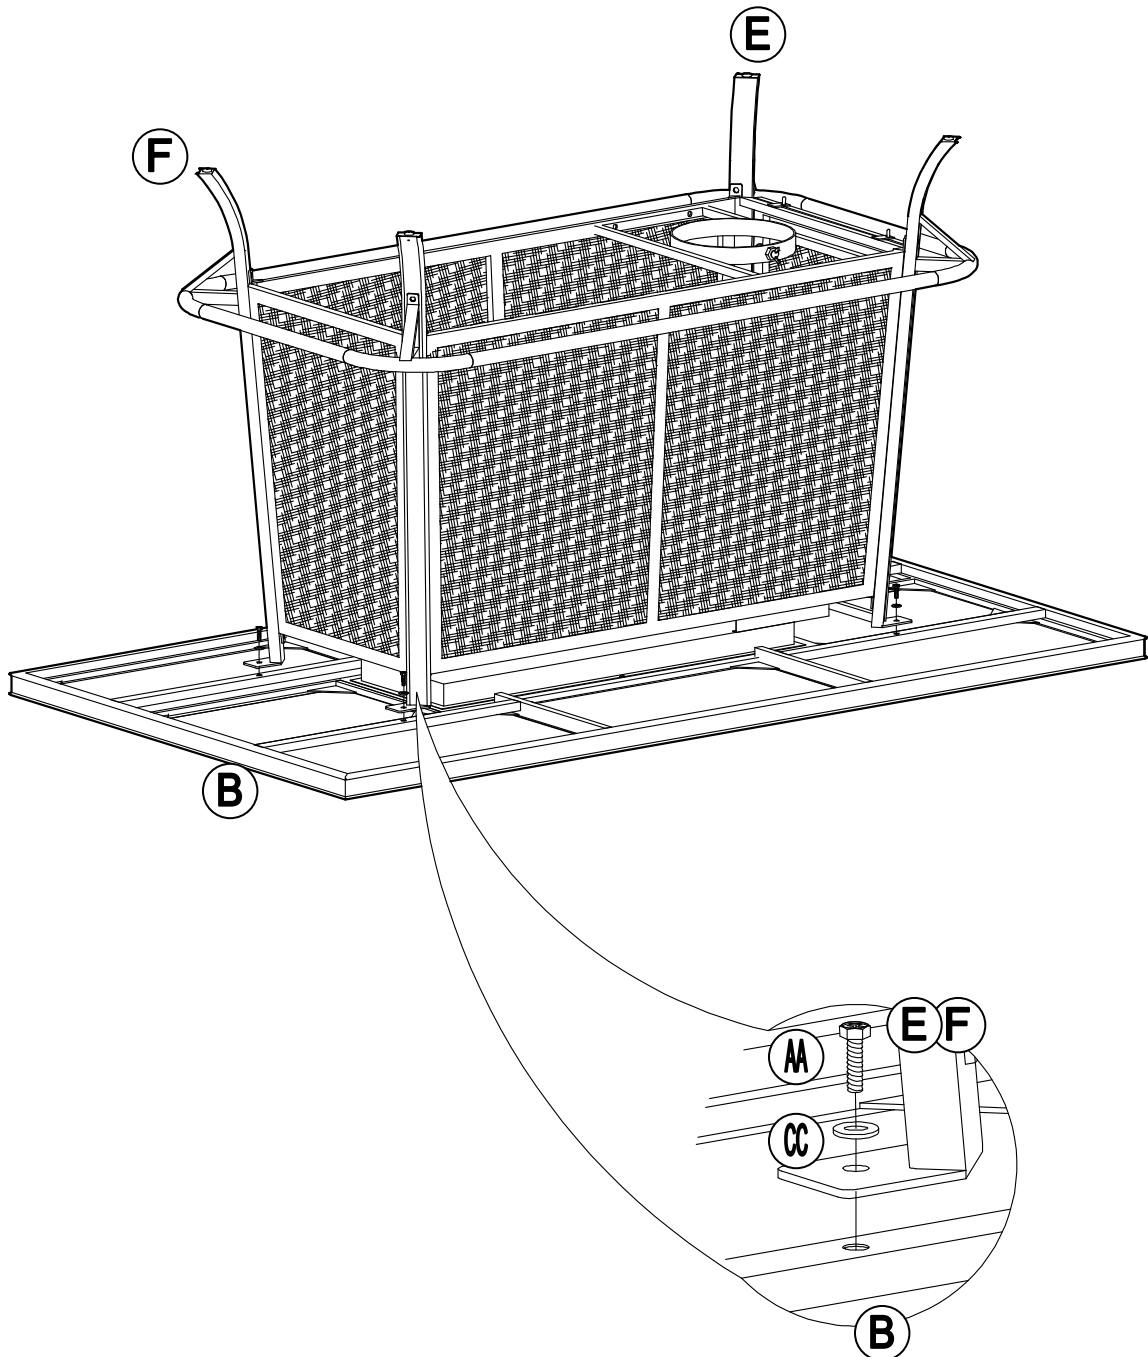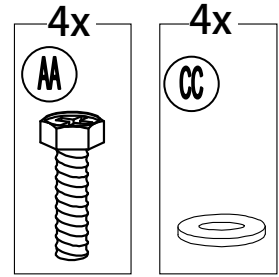

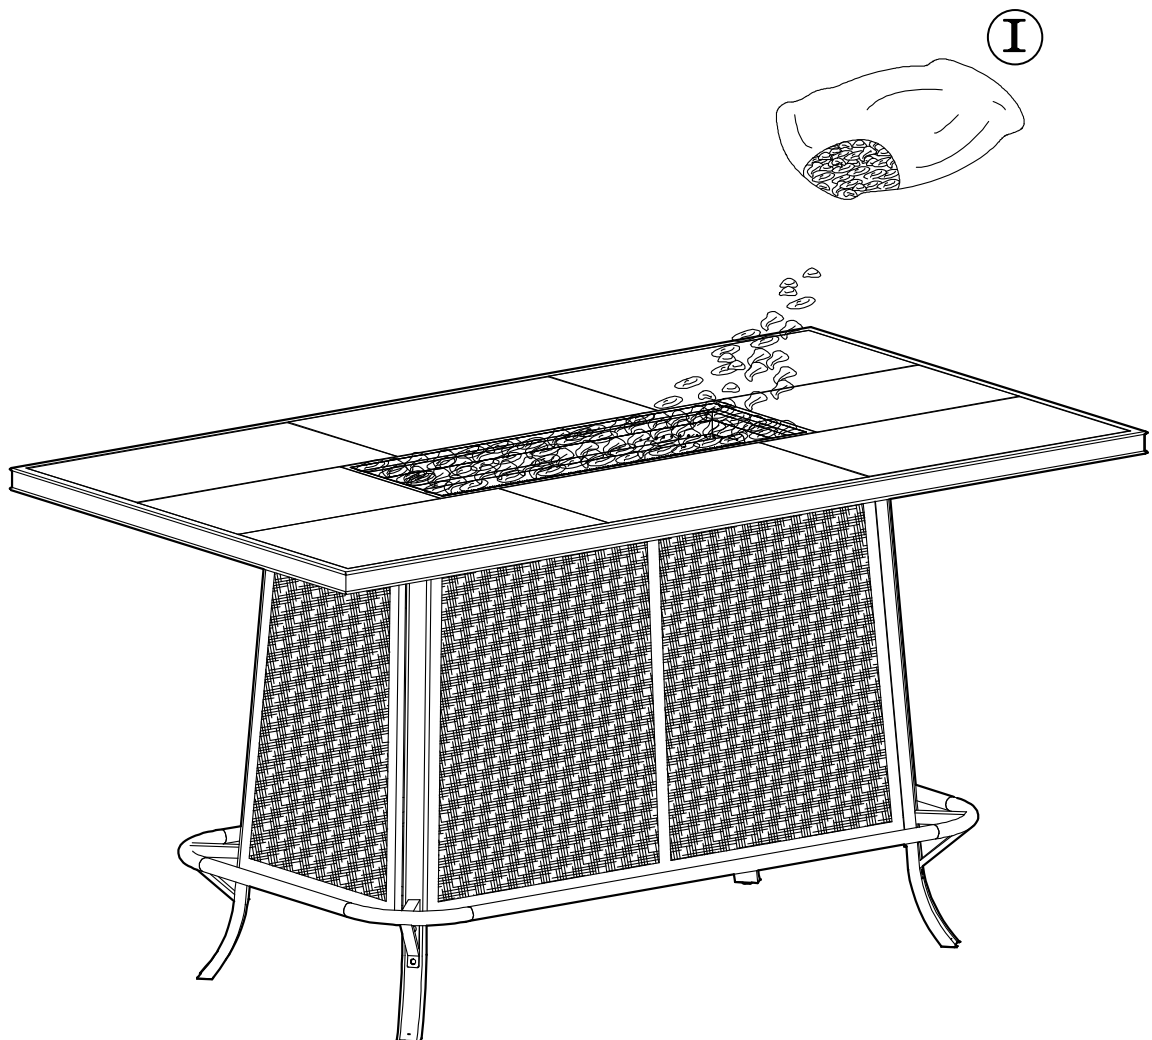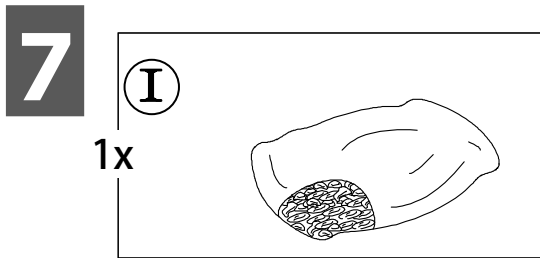


8

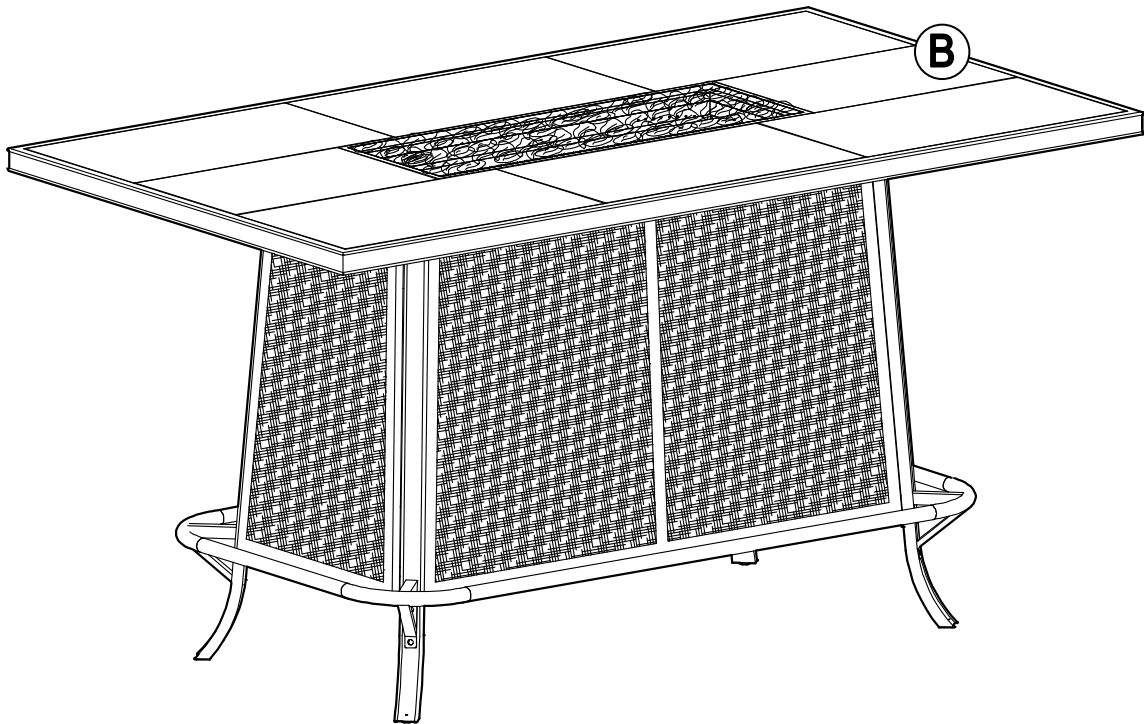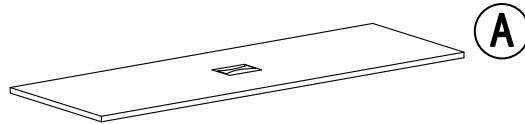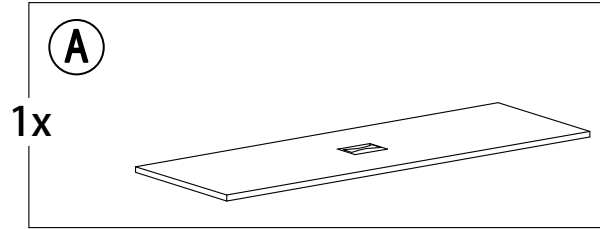

9

2x

J

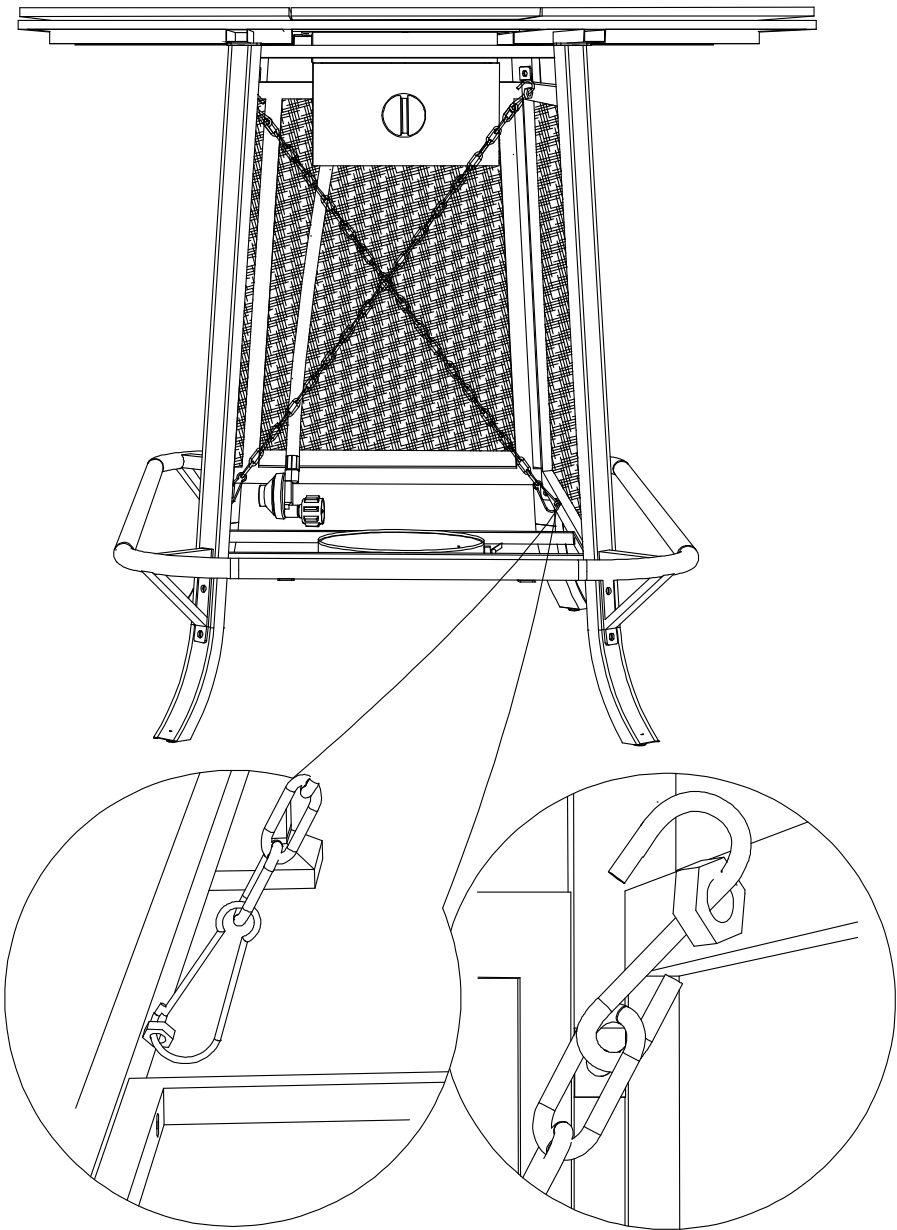

Your gas appliance must be installed on a flat, stable surface, away from any combustible materials or construction.

Your Gas appliance comes assembled, ready for a Gas connection.

1-Remove the appliance from container box and place it on any level, outdoor, non-combustible surface.

NOTE: Do not place this appliance on grass or dirt area. This may prevent proper safety venting.

2-Open the gas door and put the cylinder inside.

3-Unscrew the battery box as shown in Fig 1. Insert the negative electrode side of the battery into the bottom of battery box as shown in Fig 2. Then screw the battery box as shown in Fig 3.

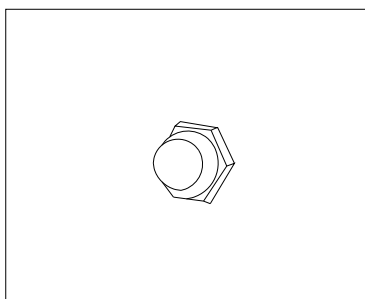


Fig. 1

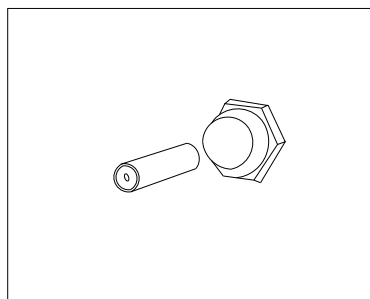


Fig. 2

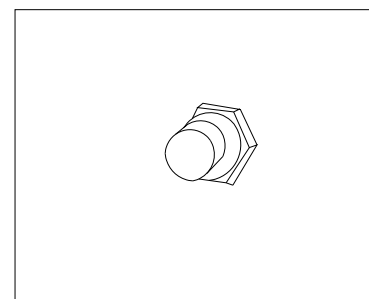


Fig. 3

1) Clean the valve and ensure the tank holder is situated in an appropriate location (Fig. 1).

2) Loosen the tank holder retainer bolt by turning counter-clockwise (Fig. 2). Place the propane tank on the tank holder (Fig. 3) and tighten the retainer bolt securing the tank to the tank holder (Fig. 4).

3) Connect the regulator to the propane tank as shown (Fig. 5). Perform a leak test as described on page 11.

4) Disconnect the regulator from the tank as shown (Fig. 6).

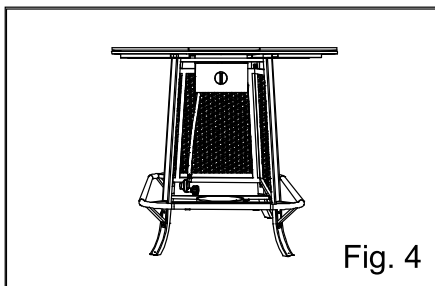


Fig. 4

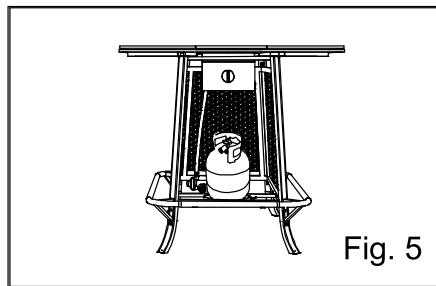


Fig. 5

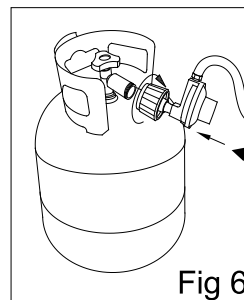


Fig. 6

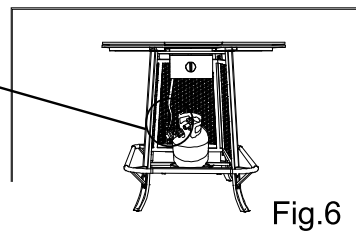


Fig. 6

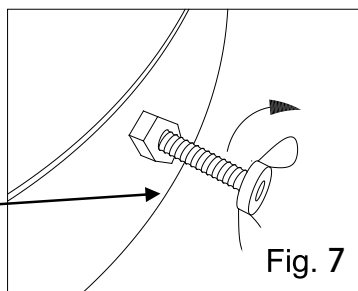
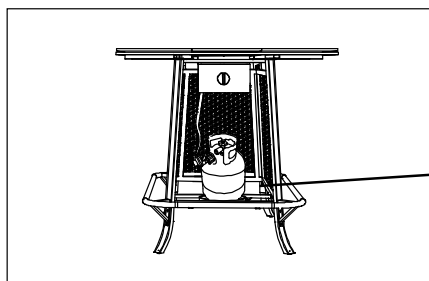


Fig. 7

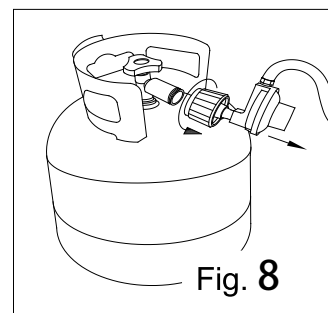


Fig. 8


LEAK TEST

WARNING!!!


- Do not use an open flame to check for leaks.
- Do not smoke during testing.
- Do not test indoors.
- A leak test must be performed whenever the gas cylinder is replaced.

1. Make sure the control knob is in the "OFF" position.
2. Make sure the gas cylinder is correctly and securely connected to the pressure regulator, without over-tightening.
3. Turn on the gas cylinder valve. Apply 50% soap and 50% water solution to the gas hose and connections between the control knob and gas cylinder.
4. If something is leaking, you will see bubbles form. In case of leaks, turn off the gas supply, undo the leaking connection, re-connect it and try again. If the leak persists, consult Customer Service Centre for assistance at 1-888-670-6684.
5. If the connection does not leak, continue to the next step.

1. Push in and turn control knob to LOW.
2. If the burner is not lit, turn the knob back to "OFF". Wait 5 minutes and repeat step 1.
3. If burner is lit, continue to depress control knob for 1-2 minutes until the thermocouple is hot.
4. Release control knob and the burner should stay lit.
5. Turn control knob to desired heat setting: LOW - HIGH.
6. Turn control knob to OFF to shut down. Turn off gas supply at cylinder. Allow a 5-minute complete shut off period before relighting the appliance.

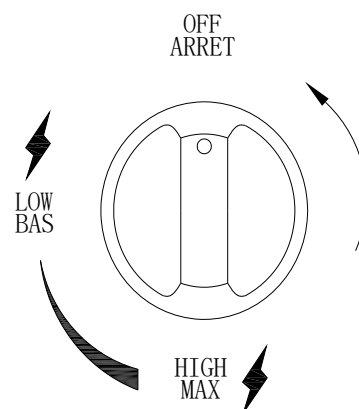

NOTE: While in use, the burner flame should be mainly blue in appearance with a small amount of yellow. The flame can be identified by the following figure.

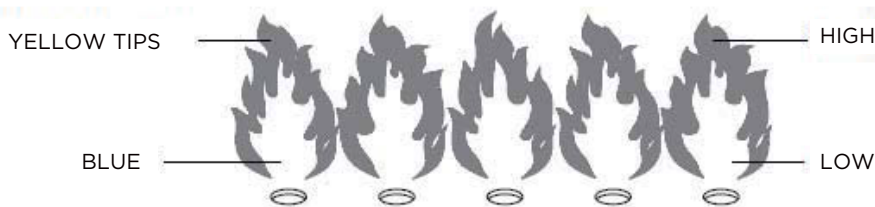

Correct Flame




Incorrect Flame

Warning: Lighting the fire table improperly could lead to an unsafe condition.

7. Press and turn the control valve knob clockwise to OFF to shut down the fire pit. Close the gas cylinder valve when the fire pit is not in use.
(**CAUTION:** Do not kink flexible gas hose. If it is kinked, a gas leak could occur.)

To obtain the best performance from your fire table, you must perform the following storage and maintenance activities on a regular basis:

- Allow at least 35 minutes for the fire table to cool down after use, before disconnecting and removing the gas cylinder.
- Store the gas cylinder in a dry, well-ventilated and sheltered area protected from inclement weather and dust, out of the reach of children, and not in a building, garage or any other closed area.
- The fire table may be stored indoors only if the cylinder is disconnected and removed.
- Keep the fireplace area clear and free from combustible materials, gasoline and other flammable vapours and liquids.

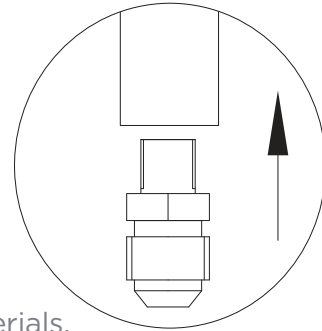

● **Installation and repair should be done by a qualified service person. The fire table should be inspected before use and at least annually by a qualified service person. More frequent cleaning may be required as necessary. It is imperative that the control compartment, burner, and circulating air passageways of the fire table be kept clean.**

● If you disassemble the burner when cleaning the fire table, please reassemble it according to the picture on the right to make sure the burner induction tunnel is on and exactly covers the orifice base. It is imperative that the control compartment, burner, and circulating air passageways of the fire table be kept clean. It is recommended not to disassemble the burner.

● Permanent installation and repair should be done by a qualified service person. The fire table should be inspected annually by a qualified service person.

PROBLEM OBSERVED	POSSIBLE CAUSE	CORRECTIVE MEASURES
Gas odour	Gas leak	See "If you smell gas:" on front cover of manual Check all gas connections.
Delayed ignition	Low gas pressure Clogged or dirty burner ports Blocked orifice Spent battery	Check gas supply pressure. Clean burner ports—see manual section. Check orifice opening. Replace battery.
Incorrect burner flame	Incorrect gas supply or pressure Blocked orifice Clogged or dirty burner ports	Check gas supply pressure. Check and clean orifice opening. Clean burner ports.

Subject to the conditions set out below, this product is warranted to the original purchaser to be free from defects in workmanship and materials for one (1) year from the date of purchase.

- Satisfactory proof of the purchase date must be furnished at the time of notification of the defect for any claim under the warranty to be enforceable.
- This warranty covers all parts found defective in workmanship and/or materials during the warranty period and can be repaired or replaced at the discretion of the manufacturer at no cost to the original purchaser.
- This warranty will be void if the product has not been assembled, installed or operated according to the instructions, or subjected to abuse, improperly treated, neglected, rusted by exposure to the elements, misused and/or if any repairs, maintenance, or service has been done by an unauthorized person.
- Returns must be properly packaged and returned to the dealer from whom the product was acquired.
- The manufacturer, distributor and retailer will not be liable for any incidental or consequential loss or damage arising from the installation or operation of the product and/or the failure of any part for any reason.
- There are no other express or implied warranties, except for those stipulated herein. This warranty gives specific rights and the original purchaser may have additional rights and remedies in law.
- This warranty does not cover commercial use.

Made in China

Imported by Trileaf Distribution Trifeuil Toronto, Canada M4S 2B8