
CANVAS

WATERTON 10' x 10' PRIVACY PANELLED SKYLIGHT GAZEBO

MODEL NO. 088-2281-0

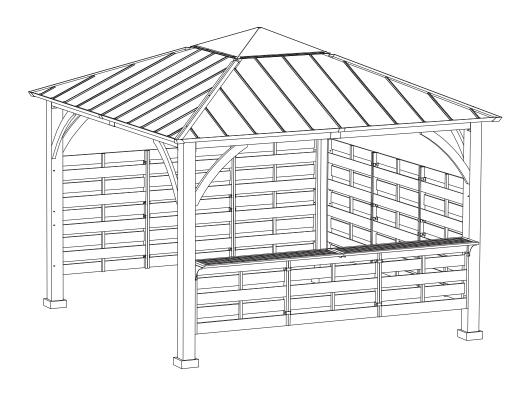

ASSEMBLY INSTRUCTIONS



HAVING TROUBLE?
TOLL-FREE:

1-888-670-6684

IMPORTANT: Please read this manual carefully before beginning assembly of this product. Keep this manual for future reference.

Production Number: xxxxxxxx





We believe in the power of décor and its ability to make up the fabric of your home.

That's why CANVAS™ collections draw inspiration from Canadians and the way they live.

From on-trend furniture pieces to holiday décor and all your outdoor living essentials, CANVAS™ makes it easy to refresh your space to reflect your unique style and the way you live every day.

We would love to hear from you and welcome your thoughtful feedback. Visit our website at **canadiantire.ca** to tell us about your experience, and share your photos with us using **#mycanvasstyle**.

Show us how you bring **CANVAS™** products to life. We can't wait to see!

TABLE OF CONTENTS

Parts List	5
Step-by-step Guide	12
Technical Data	39
Troubleshooting	40
Caring for Your Item	40
Warranty	41



WARNING! To reduce the risk of serious injury, read the following safety instructions before assembling and using the gazebo. CAUTION! Always keep children and pets under close supervision while they are using or around this product. Never leave children unattended.



Let us help you!

DO NOT RETURN YOUR PRODUCT TO THE STORE. CALL US FIRST! 1-888-670-6684 (toll free).

If you have questions regarding your product, require warranty assistance, or have damaged or missing parts, please call our customer service toll-free helpline. Contact us for assistance; we're here to help.

IMPORTANT: Please read and understand this manual before any assembly. Before beginning assembly of product, make sure all parts are present. Compare parts with packaging contents list. If any part is missing, or if you have any questions, contact us at 1-888-670-6684 (toll free).

Place all parts from the box in a cleared area and position them on the floor in front of you. Remove all packing materials and place them back into the box. Do not dispose of the packing materials until assembly is complete. Read each step carefully before beginning any assembly and make sure you understand each step. If you are missing a part, please call our Customer Service team at 1-888-670-6684 (toll free).

TOOLS REQUIRED

Needed for assembly: Below tools are not included in the package.









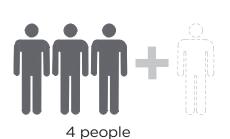


TABLE OF CONTENTS



CAUTION!

- Proper placement of your gazebo is essential. Do not place the product underneath electrical lines.
- Keep children away during assembly. This product contains small parts which can be swallowed by children.
- Keep fingers away from the places where they can be pinched or trapped.
- Do not attempt to assemble the gazebo if any parts are missing.
- This product is intended for outdoor use only.
- The product should be assembled on a flat stable surface.
- Do not assemble the gazebo on unstable surfaces.
- Ensure the location and clearance of your gazebo is acceptable.
- The gazebo must be anchored with stakes into the ground for added safety. It is recommended that it should not be permanently attached to a concrete floor or platform.
- Arrange the necessary manpower when assembling or moving the product.
- Some parts may contain sharp edges. Wear protective gloves and glasses if
- Keep children and pets away while setting up the gazebo.
- Check all nuts and bolts periodically for tightness. When required, tighten them again.
- Repairing and replacing parts should be done by a qualified technician.
- The gazebo is intended for decorative and shade purposes only, and is not designed to withstand harsh weather, including high winds, rain and snow.
- If the product is not being used for long periods of time (e.g., winter), it should be store in a clean, dry environment.
- Do not put a liquid-propane or wood-burning firepit or fireplace inside the product.
- Do not climb or place heavy objects onto the gazebo roof.
- Retain the original packaging to store and protect the gazebo during the winter months.
- Do not use or enter the gazebo if the following conditions exist:
 - -Visible movement of supports, roofing panels or a sagging roof;
 - -Unusual noise from the gazebo;
 - -Deformed roof panels:
 - -Damaged or missing bolts/fasteners.
- Please check your HOA and local government agencies prior to purchasing and assembling gazebos. These local organizations may require permits and may have specific requirements for installation.
- Maintain your instruction manual for future reference.
- Warranty: Please retain you receipt for proof of purchase.

PARTS LIST


TEM	DESCRIPTION	THUMBNAIL	QUANTITY
P00010048801	Post		4
P00010045702	Post Base		4
c P00610023102 Base Cover			4
P00040135901	Left Crossbeam Beam		4
P00040136001	Right Crossbeam Beam		4
P00050175201	Crossbeam Connector	•	4
P00220038601	Crossbeam Cap		4
P00050160902	Arc Brace Connector	© 0	16
P00500058902	Arc Brace		8
P00050024804	Lower Connector for Rafter Beam		4
P00050025104	Lower Connector for Middle Beam		4
P00060197104	Rafter (Big Roof)	<u> </u>	== 4
P00060198304	Middle Beam	,	⇒ 4
	P00610023102 P00040135901 P00040136001 P00050175201 P000220038601 P00050160902 P00500058902	P00010048801 Post P00010045702 Post Base P00610023102 Base Cover P00040135901 Left Crossbeam Beam P00040136001 Right Crossbeam Beam P00050175201 Crossbeam Connector P00220038601 Crossbeam Cap P00050160902 Arc Brace Connector P00500058902 Arc Brace P00050024804 Lower Connector for Rafter Beam P00050025104 Lower Connector for Middle Beam P00060197104 Rafter (Big Roof)	P00010048801 Post P00010045702 Post Base P00610023102 Base Cover P00040135901 Left Crossbeam Beam P00040136001 Right Crossbeam Beam P00050175201 Crossbeam Connector P00220038601 Crossbeam Cap P00050160902 Arc Brace Connector P00500058902 Arc Brace P00050024804 Lower Connector for Rafter Beam P00050025104 Lower Connector for Middle Beam P00060197104 Rafter (Big Roof)


PARTS LIST

	ITEM	DESCRIPTION	THUMBNAIL	QUANTITY
	Q P00060231702	Big Top Frame		4
	R P00060198904	Big Roof Upper Top Beam		8
	S P00060199904	Big Roof Lower Top Beam		8
	T P00570034504	Left Mosquito Netting Rod	£	4
	U P00570034604	Right Mosquito Netting Rod		4
	V P00070105601	PC Cover Board		<u> </u>
	W P00220034801	Press Panel	-	4
	X P00060201204	Big Roof Left Panel Flashing		4
	Y P00060201704	Big Roof Right Panel Flashing		4
	AA P00070101004	Big Roof Small Panel ((Left)	4
	AB P00070101404	Big Roof Small Panel (Left Middle)		4
	AC P00070111202	Big Top Left Big Roof	Panel	4
	AD P00070111302	Big Top Right Big Roof Panel		4

PARTS LIST

ITEM	DESCRIPTION	THUMBNAIL	QUANTITY
AE P00070101604	Big Roof Small Panel (Right Middle)		4
AF P00070101204	Big Roof Small Panel (Rig	ht)	4
AG P00080039502	Big Roof Rafter Cap		4
AJ P00630013501	Small Screen 1		1
AK P00630013601	Small Screen 2		1
AL P00630013701	Small Screen 3		1
AM P00220038501	Press Panel for Screen	0 0	20
AN P00210053301	Table Top 1		1
AP P00210053401	Table Top 2		1
AQ P00050174901	Connect Panel 1		2
AR P00630013401	Big Screen		6
AS P00220038402	Press Panel for Roof Pane		8
AT P00050175001	Connect Panel 2		1
AU P00050175101	Connect Panel 3	6 6	1

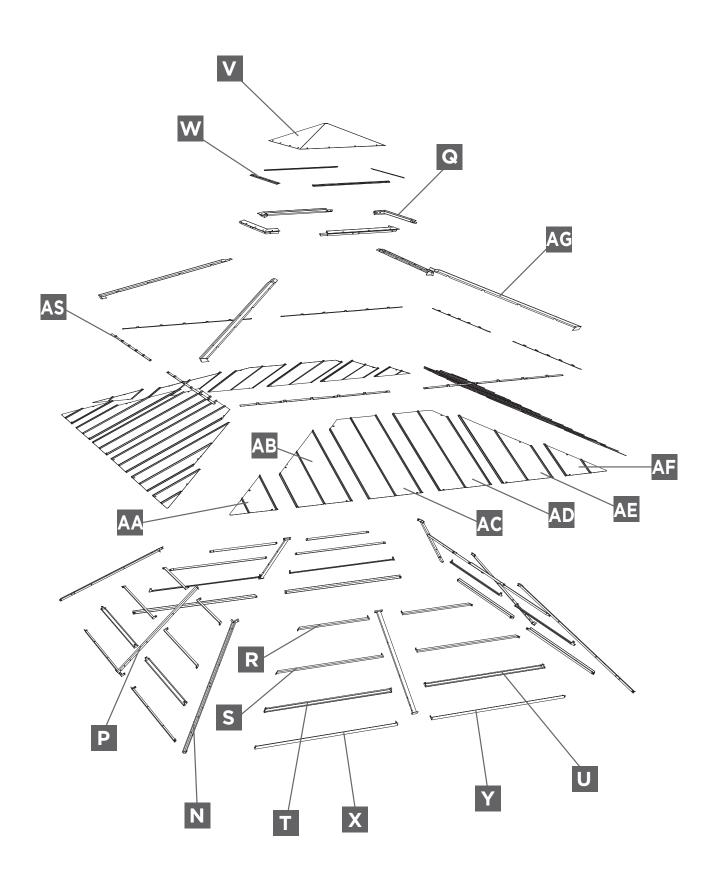

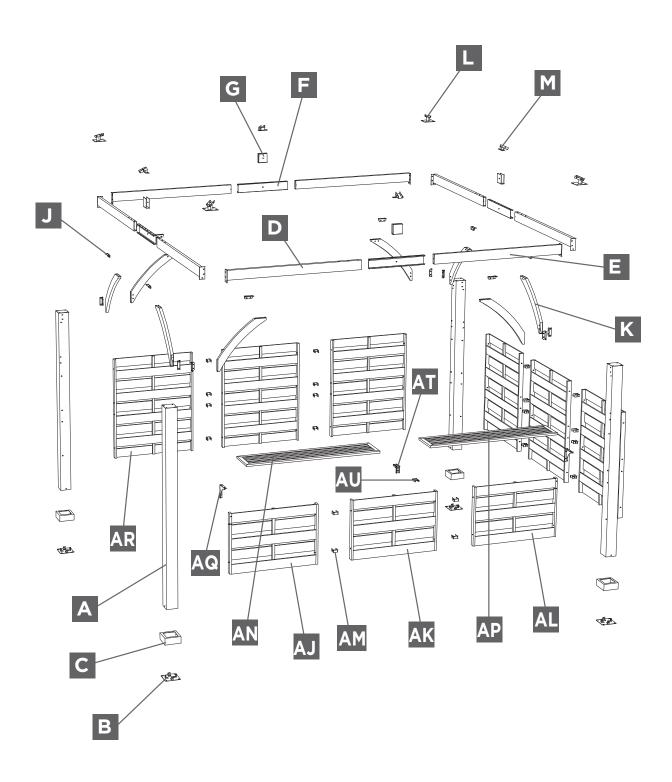


HARDWARE LIST

ITEM	DESCRIPTION	THUMBNAIL	QUANTITY
H1 H100010068	Bolt M6X15		16+1 Spare
H2 H100010047	Bolt M6X20		302+16 Spare
H3 H100010046	Bolt M6X40		28+2 Spare
H4 H100010051	Bolt M6X55		20+1 Spare
H5 H050030001	Flat Washer M6		20+1 Spare
H6 H040010004	Nut M6		20+2 Spare
HH1 H050050018	Washer rubber N	16	8+1 Spare
HH2 P00810002701	Plug M5.3*12		12+1 Spare
HS H070010003	Stake Φ8 *180		8
HW H090010017	Wrench M6		2

MAKE SURE ALL PARTS ARE PRESENT

 Compare all pieces to the parts and hardware lists, and make sure you have all tools required for assembly.




ASSEMBLE IN A CLEARED AREA

Place all parts from the box on the floor in front of you on a clean, dry, level surface to protect the product as it is being assembled.




REMOVE PACKAGING MATERIALS


Place packing materials back in the box. Do not dispose of packaging materials until assembly is complete.

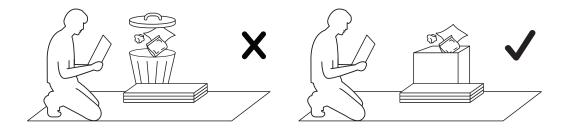



READ EACH STEP CAREFULLY


Make sure you understand each step. If you have questions, contact CANVAS™ customer service at 1-888-660-6684 (toll-free).

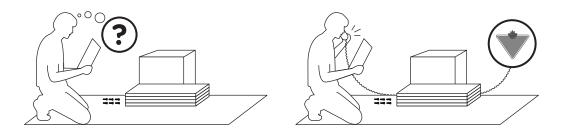


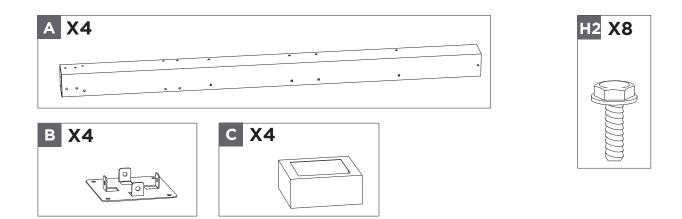


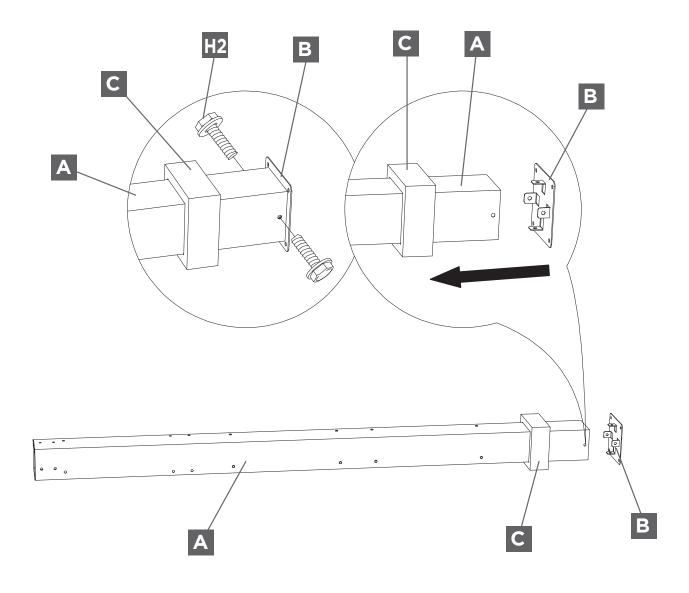


 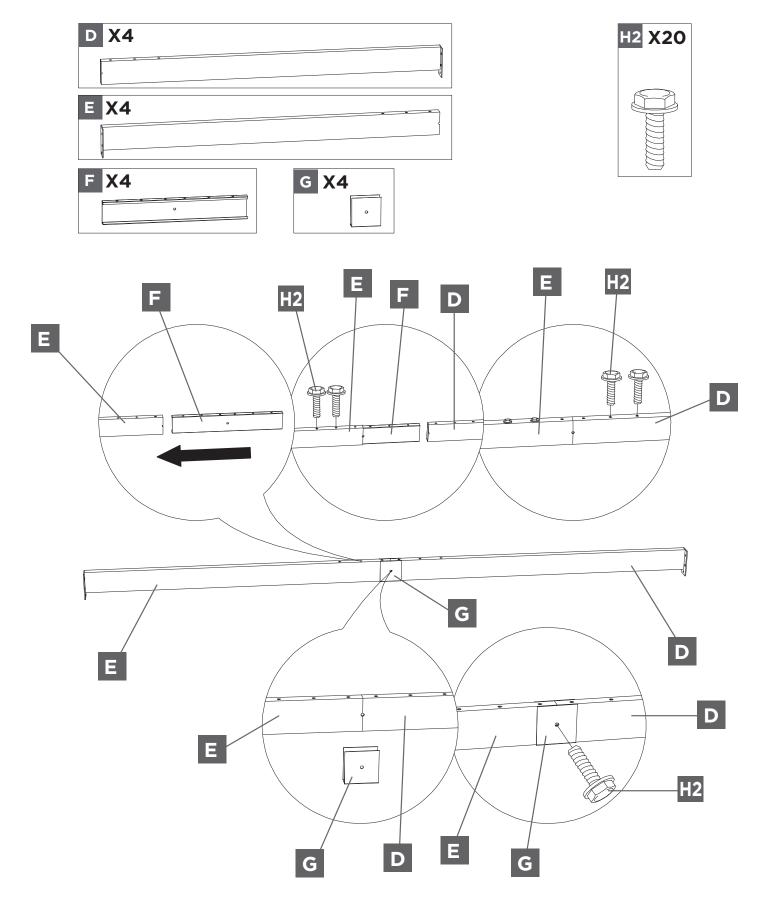


 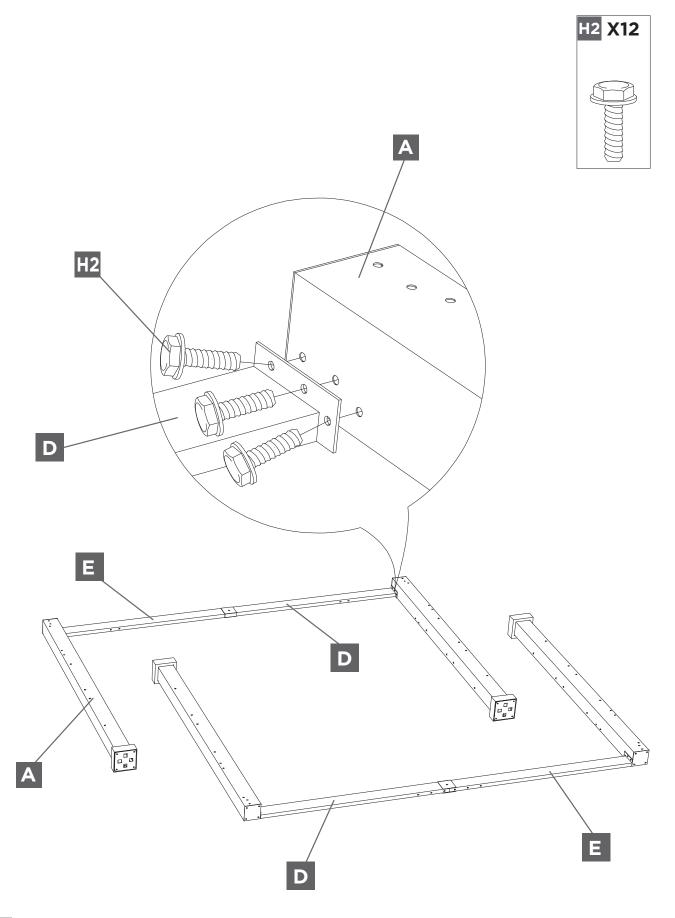


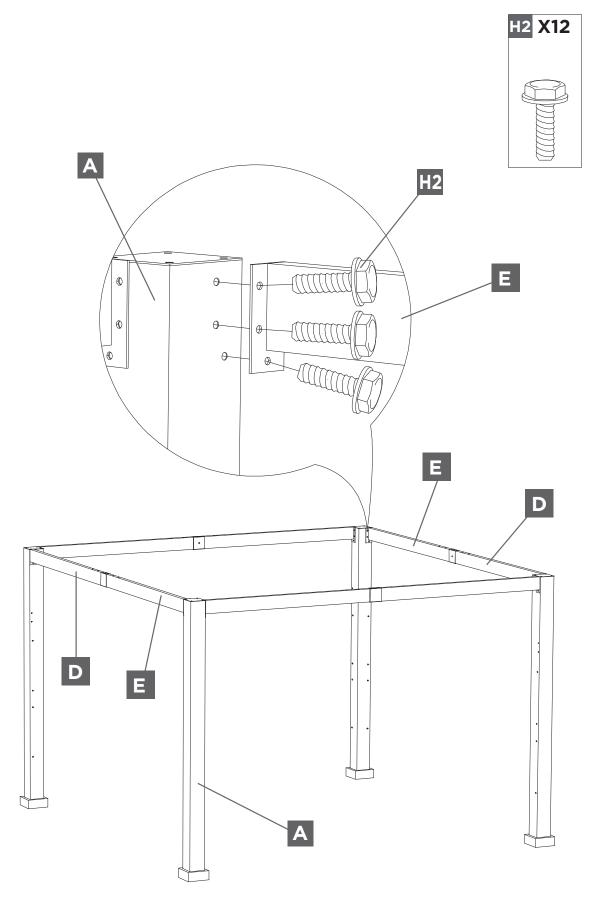


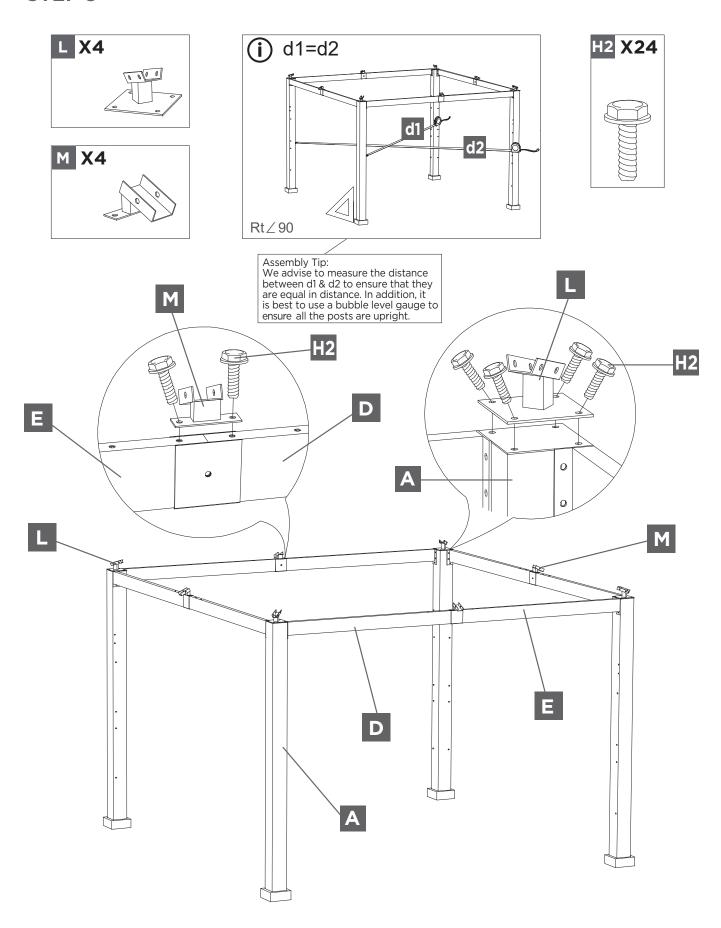


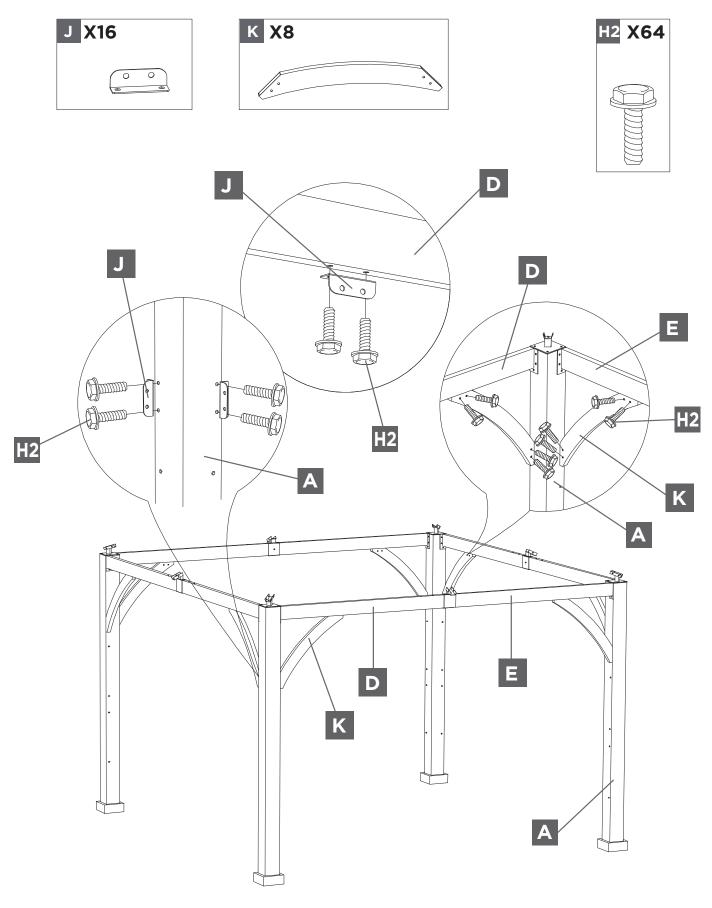








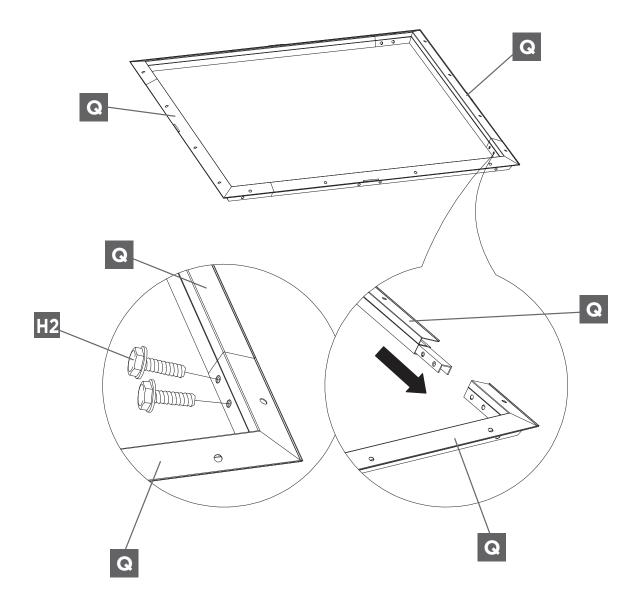


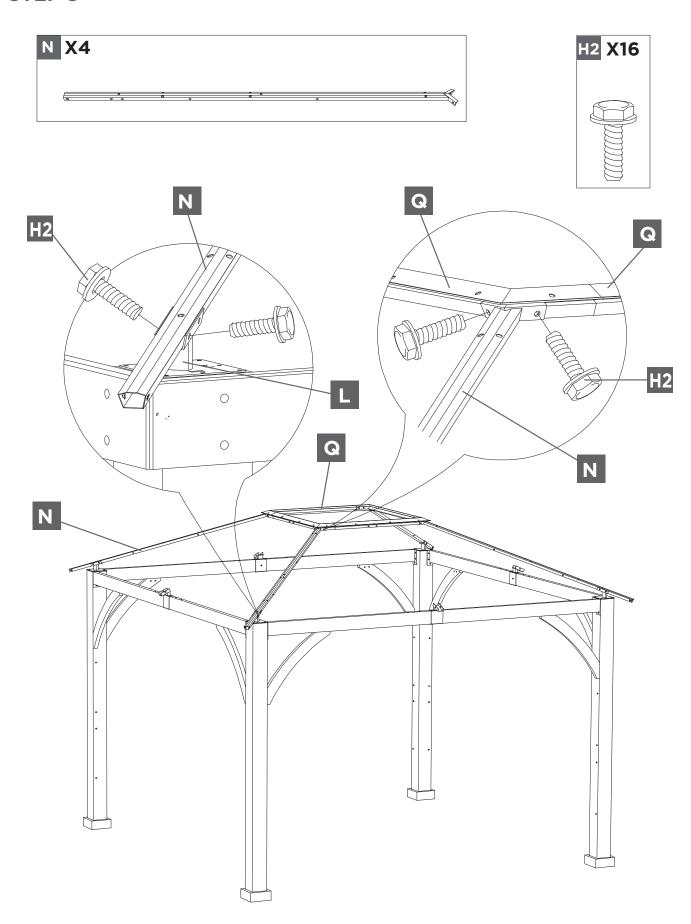


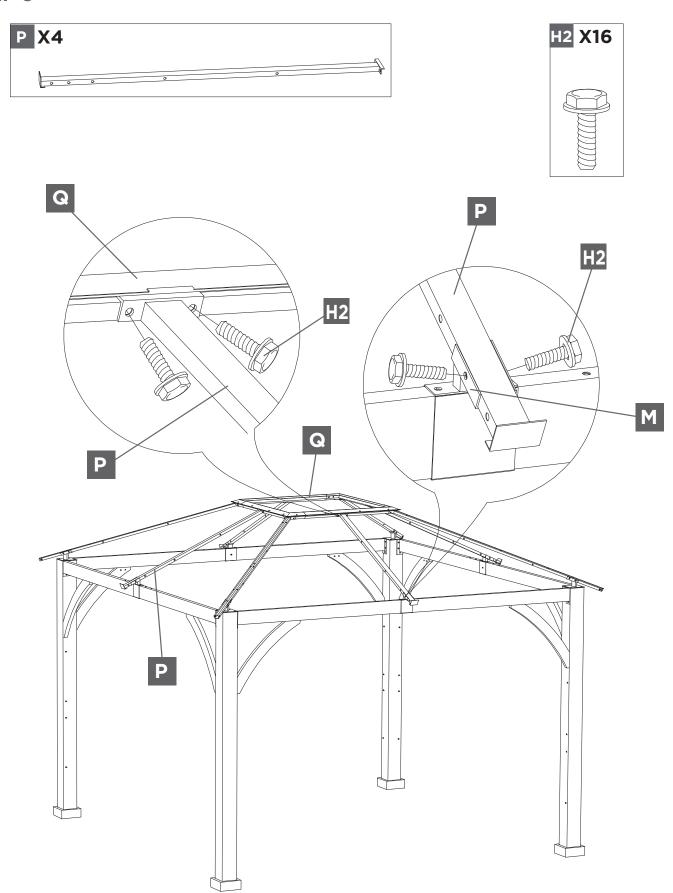


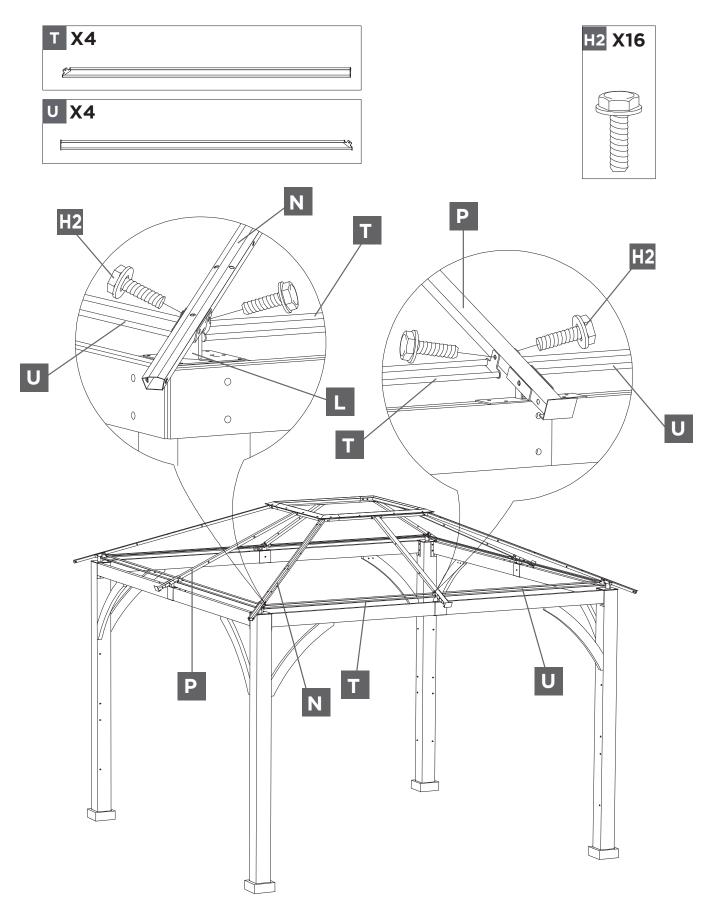


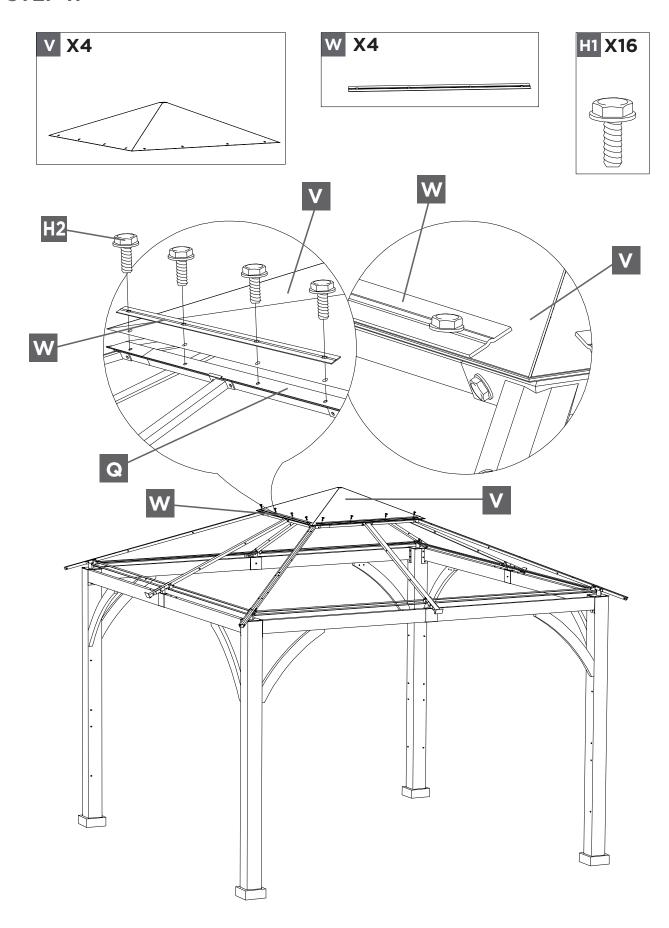


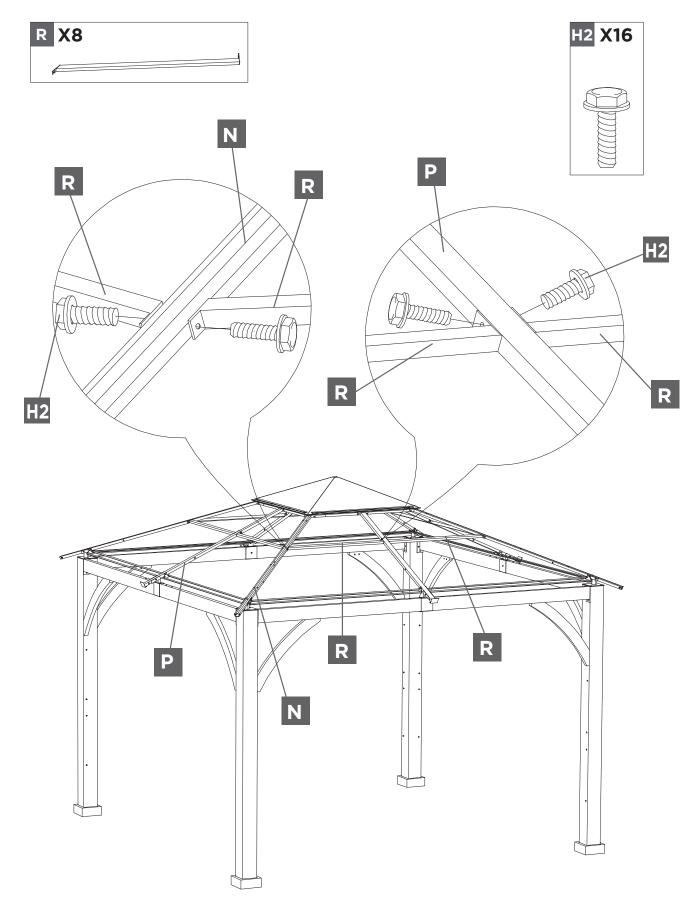


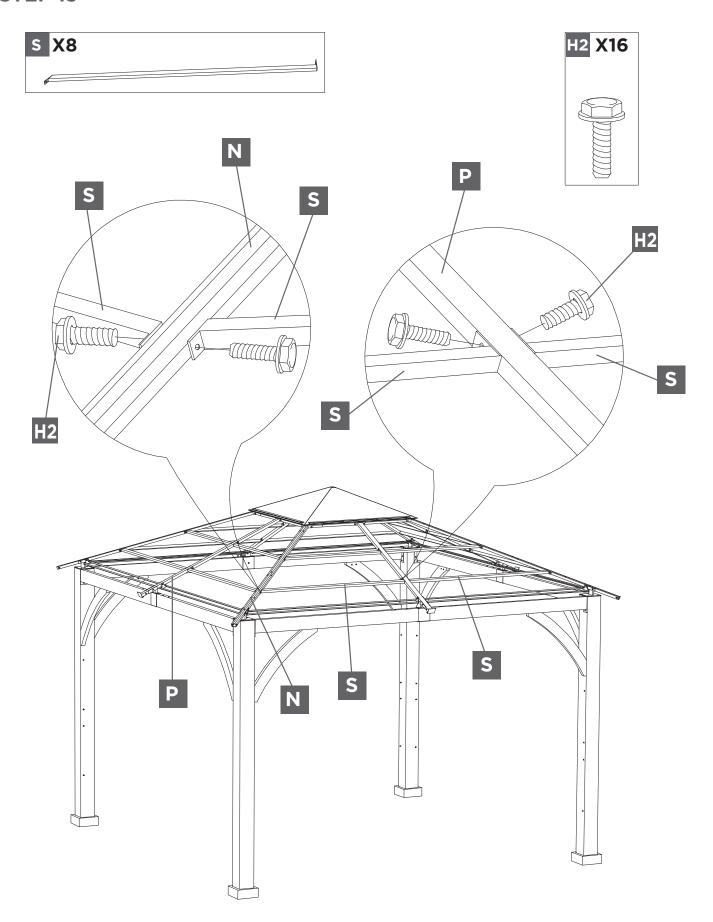


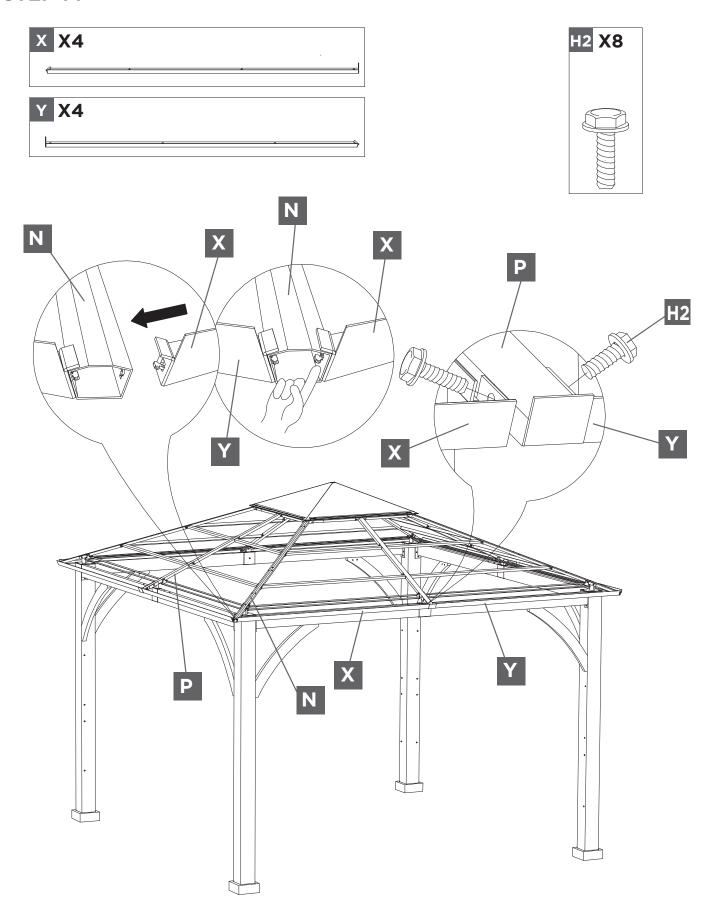


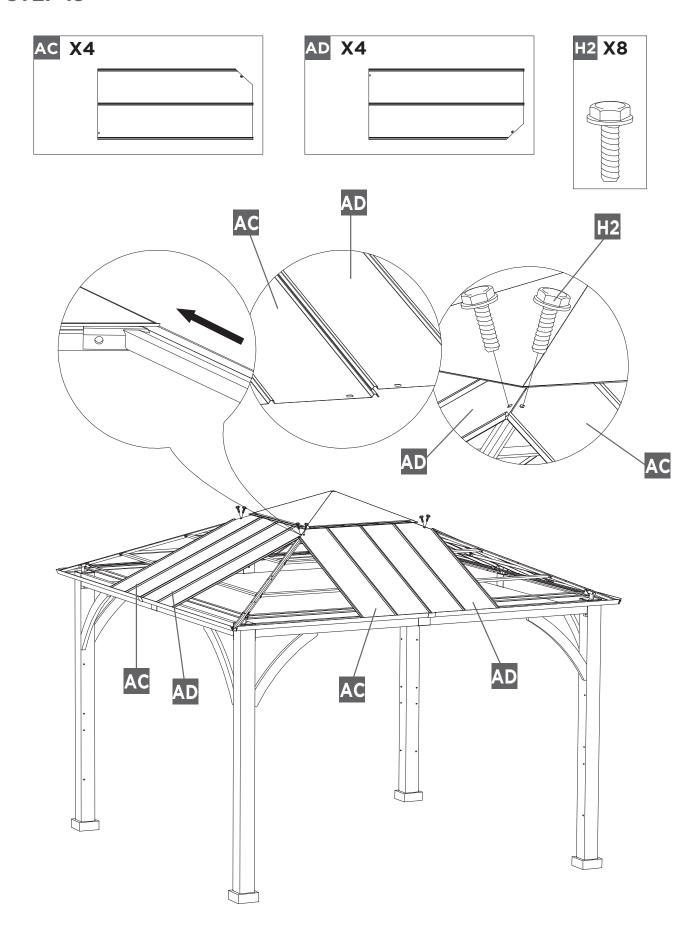

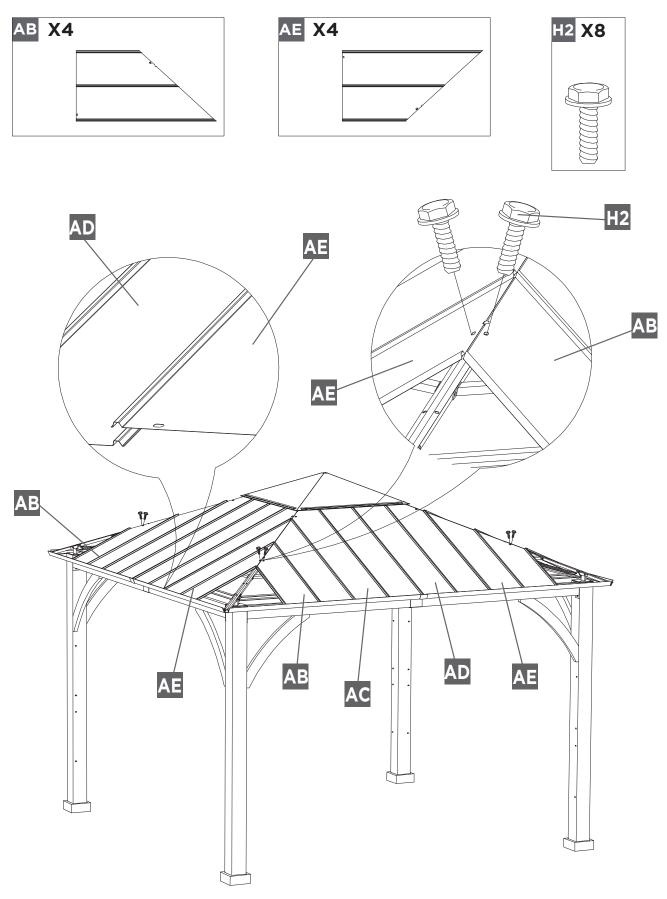


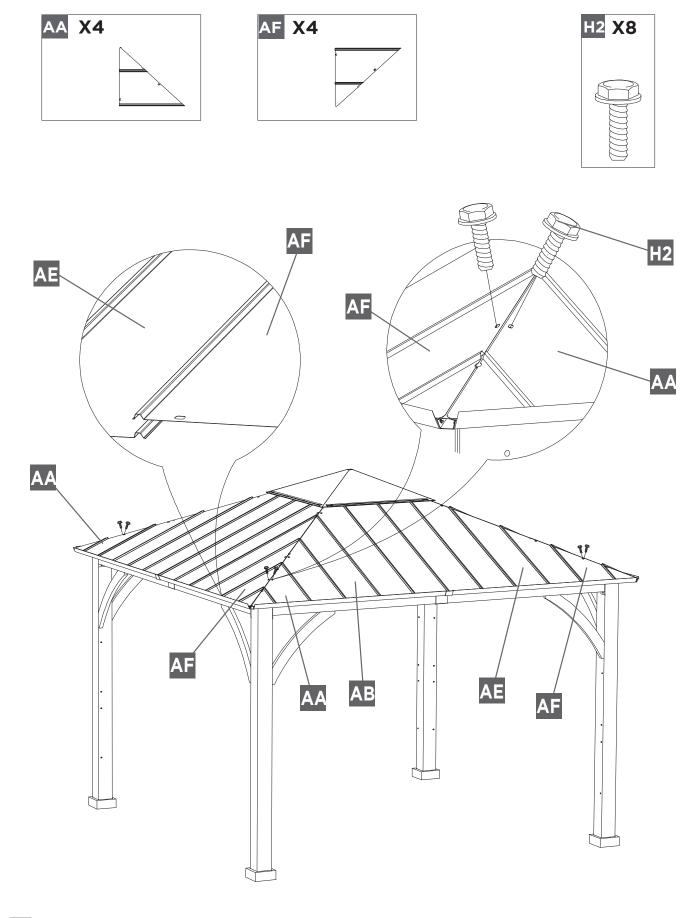


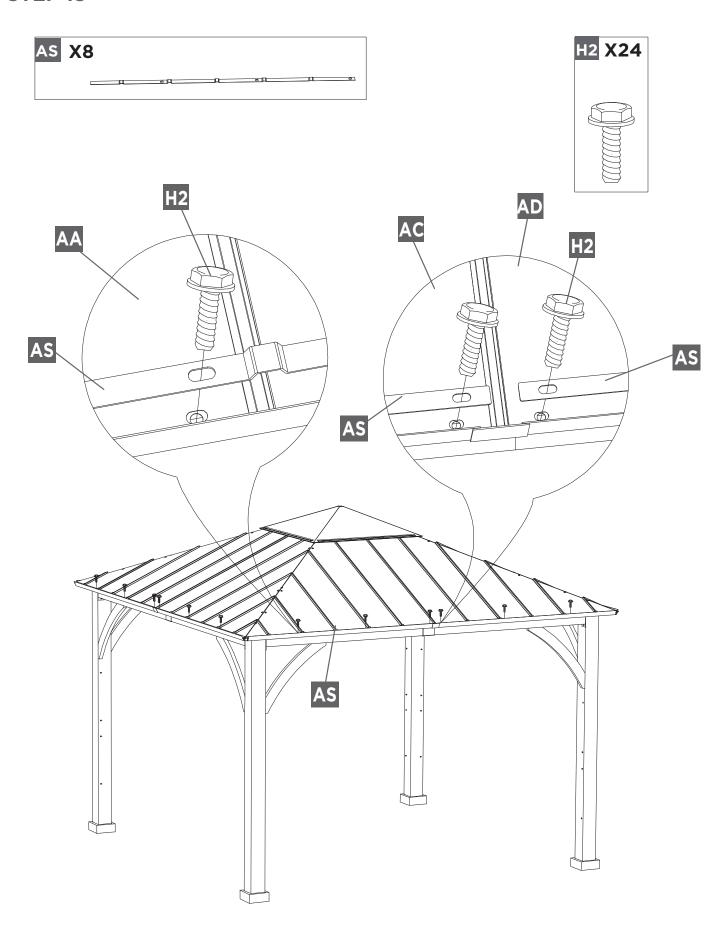


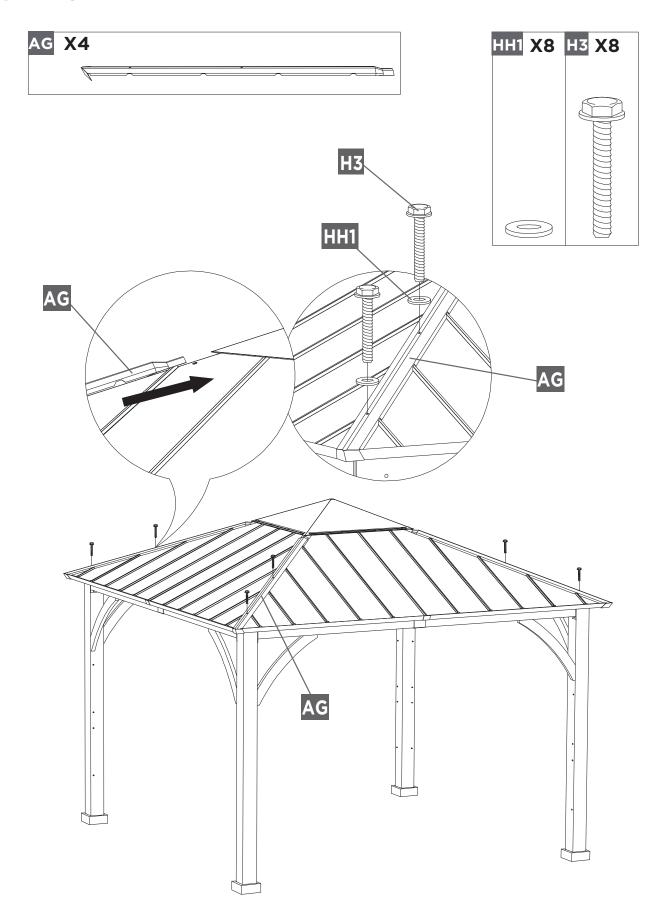


 
Tips: The privacy fencing and the bar are universal; you can customize your gazebo with the 3 options shown below.

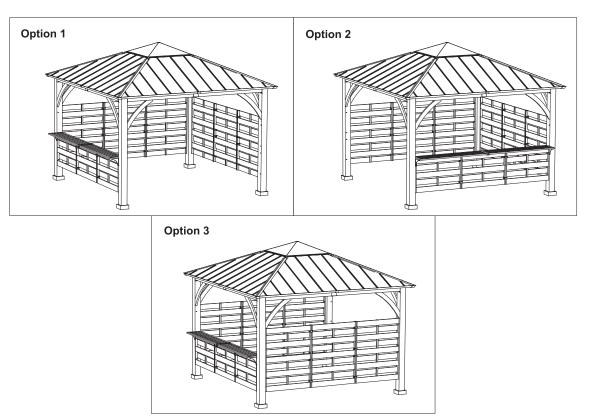


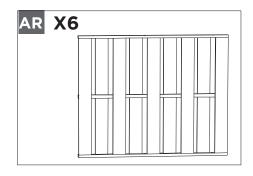





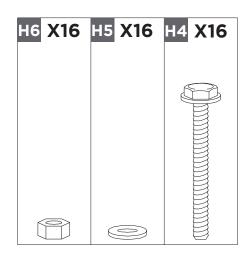


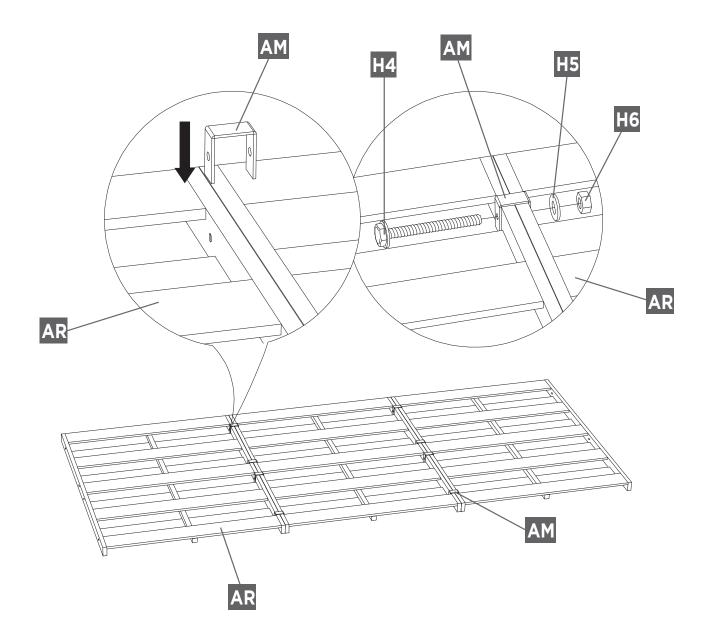


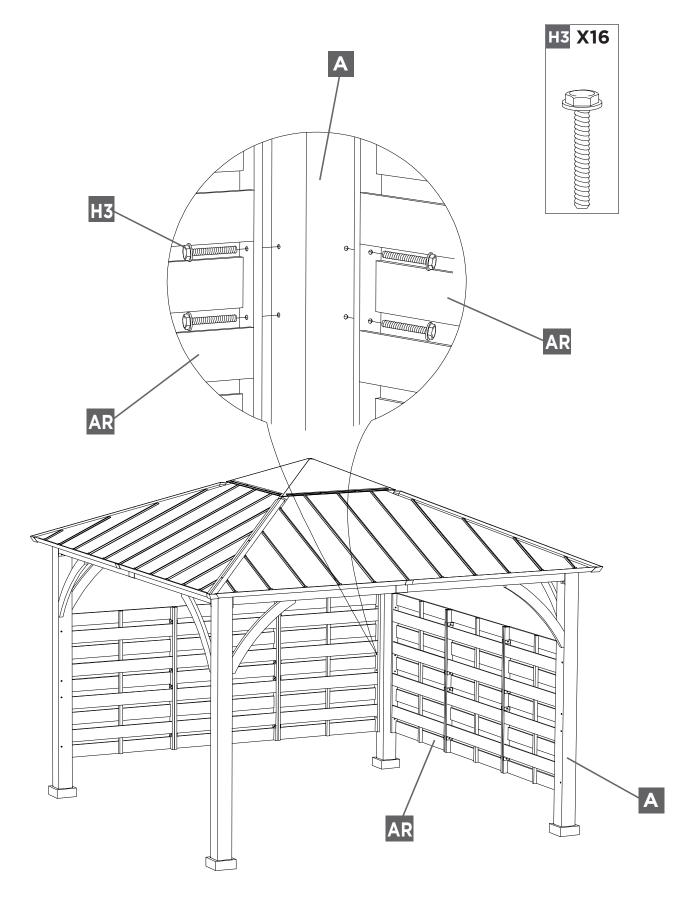


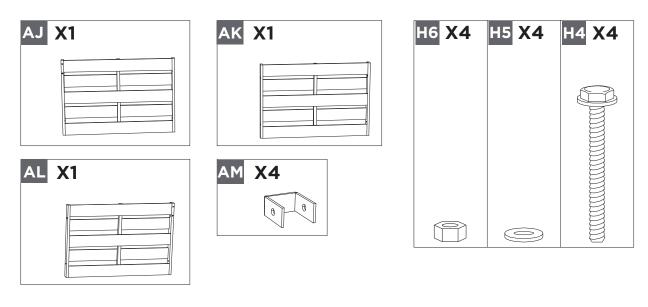


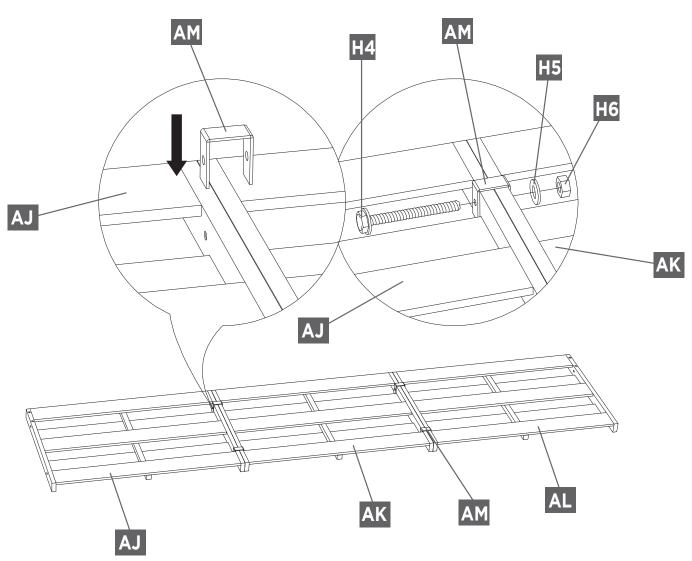

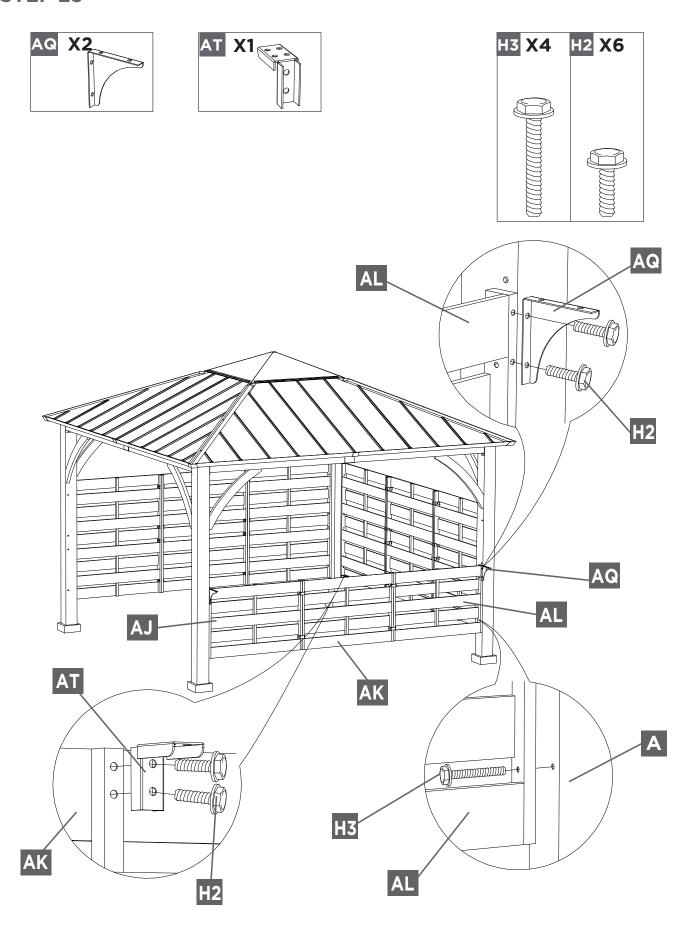


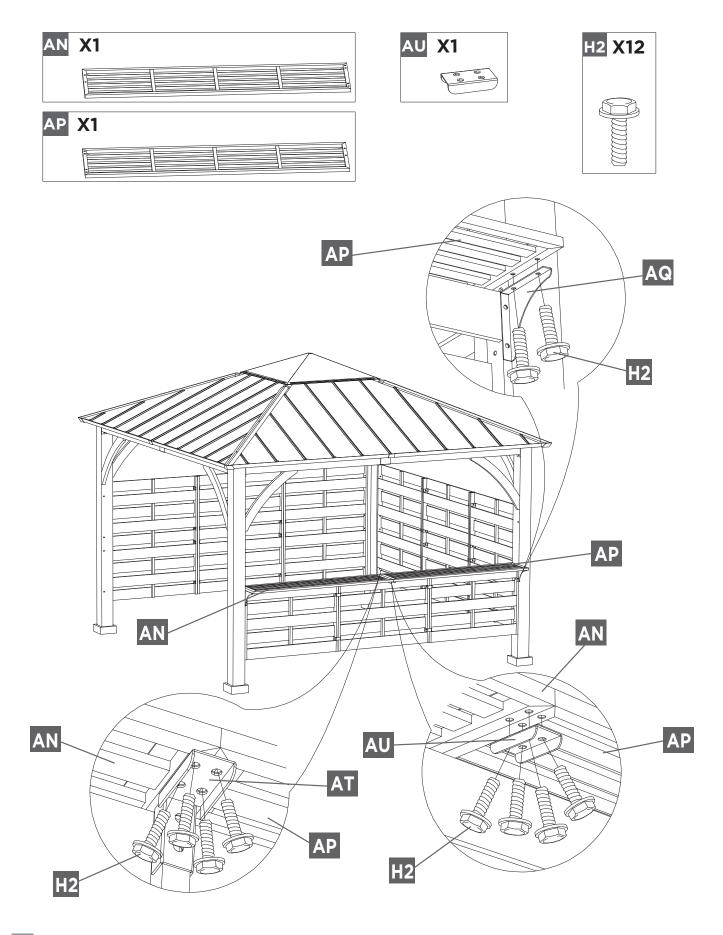

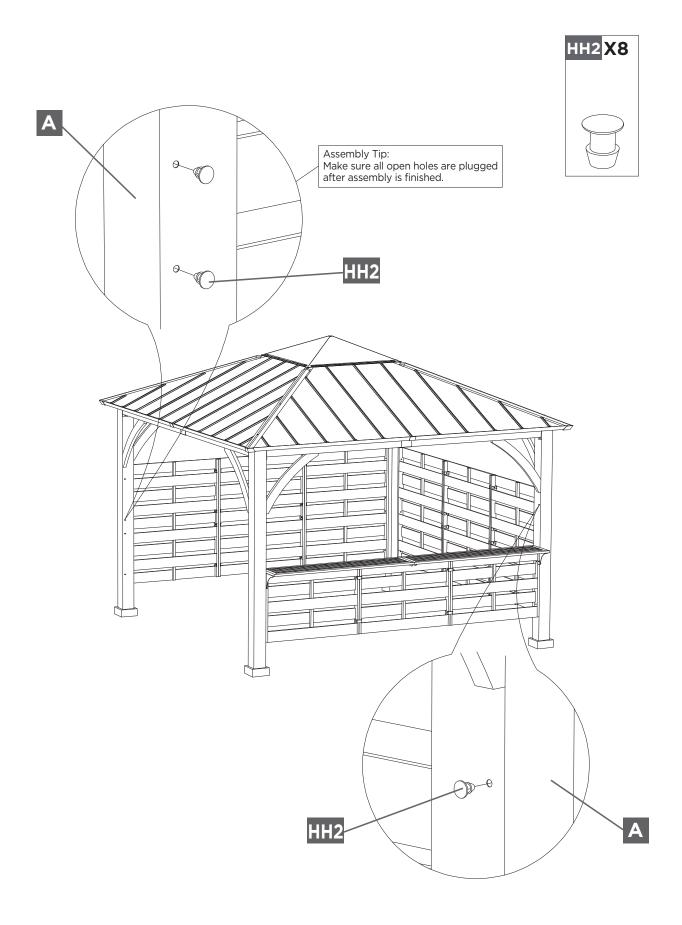

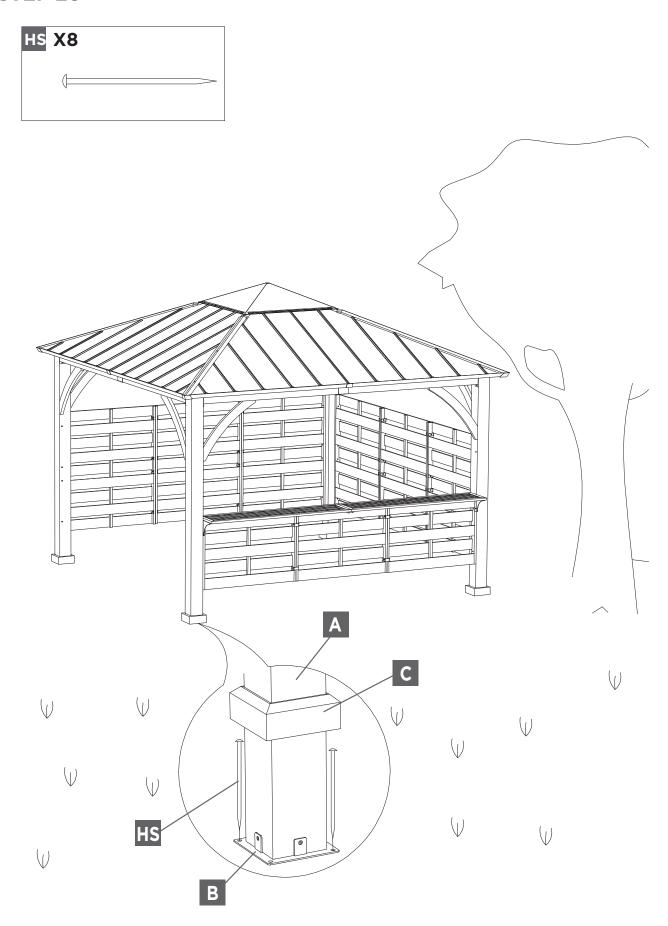

TECHNICAL DATA

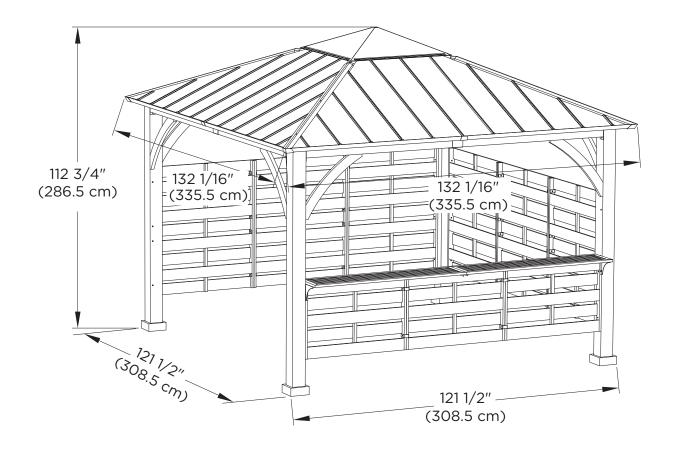

SPECIFICATIONS

ASSEMBLED DIMENSIONS (W x D x H)

132 1/16" x 132 1/16 x 112 3/4"

335.5 x 335.5 x 286.5 cm

ASSEMBLED WEIGHT

588 lb 9 oz

267 kg

TROUBLESHOOTING



HAVING TROUBLE? **LET US HELP YOU!**

TOLL-FREE: 1-888-670-6684



If you have questions regarding your product or require warranty assistance, please call our customer service helpline.

CARING FOR YOUR ITEM



CAUTION! CHECK ALL SCREWS AND NUTS PERIODICALLY FOR TIGHTNESS, FASTENING THEM AGAIN AS REQUIRED.

Always keep children under close supervision while they are using or around this product. Never leave children unattended.

This product is intended for outdoor use only.

Do not light any fires below or near the product.

Clean the gazebo with mild soap and water. Rinse thoroughly and wait until the product is dry before reassembling it.

Check all nuts and bolts periodically for tightness. When required, tighten them again.

Disassemble the gazebo in the reverse order of the assembly steps. Always disassemble the gazebo completely. A partially disassembled gazebo is not stable enough to resist wind and bad weather, and therefore can be damaged

Cleaning & **Use & Care** Instructions

Remove all excess snow from the roof.

and/or cause damage.

Do not shake, lean or climb on gazebo.

Clean and dry before storing in a dry, sheltered area. Do not use bleach, acid, or other abrasive cleaners on the canopies or frame parts.

Steel components for this gazebo are treated with rust inhibiting paint to prevent and limit rusting. However, due to the nature of steel, surface oxidation (rusting) will occur if these protective coatings are scratched. This is not a defect and thus not covered by the warranty. To minimize this condition, it is recommended to use care when assembling and handling the product to prevent scratching of the paint Should any scratching or damage occur, it is recommended to cover the scratch immediately with rust inhibiting paint (not included). Surface rust can also be easily removed with a very light application of regular cooking oil. If surface oxidation (rusting) occurs and if no measure is taken to prevent this, the oxidation may start dripping onto deck or patio and cause damaging stains, which may be difficult to remove. This can be prevented if the above-mentioned measures are taken to keep the product from oxidizing.

Keep instruction manual for future reference.

Keep the original packaging to store the gazebo.

WARRANTY INFORMATION



3 YEARS LIMITED WARRANTY*

This CANVAS product carries a three (3) year warranty against defects in workmanship and materials on the frame and 1 year warranty for the remaining parts. Trileaf Distribution agrees to replace a defective product free of charge within the stated warranty period, when returned by the original purchaser with proof of purchase. This product is not guaranteed against wear or breakage due to misuse and/or abuse.

MODEL NO. 088-2281-0

Made in China

Imported by Trileaf Distribution Trifeuil Toronto, Canada M4S 2B8

CANVAS



