

6 1/2' Mariposa Pre-Lit Colour-changing Tree and Bonus Garland

model no. 151-8403-4 | Toll-free number 1-866-827-4985

IMPORTANT: Please read this manual carefully before assembly and save it for reference.

TREE ASSEMBLY INSTRUCTIONS

Carefully follow the instructions below to quickly and easily set up your new tree.

1. Before you start to assemble your tree, choose an appropriate location near a wall outlet.
2. Assemble the tree stand and place on a level surface. (See Fig. A.)

Fig. A: Tree Stand Assembly

Pull apart the legs of the stand so that they are snapped into an X-shape and the screw holes are aligned. Place the tree stand on a level surface. Insert the tree screws into the screw holes and turn 3 – 4 rotations only (if the screws are inserted too far you will not be able to fully insert the tree pole).


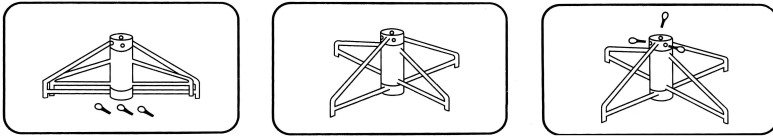 


Fig. B: Tree and Light Assembly

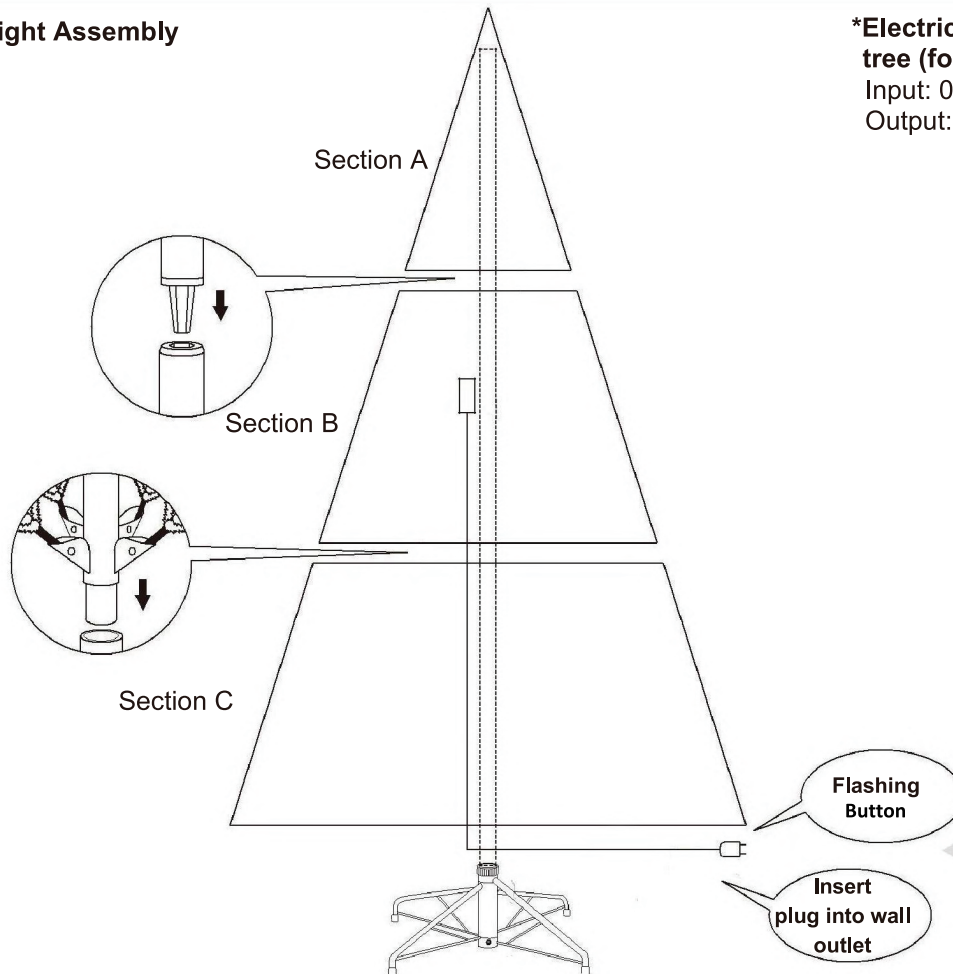 

***Electrical rating for the tree (for indoor use only).**

Input: 0.20 A 120 V 60 Hz

Output: 0.12 A 30 V

3. Each tree section is numbered with a tag. Please identify all sections before assembling.
4. Assemble the tree from the bottom C to the top A. Start with the bottom section C and remove protective cap before inserting into the assembled stand. Make sure the pole is firmly inserted and secured into the stand.
5. Continue by inserting the upper tree section(s) to the lower section(s) until inserting the tree top A.
6. Allow branches to fall into place or gently pull up and out. When adjusting branches, be sure that all wires are free of branch hinges.

- (For pre-lit trees only.) Connect the plug(s) securely to the extension cord(s) as per the colour labels indicated in **Fig. B**, and insert the extension cord plug into the wall outlet. Your entire tree should now be lit. If some bulbs do not light or flicker, search for any loose plugs.
- Begin to shape the branches and tips, working from the bottom to the top. Start with tips farthest from the pole and fan out one to the right, one to the left and one at the centre of the main stem. **(See Fig. C.)**



- After shaping the entire tree following the previous step, slightly upsweep all branch tips for a uniform look. Shift branches to fill any gaps. Your Christmas tree is now complete and ready to be decorated.

FLASH FUNCTION

The lights are 2-colour colour-changing LEDs. When the entire tree is lit, you may push the controller. The lights flash in ten different styles in circulation. The 9 flashing styles are:

Combination;

Colour-1 Steady On;

Colour-2 Steady On;

Colour-1 Flashing;

Colour-2 Flashing;

Colour-1 and Colour-2 Sequential;

Colour-1 and Colour-2 Twinkle;

Colour-1 and Colour-2 Slow Fade;

Slow Glow; and

Off

STORAGE INSTRUCTIONS

- Remove all ornaments and decorations. For pre-lit trees, first unplug extension cord from the wall outlet and then disconnect light extension cord between each section of the tree.
- Disassemble the tree from the top to the bottom. Start with the tree top; gently lift straight up to remove from section below, and fold all branches toward the pole.
- In case of difficulty separating the tree pole (trunk), apply a small amount of lubricant at the joint and rotate the upper pole in both directions. Lift up the upper pole again.
- Continue by gently lifting straight up each section from the section below and folding all branches toward the pole until the bottom section is removed from the tree stand.
- Carefully place all tree sections into shipping box and tape it shut.
- When not in use, please store your tree in a cool, dry place away from sunlight. Exposing your tree to excessive heat or humidity may damage your tree.
- Do not use with an extension cord unless plug can be fully inserted. Do not alter or replace the plug.

For pre-lit trees, if the tree does not illuminate:

- Please check to make sure that all plugs are properly connected and that the power cord is plugged into the wall outlet. Refer to assembly guide for instructions. (If the tree comes with a foot pedal, try stepping on the ON/OFF button.)
- When multiple products are connected together, do not exceed the lowest of the indicated maximum wattage on the cord tag near the connected product's receptacle.

Loose Hinge Rivet

 
Extra hinge rivets are included for repairing the hinges.

- Place the branch into the slot of the bracket.
- Insert a new hinge rivet through the hole and secure by clipping the end of rivet. **(See Fig. D.)**

CAUTION: Risk of fire. Do not replace attachment plug. Do not remove the safety device. Discard product if the attachment plug is damaged.

SPARE PARTS

Each tree includes hinge rivets. If extra parts are needed, please contact our customer service centre.

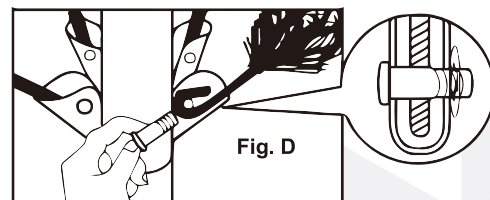

INSERTING THE BATTERIES

1. Locate battery compartment on the product.
2. Gently open the top cover of the battery case.
3. Insert 3 AA batteries as indicated in diagram below. Make sure the batteries are inserted in the correct direction and polarity.
4. Close the cover of the battery case, and the lights will turn on. If they do not immediately turn on, slide the ON-OFF switch.
5. BATTERIES ARE NOT INCLUDED.
6. Batteries must be recycled or disposed of properly. Dispose of as per the requirements of your local municipality.

FIG.1


 
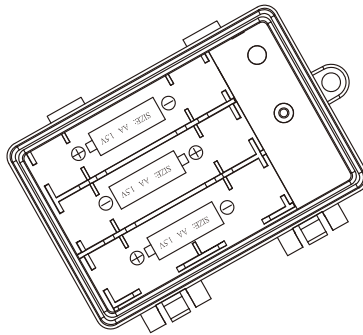 


FIG.2

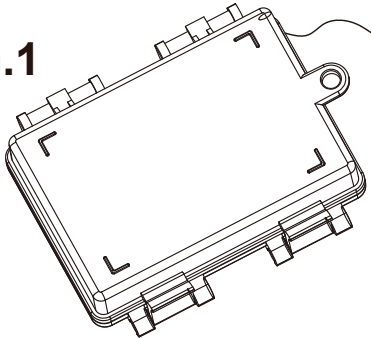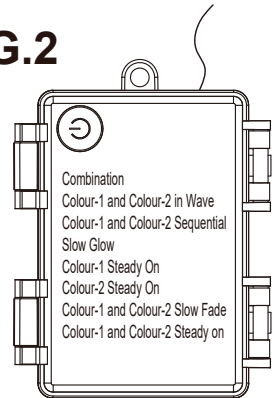 

OPERATING INSTRUCTIONS

This battery-operated control box comes with a pre-set timer function.

1. When you press on, the lights will automatically come on and stay lit for 6 hours.
2. The lights will automatically turn off after 6 hours and remain off for 18 hours. This cycle will then continue until you press off.

WARNING

1. Do not expose light set to moisture.
2. Do not mix alkaline, standard (carbon-zinc), lithium, or rechargeable (NiCd, NiMH or other type) batteries.
3. Remove batteries when not used for an extended period of time or when depleted.
4. Clean the battery contacts prior to battery installation.
5. Caution! When replacing the batteries, you must only replace with AA Alkaline type batteries.
6. Do not mix old and new batteries (or different types of batteries).
7. Use indoors only.
8. Batteries must be recycled or disposed of properly. Dispose of as per the requirements of your local municipality.

This product carries a five (5) year warranty against defects in workmanship and materials. NOMA Canada agrees to replace a defective product, within the stated warranty period, when returned to the place of purchase with proof of purchase. This product is not guaranteed against wear or breakage due to misuse and/or abuse.

Made in China

Imported by

NOMA Canada, Toronto, Canada M4S 2B8

CAN ICES-005(B)/NMB-005(B)

BO LIGHTS MODEL: AA*3-ABCDEFHI

