



Instruction Manual  
For indoor use only  
Retain carton for storage purposes

## 7 1/2' Fairbanks Tree

model no. 151-8407-6 | Toll-free number 1-877-483-6759

IMPORTANT: Please read this manual carefully before assembly and save it for reference.




### TREE ASSEMBLY INSTRUCTIONS

Carefully follow the instructions below to quickly and easily set up your new tree.


1. Before you start to assemble your tree, choose an appropriate location near a wall outlet.
2. Assemble the tree stand and place on a level surface. (See Fig. A.)

**Fig. A - Tree Stand Assembly**

Pull apart the legs of the stand so that they are snapped into an X-shape and the screw holes are aligned, then place the tree stand on a level surface. Insert the tree screws into the screw holes and turn 3 – 4 rotations only (if the screws are inserted too far you will not be able to fully insert the tree pole).

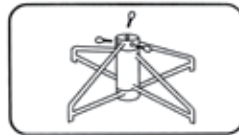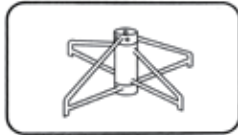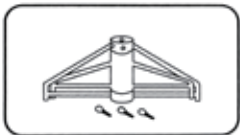   

**Fig. B - Tree Assembly**

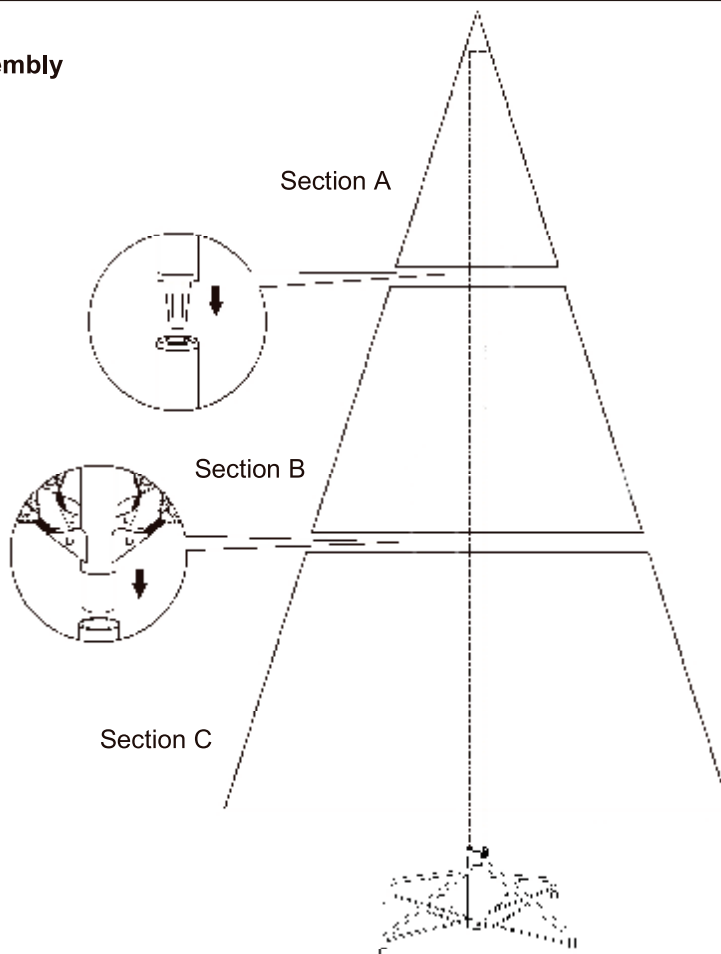 

3. Each tree section is numbered with a tag. Please identify all sections before assembling. (See Fig. B.)
4. Assemble the tree from the bottom section C to the top section A. Start with the bottom section C and remove protective cap before inserting into the assembled stand. Make sure the pole is firmly inserted and secured into the stand.
5. Continue by inserting the upper tree section(s) to the lower section(s) until inserting the tree top A.
6. Allow branches to fall into place or gently pull up and out. When adjusting branches, be sure that all wires are free of branch hinges.

7. Begin to shape the branches and tips, working from the bottom to the top. Start with tips farthest from the pole and fan out one to the right, one to the left and one at the centre of the main stem. **(See Fig. C.)**




8. After shaping the entire tree following the previous step, slightly upsweep all branch tips for a uniform look. Shift branches to fill any gaps. Your Christmas tree is now complete and ready to be decorated.

## STORAGE INSTRUCTIONS

 1. Remove all ornaments and decorations.
2. Disassemble the tree from the top to the bottom. Start with the tree top; gently lift straight up to remove from section below, and fold all branches toward the pole.
3. In case of difficulty separating the tree pole (trunk), apply a small amount of lubricant at the joint and rotate the upper pole in both directions. Lift up the upper pole again.
4. Continue by gently lifting straight up each section from the section below and folding all branches toward the pole until the bottom section is removed from the tree stand.
5. Carefully place all tree sections into shipping box and tape it shut.
6. When not in use, please store your tree in a cool, dry place away from sunlight. Exposing your tree to excessive heat or humidity may damage your tree.

### Loose Hinge Rivet

1. Extra hinge rivets are included for repairing the hinges. Place the branch into the slot of the bracket.
2. Insert a new hinge rivet through the hole and secure by clipping the end of rivet. **(See Fig. D.)**

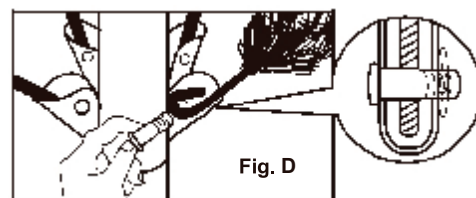

## SPARE PARTS

Each tree includes spare hinge rivets. If extra parts are needed, please contact our customer service centre.

This product carries a one (1) year warranty against defects in workmanship and materials. NOMA Canada agrees to replace a defective product, within the stated warranty period, when returned to the place of purchase with proof of purchase. This product is not guaranteed against wear or breakage due to misuse and/or abuse.

Made in China

Imported by

TRILEAF DISTRIBUTION TRIFEUIL TORONTO, CANADA M4S 2B8