

NOMA®

4' Halston Pre-Lit Flocked Colour-Changing Potted Tree


model no. 151-8571-2

Instruction Manual
For indoor and outdoor covered use
Retain carton for storage purposes

ASSEMBLY:

- 1) Insert the bottom tree trunk into the pot, and then insert the treetop into the bottom tree section.
- 2) Shape the branches by working from the bottom of the tree upwards. Gently pull down the branches. Straighten the branches and fan out the tips.
- 3) Connect the plug(s) securely as shown on the left. Connect the plugs between the two tree sections, and also the plugs between the bottom tree section and the foot pedal. Plug the adaptor into the wall outlet. Turn on the lights by lightly tapping on the foot pedal controller. The controller box has 9 different light functions, and the function will change each time the pedal is pressed.

- 1) Warm White
- 2) Multi-colour
- 3) Fading Warm White
- 4) Fading Multi-colour
- 5) Alternating Fading Warm White and Multi-colour
- 6) Flashing Warm White
- 7) Flashing Multi-colour
- 8) Flashing Warm White and Multi-colour
- 9) Quick Flashing Warm White and Multi-colour
- 10) Off

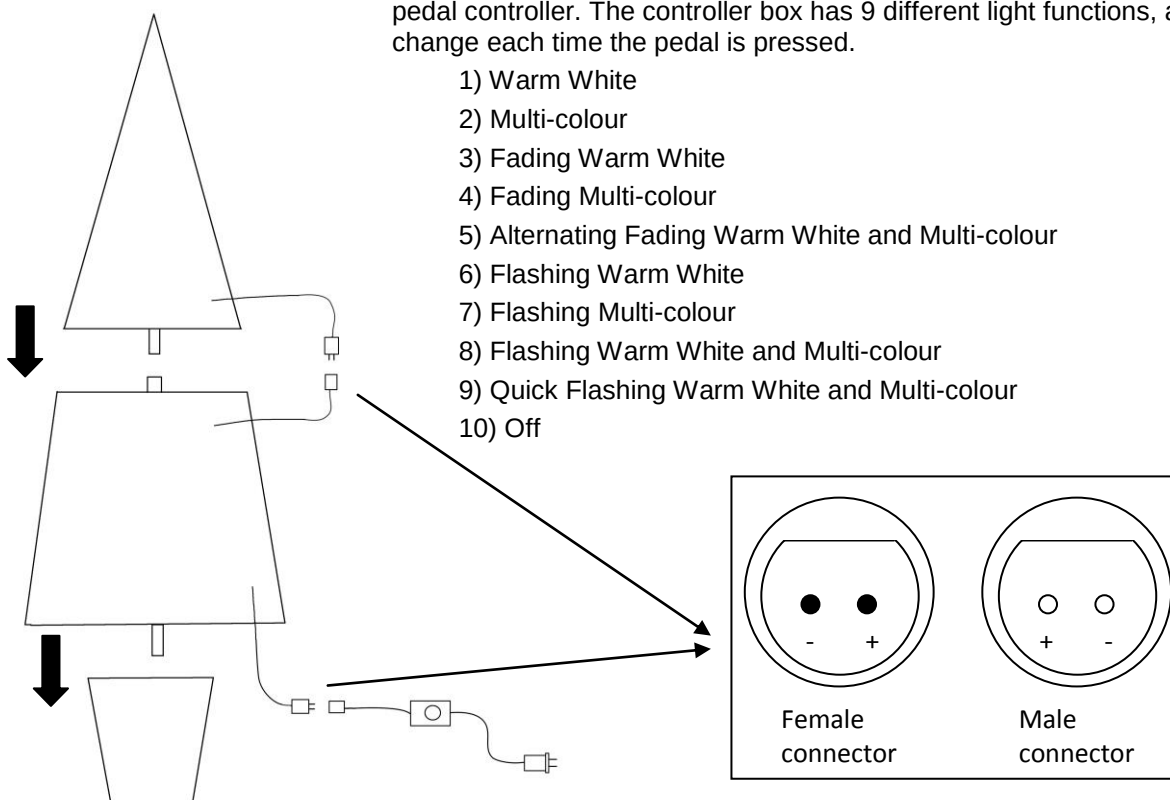

STORAGE:

- 1) Unplug the tree from the wall outlet. Disconnect the light strings between each tree section.
- 2) Remove all decorations from the tree.
- 3) Carefully lift off the treetop from the bottom section. Carefully lift off the bottom section from the pot.
- 4) Store in the original carton.
- 5) Do not store in direct sunlight, in a damp area, or in an area where the temperature exceeds 40°C (104°F).

IMPORTANT SAFETY INSTRUCTIONS

When using electrical products, basic precautions should always be followed including the following:

READ AND FOLLOW ALL SAFETY INSTRUCTIONS

- 1) Do not use seasonal products outdoors unless marked suitable for indoor and outdoor use. When products are used in outdoor applications, connect the product to a Ground Fault Circuit Interrupting (GFCI) outlet. If one is not provided, contact a qualified electrician for proper installation.
- 2) This seasonal use product is not intended for permanent installation or use.
- 3) Do not mount or place near gas or electric heaters, fireplaces, candles, or other similar sources of heat.
- 4) Do not secure the wiring of the product with staples or nails, or place on sharp hooks or nails.
- 5) Do not let lamps rest on the supply cord or on any wire.
- 6) Unplug the product when leaving the house, or when retiring for the night, or if left unattended.
- 7) This is an electric product — not a toy! To avoid risk of fire, burns, personal injury, and electric shock, it should not be played with or placed where small children can reach it.
- 8) Do not use this product for other than its intended use.

- 9) Do not hang ornaments or other objects from cord, wire, or light string.
- 10) Do not close doors or windows on the product or extension cords as this may damage the wire insulation.
- 11) Do not cover the product with cloth, paper, or any material not part of the product when in use.
- 12) Read and follow all instructions that are on the product or provided with the product.

SAVE THESE INSTRUCTIONS

CAUTION: To reduce the risk of fire and electric shock:


Do not install on trees having needles, leaves or branch coverings of metal or materials which look like metal; and
Do not mount or support wires in a manner that can cut or damage wire insulation.”

Use and care instruction.

- a) When the product is placed on a live tree, the tree should be well maintained and fresh. Do not place on live trees in which the needles are brown or break off easily. Keep the live tree holder filled with water.
- b) If the product is placed on a tree, the tree should be well secured and stable.
- c) Before using or reusing, inspect product carefully. Discard any products that have cut, damaged, or frayed wire insulation or cords, cracks in the lampholders or enclosures, loose connections, or exposed copper wire.
- d) When storing the product, carefully remove the product from wherever it is placed, including trees, branches, or bushes, to avoid any undue strain or stress on the product conductors, connections, and wires.
- e) When not in use, store neatly in a cool, dry location protected from sunlight.

If the lights do not work:

- 1) Ensure the power outlet is working correctly. Check whether the cord is properly plugged into the outlet.
- 2) Ensure the light strings on the tree are securely connected in the correct orientation. The light connectors can only be connected in one orientation. The light will have the wrong colour or will not light up at all if the polarity is wrong.

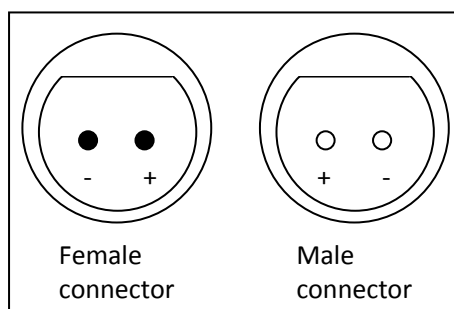

This NOMA product carries a five (5) year warranty against defects in workmanship and materials. NOMA Canada agrees to replace a defective product, within the stated warranty period, when returned to the place of purchase with proof of purchase. This product is not guaranteed against wear or breakage due to misuse and/or abuse.

MADE IN CHINA
Imported by NOMA Canada
Toronto, Canada M4S 2B8