


CANVAS^{TM/MC}

RECHARGEABLE BATTERY WALL SCONCE

PRODUCT NO. 000-0000-0

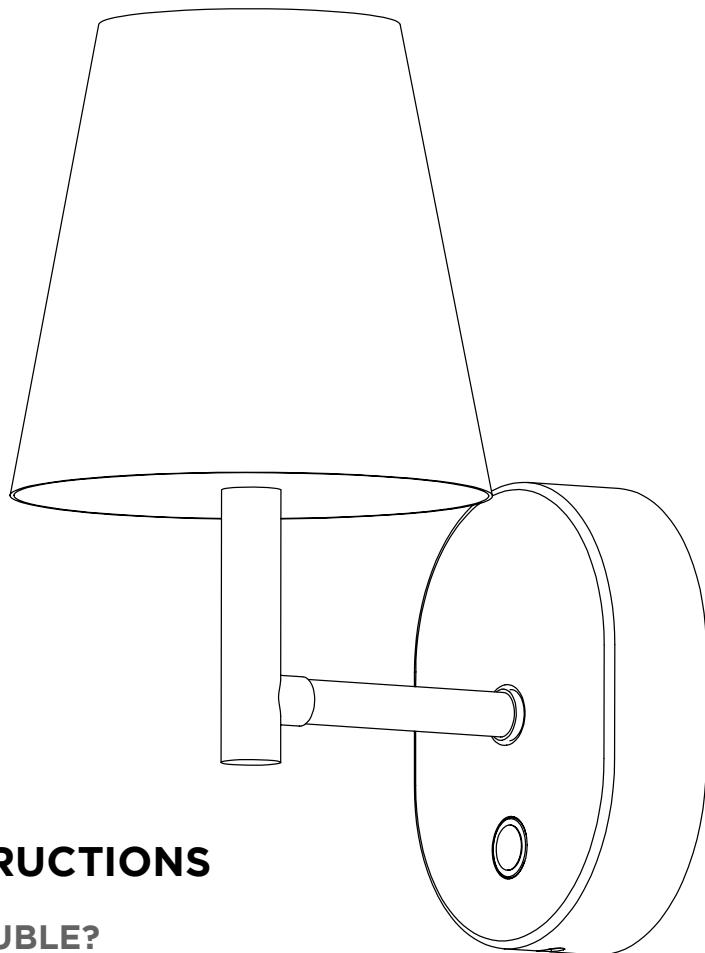

ASSEMBLY INSTRUCTIONS



HAVING TROUBLE?

TOLL-FREE:

1-888-670-6684

IMPORTANT: Please read this manual carefully before beginning assembly of this product. Keep this manual for future reference.

CANVAS™

REDISCOVER YOUR SPACE



We believe in the power of décor and its ability to make up the fabric of your home.

That's why **CANVAS™** collections draw **inspiration from Canadians and the way they live.**

From on-trend furniture pieces to holiday décor and all your outdoor living essentials, **CANVAS™** makes it easy to refresh your space to reflect **your unique style and the way you live every day.**

We would love to hear from you and welcome your thoughtful feedback. Visit our website at **canadiantire.ca** to tell us about your experience, and share your photos with us using **#myCANVASstyle**.

Show us how you bring **CANVAS™** products to life. We can't wait to see!

TABLE OF CONTENTS

Important Safety Instructions	3	Technical Data	11
Parts List	4	Troubleshooting	12
Before You Begin Assembly	6	Caring for Your Item	12
Step-by-step Guide	7	Warranty	13

IMPORTANT: RETAIN FOR FUTURE REFERENCE, AND READ CAREFULLY.

CLEANING: Before cleaning your fixture, turn off the switch or power source. Wipe the fixture with a soft, damp cloth.

WARNING: This unit has a non-replaceable integrated LED diffuser. DO NOT REMOVE.




IMPORTANT SAFETY INSTRUCTIONS READ INSTRUCTIONS AND REVIEW ALL DIAGRAMS BEFORE INSTALLING FIXTURE. GENERAL INSTRUCTIONS:


1. All electrical connections must be in accordance with local codes, ordinances and the Canadian Electrical Code.
2. Turning the light switch off to cut the power is not sufficient to prevent electric shock. When in doubt about the safety of any electrical installation or repair, consult a qualified electrician.

CAN ICES (B)/NMB (B)

TOOLS REQUIRED

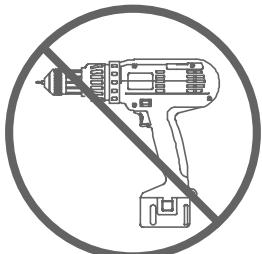

NOTE: Do not over drill/
Be aware of over-drilling

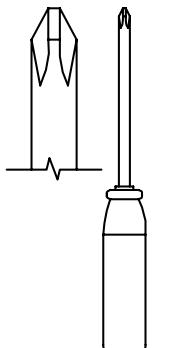




No. 2 Phillips Screwdriver
Tip Shown Actual Size

Pencil


PARTS LIST

ITEM	DESCRIPTION	THUMBNAIL	QUANTITY
1	Wall sconce		1

   HARDWARE LIST

ITEM	DESCRIPTION	THUMBNAIL	QUANTITY
A	Mounting screw		2
B	Wall anchor		2
C	Mounting bracket		1
D	5 ft. USB-C charging cable		1


EXPLODED PARTS

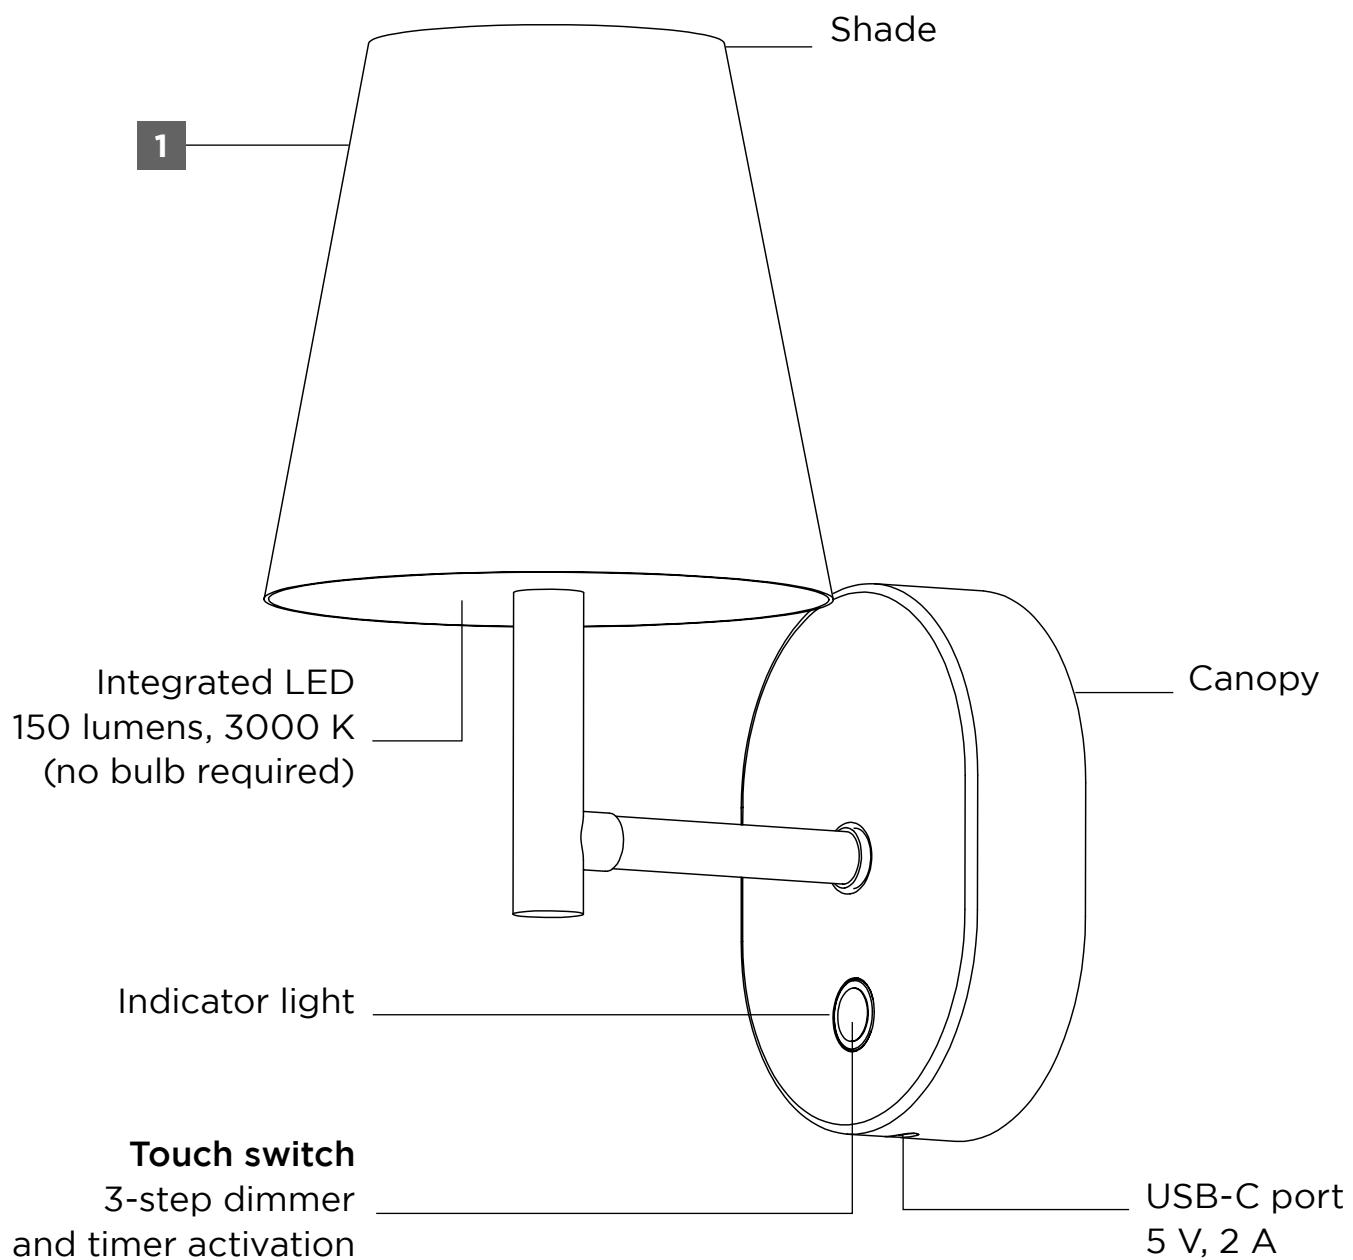

BEFORE YOU BEGIN ASSEMBLY


MAKE SURE ALL PARTS ARE PRESENT

Compare all pieces to the parts and hardware lists, and make sure you have all tools required for assembly.

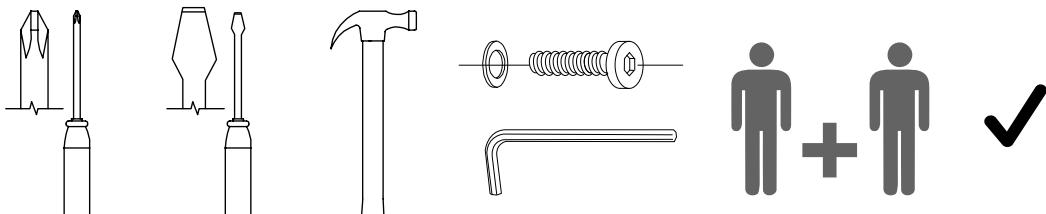


ASSEMBLE IN A CLEARED AREA

Place all parts from the box on the floor in front of you in a clean, dry, level surface to protect the product as it is being built.

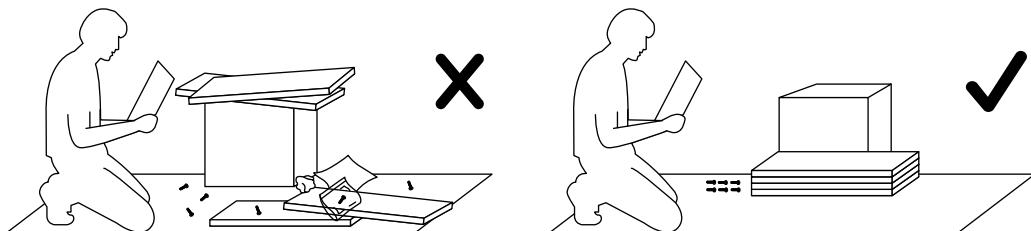


REMOVE PACKAGING MATERIALS

Place packing materials back in the box. Do not dispose of packaging materials until assembly is complete.

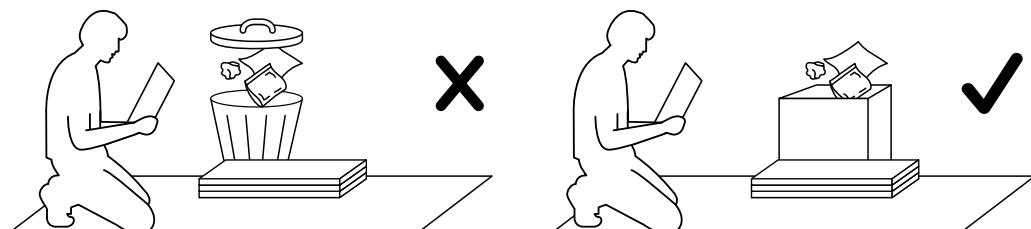


READ EACH STEP CAREFULLY

Make sure you understand each step. Or if you have any questions, contact CANVAS™ customer service at 1-888-660-6684 (toll-free)

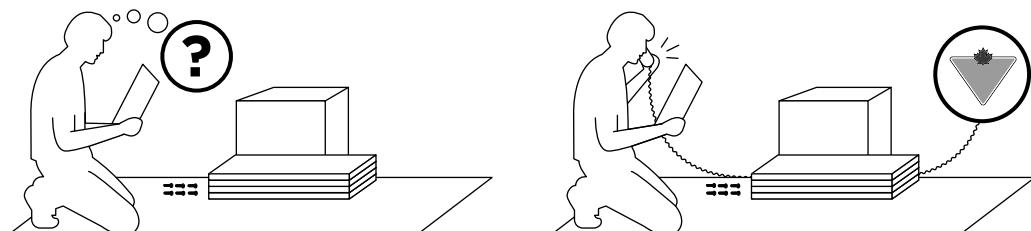

STEP-BY-STEP GUIDE

STEP 1

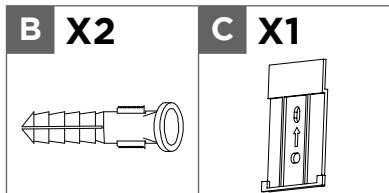

NOTE:

Prior to use, we suggest fully charging the battery before installing the wall sconce.


After selecting the ideal location for your wall sconce, position the mounting bracket **C** against the wall, making sure the arrow is facing you and pointing upwards. Hold in place and ensure that the mounting bracket **C** is level.

Mark the 2 holes with a pencil on the wall.

Remove the mounting bracket **C** from the wall.

Use a drill (not included) to create the pilot holes.

Insert the wall anchors **B** into the holes.

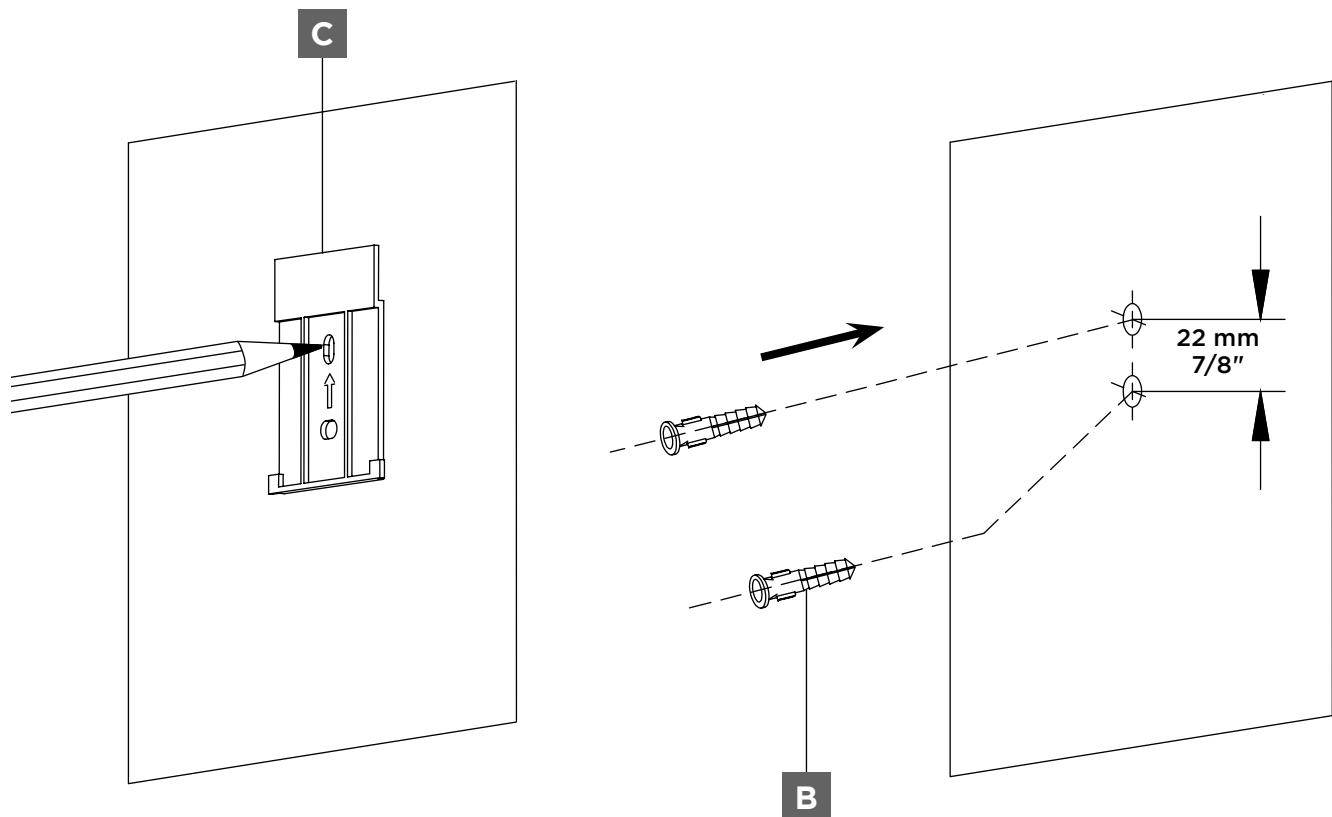

STEP-BY-STEP GUIDE


STEP 2

A X2




Align the screw holes on the mounting bracket **C** with the wall anchors **B**

Using a screwdriver, attach the mounting bracket **C** to the wall by screwing in the mounting screws **A** into the wall anchors **B**. After the mounting bracket **C** is securely fastened to the wall, it should feel stable and not wobble or move when pulled.

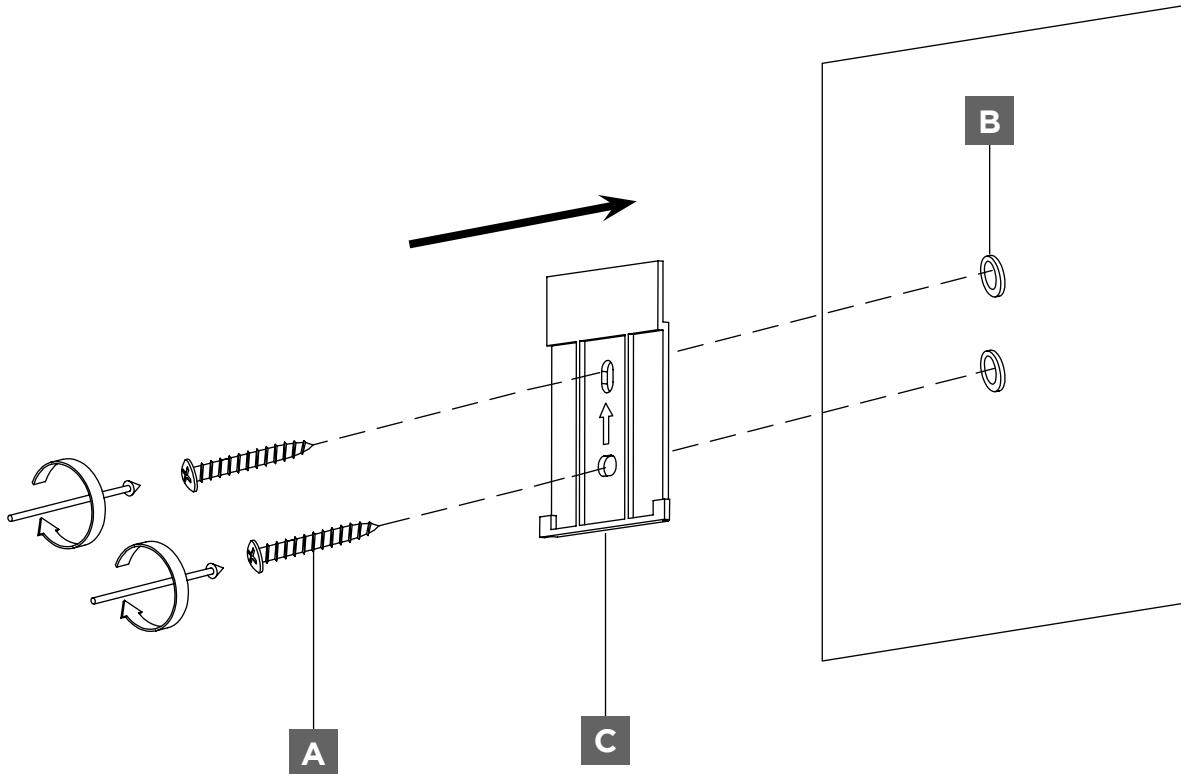

STEP-BY-STEP GUIDE

STEP 3

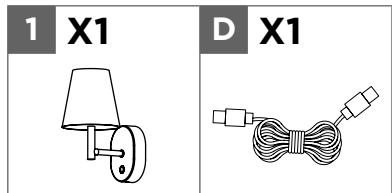


NOTE:

It can take up to 3 hours to fully charge.

To mount your wall sconce **1** easily, align the canopy directly to the mounting bracket **C**. When you feel the tabs of the mounting bracket **C** slotting perfectly into the back of the canopy, slide it down to lock it in place.

Attach the cable **D** to the port on the wall sconce **1** to charge the fixture.

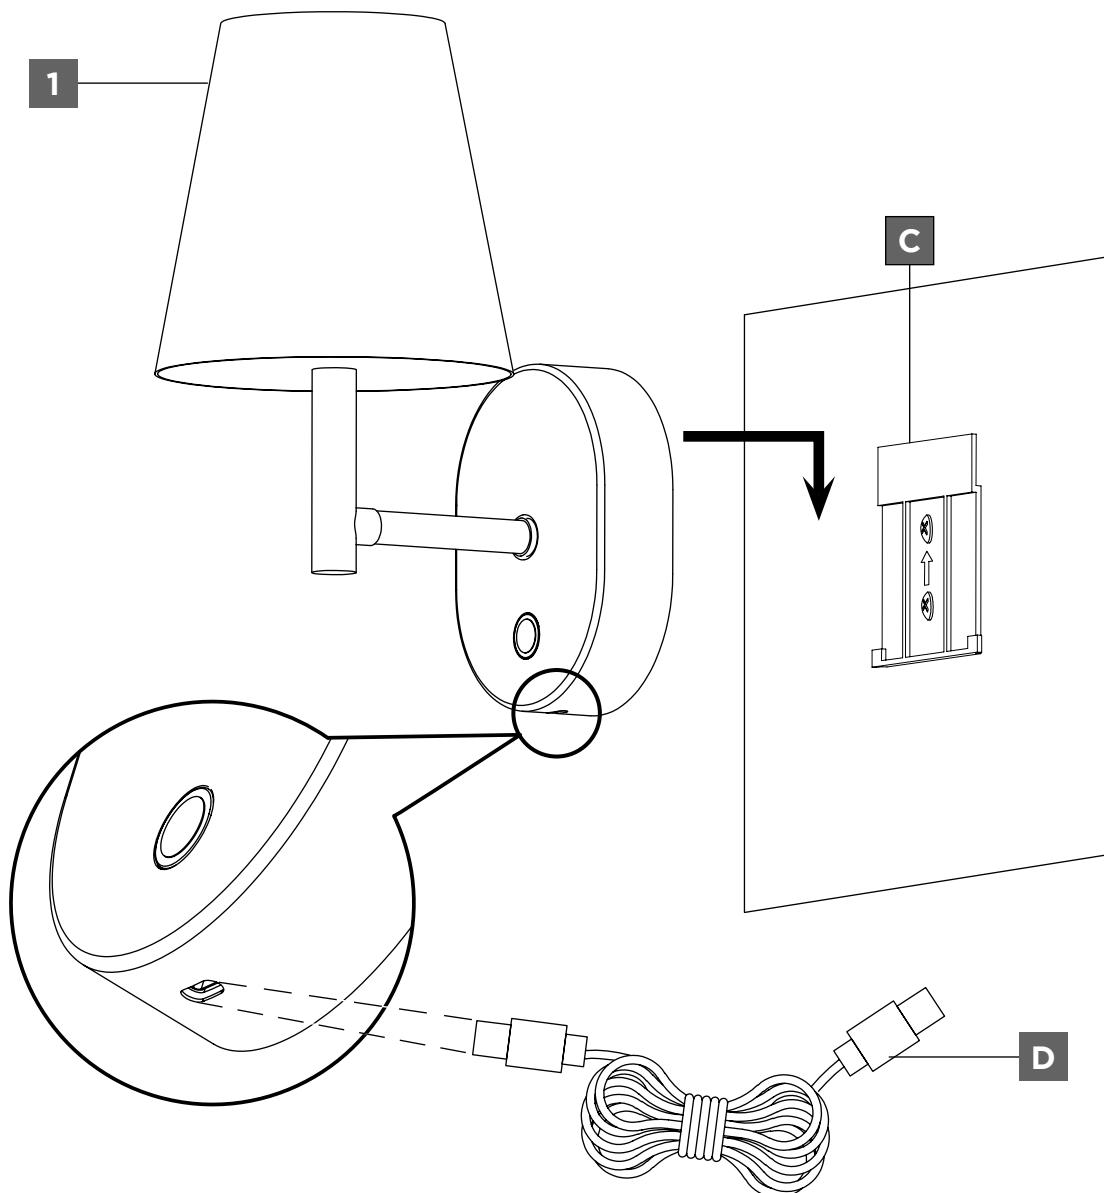


STEP-BY-STEP GUIDE

TOUCH SWITCH

ADJUSTING THE BRIGHTNESS

To turn on the light, touch once. To set the light to your desired brightness, use the chart below.

OPERATION	BRIGHTNESS LEVEL
Touch 1 time	Low
Touch 2 times	Medium
Touch 3 times	High

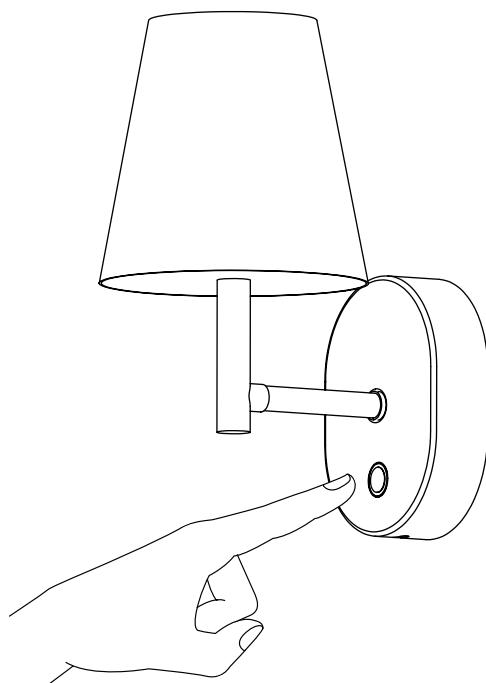


TIMER ACTIVATION

Hold the switch for 3 seconds to activate the 1-hour timer. The wall sconce will automatically turn off after 1 hour.

INDICATOR LIGHT

FEATURE	INDICATOR LIGHT	DESCRIPTION
Timer	Blue	Turns on to indicate the 1-hour timer is activated (the indicator light automatically turns off after 1 minute).
Battery	Flashing red	Turns on to indicate low battery (only when the main light is on).
Battery	Red	Turns on to indicate the battery is charging (the indicator light automatically turns off when the battery is fully charged).
Dual light	Purple	When both indicator lights are ON (blue light for timer, and red light for battery), your indicator light will appear purple. For example, when activating the timer while battery is low or when activating the timer while charging.

TECHNICAL DATA

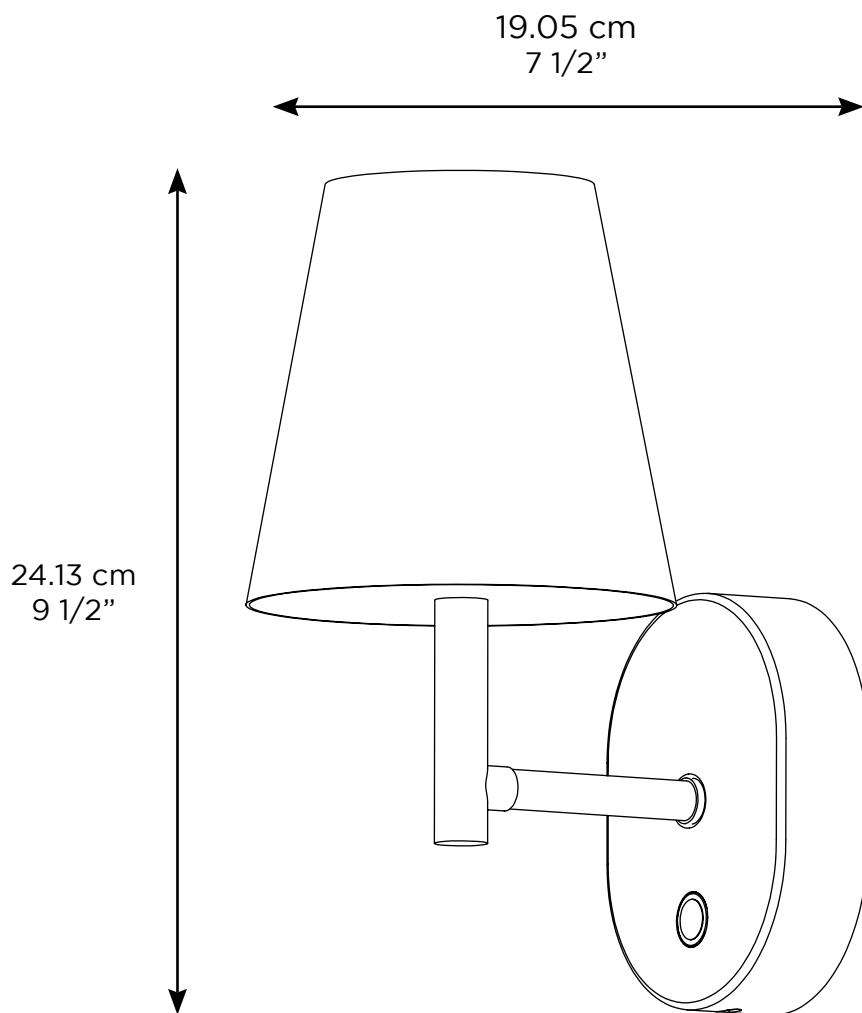

SPECIFICATIONS

ASSEMBLED DIMENSIONS (WxDxH)

15.24 x 19.05 x 24.13 cm

6 x 7 1/2 x 9 1/2"

ASSEMBLED WEIGHT

0.99 lb

0.45 kg

USB-C CHARGING CABLE

5 ft

1.52 m

ASSEMBLY TROUBLESHOOTING



**BEFORE RETURNING
YOUR PRODUCT**

**HAVING TROUBLE?
LET US HELP YOU!**

**TOLL-FREE:
1-888-670-6684**

If you have questions regarding your product or require warranty assistance, please call our customer service helpline.



**CALL US,
WE CAN HELP**

PRODUCT TROUBLESHOOTING

PROBLEM

The light will not turn on.

SOLUTION

Make sure it's fully charged.

The timer is not working.

Contact customer service.

The dimming feature option is not working.

Contact customer service.

The battery is not charging.

Contact customer service.

CARING FOR YOUR ITEM

- 1 Before cleaning your wall sconce, turn off the switch.
- 2 Clean this unit periodically. Clean the surface finish only using a soft, dry cloth.
- 3 Never use a rough cloth, abrasives or chemical cleaners containing acids or harsh solvents.

WARRANTY INFORMATION



1-YEAR LIMITED WARRANTY*

This CANVAS™ product carries a one (1) year warranty against defects in workmanship and materials. Trileaf Distribution agrees to replace the defective product free of charge within the stated warranty period, when returned by the original purchaser with proof of purchase. This product is not guaranteed against wear or breakage due to misuse and/or abuse.

PRODUCT NO. 000-000-0

Made in China

Imported by Trileaf Distribution Trifeuil Toronto, Canada M4S 2B8

CANVASTM

REDISCOVER YOUR SPACE

