 




Tilt-out Laundry Hamper

Product No. 168-0142-4

Assembly Instructions

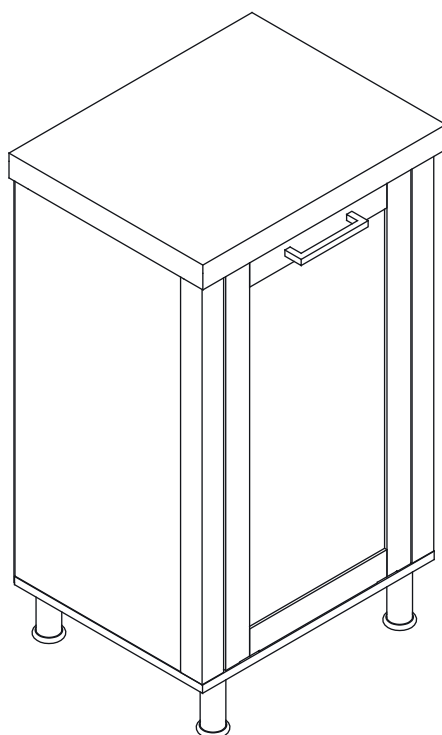

NEED HELP? GIVE US A CALL!
WE'RE HERE FOR YOU.

TOLL-FREE:
1-877-483-6759

IMPORTANT: Please read this manual carefully
before beginning assembly of this product.
Keep this manual for future reference.



From your first apartment to
downsizing your family home,
For LIVING® is a great place to start.

Uncomplicate your life with timeless
style and reliable quality that delivers
everyday solutions for your home.

Let us know how our products
work for you. Rate and review at
canadiantire.ca

Table of Contents




| | | | |
|---------------------------|---|--------------------------|----|
| Parts List | 4 | Adjust Levellers | 23 |
| Exploded Parts | 5 | Technical Data | 24 |
| Hardware List | 6 | Assembly Troubleshooting | 25 |
| Before You Begin Assembly | 8 | Caring for Your Item | 25 |
| Step-by-step Guide | 9 | Warranty | 26 |




Warning! Please use your furniture correctly and safely. Improper use can cause safety hazards or damage to your furniture or household items. Carefully read the following safety information.

- Please read and understand this entire manual before attempting to assemble, operate, or install the product.
- Any assembly or maintenance of the product must be carried out by adults only.
- Some parts may contain sharp edges. Wear protective gloves if necessary.
- To prevent damage, place all parts on a level surface during assembly.
Add a layer of protective cover if needed.

 Needed for Assembly:

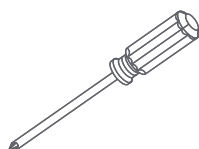

Screwdriver
(Not provided)

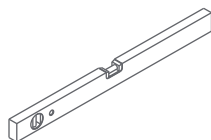 


Level
(Not provided)




Hammer
(Not provided)



  Power Drill
(Not provided)

 
 
 
 
 
 
 
 
 
 
 
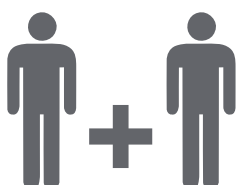 

 


2 people

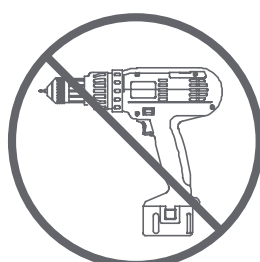 


NOTE: Do not over-drill.
Be aware of over-drilling.



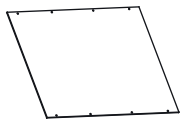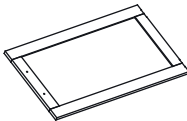

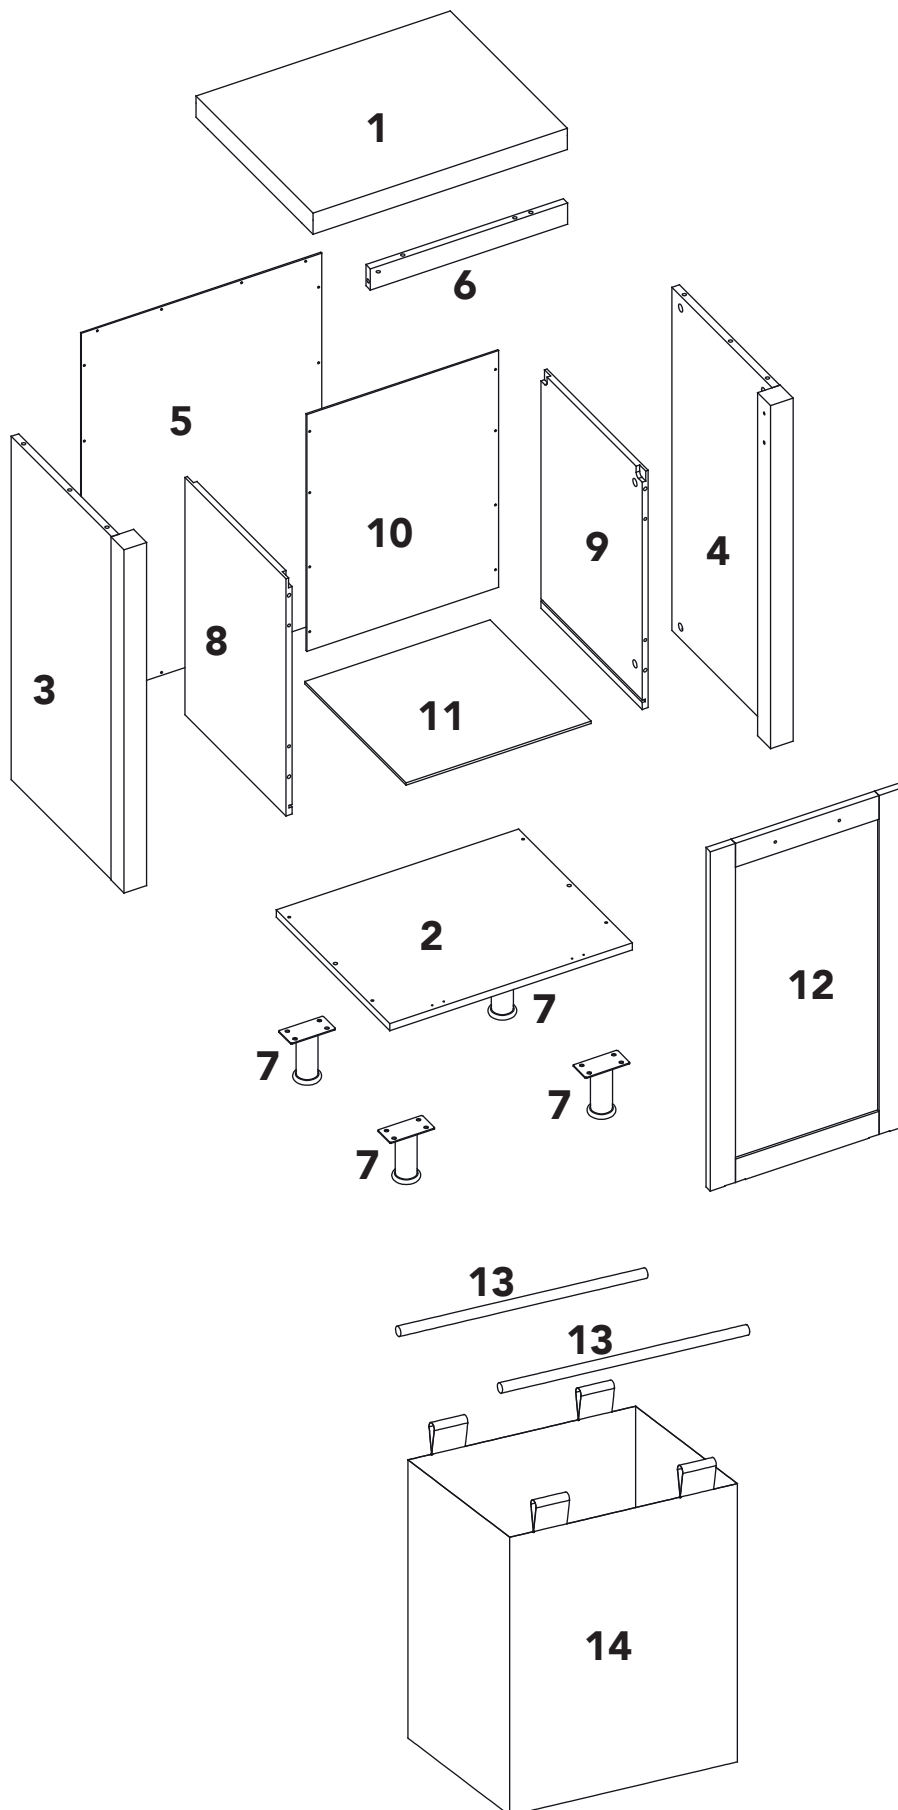


 
 
 

 
Parts List

| Item | Description | Thumbnail | Quantity |
|------|---------------------|--|----------|
| 1 | Top panel |  | 1 |
| 2 | Bottom panel |  | 1 |
| 3 | Left side panel |  | 1 |
| 4 | Right side panel |  | 1 |
| 5 | Back panel |  | 1 |
| 6 | Top support |  | 1 |
| 7 | Foot |  | 4 |
| 8 | Hamper left panel |  | 1 |
| 9 | Hamper right panel |  | 1 |
| 10 | Hamper back panel |  | 1 |
| 11 | Hamper bottom panel |  | 1 |
| 12 | Hamper front panel |  | 1 |
| 13 | Wooden rod |  | 2 |
| 14 | Cloth hamper |  | 1 |

Exploded Parts


 








Hardware List

| Item | Description | Thumbnail | Quantity |
|------|--------------------------|---|----------|
| A | Small cam lock Ø15x10mm |  | 4 |
| B | Large cam lock Ø15x12mm |  | 12 |
| C | Cam bolt Ø6x34mm |  | 16 |
| D | Coated paper sticker |  | 16 |
| E | Large wood dowel Ø8x30mm |  | 6 |
| F | Small wood dowel Ø6x30mm |  | 4 |
| G | Hinge |  | 2 |
| H | Handle |  | 1 |
| I | Bolt Ø4x22mm |  | 2 |
| J | Screw Ø3.5x12mm |  | 10 |
| K | Screw Ø3x12mm |  | 26 |
| L | Screw Ø6x12mm |  | 16 |

 Hardware List




| Item | Description | Thumbnail | Quantity |
|------|----------------|--|----------|
| M | Hex key |  | 1 |
| N | Hamper stopper |  | 2 |
| O | Door bumper |  | 2 |
| P | Screw Ø4x55mm |  | 1 |
| Q | Screw Ø4x18mm |  | 1 |
| R | Metal bracket |  | 2 |
| S | Anchor |  | 1 |
| T | Nylon strap |  | 1 |

Before You Begin Assembly

Make Sure All Parts Are Present

 Compare all pieces to the parts and hardware lists, and make sure you have all tools required for assembly.

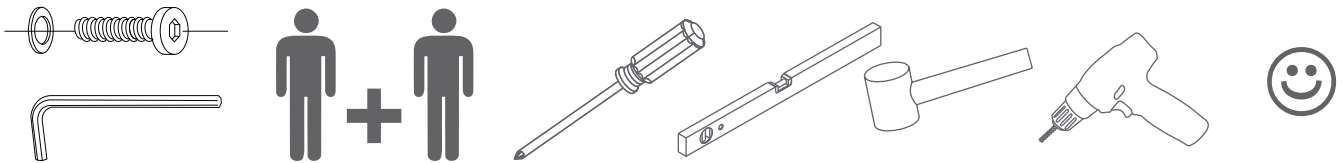

Assemble in a Cleared Area

Place all parts from the box on the floor in front of you on a clean, dry, level surface to protect the product as it is being built.



 
Remove Packaging Materials

Place packing materials back in the box. Do not dispose of packaging materials until assembly is complete.



Read Each Step Carefully

Make sure you understand each step. If you have any questions, contact the For LIVING® customer service centre at 1-877-483-6759 (toll free).

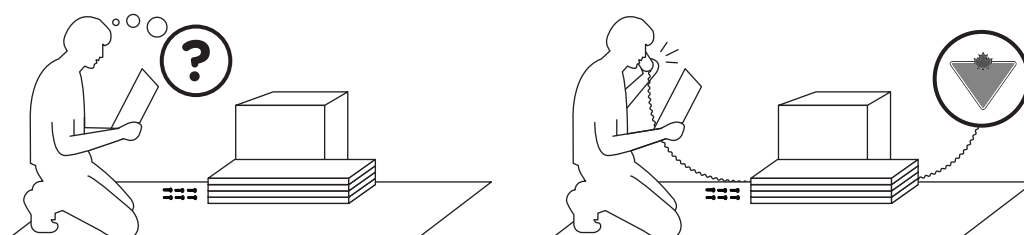

Step-by-step Guide




Step 1

| | | | | | | |
|-------------|-------------|-------------|-------------|-------------|--------------|-------------|
| 1 x1 | 2 x1 | 3 x1 | 4 x1 | 6 x1 | C x12 | E x6 |
| | | | | | | |


Attach 12 cam bolts (**C**) to top panel (**1**), bottom panel (**2**), left side panel (**3**) and right side panel (**4**). Do not over tighten.

 Attach six large wood dowels (**E**) to left side panel (**3**), right side panel (**4**) and top support (**6**).

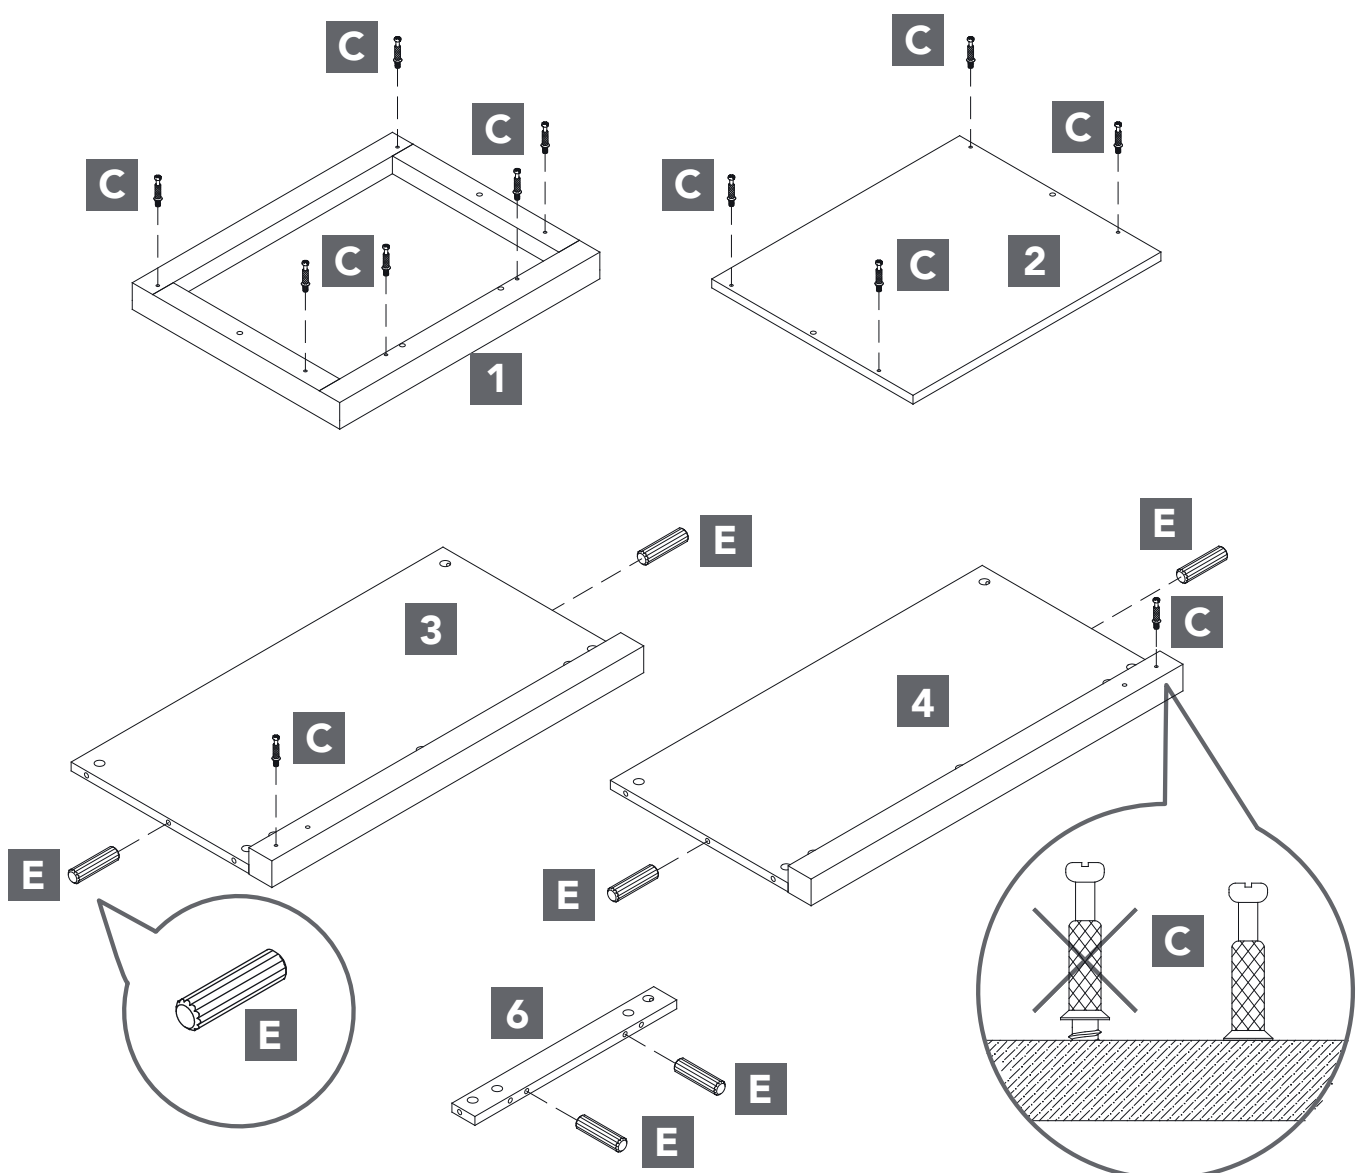


Step-by-step Guide

 Step 2

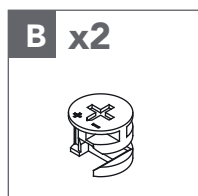

 Attach left side panel **(3)** and right side panel **(4)** to top support **(6)** using two large cam locks **(B)**. Tighten cam locks **(B)**.

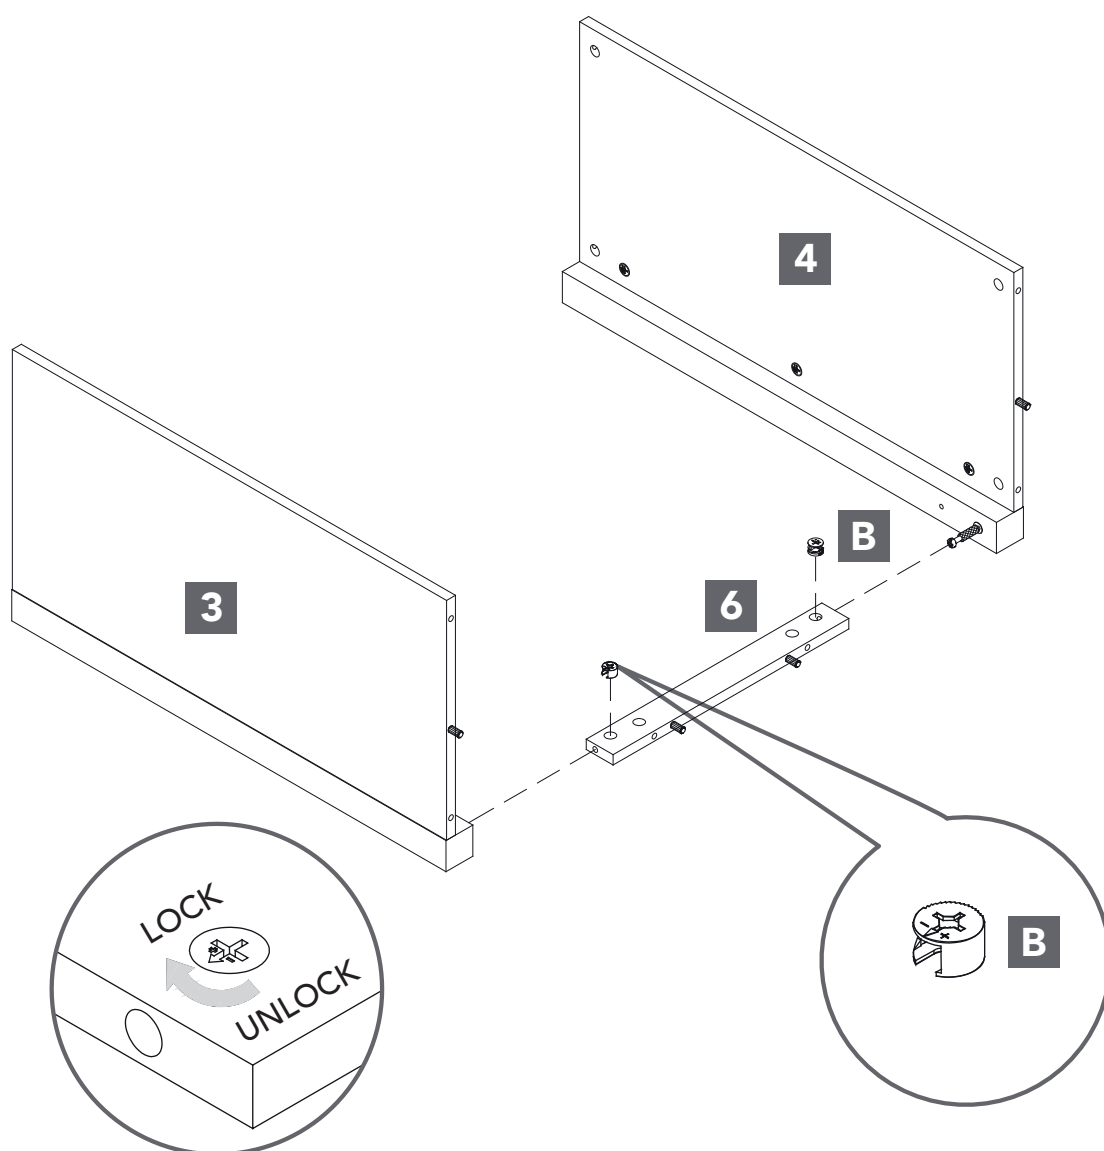

Proper orientation of cam lock

Step-by-step Guide




Step 3

| | | | |
|-------------|-------------|--------------|-------------|
| 7 x4 | B x4 | L x16 | M x1 |
| | | | |


Attach bottom panel (**2**) to left side panel (**3**) and right side panel (**4**) using four large cam locks (**B**). Tighten cam locks (**B**).

 Attach four feet (**7**) to bottom panel (**2**) using four bolts (**L**) each. Tighten bolts (**L**) using hex key (**M**).

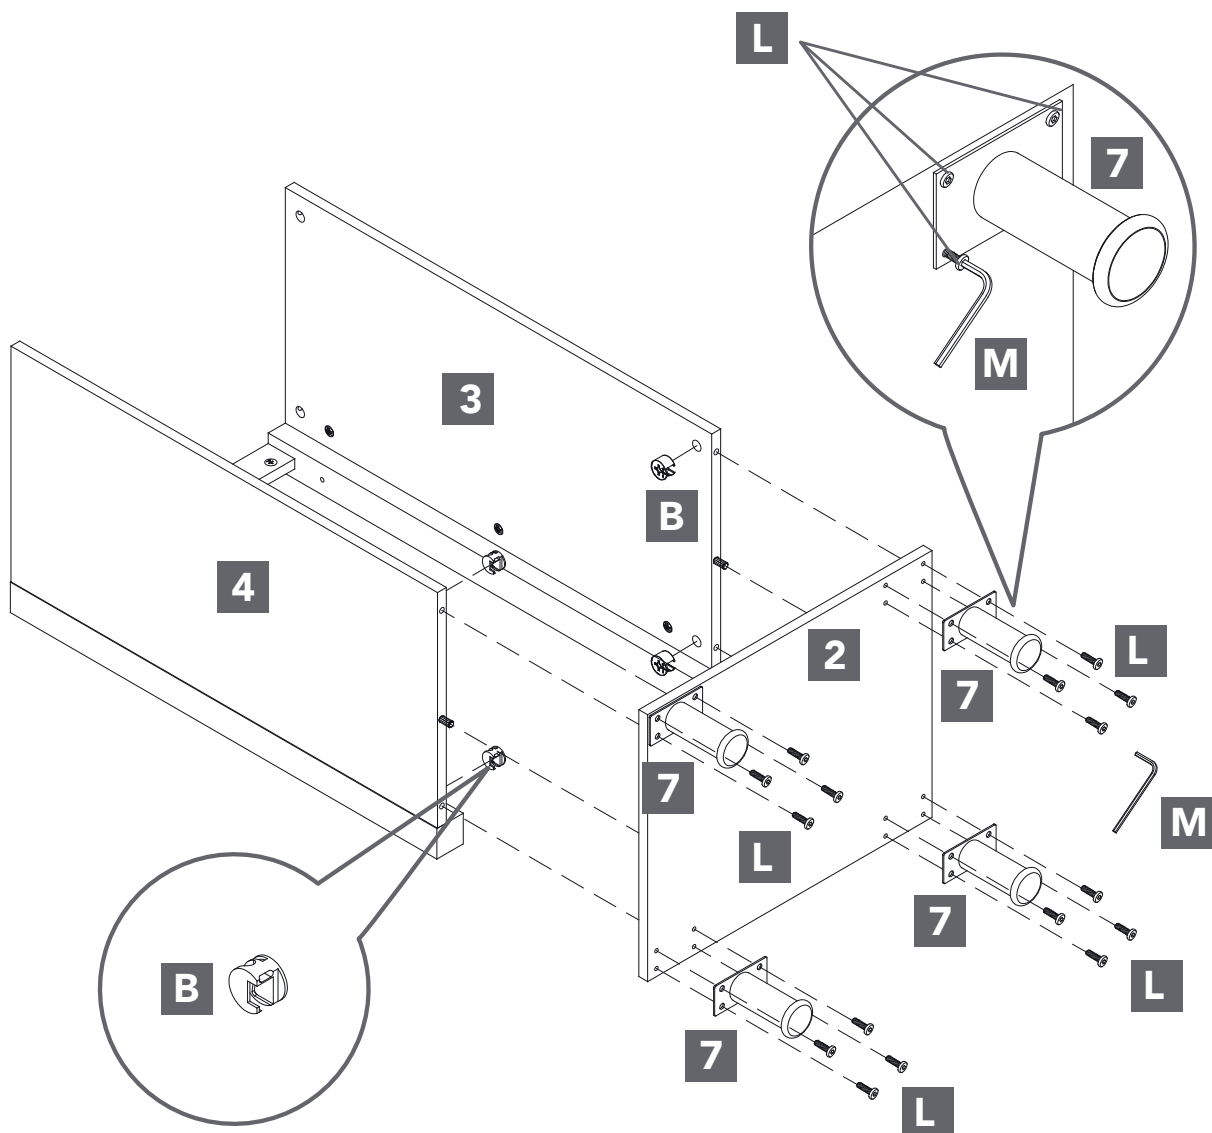


Step-by-step Guide

 Step 4

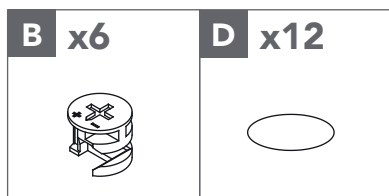

Attach top panel **(1)** to left side panel **(3)**, right side panel **(4)** and top support **(6)** using six large cam locks **(B)**. Tighten cam locks **(B)**.

 
Cover all large cam locks **(B)** using 12 coated paper stickers **(D)**.

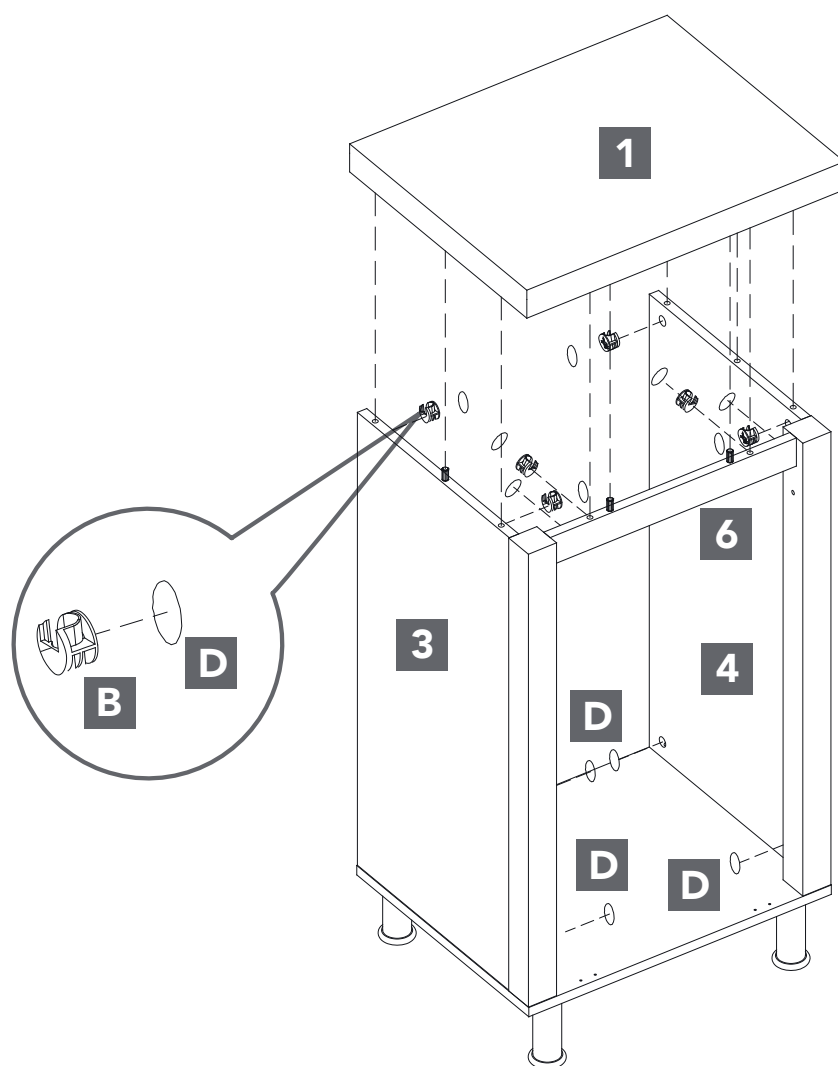

Step-by-step Guide




 Step 5

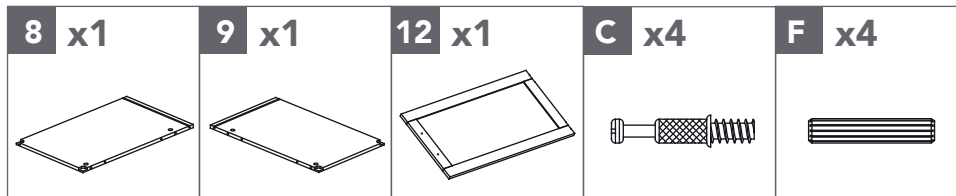


Attach four cam bolts (**C**) to hamper front panel (**12**). Do not over tighten.

 Attach four small wood dowels (**F**) to hamper left panel (**8**) and hamper right panel (**9**).

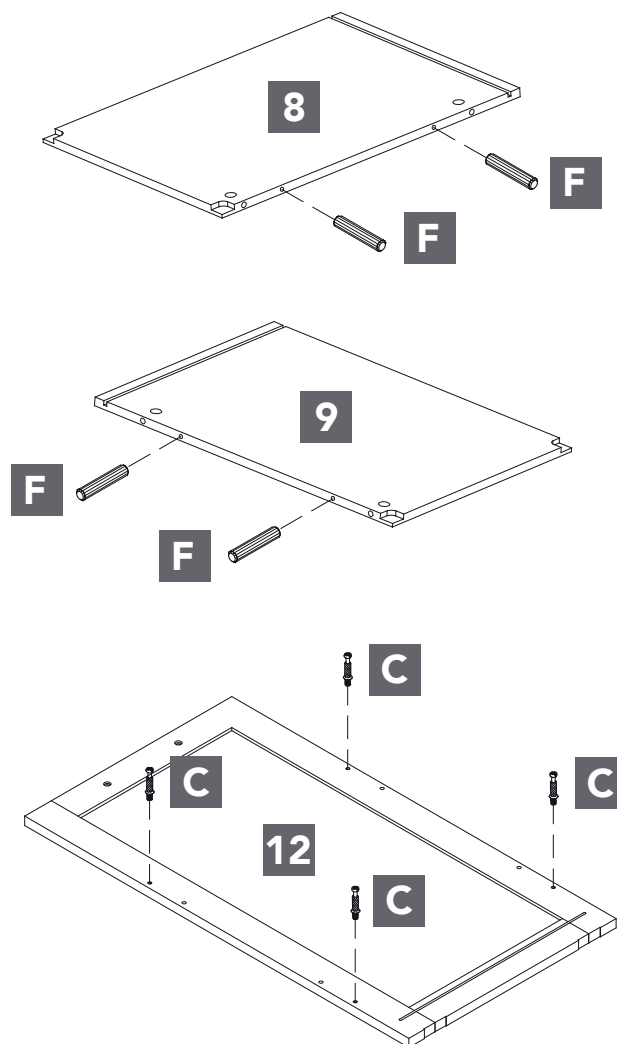


Step-by-step Guide

 Step 6

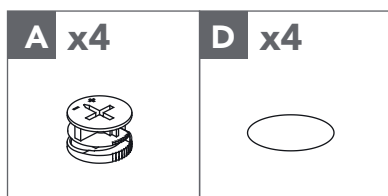


Attach hamper left panel (8) and hamper right panel (9) to hamper front panel (12) using four small cam locks (A). Tighten small cam locks (A).

 Cover all small cam locks (A) using four coated paper stickers (D).

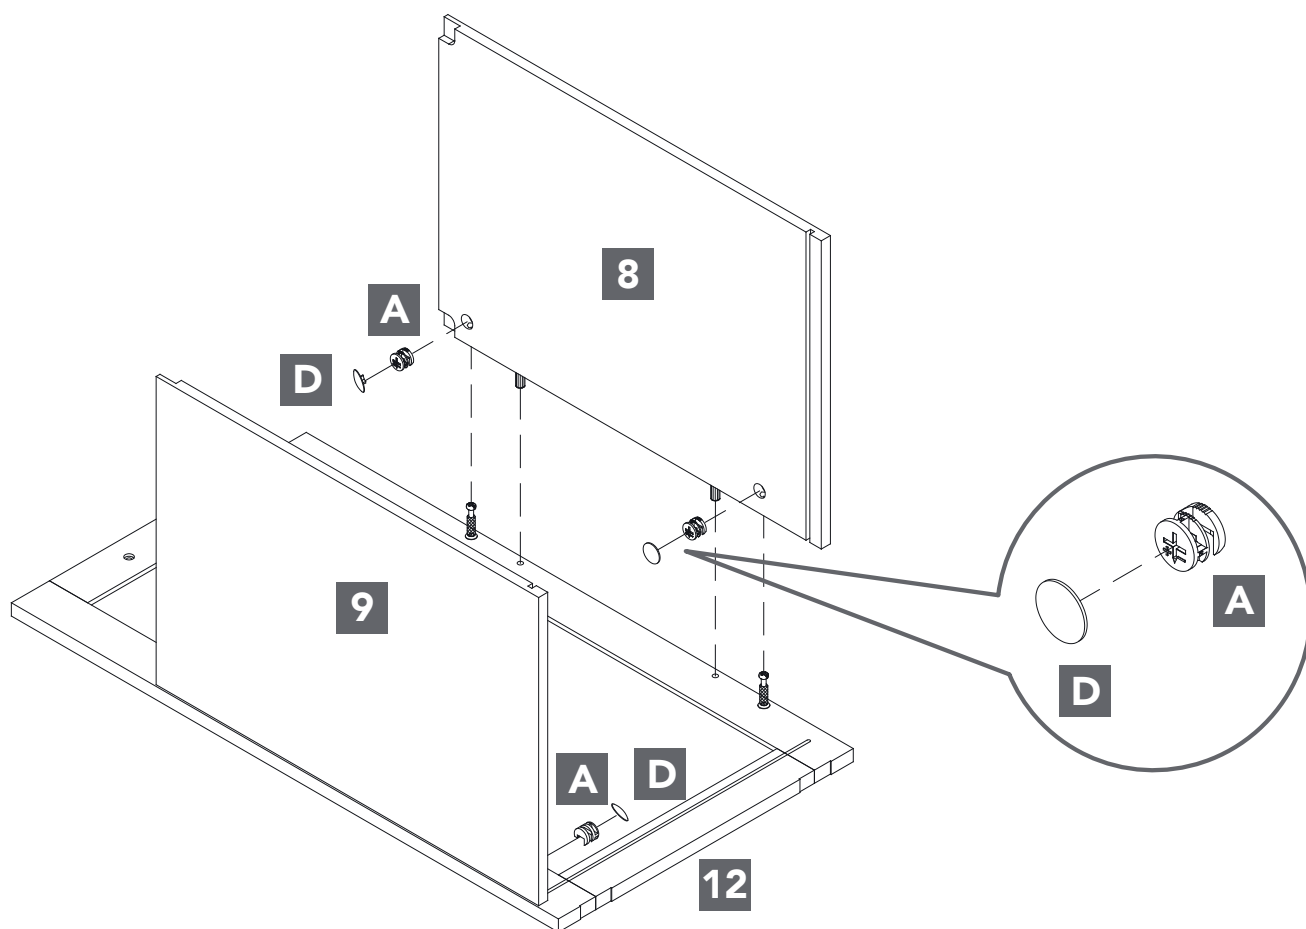


Step-by-step Guide

 Step 7

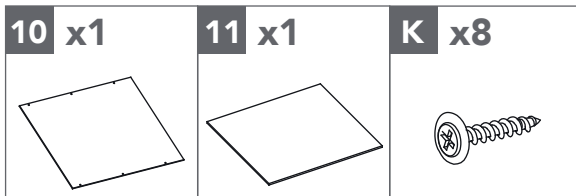




 
Insert hamper bottom panel (**11**) into the grooves as shown.

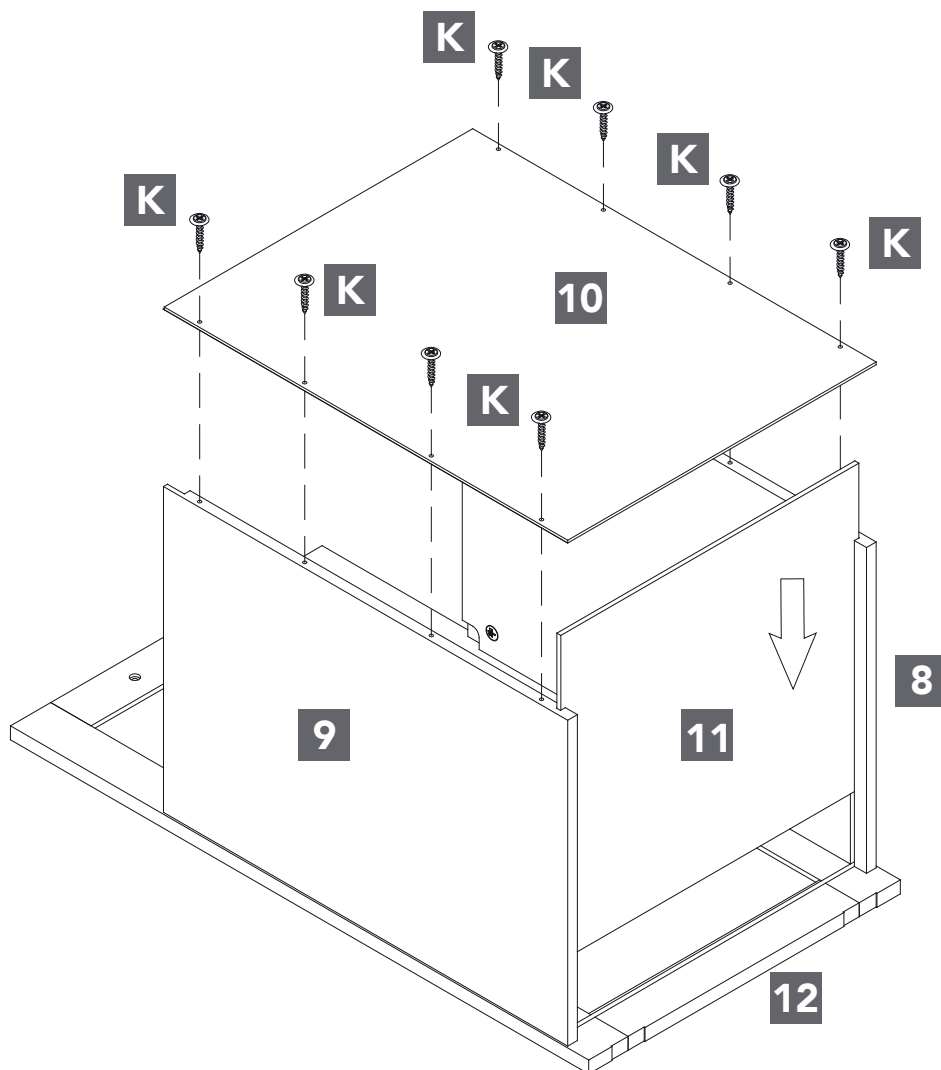Attach hamper back panel (**10**) to hamper left panel (**8**) and hamper right panel (**9**) using eight screws (**K**).




Step-by-step Guide

  Step 8

| | | | |
|---|---|---|---|
| G x2 | H x1 | I x2 | J x6 |
|  |  |  |  |

Attach two hinges (**G**) to hamper front panel (**12**) using three screws (**J**) each.

 
Attach handle (**H**) to hamper front panel (**12**) using two bolts (**I**).

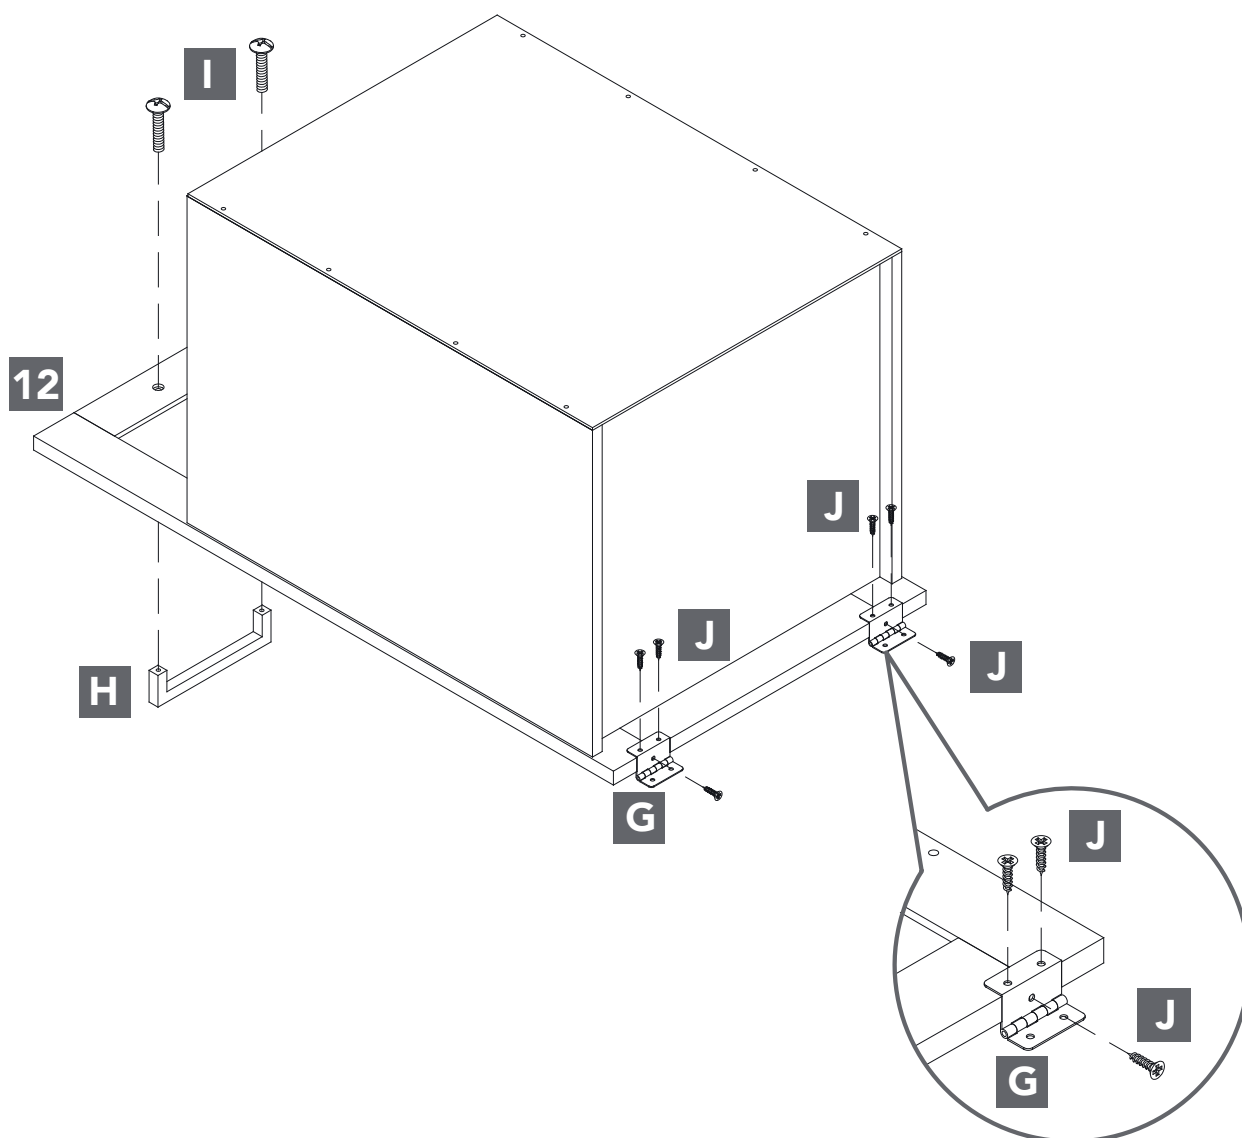


Step-by-step Guide



 Step 9

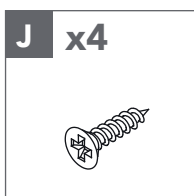


 Attach hamper frame to bottom panel **(2)** using four screws **(J)**.

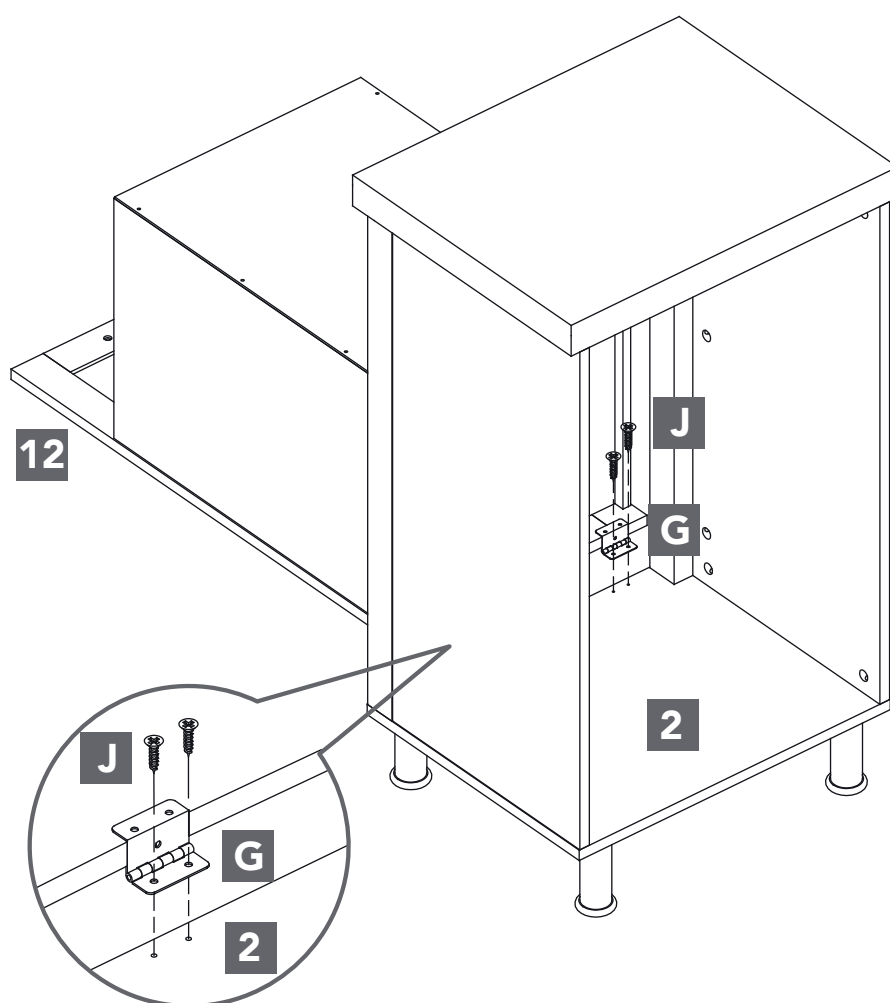


Step-by-step Guide

 Step 10

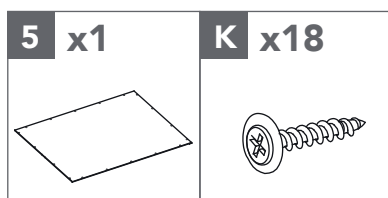

 
Attach back panel **(5)** to top panel **(1)**, bottom panel **(2)**, left side panel **(3)** and right side panel **(4)** using 18 screws **(K)**.

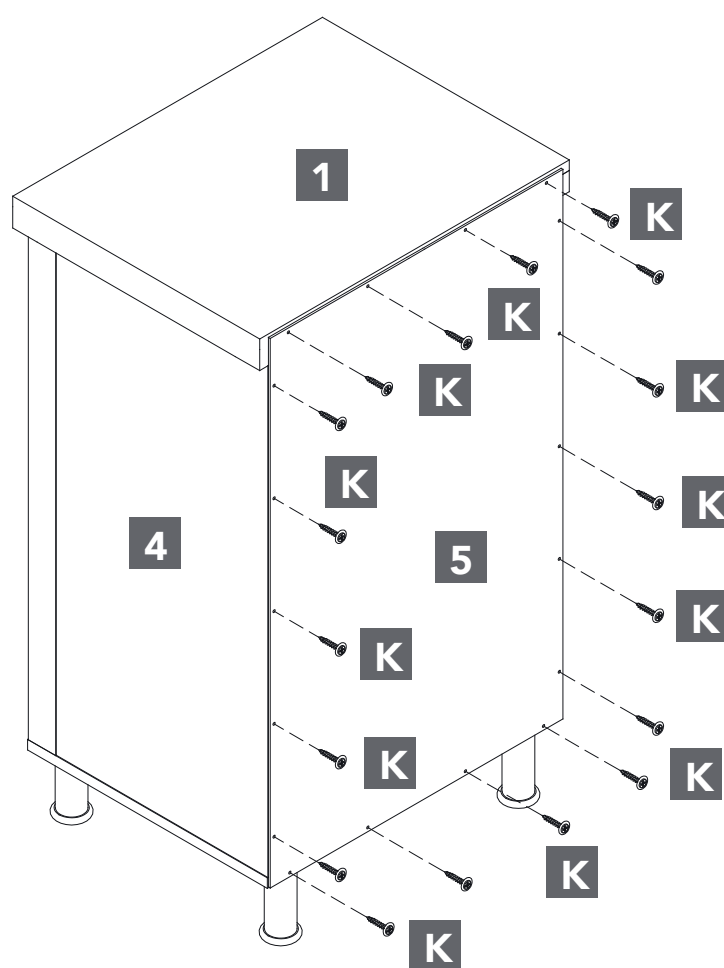

Step-by-step Guide




 Step 11

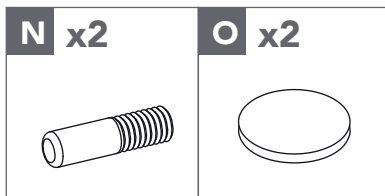


Turn two hamper stoppers (**N**) into the corresponding holes in left side panel (**3**) and right side panel (**4**) as shown.

 Place two door bumpers (**O**) on the left and right sides of top support (**6**) as shown.

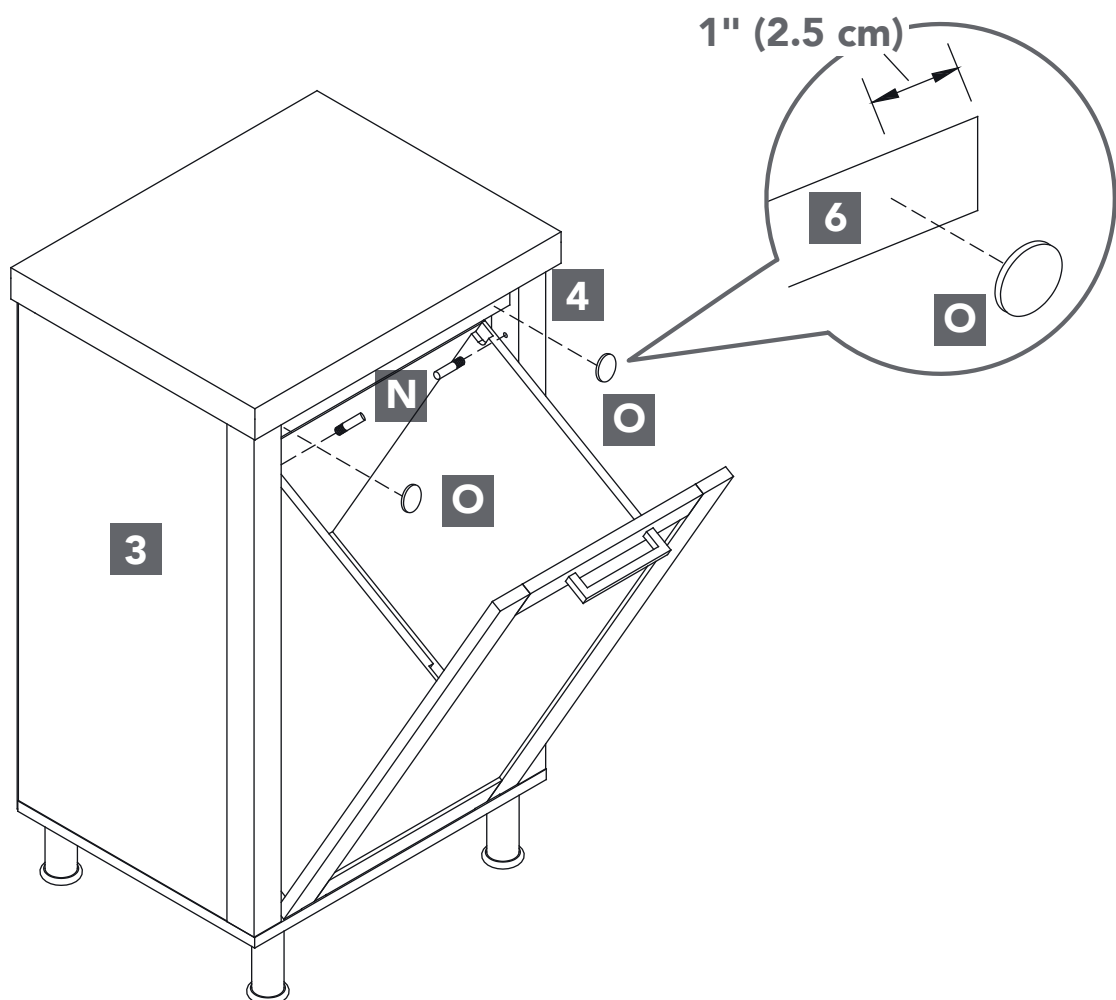


Step-by-step Guide

  Step 12

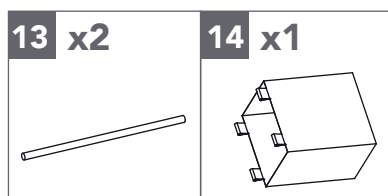

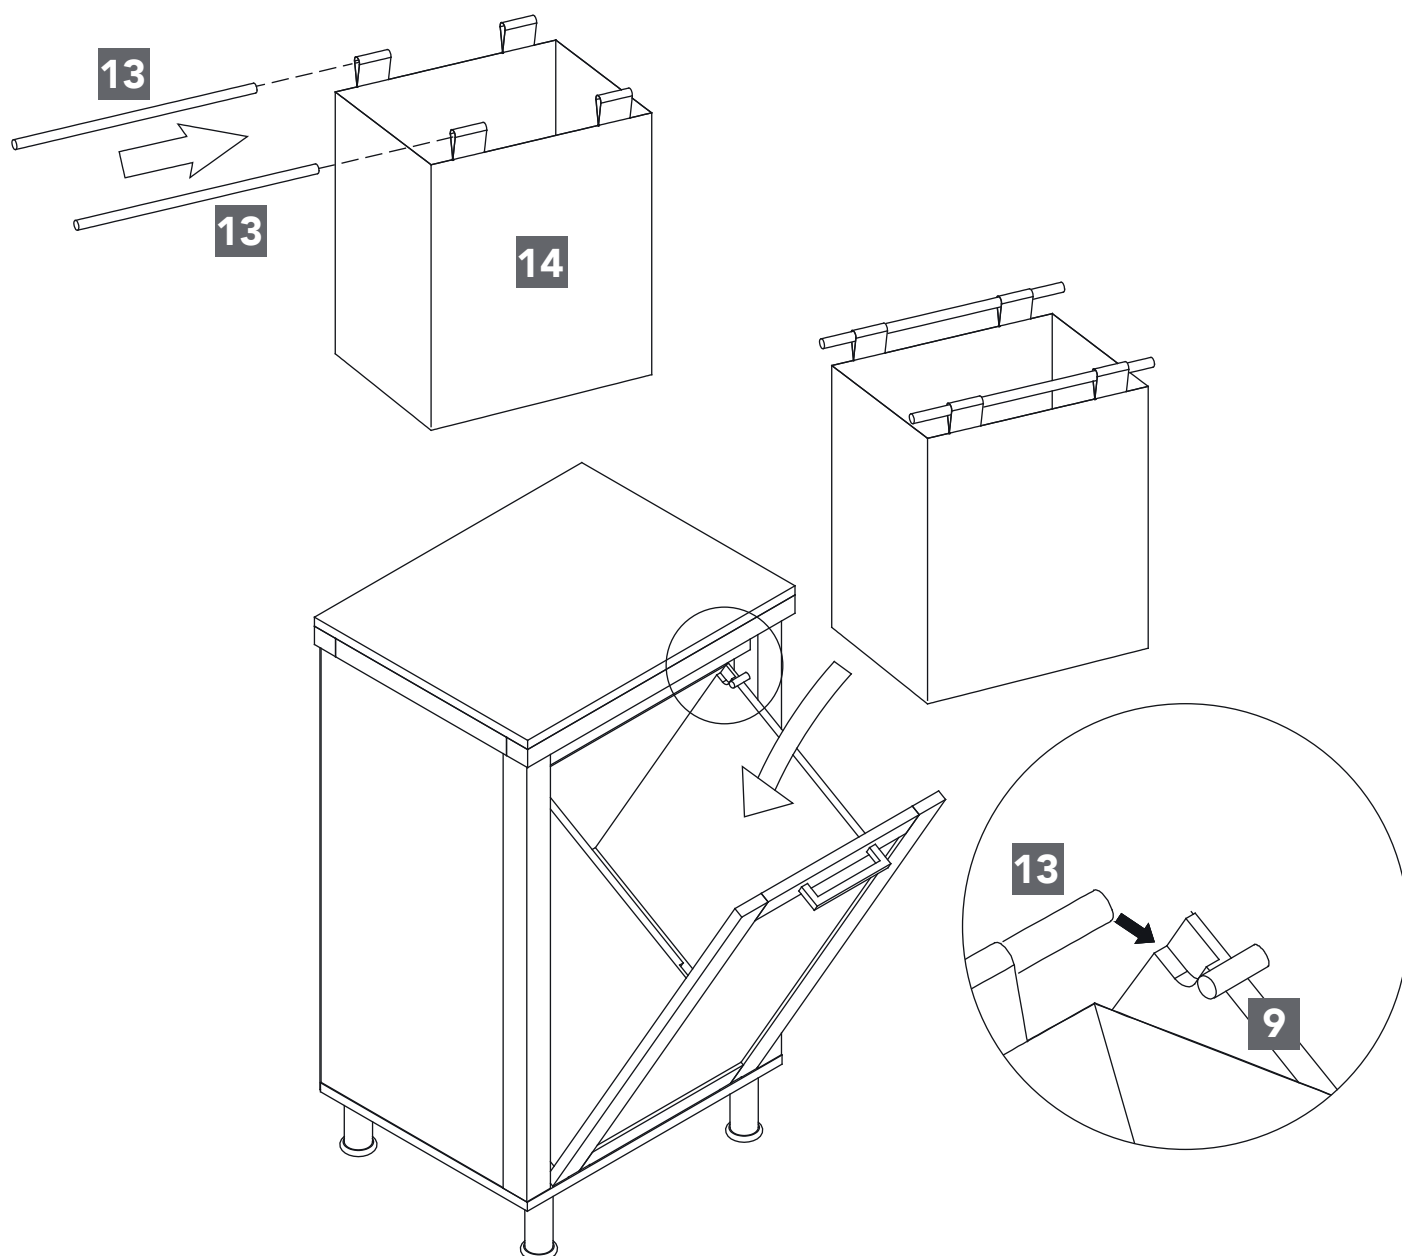


 
Insert two wooden rods (**13**) through the corresponding holes in cloth hamper (**14**), then place them into hamper frame as shown.



Step-by-step Guide




Step 13

| | | | |
|---|---|---|---|
| P x1 | Q x1 | R x2 | S x1 |
|  |  |  |  |

Pick your desired area of placement. Drill a hole approximately 3/8" (9.5 mm) in diameter and approximately 2" (5 cm) deep. Use a level to make sure the hole you drill are level. After you drill the holes, insert wall anchor (**S**) into wall.


Attach metal bracket (**R**) to wall with screw (**P**).

 Attach metal bracket (**R**) to cabinet with screw (**Q**).

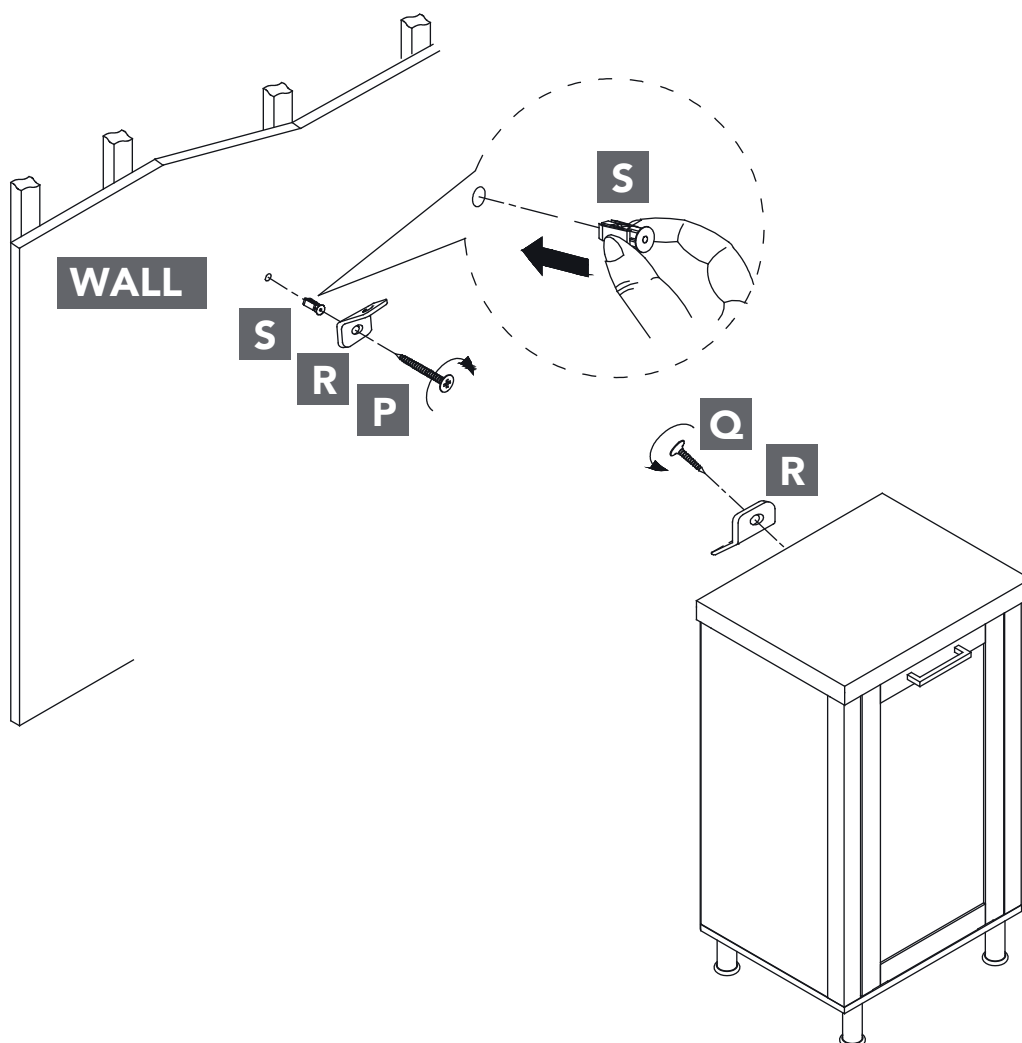



Step-by-step Guide

 Step 14

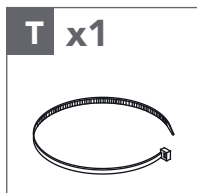

Attach cabinet to wall using nylon strap (**T**) as shown.

  
Note: The tipping restraint hardware included is for wooden stud wall construction. It must be attached to a wall stud. Depending upon your wall construction, different anchor hardware may be required. Please contact your local hardware store for assistance. Young children can be seriously injured by tipping furniture. You must install the tipping restraint hardware with the unit to prevent the unit from tipping, which can cause accidents or damage. The tipping restraints are intended only as a deterrent, they are not a substitute for proper adult supervision. The tipping restraints are not earthquake restraints.

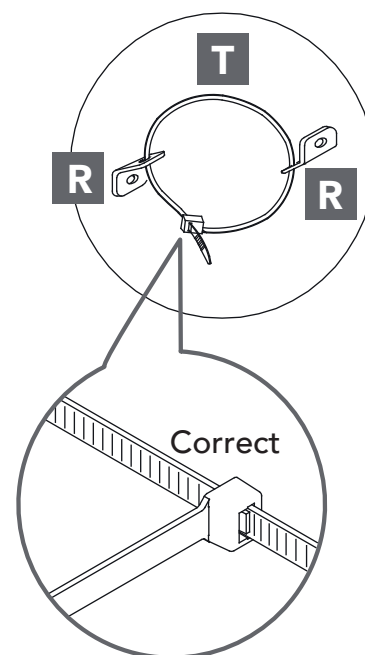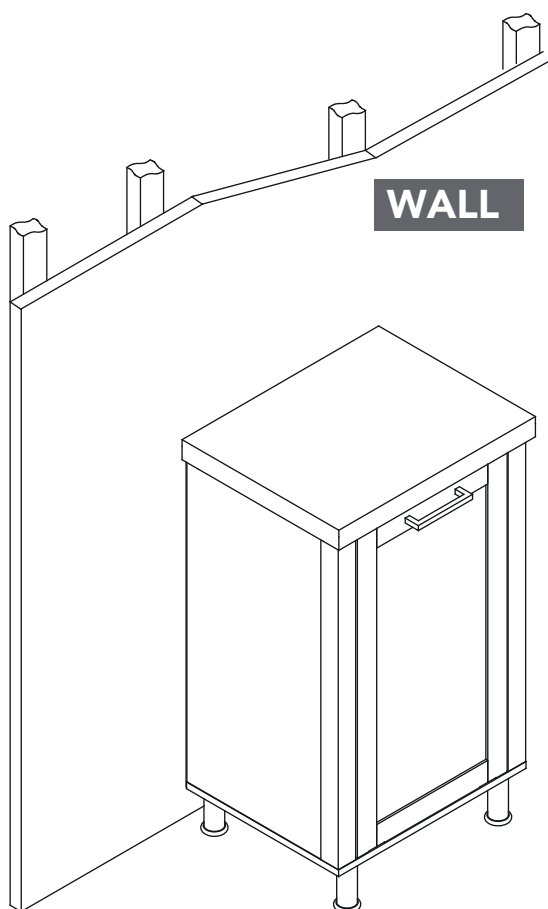


Adjust Levellers



 Note: If your item is not level, put it on a hard surface, then adjust the levellers.

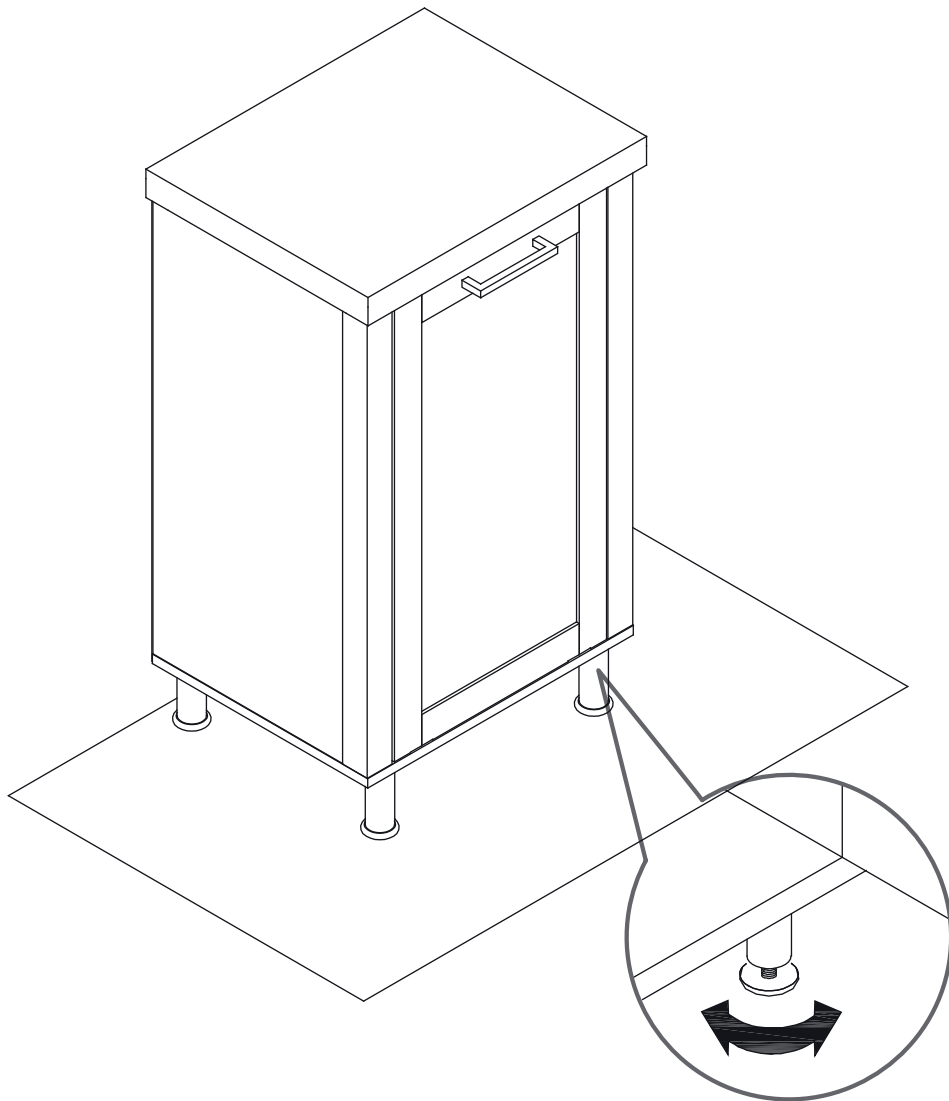

Technical Data

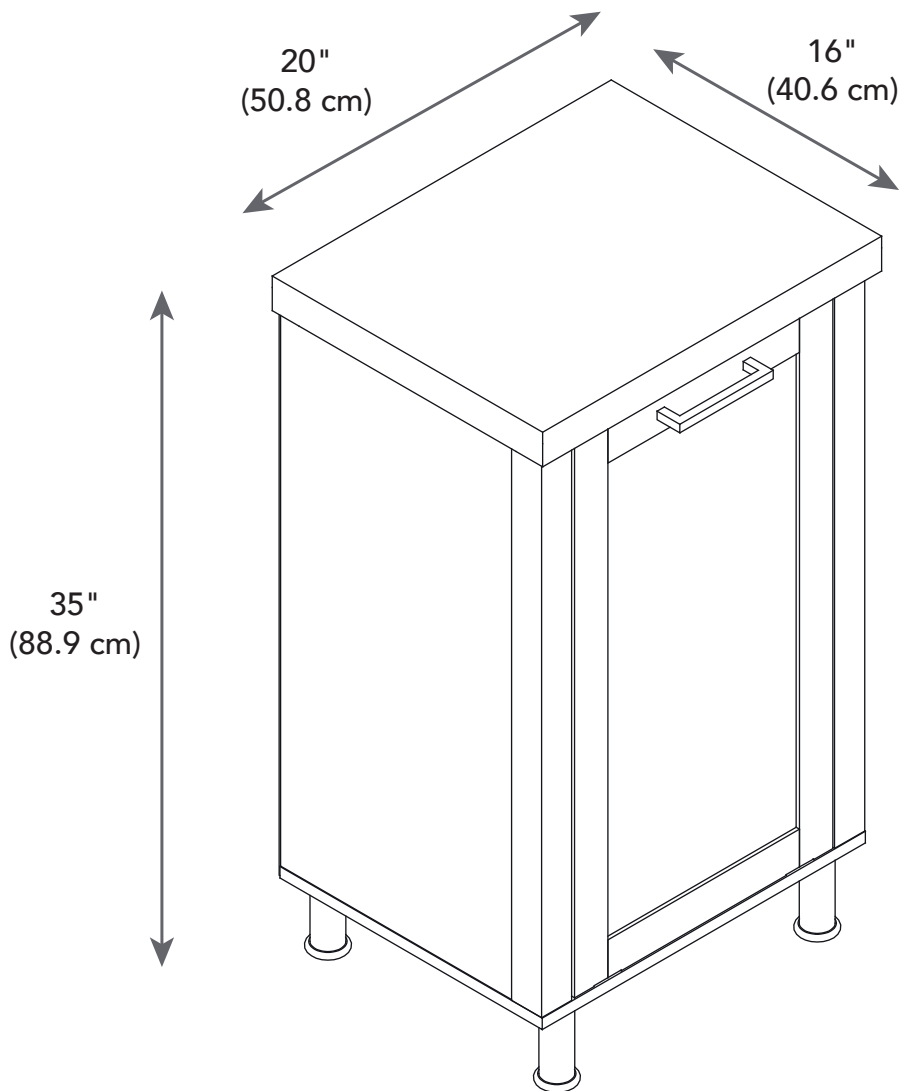 

Specifications

| | |
|----------------------------------|----------------------------|
| Assembled Dimensions (W x D x H) | 20 x 16 x 35" |
| | 50.8 x 40.6 x 88.9 cm |
| Assembled Weight | 52 lb 4 oz |
| | 23.7 kg |
| Maximum Weight Capacity | Top: 40 lb; Hamper: 20 lb |
| | Top: 18.1 kg; Hamper: 9 kg |
| Maximum Volume Capacity | 2 cu. ft. |
| | 0.05 m ³ |

Assembly Troubleshooting



Need help?
Give us a call! We're here for you.



Before returning your
product to store



Toll-free: 1-877-483-6759

If you have questions regarding your product
or require warranty assistance, please call our
customer service helpline.

Caring for Your Item

- 1 Check all nuts and bolts periodically for tightness. When required, tighten them again.
- 2 For household use only.

Warranty



1-Year Limited Warranty

This For LIVING® product carries a one (1) year warranty against defects in workmanship and materials. Trileaf Distribution agrees to replace the defective product free of charge within the stated warranty period, when returned by the original purchaser with proof of purchase. This product is not guaranteed against wear or breakage due to misuse and/or abuse.

Model No. 168-0142-4

Made in China

Imported by Trileaf Distribution Trifeuil Toronto, Canada M4S 2B8