 


CANVAS^{TM/MC}

WITTMORE MULTI-PURPOSE PANTRY CABINET

PRODUCT NO. 168-0149-0

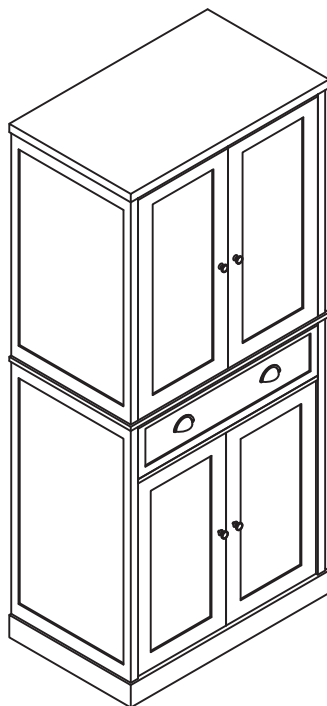

ASSEMBLY INSTRUCTIONS



HAVING TROUBLE?

TOLL-FREE:

1-888-670-6684

IMPORTANT: Please read this manual carefully before beginning assembly of this product. Keep this manual for future reference.

CANVAS™

INSPIRED BY CANADA



We believe in the power of décor and its ability to make up the fabric of your home.

That's why **CANVAS®** collections draw **inspiration from Canadians and the way they live.**

From on-trend furniture pieces to holiday décor and all your outdoor living essentials, **CANVAS®** makes it easy to refresh your space to reflect **your unique style and the way you live every day.**

We would love to hear from you and welcome your thoughtful feedback. Visit our website at **canadiantire.ca** to tell us about your experience, and share your photos with us using **#myCANVASstyle.**

Show us how you bring **CANVAS®** products to life. We can't wait to see!

TABLE OF CONTENTS



Parts List	4
Before You Begin Assembly	9
Step-by-step Guide	10
Technical Data	32
Caring for Your Item	33
Warranty	33




WARNING! TO REDUCE THE RISK OF SERIOUS INJURY, READ THE FOLLOWING SAFETY INSTRUCTIONS BEFORE ASSEMBLING AND USING THE PRODUCT.

- Please read and understand this entire manual before attempting to assemble, operate, or install the product.
- Follow all warning labels.
- Any assembly or maintenance of the product must be carried out by adults only.
- Some parts may contain sharp edges. Wear protective gloves if necessary.
- To prevent damage, place all parts on a level surface during assembly. Add a layer of protective surface if needed.
- Due to the nature of steel, surface oxidation (rusting) will occur if the protective coating is scratched. This is a natural process. To minimize this condition, it is recommended that care be taken when assembling and handling the product in order to prevent the paint from being scratched.

   TOOLS REQUIRED

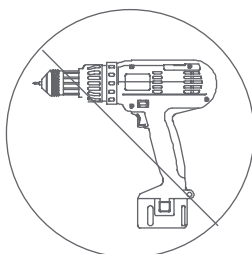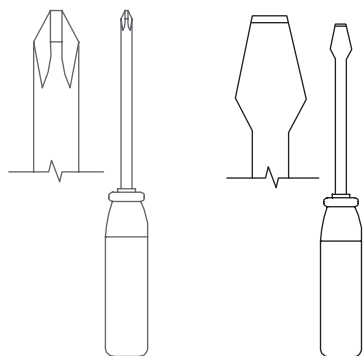







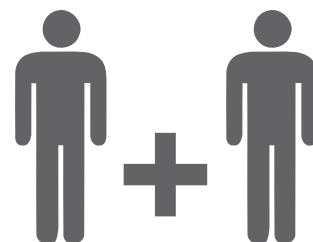









         
NOTE: Do not over drill/
Be aware of over-drilling



 
 
 
 
 
 

 
No. 2 Cross-head Screwdriver
Tip Shown Actual Size

2 people


PARTS LIST

ITEM	DESCRIPTION	THUMBNAIL	QUANTITY
1	Top		1
2	Upper left side		1
3	Upper right side		1
4	Support rail		2
5	Shelf		2
6	Adjustable shelf		2
7	Middle shelf		1
8	Lower left side		1
9	Lower right side		1
10	Drawer support		1
11	Bottom		1
12	Upper back		2
13	Upper H-shaped strip		1
14	Lower left back		1
15	Upper door		2
16	Lower door		2
17	Drawer front		1

 PARTS LIST

 




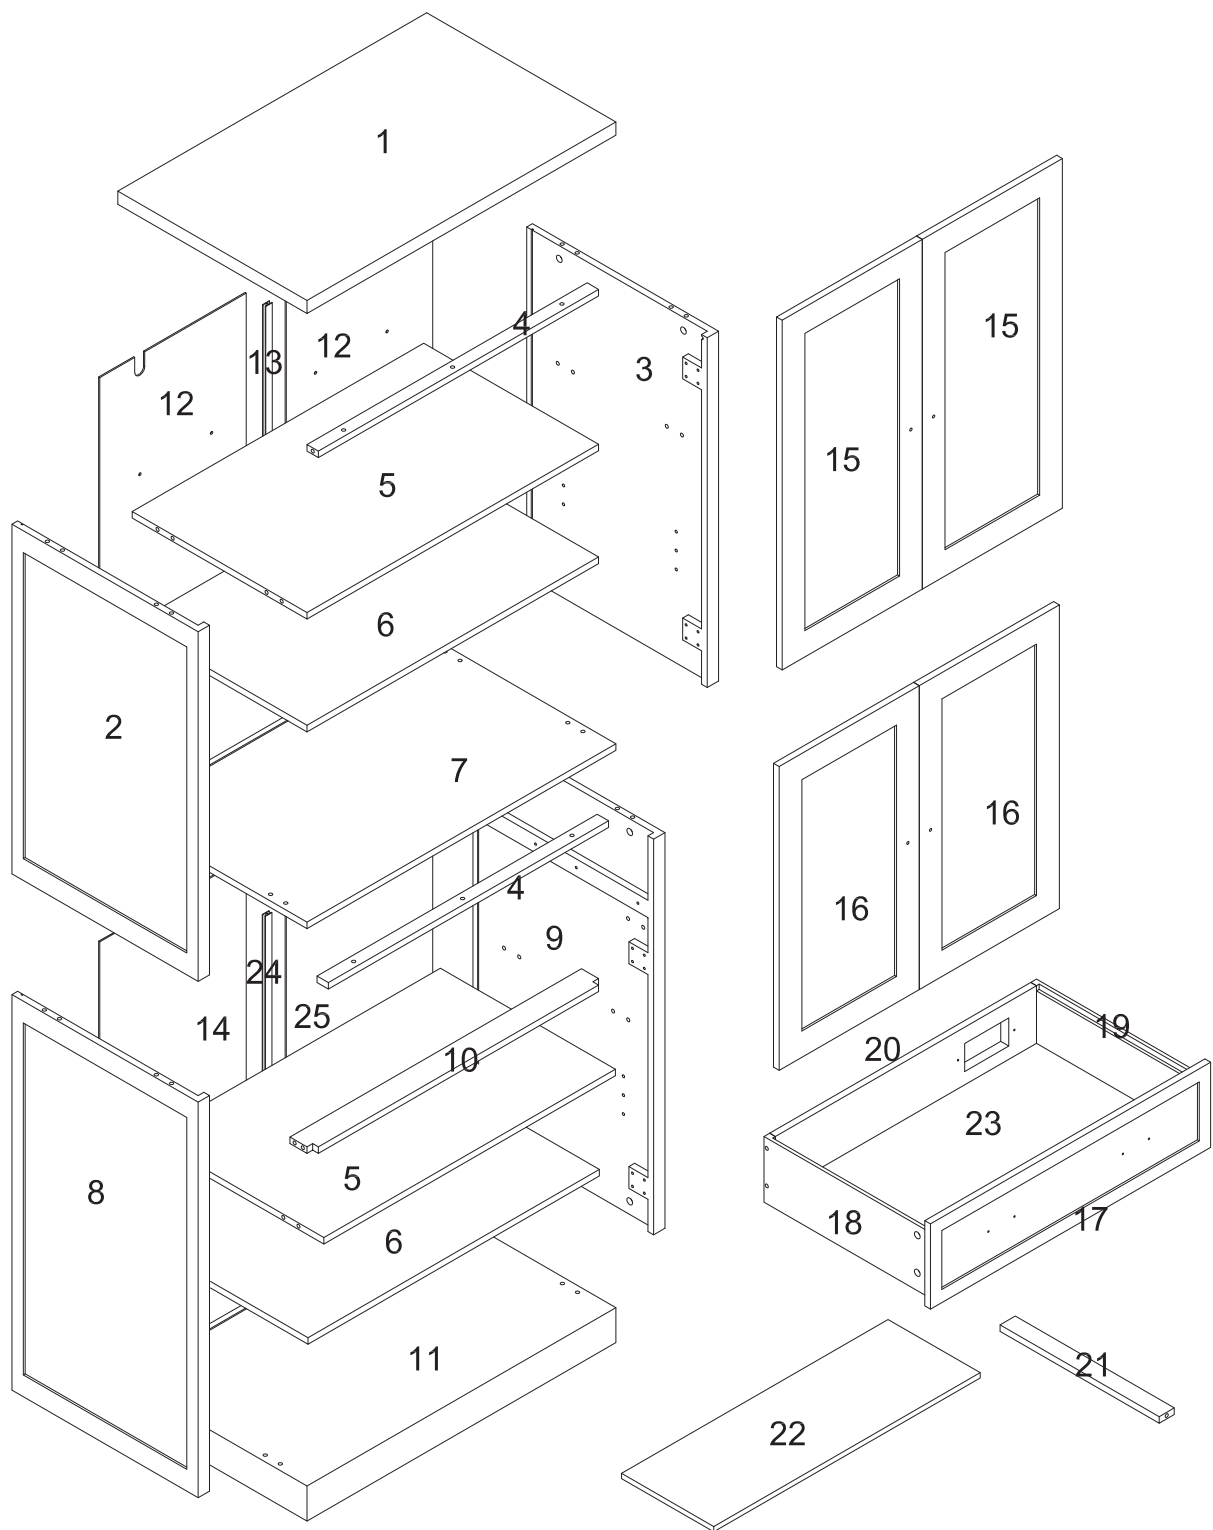









ITEM	DESCRIPTION	THUMBNAIL	QUANTITY
18	Drawer left		1
19	Drawer right		1
20	Drawer back		1
21	Drawer support		1
22	Removable work surface		1
23	Drawer bottom		1
24	Lower H-shaped strip		1
25	Lower right back		1

   EXPLODED PARTS









Warning: Before assembly, please check all accessories in the hardware box, and ensure parts are not missing.

 HARDWARE LIST

ITEM	DESCRIPTION	THUMBNAIL	QUANTITY
A	Cam bolt		27
B	Cam lock		27
C	Wood dowel		26
D	Screw		4
E	Door handle		4
F	Screw		8
G	Screw		5
H	Backboard locker		24
I	Hinge		8
J	Flat-head screw		48
K	Extension rail		2
L	Drawer handle		2
M	Round-head screw		4
O	Power station		1
P	Flat-head screw		14

 HARDWARE LIST

ITEM	DESCRIPTION	THUMBNAIL	QUANTITY
Q	Shelf holder		8
R	Round-head screw		4
S	Anti-tip bracket		4
T	Screw		4
U	Wall anchor		4
V	Screw		6
Y	Round-head screw		4

BEFORE YOU BEGIN ASSEMBLY

 
MAKE SURE ALL PARTS ARE PRESENT

Compare all pieces to the parts and hardware lists, and make sure you have all tools required for assembly.




ASSEMBLE IN A CLEARED AREA

Place all parts from the box on the floor in front of you on a clean, dry, level surface to protect the product as it is being built.

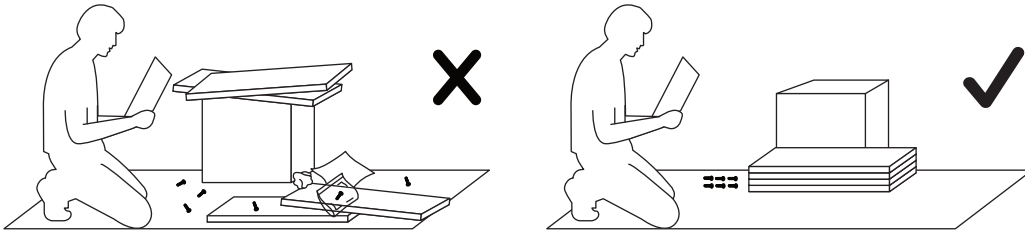


REMOVE PACKAGING MATERIALS

 Place packing materials back in the box. Do not dispose of packaging materials until assembly is complete.

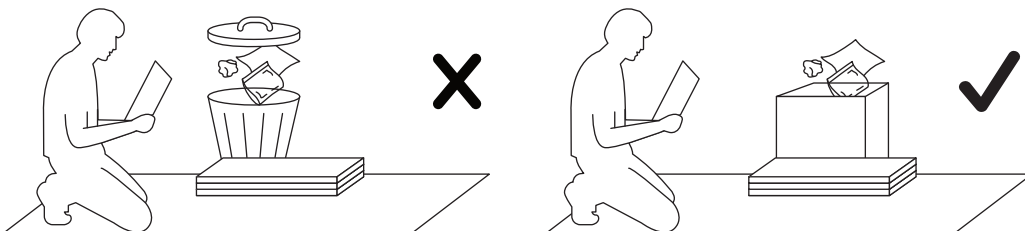







READ EACH STEP CAREFULLY

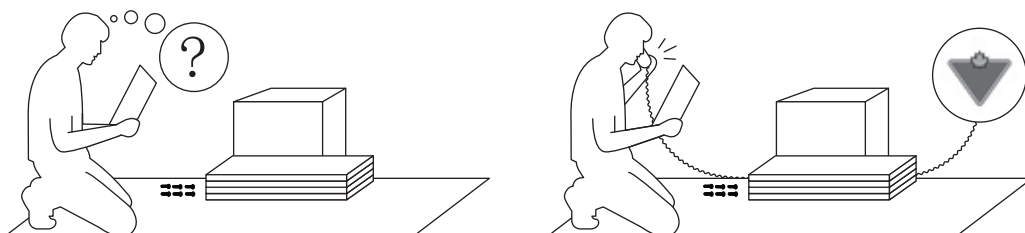 Make sure you understand each step. If you have any questions, contact CANVAS® customer service at 1-888-670-6684 (toll free).



   STEP-BY-STEP GUIDE

STEP 1


1 x1	4 x1	A x4	S x2	R x2	V x3
					

Insert four cam bolts **A** into the top **1**.

Insert three screws **V** through the support rail **4** into the top **1**.


Insert two round-head screws **R** through the anti-tip brackets **S** into the top **1**.

 Tighten all cam bolts and screws.

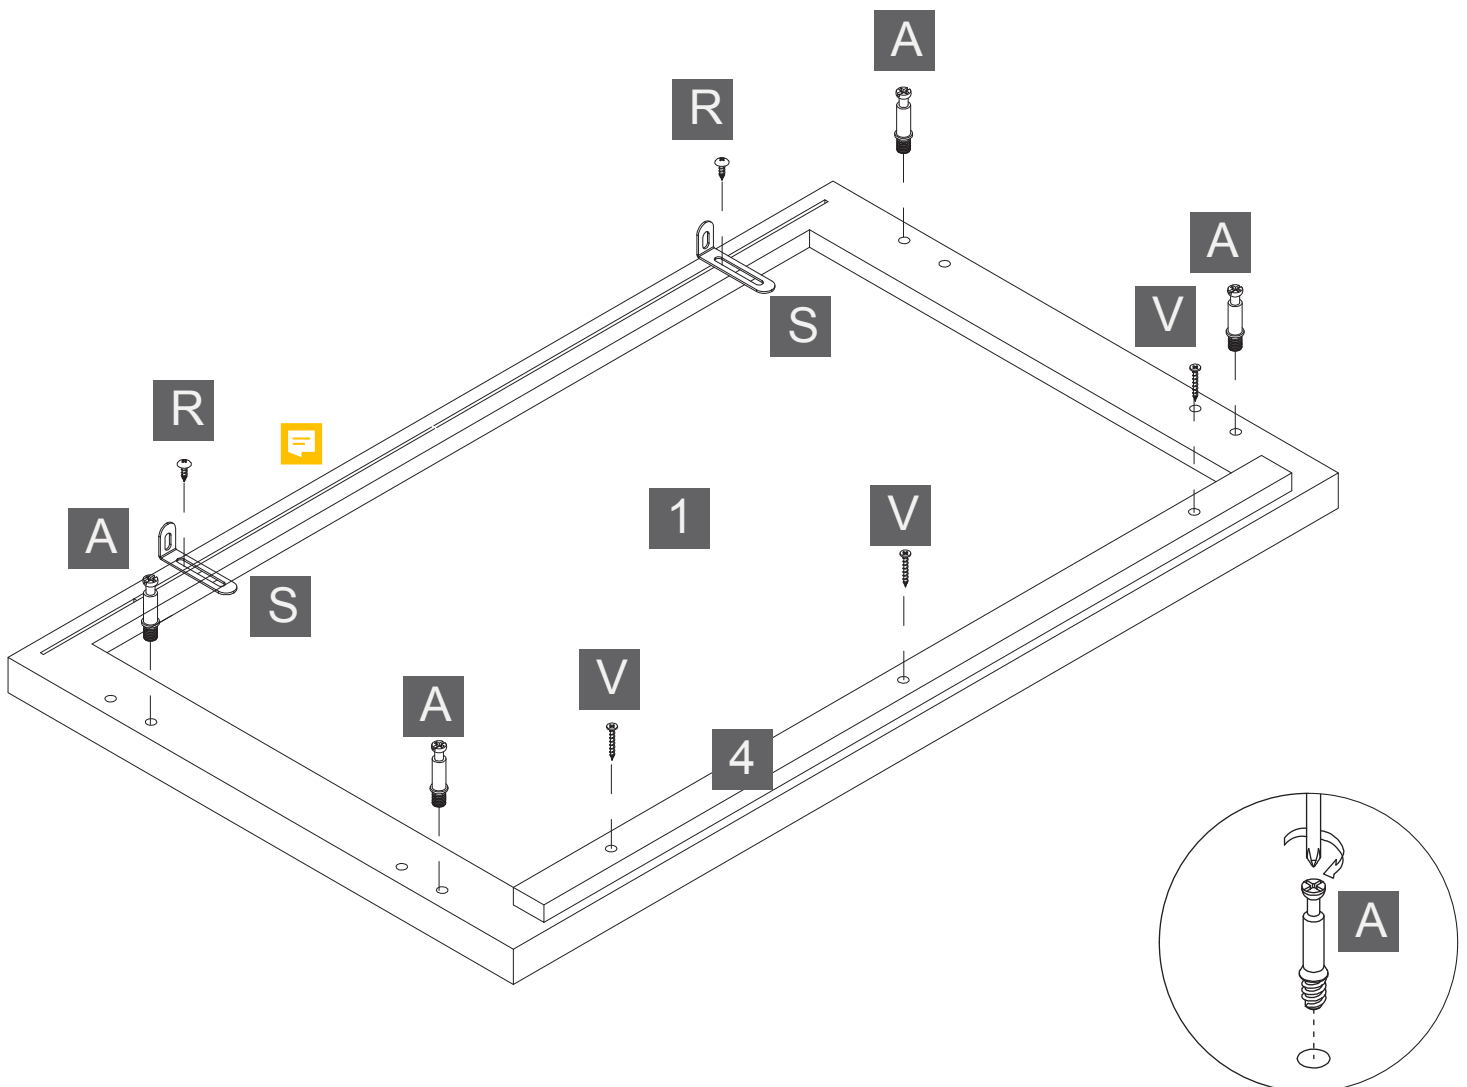


STEP-BY-STEP GUIDE

  STEP 2

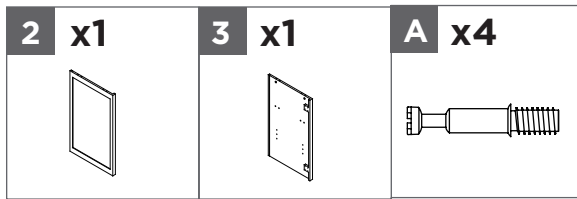 

 


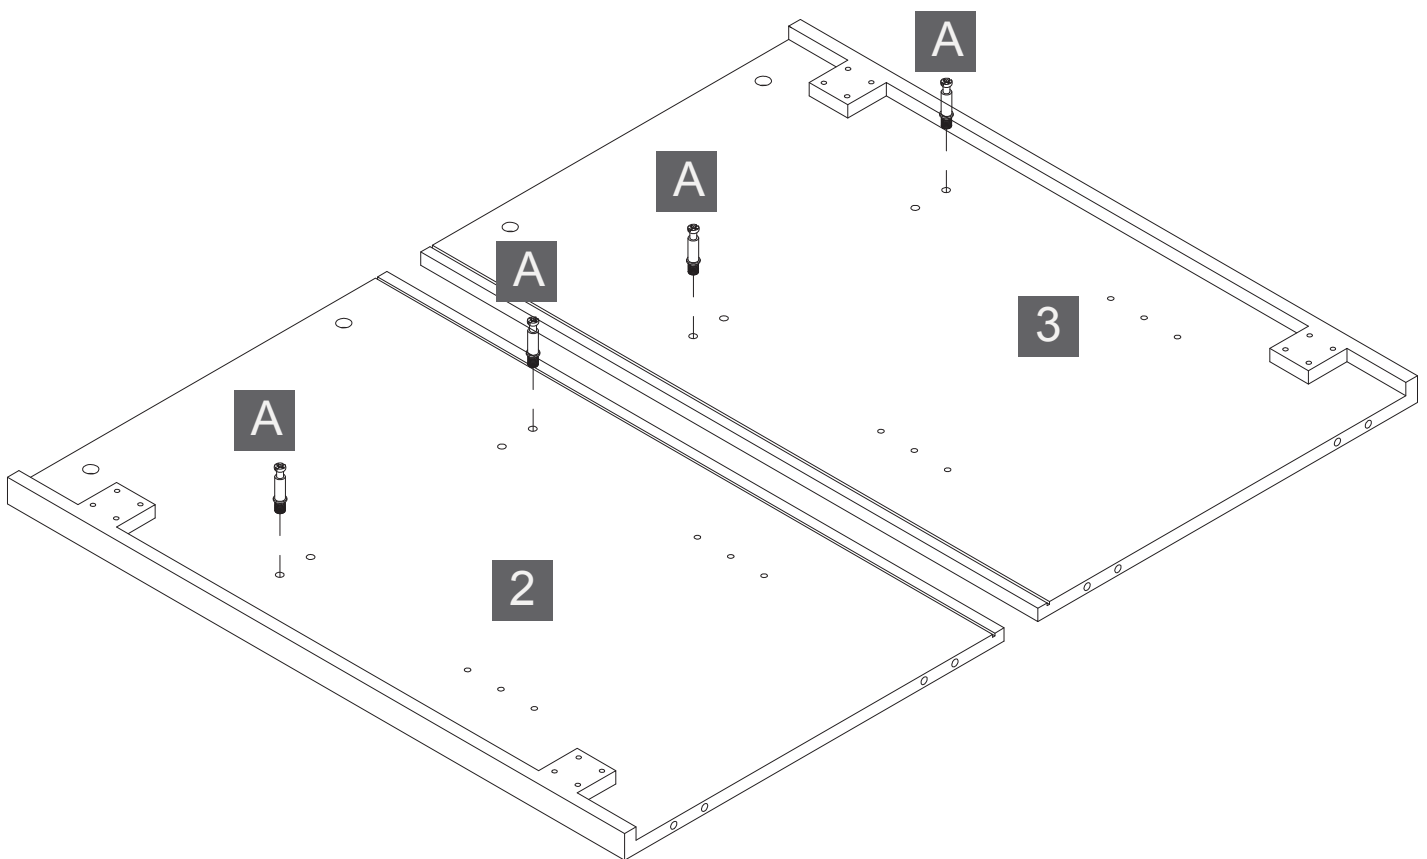

Insert four cam bolts **A** into the upper left side **2** and upper right side **3**. Tighten all cam bolts.



STEP-BY-STEP GUIDE

STEP 3


2 x1	3 x1	5 x1	B x4	C x4
				

Insert four wood dowels **C** into the shelf **5**.

Attach the upper left side **2** and upper right side **3** to the shelf **5**.


Insert four cam locks **B** into the shelf **5**.

 Tighten all cam locks.

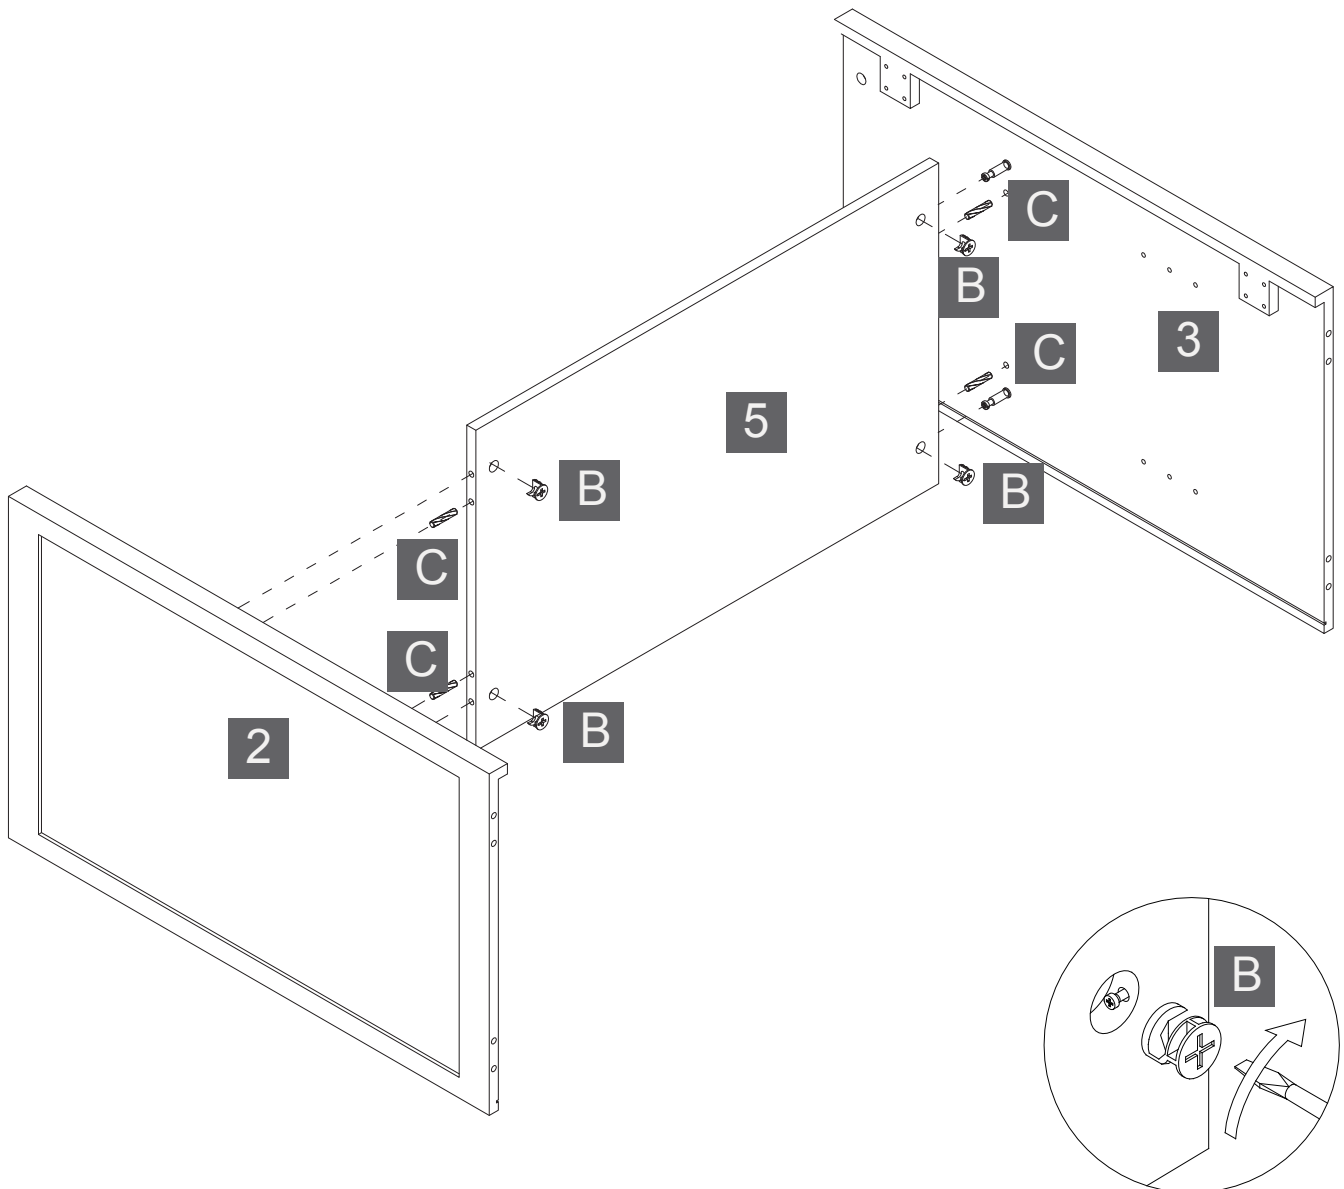


STEP-BY-STEP GUIDE

 STEP 4

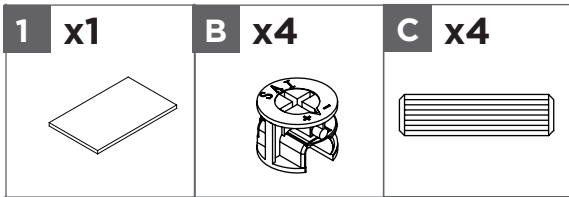

 Insert four wood dowels **C** into the upper left side **2** and upper right side **3**. Attach the top **1** to the upper left side **2** and upper right side **3**. Insert four cam locks **B** into the upper left side **2** and upper right side **3**. Tighten all cam locks.

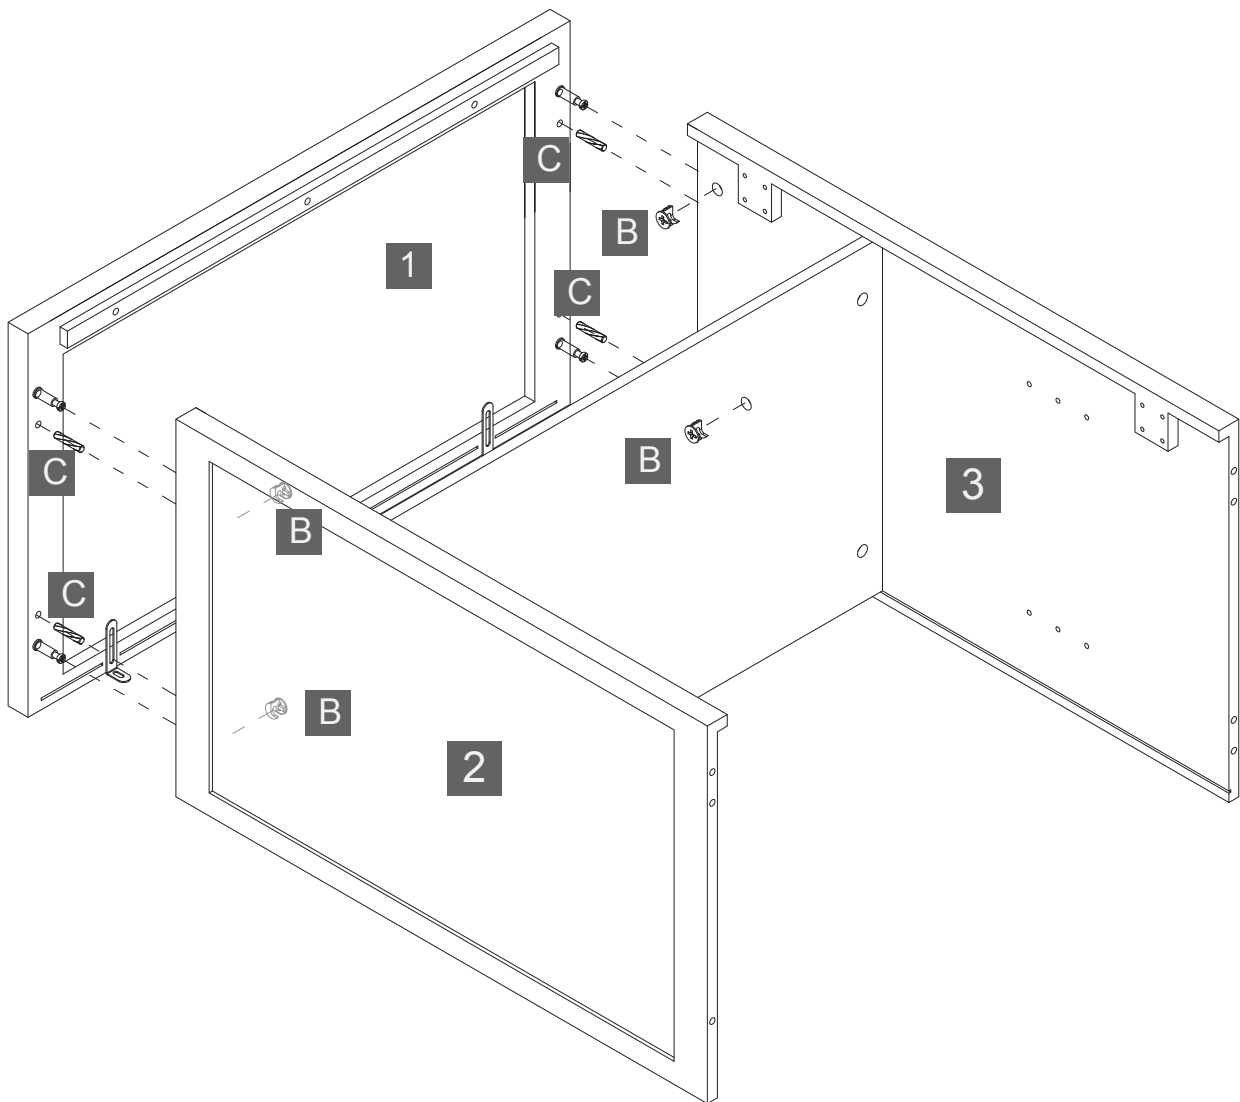

STEP-BY-STEP GUIDE

STEP 5

12 x2



 
13 x1



Insert the upper backs **12** and upper H-shaped strip **13** into the groove between the upper left side **2** and upper right side **3**.


 



Make equal margins along all four edges of the upper backs **12**.

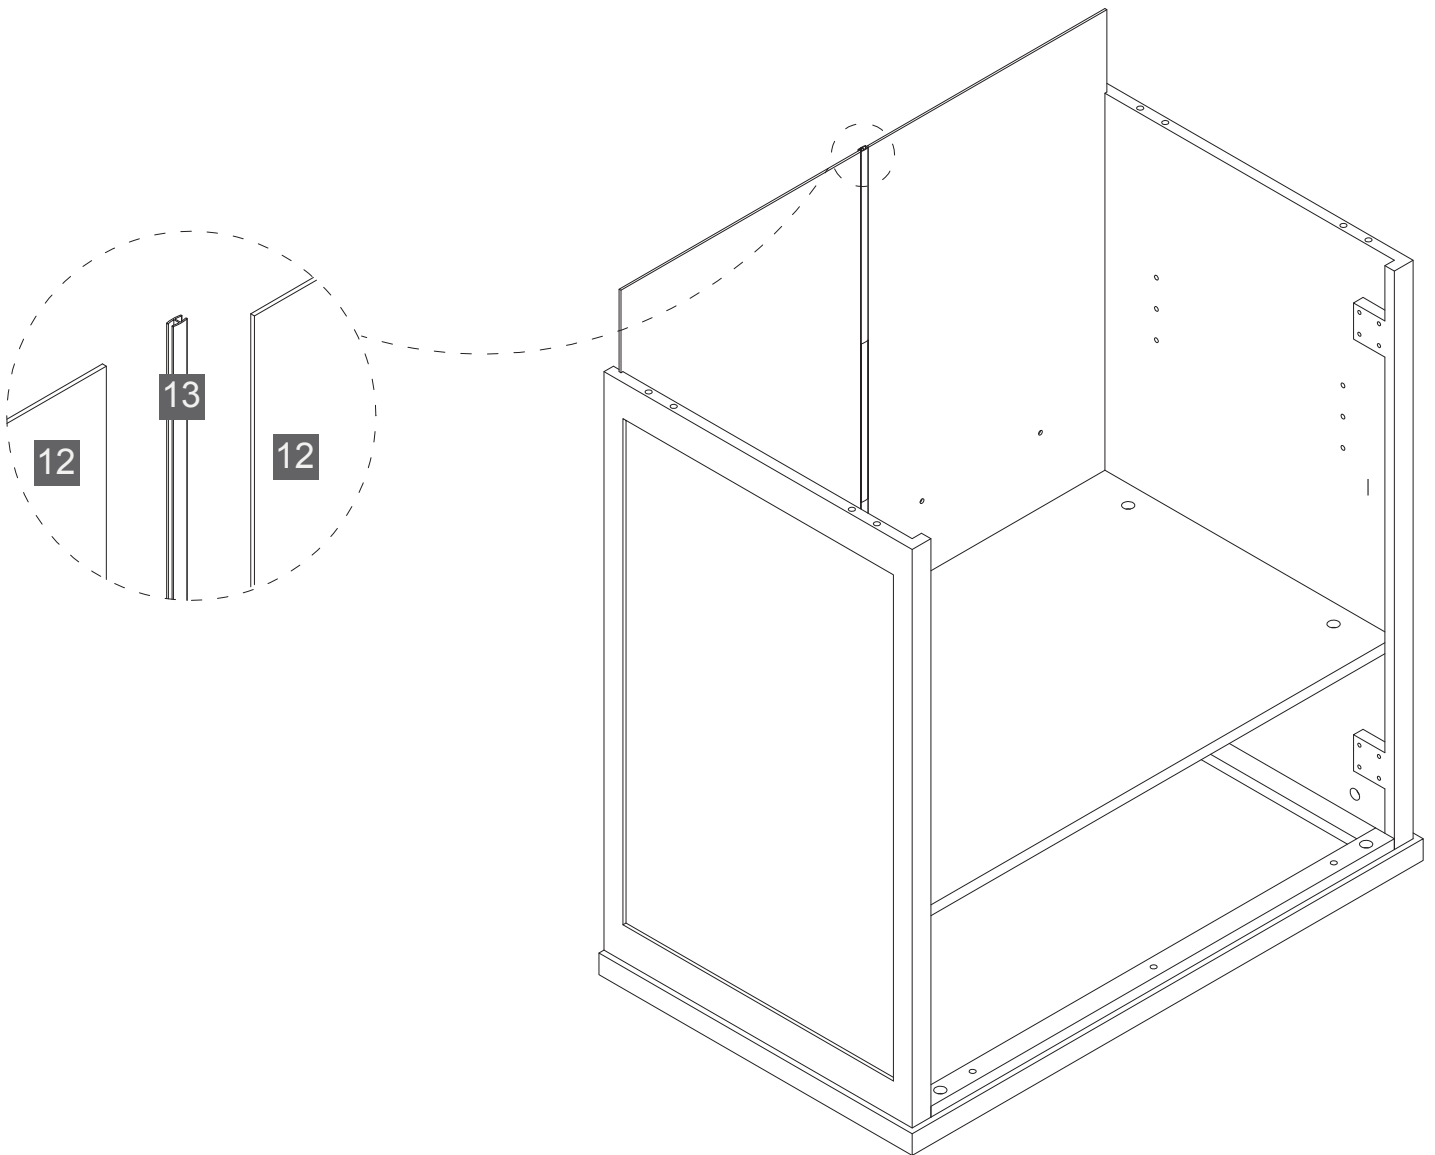Push on opposite corners of your unit if needed to make it “square”.




STEP-BY-STEP GUIDE

STEP 6


7 x1	D x4	C x4	S x2	R x2
				

 Insert four wood dowels **C** into the upper left side **2** and upper right side **3**.
Insert four screws **D** through the middle shelf **7** into the upper left side **2** and upper right side **3**.
Insert two round-head screws **R** through the anti-tip brackets **S** into the middle shelf **7**.
Tighten all screws.

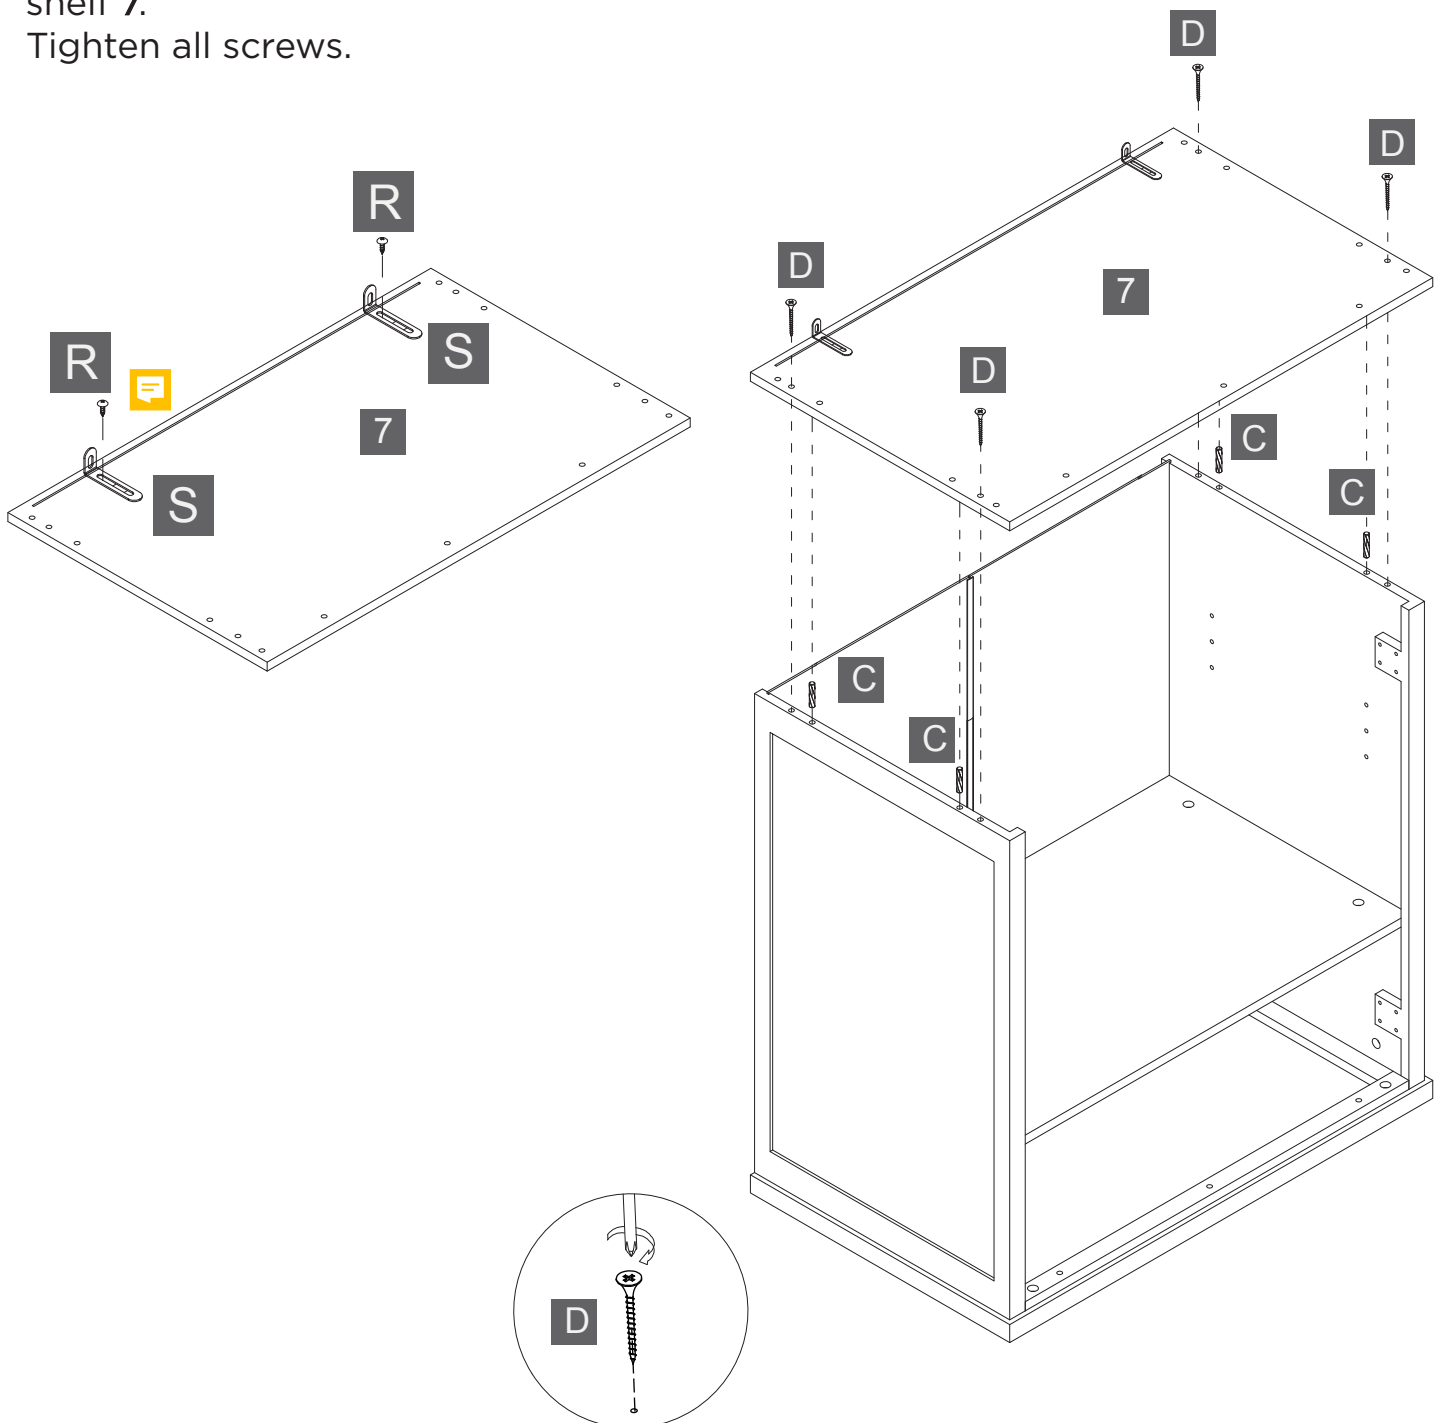


STEP-BY-STEP GUIDE

 STEP 7

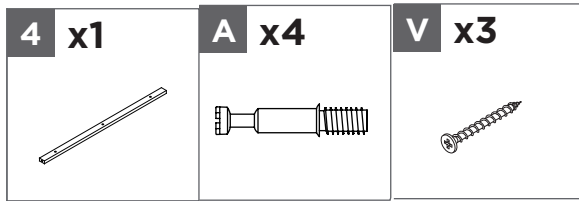


 Insert four cam bolts **A** into the middle shelf **7**.
Insert three screws **V** through the support rail **4** into the middle shelf **7**.
Tighten all cam bolts and screws.

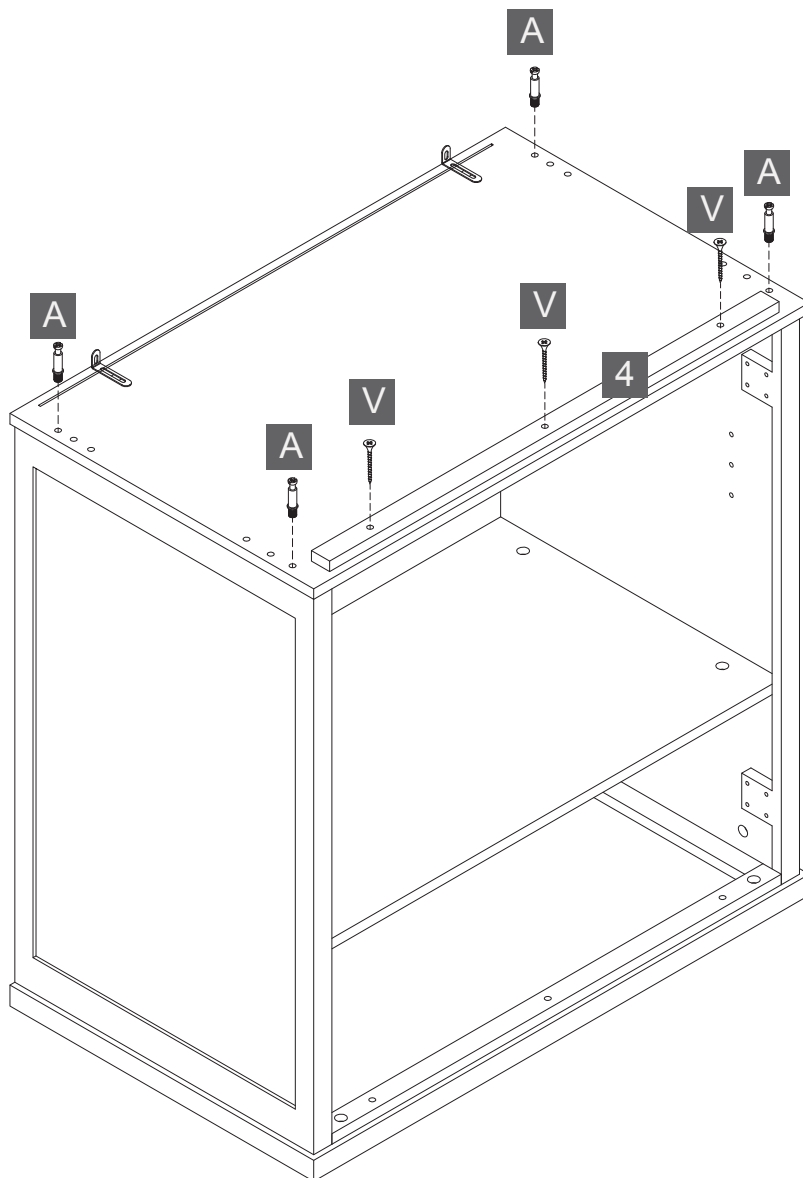

STEP-BY-STEP GUIDE

 STEP 8

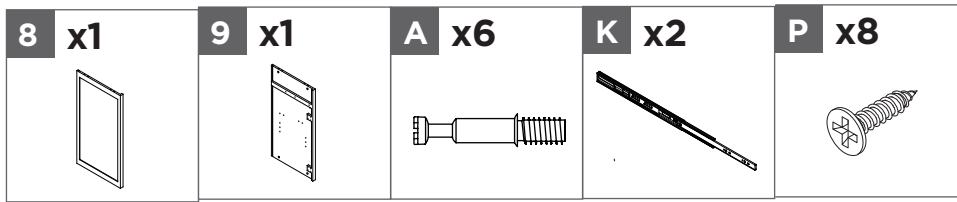


The slide track **K2** and the slide runner **K1** will need to be separated for assembly. To do so, slide the slide track **K2** slightly out from inside the slide runner **K1** until the trigger disconnect lever is visible.

In the groove of the slide runner **K1**, press the trigger disconnect lever upwards as the same time sliding the slide track **K2** out.

Insert eight flat-head screws **P** through the slide runners **K1** into the lower left side **8** and lower right side **9**.

Insert six cam bolts **A** into the lower left side **8** and lower right side **9**.

 
Tighten all screws and cam bolts.

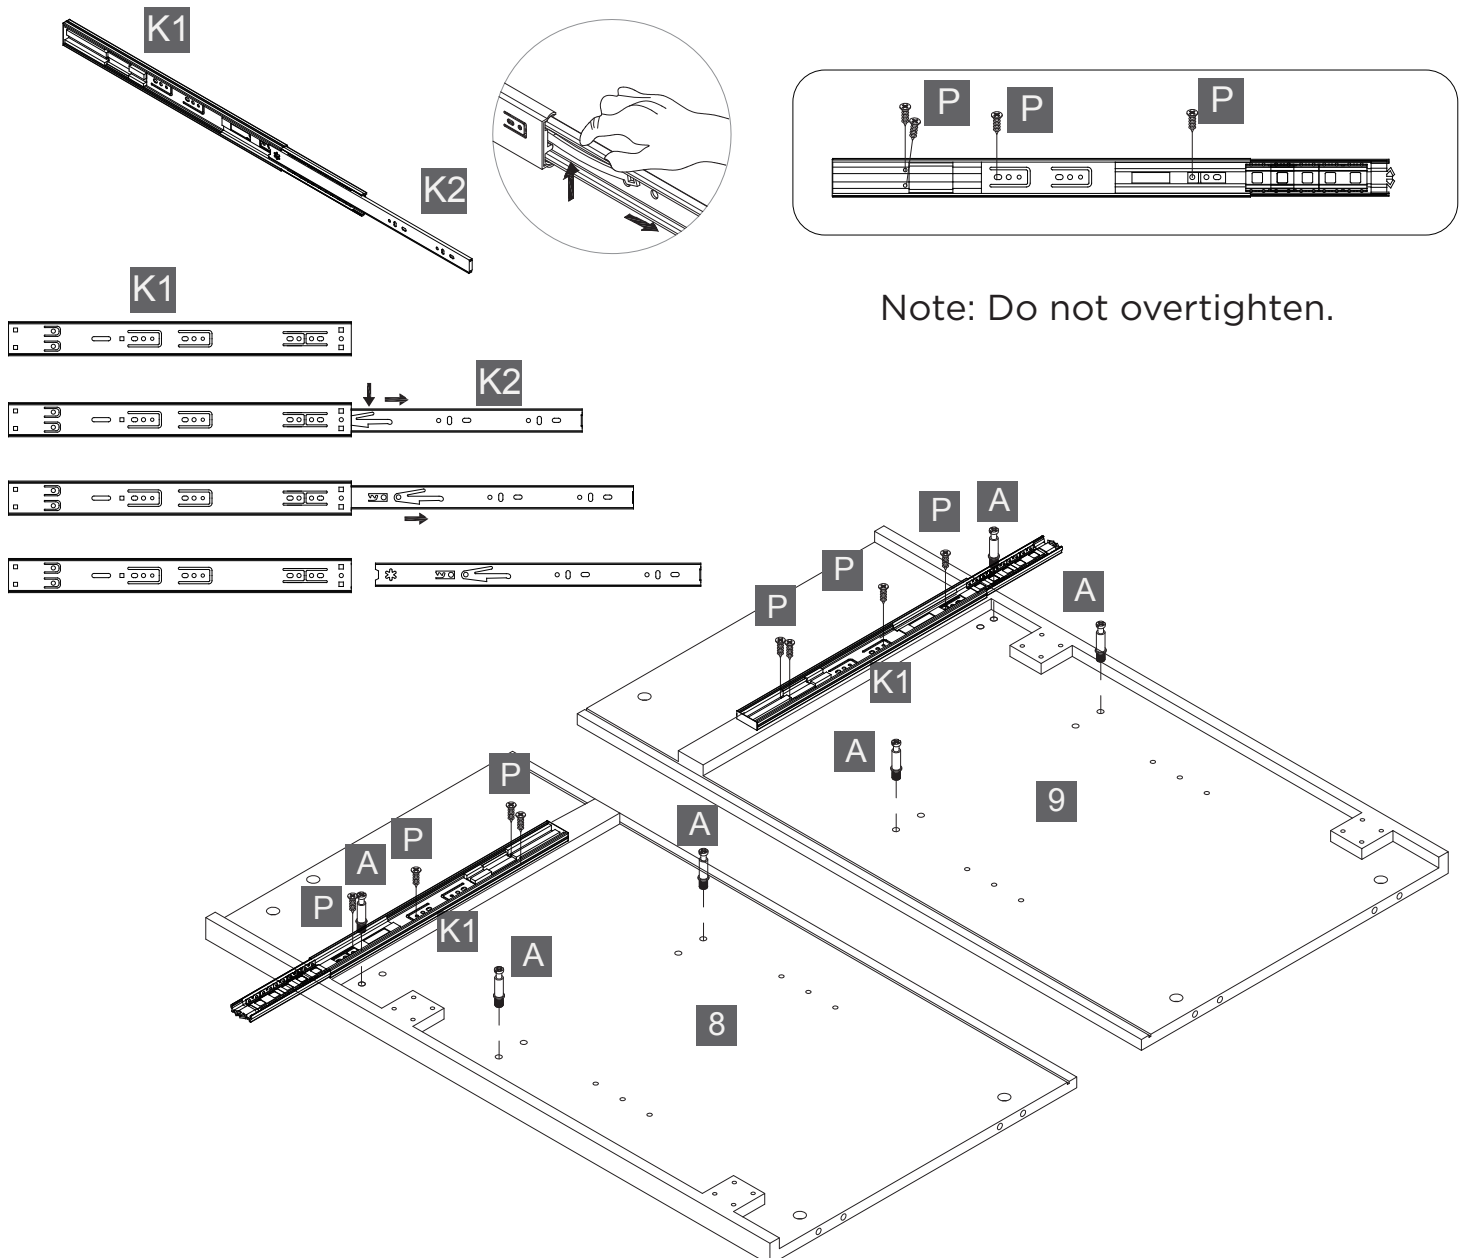


Note: Do not overtighten.

STEP-BY-STEP GUIDE

  STEP 9

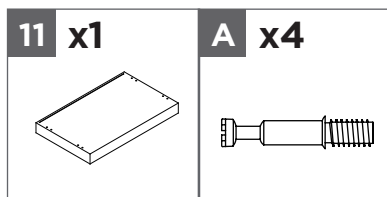





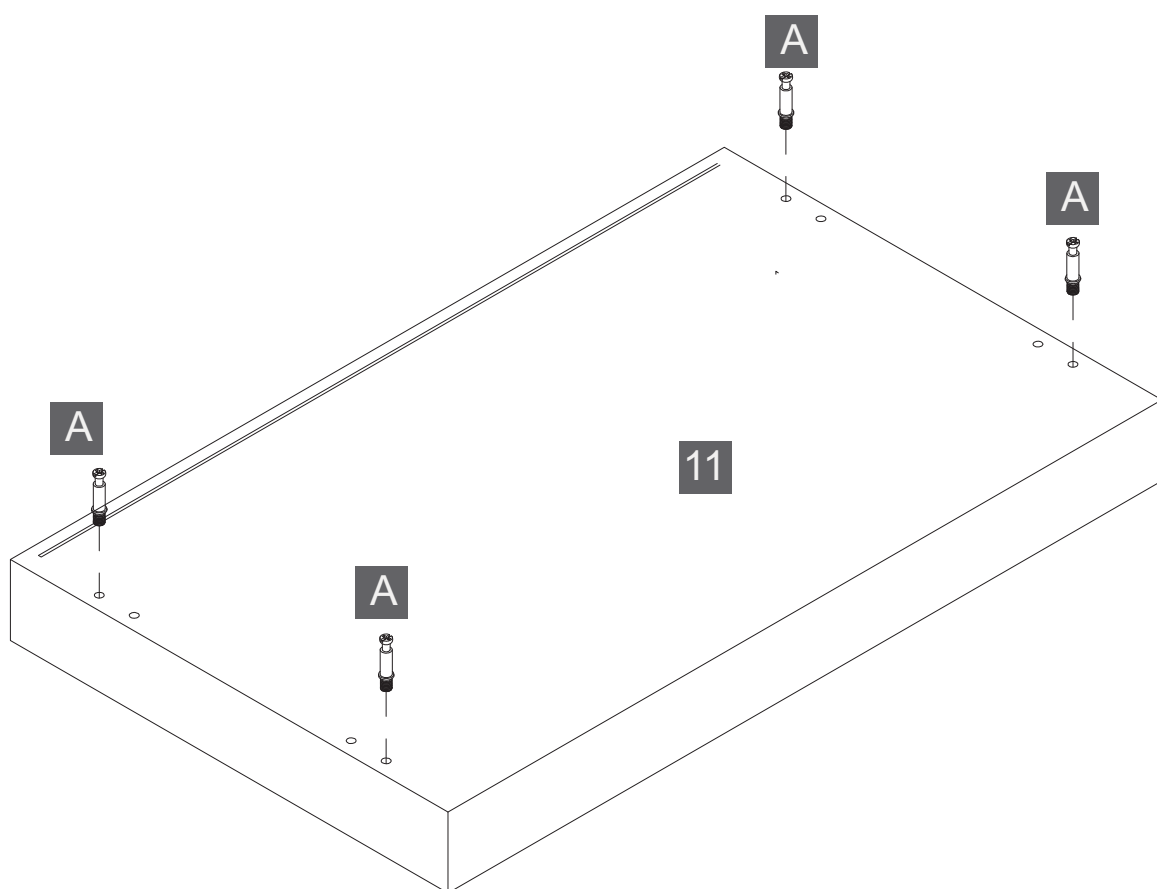

 Insert four cam bolts **A** into the bottom **11**.
Tighten all cam bolts.




STEP-BY-STEP GUIDE

 STEP 10

5 x1	8 x1	9 x1	10 x1	B x6	C x6
					


Insert six wood dowels **C** into the shelf **5** and drawer support **10**.
Attach the lower left side **8** and lower right side **9** to the shelf **5** and drawer support **10**.

 Insert six cam locks **B** into the shelf **5** and drawer support **10**.
Tighten all cam locks.

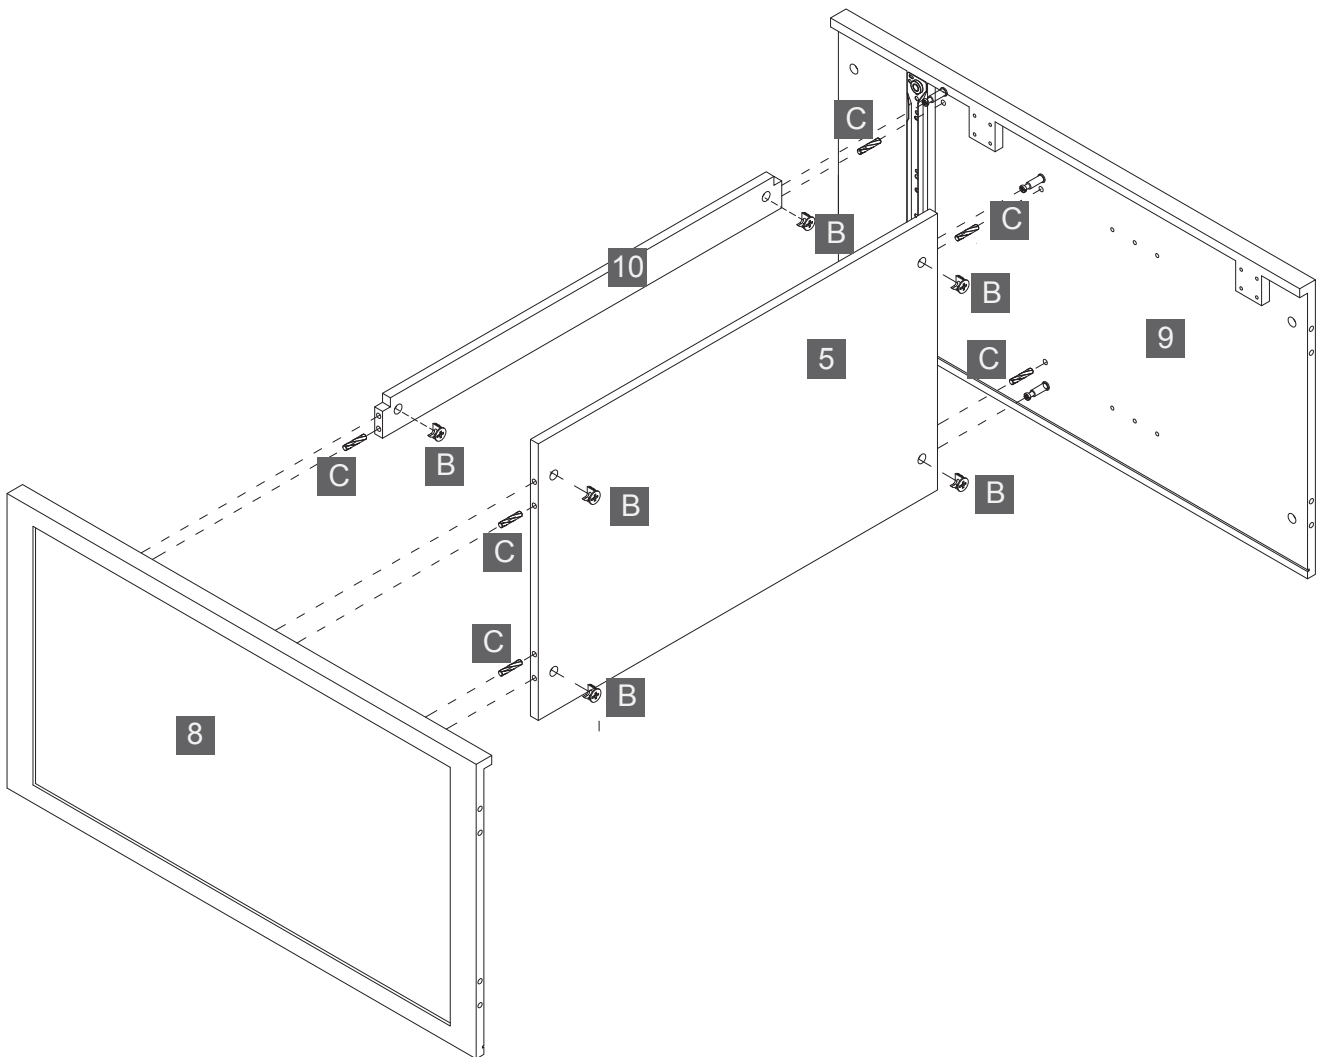


STEP-BY-STEP GUIDE

 STEP 11

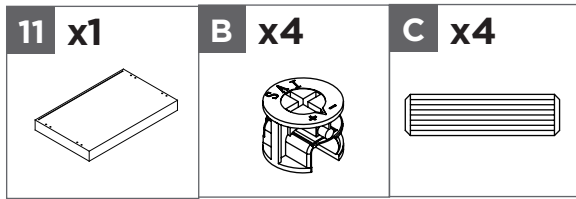


 Insert four wood dowels **C** into the bottom **11**.
Attach the lower left side **8** and lower right side **9** to the bottom **11**.
Insert four cam locks **B** into the lower left side **8** and lower right side **9**.
Tighten all cam locks.

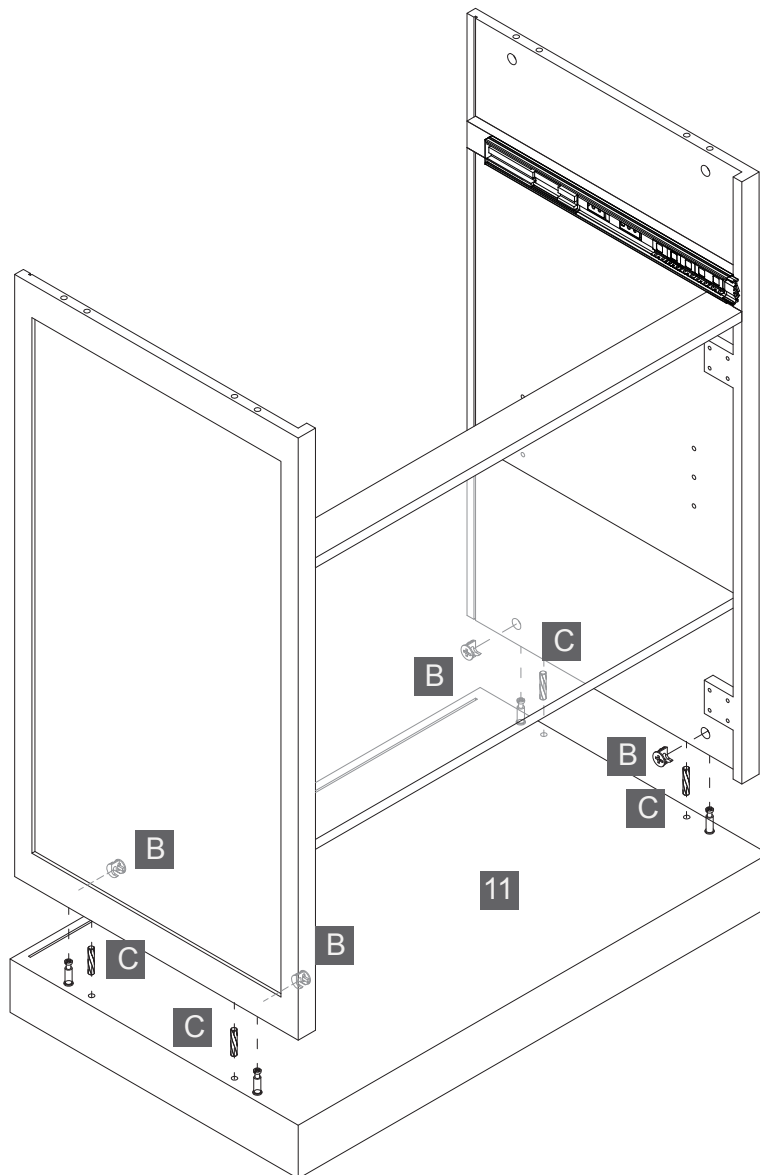

STEP-BY-STEP GUIDE

 
STEP 12

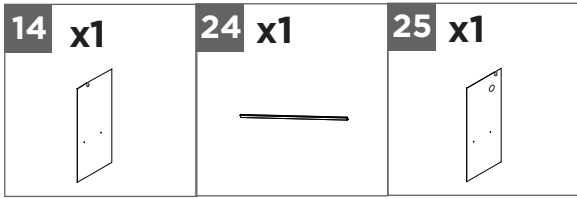

Insert the lower left back **14**, lower H-shaped strip **24** and lower right back **25** into the groove between the lower left side **8** and lower right side **9**.

Make equal margins along all four edges of the lower left back **14** and lower right back **25**.

 Push on opposite corners of your unit if needed to make it “square”.

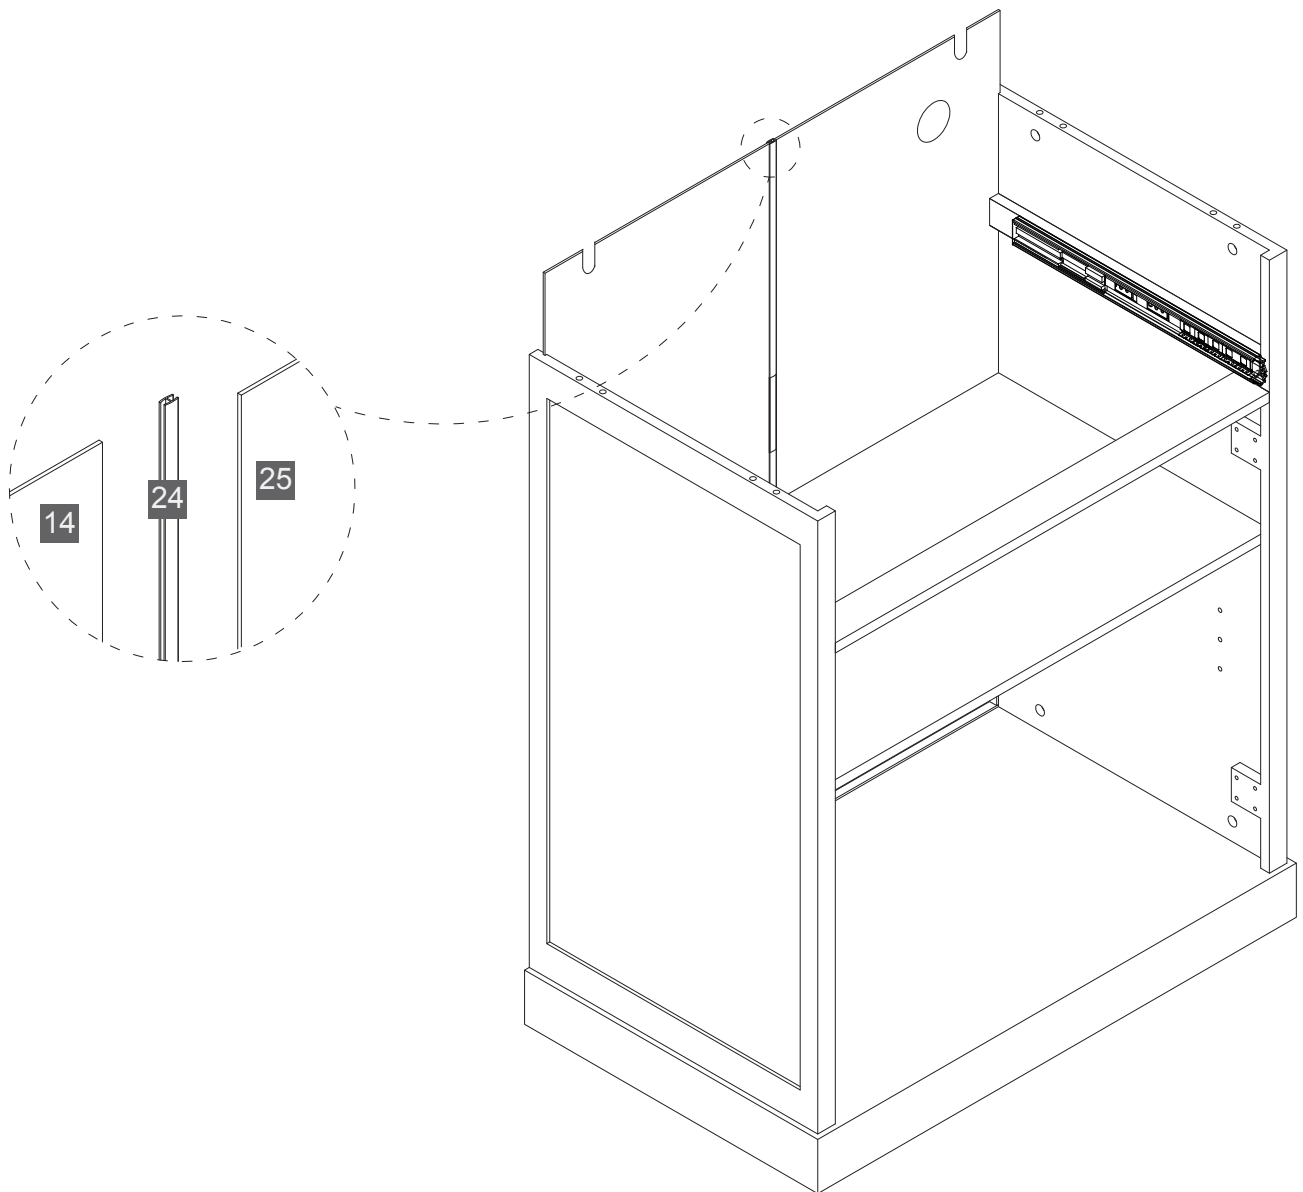

STEP-BY-STEP GUIDE

STEP 13

 
B x4



C x4



Insert four wood dowels **C** into the lower left side **8** and lower right side **9**. Attach the middle shelf **7** to the lower left side **8** and lower right side **9**. Insert four cam locks **B** into the lower left side **8** and lower right side **9**. Tighten all cam locks.

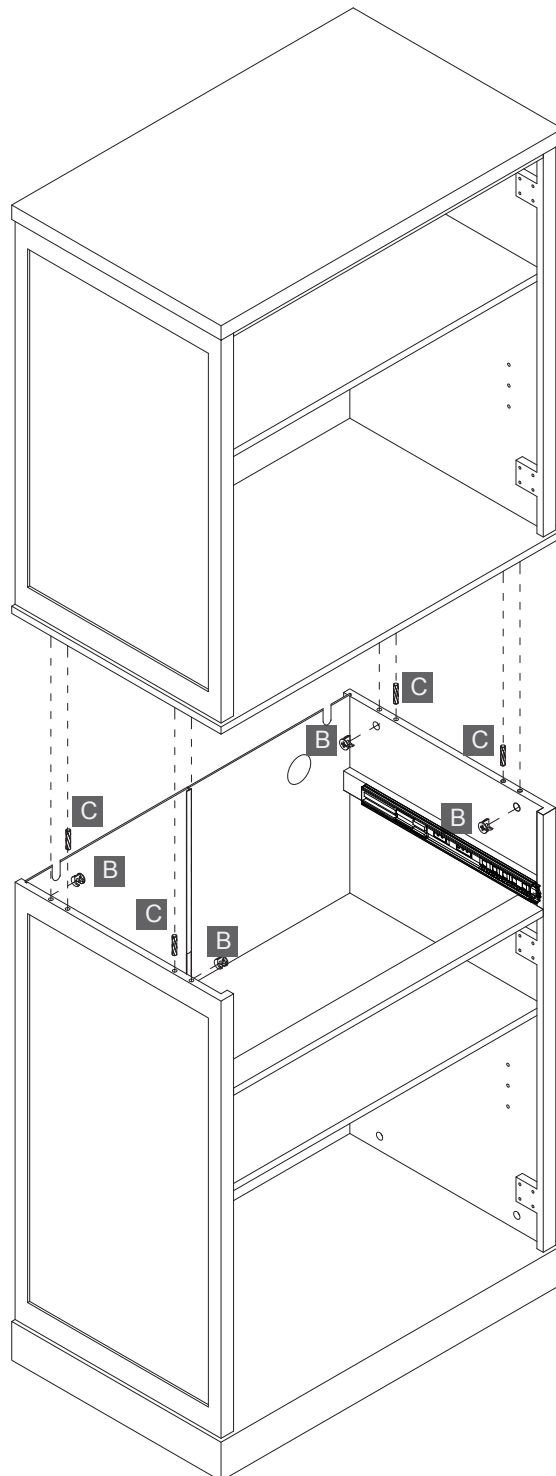


STEP-BY-STEP GUIDE

STEP 14


F x8



 H x24



 Insert sixteen screws **H** through the backboard locker **H** into the groove as shown. Insert eight screws **F** through the backs into the shelves. Tighten all screws.

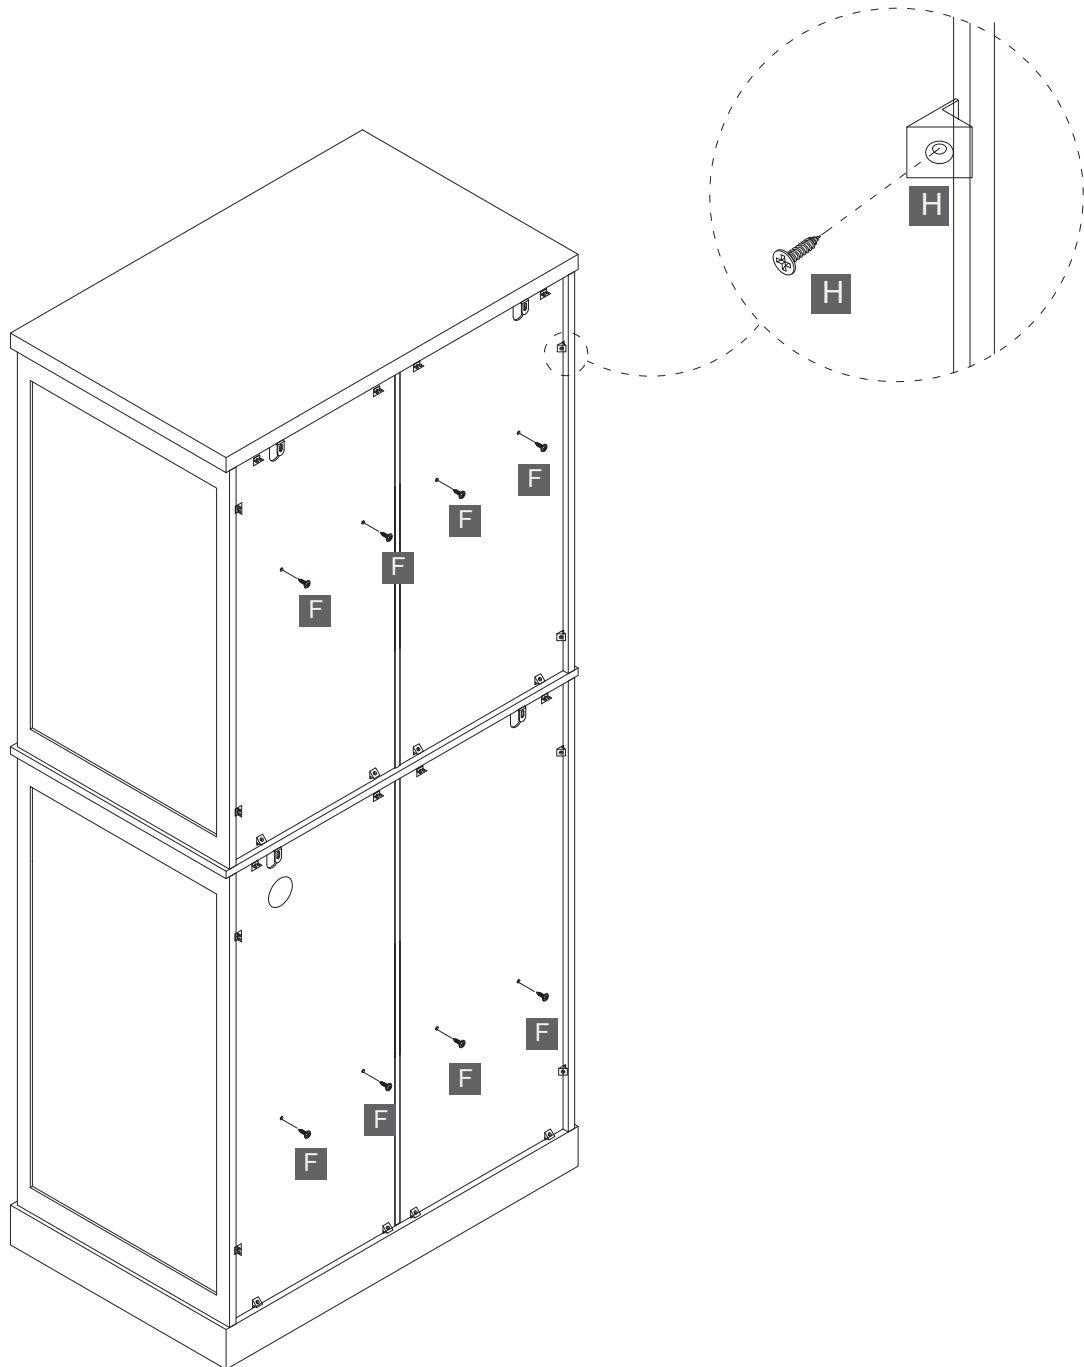


STEP-BY-STEP GUIDE

STEP 15


T x4



 U x4



 
Using the anti-tip brackets **S** as a guide, mark four points on the wall, drill a hole at each mark into a wall stud, hammer four wall anchors **U** into the wall, and fasten the anti-tip brackets **S** using four screws **T** screwed into the wall anchors **U**.

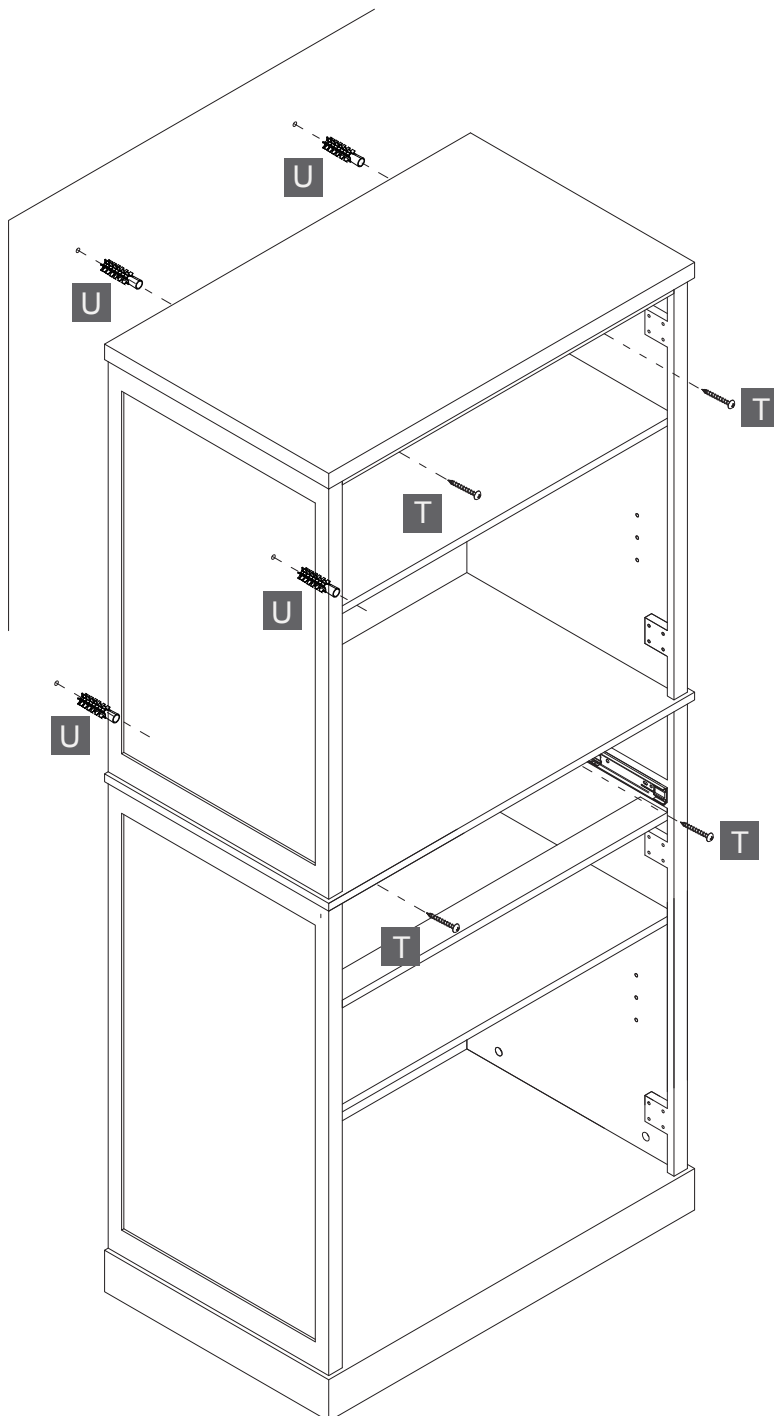

STEP-BY-STEP GUIDE

STEP 16

 
6 x2



Q x8

 
 



 


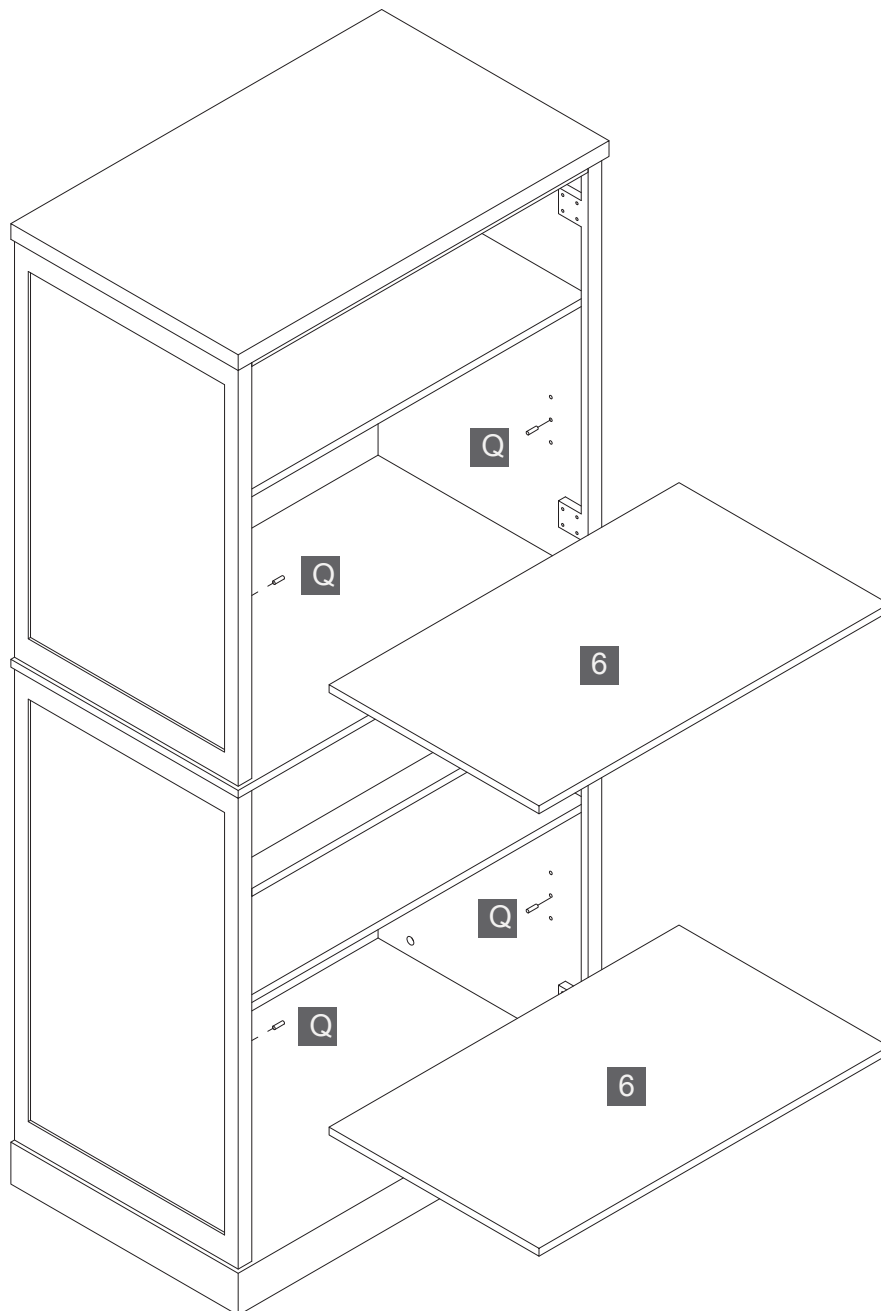Insert eight shelf holders **Q** into the pre-drilled holes as shown. Place the adjustable shelves **6** on the shelf holders **Q**.




STEP-BY-STEP GUIDE

STEP 17

15 x2	16 x2	E x4	J x16	M x4	I x8
					

 
Insert four round-head screws **M** through the upper doors **15** and lower doors **16** into the door handles **E**.
 Insert sixteen flat-head screws **J** through the hinges **I** into the upper doors **15** and lower doors **16**.
 Tighten all screws.

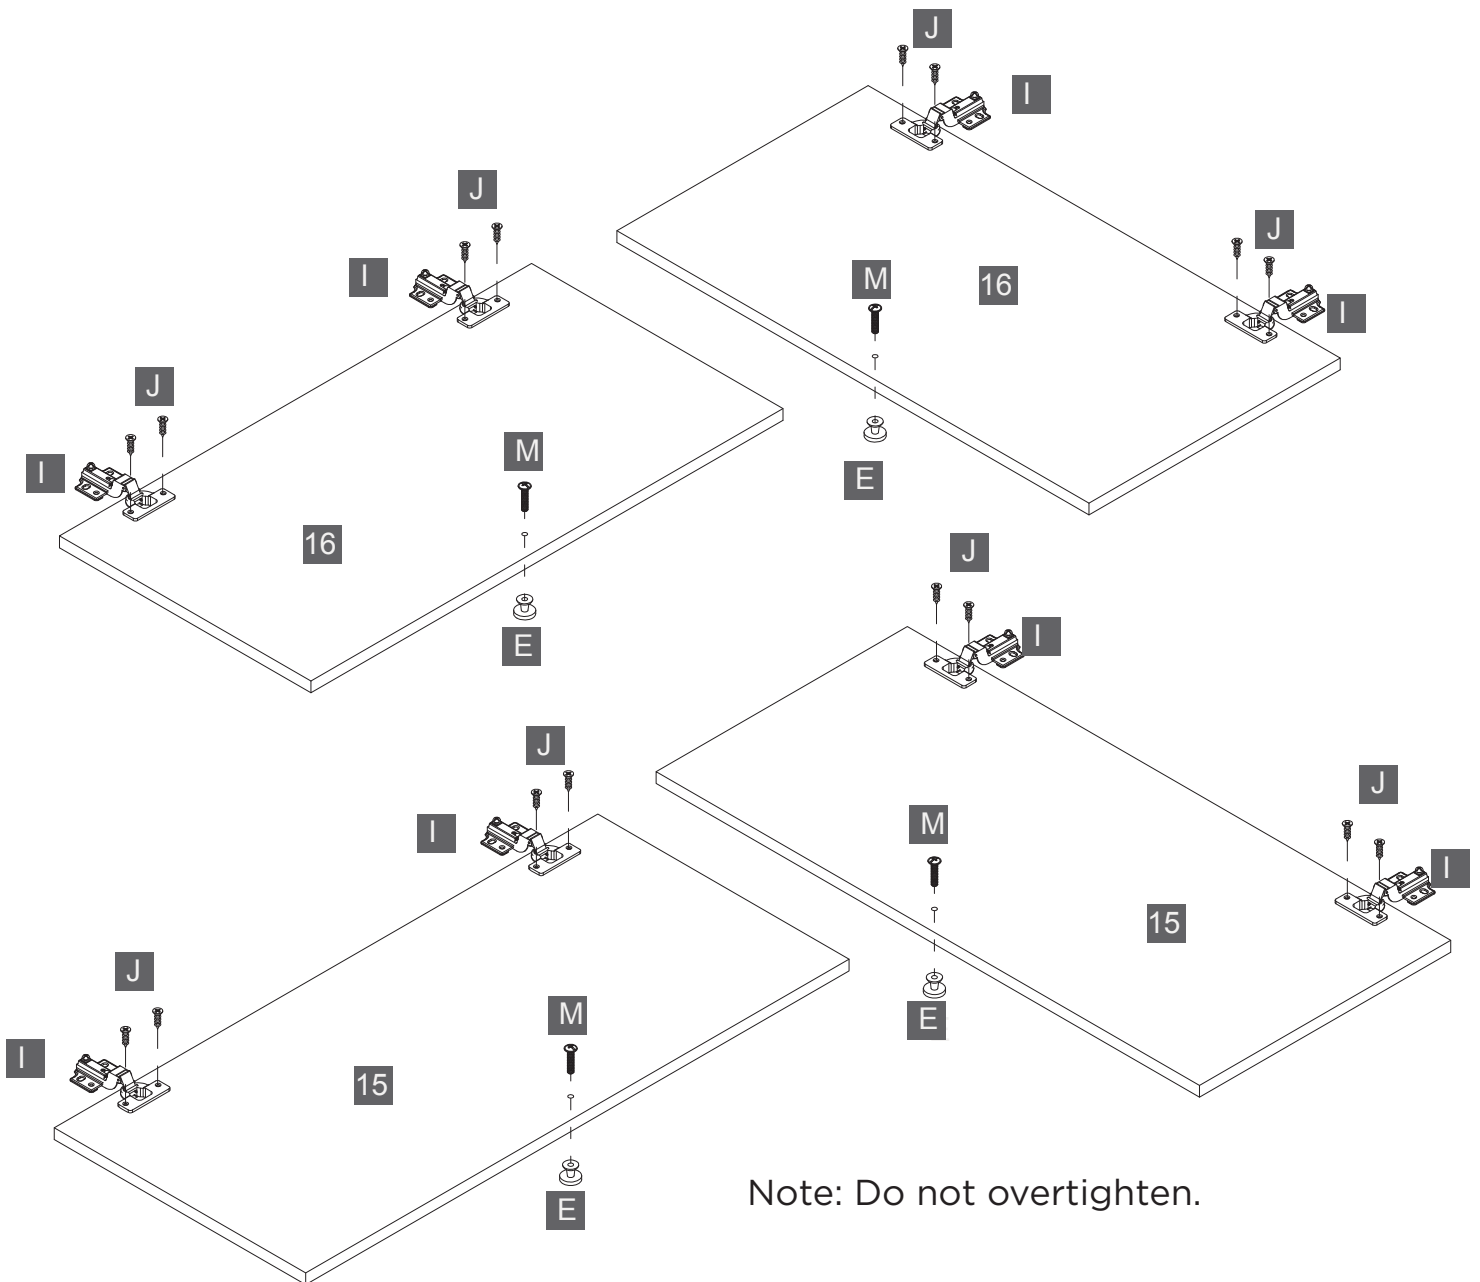



Note: Do not overtighten.

STEP-BY-STEP GUIDE

   STEP 18

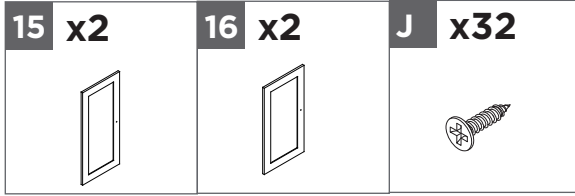

 
 
 
 

 
Insert thirty two flat-head screws **J** through the hinges **I** into the upper left side **2**, upper right side **3**, lower left side **8** and lower right side **9**, and fasten the hinges to the upper left side **2**, upper right side **3**, lower left side **8** and lower right side **9**. Tighten all screws.

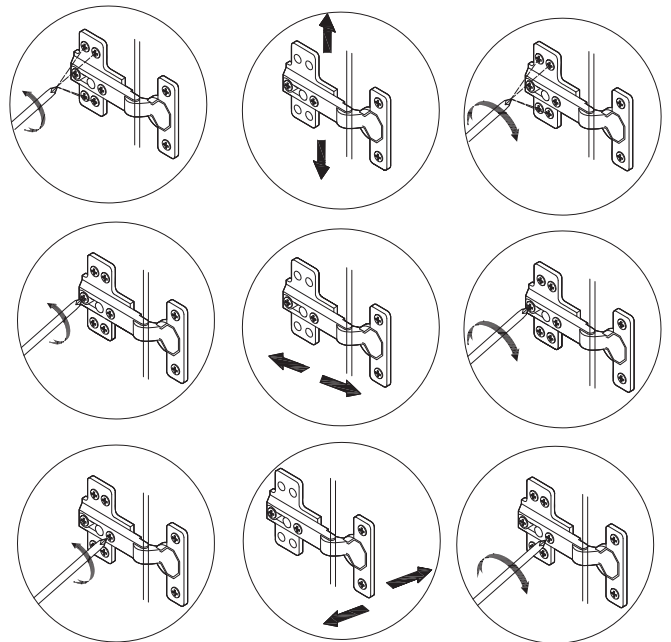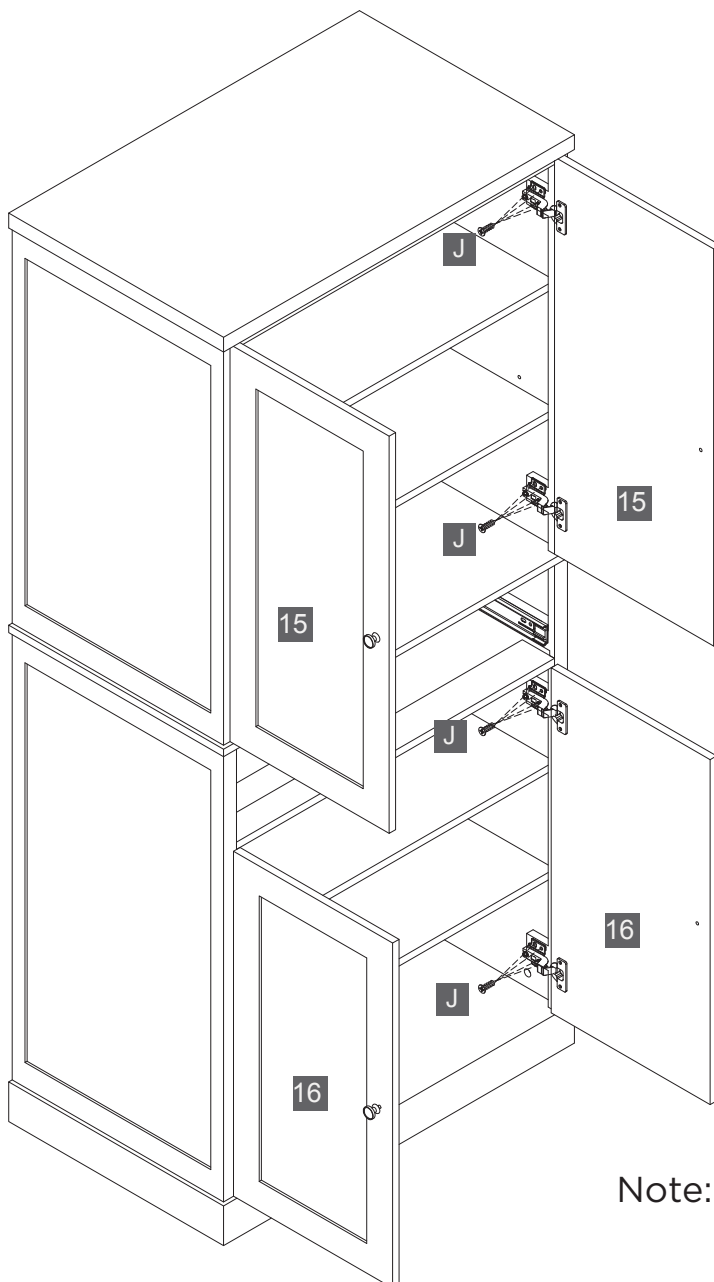

Note: Do not overtighten.

STEP-BY-STEP GUIDE



STEP 19

17 x1	18 x1	19 x1	A x5	K x2	P x4
					

Insert five cam bolts **A** into the drawer front.







Insert four flat-head screws **P** through the slide tracks **K2** into the drawer left **18** and drawer right **19**.

  Tighten all cam bolts and screws.

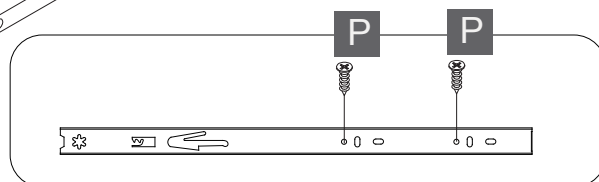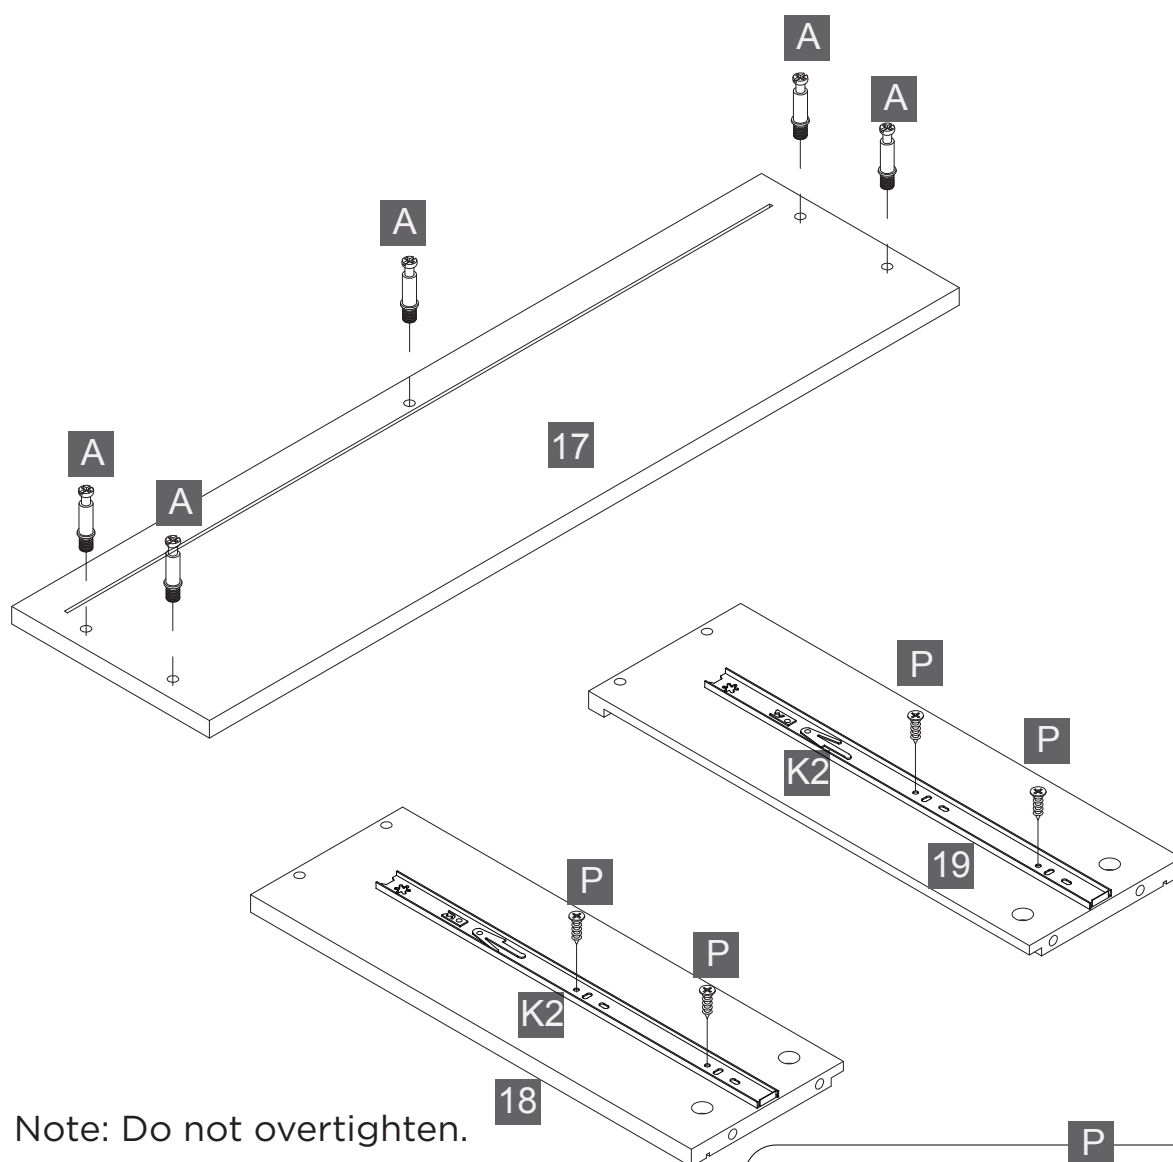

STEP-BY-STEP GUIDE

     
STEP 20

18 x1	19 x1	20 x1	21 x1	23 x1	G x5
					

 Insert four screws **G** through the drawer left **18** and drawer right **19** into the drawer back **20**.

 
 



 

Insert one screw **G** through the drawer back **20** into the drawer support **21**. Tighten all screws.

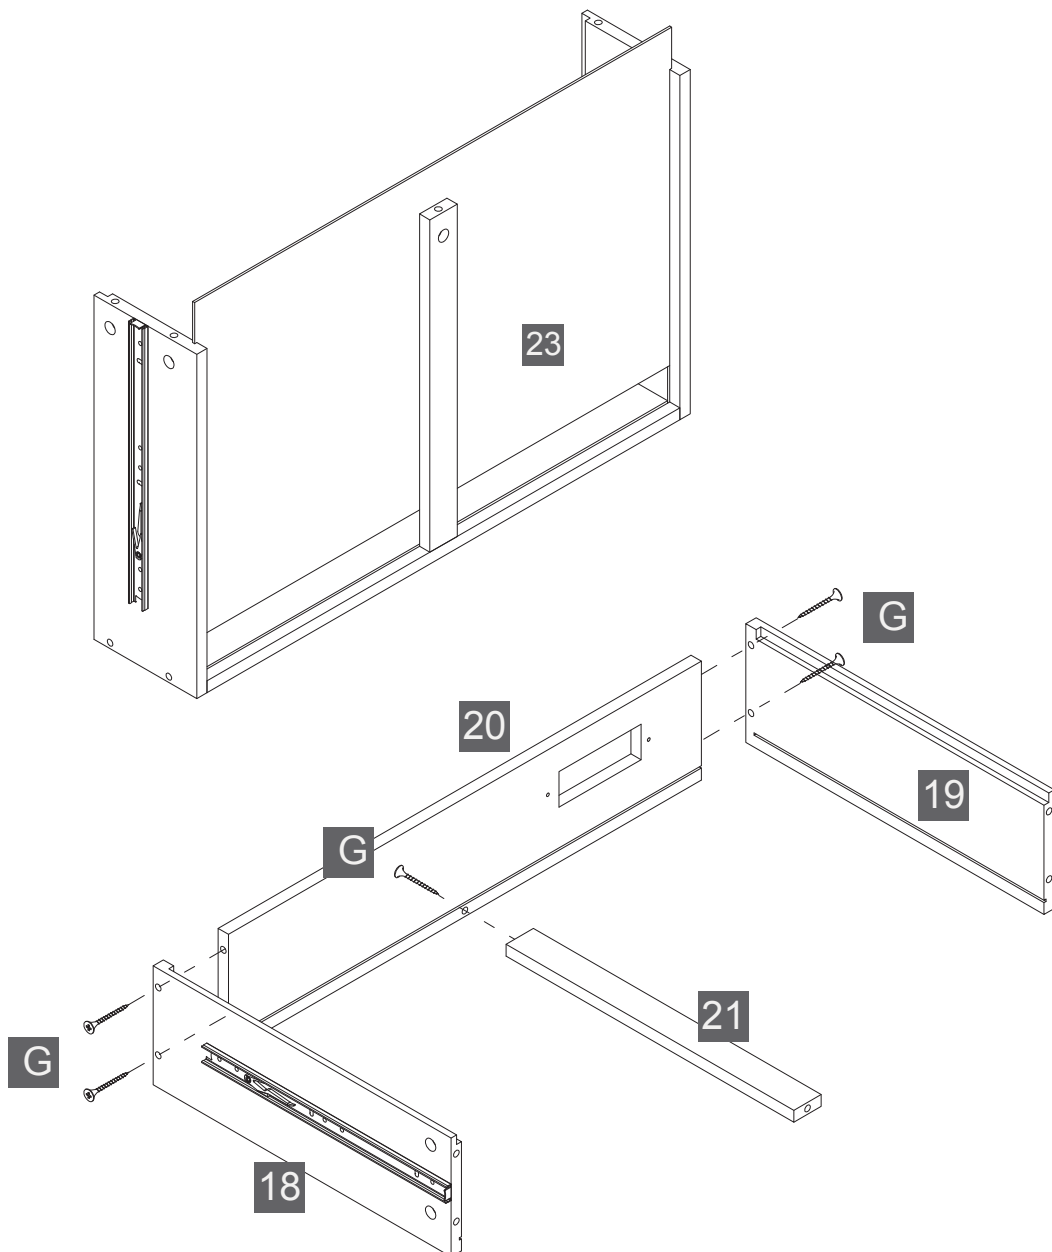Insert the drawer bottom **23** into the groove around the bottom of the drawer left **18**, drawer right **19** and drawer back **20**.



STEP-BY-STEP GUIDE

STEP 21

17 x1	22 x1	B x5	L x2	Y x4	O x1	P x2
						

Attach the drawer front **17** to the drawer left **18** and drawer right **19**.

 
Insert four cam lock **B** into the drawer left **18** and drawer right **19**.

Insert four round-head screws **Y** through the drawer front into the drawer handles **L**.

Insert two flat-head screws **P** through the power station **O** into the drawer back **20**.

Tighten all screws.



Put the removable work surface **22** on the groove in the drawer left **18** and drawer right **19** as shown.

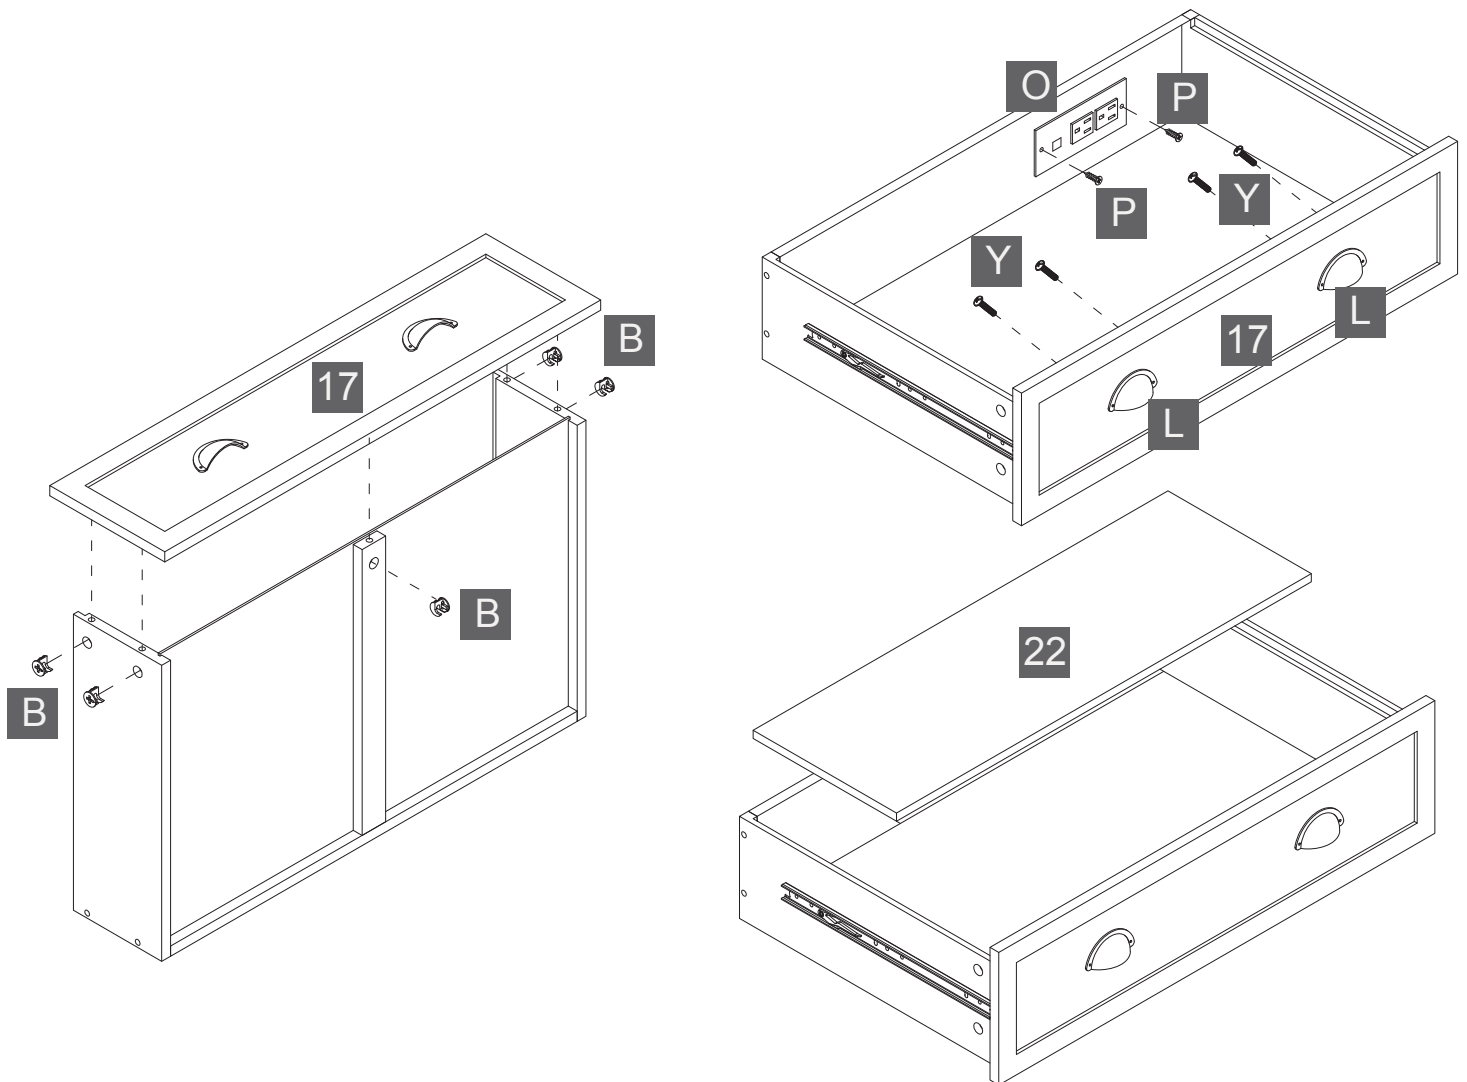


STEP-BY-STEP GUIDE

STEP 22

  Insert the drawer into the unit by lining up the slide track on the drawer with the slide runner on the unit.

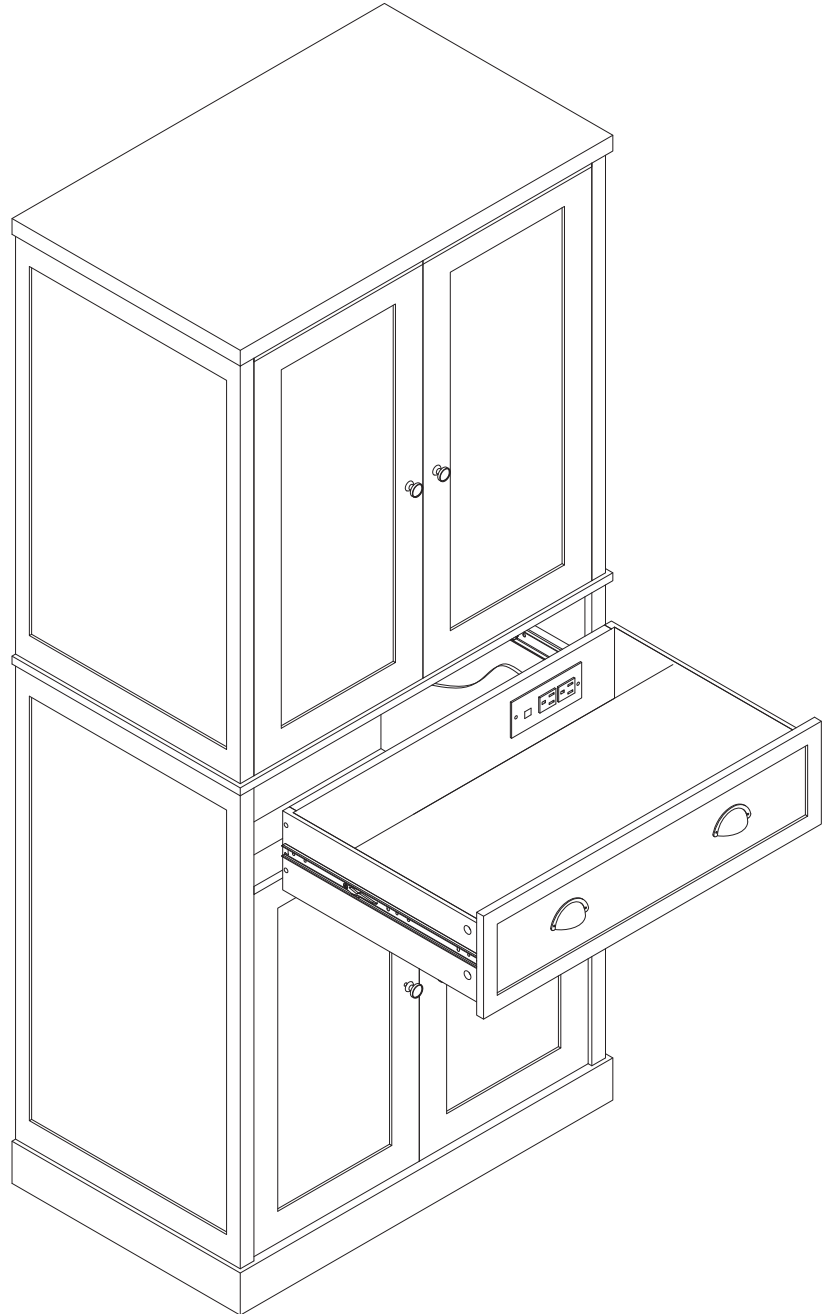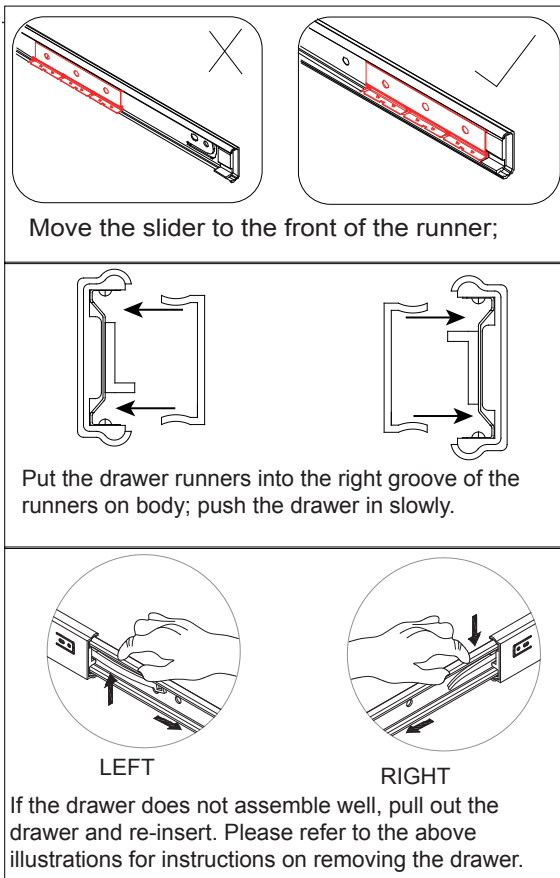

TECHNICAL DATA

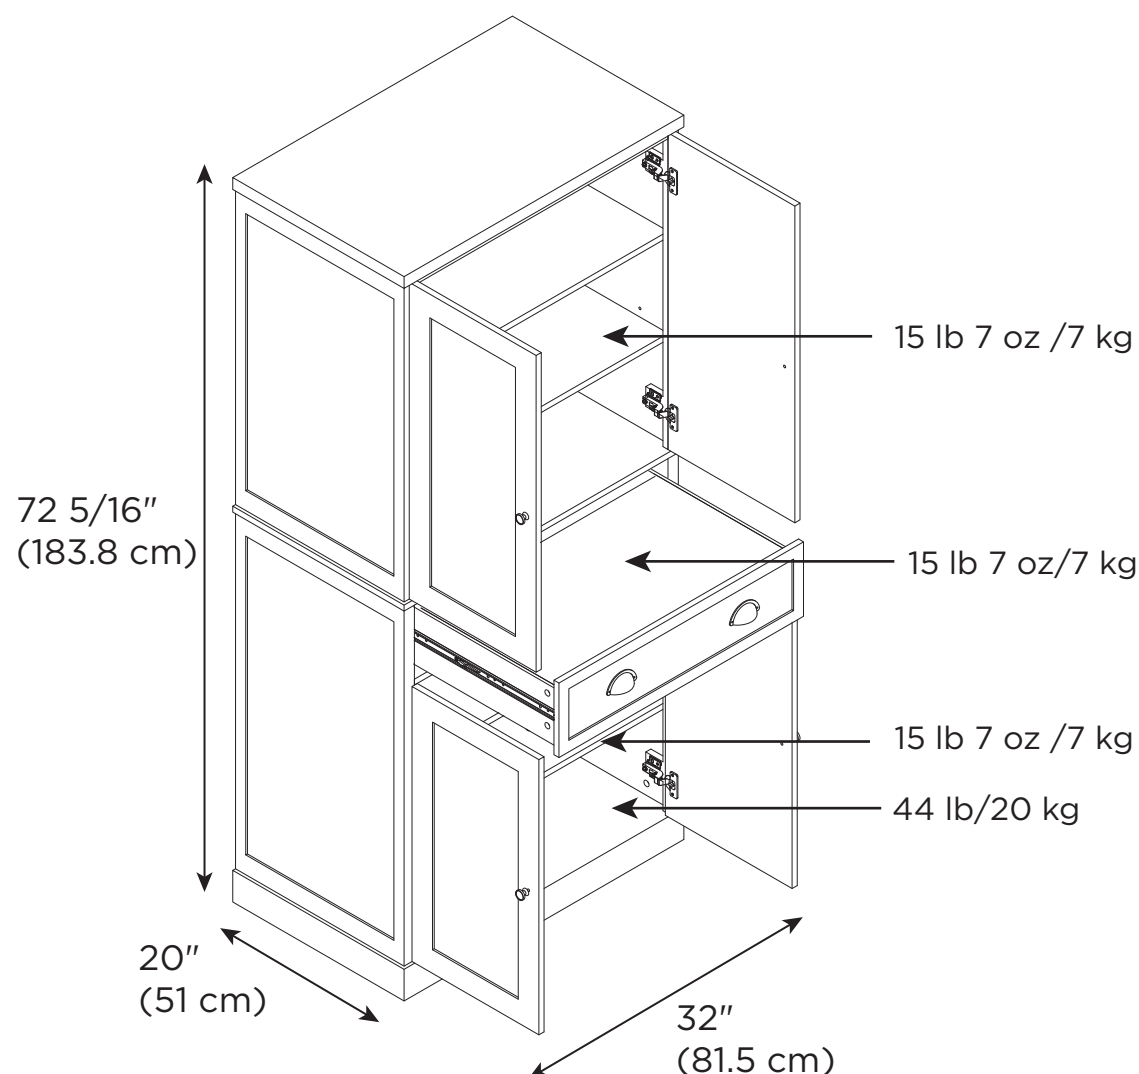 

SPECIFICATIONS

ASSEMBLED DIMENSIONS (W x D x H)

32 x 20 x 72 5/16"

81.5 x 51 x 183.8 cm

ASSEMBLED WEIGHT

165 lb 6 oz

75 kg

MAXIMUM WEIGHT CAPACITY (Drawer and removable surface)

15 lb 7 oz

7 kg

MAXIMUM WEIGHT CAPACITY (Each shelf)

15 lb 7 oz

7 kg

MAXIMUM WEIGHT CAPACITY (Bottom shelf)

44 lb

20 kg

ASSEMBLY TROUBLESHOOTING



**BEFORE RETURNING
YOUR PRODUCT**

**HAVING TROUBLE?
LET US HELP YOU!**

**TOLL-FREE:
1-888-670-6684**

If you have questions regarding your product or require warranty assistance, please call our customer service helpline.



**CALL US;
WE CAN HELP**

CARING FOR YOUR ITEM

1

Weight Capacity:

- Do not exceed maximum weight capacity of 15 lb 7 oz (7 kg) on drawer and removable surface.
- Do not exceed maximum weight capacity of 15 lb 7 oz (7 kg) on each shelf.
- Do not exceed maximum weight capacity of 44 lb (20 kg) on bottom shelf.

2

Furniture tipping over can be dangerous. To reduce your risk:

- Do not stand on, sit on or climb this unit.
- Do not sit on top of unit.
- For indoor use only.
- Always place the unit on a flat, level surface.
- Regularly tighten all hardware to ensure unit is secure and stable.

3

Wipe clean with a damp cloth.

4

Avoid direct sunlight.

WARRANTY INFORMATION



1-YEAR LIMITED WARRANTY*

This CANVAS® product carries a one (1) year warranty against defects in workmanship and materials. Trileaf Distribution agrees to replace the defective product free of charge within the stated warranty period, when returned by the original purchaser with proof of purchase. This product is not guaranteed against wear or breakage due to misuse and/or abuse.

PRODUCT NO. 168-0149-0

Made in China

Imported by Trileaf Distribution Trifeuil Toronto, Canada M4S 2B8

CANVAS™

INSPIRED BY CANADA

