 


CANVAS™

KELSEY

1-DOOR SMALL WARDROBE

PRODUCT NO. 168-0188-6

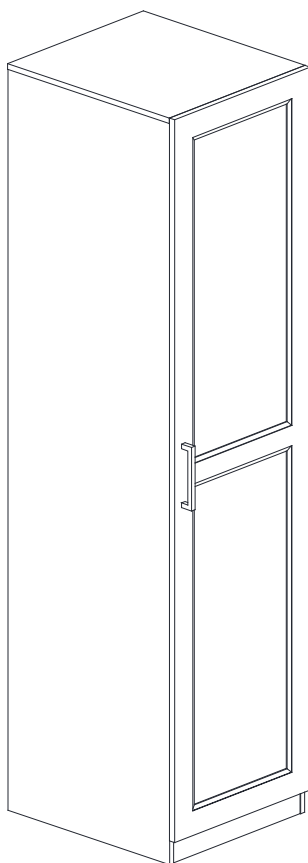

ASSEMBLY INSTRUCTIONS



HAVING TROUBLE?

TOLL-FREE:

1-888-670-6684

IMPORTANT: Please read this manual carefully before beginning assembly of this product. Keep this manual for future reference.

CANVAS™

INSPIRED BY CANADA



To the trend seekers and design mavens.
CANVAS™ is the furniture and décor brand
that helps you imagine and create a space
you can be proud of.

That's because **CANVAS™** offers style with
ease with products that are made for real life
and Canadian inspired.

We would love to hear from you and welcome
your thoughtful feedback. Visit our website
at **canadiantire.ca** to tell us about your
experience, and share your photos with us
using **#myCANVAS style**.

Show us how you bring **CANVAS™** products
to life. We can't wait to see!

TABLE OF CONTENTS

Parts List	4
Before You Begin Assembly	8
Step-by-step Guide	10
Tip Restraint	25
Adjust Door	27
Adjust Levellers	28
Technical Data	29
Caring for Your Item	30
Warranty Information	31



 
WARNING! TO REDUCE THE RISK OF SERIOUS INJURY, READ THE FOLLOWING SAFETY INSTRUCTIONS BEFORE ASSEMBLING AND USING THE PRODUCT.

- Please read and understand this entire manual before attempting to assemble, operate, or install the product.
- Any assembly or maintenance of the product must be carried out by adults only.
- Some parts may contain sharp edges. Wear protective gloves if necessary.
- To prevent damage, place all parts on a level surface during assembly. Add a layer of protective surface if needed.

TOOLS REQUIRED



Screwdriver
(Not provided)

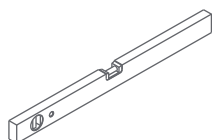


Level
(Not provided)




Mallet
(Not provided)



  Power Drill
(Not provided)

 
 
 
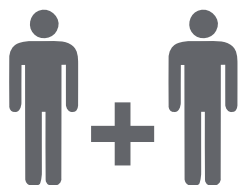 

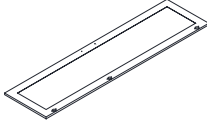 
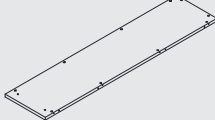 
 

 


2 people

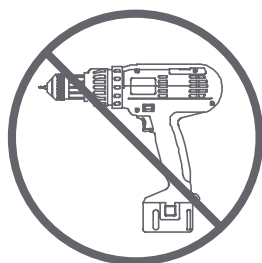 


NOTE: Do not over-drill.
Be aware of over-drilling.

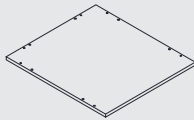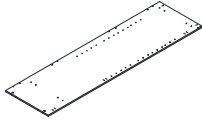

 

 


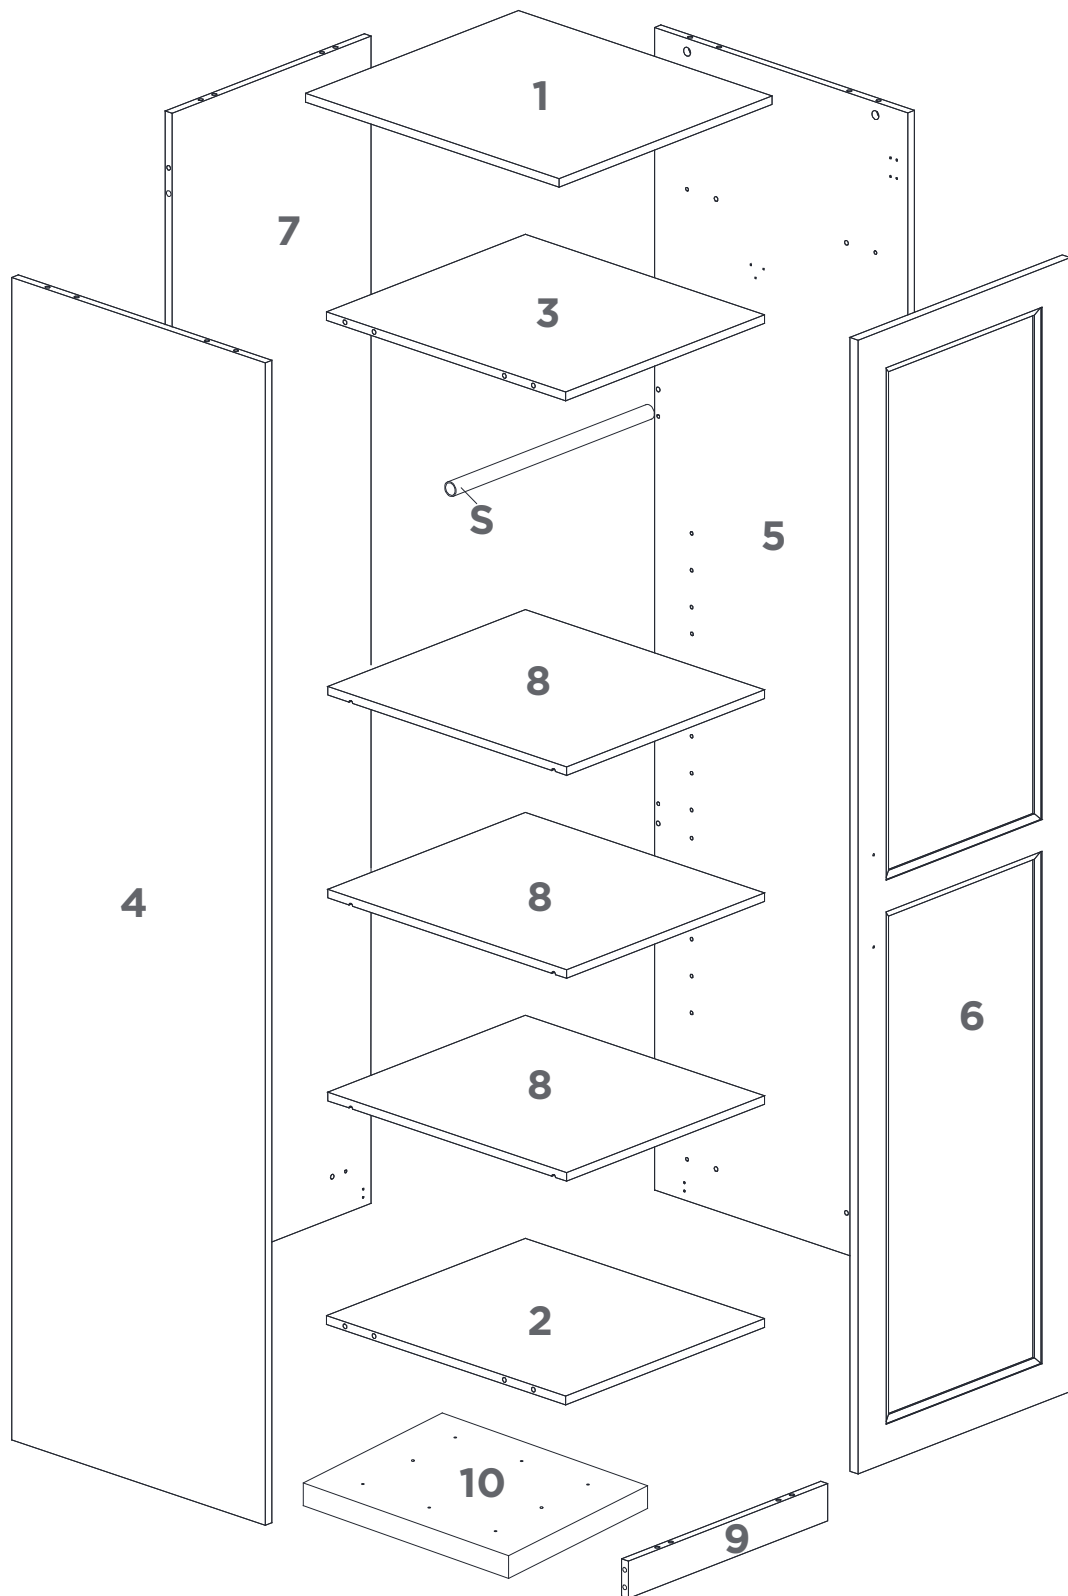



PARTS LIST

ITEM	DESCRIPTION	THUMBNAIL	QUANTITY
1	Top panel		1
2	Bottom panel		1
3	Fixed shelf		1
4	Left side panel		1
5	Right side panel		1
6	Door		1
7	Back panel		1
8	Adjustable shelf		3
9	Front bottom rail		1
10	Bottom frame		1

 
 
 



EXPLODED VIEW



HARDWARE LIST

ITEM	DESCRIPTION	THUMBNAIL	QUANTITY
A	Cam lock ø15x12mm		24
B	Cam bolt ø6x34mm		24
C	Wood dowel ø8x30mm		32
D	Hinge		3
E	Screw ø4x14mm		21
F	Shelf support		12
G	Bolt ø4x25mm		2
H	Handle		1
I	Coated paper sticker		8
J	Adjustable leveller		4
K	Screw ø3.5x12mm		16
L	Screw ø4x55mm		2
M	Screw ø4x18mm		2

 
HARDWARE LIST

ITEM	DESCRIPTION	THUMBNAIL	QUANTITY
N	Metal bracket		4
O	Anchor		2
P	Nylon strap		2
Q	Screw ø4x50mm		8
R	Hanging rod supports		2
S	Hanging rod		1

BEFORE YOU BEGIN ASSEMBLY


MAKE SURE ALL PARTS ARE PRESENT

 Compare all pieces to the parts and hardware lists, and make sure you have all tools required for assembly.

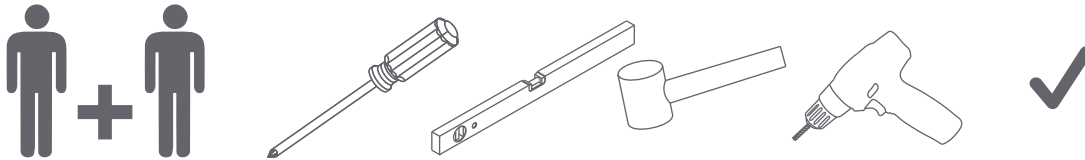


ASSEMBLE IN A CLEARED AREA

 Place all parts from the box on the floor in front of you on a clean, dry, level surface to protect the product as it is being built.

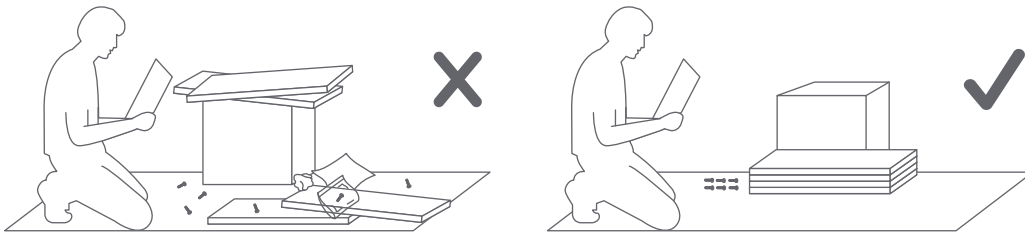


REMOVE PACKAGING MATERIALS

 Place packing materials back in the box. Do not dispose of packaging materials until assembly is complete.

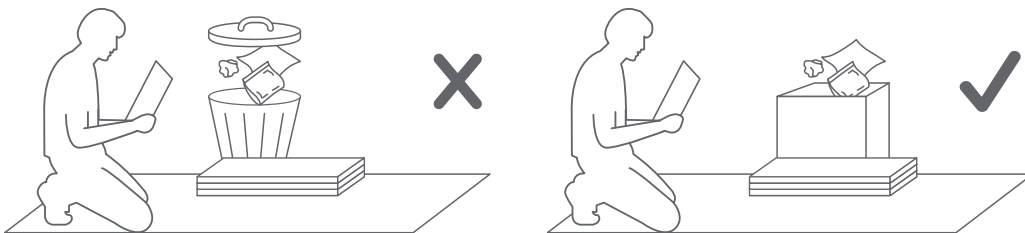

READ EACH STEP CAREFULLY

 
Make sure you understand each step. For any questions, contact CANVAS™ customer service at 1-888-670-6684 (toll-free).

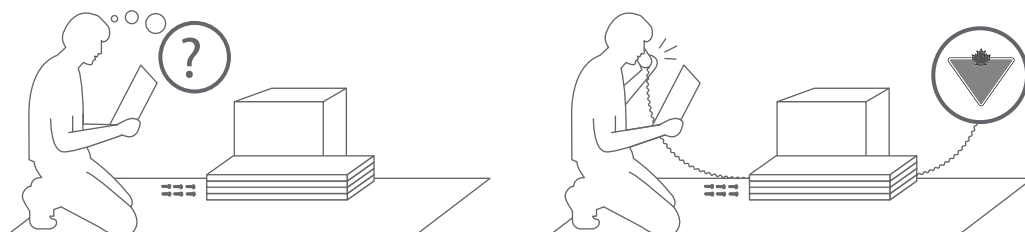


BEFORE YOU BEGIN ASSEMBLY

NOTE: IT IS VERY IMPORTANT TO USE GLUE WITH DOWELS. EXCESS GLUE CAN BE WIPED OFF WITH DAMP CLOTH.

 Insert the dowel at least half way by tapping lightly with a rubber mallet IF NECESSARY.

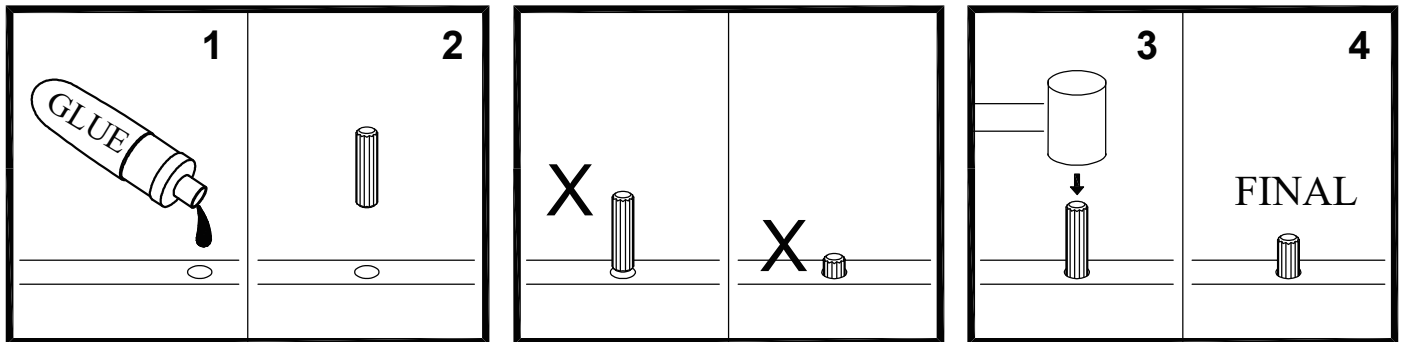

CAM LOCK SYSTEM OPERATION

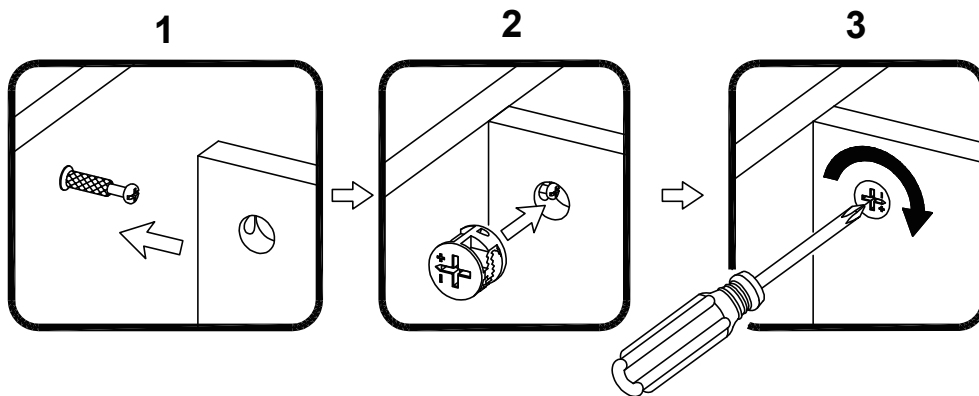 

HOW THE KNOCK DOWN (KD) ASSEMBLY SYSTEM WORKS

1. Screw the cam bolt into the pre-drilled threaded holes on the panel. Connect both panels together making sure cam bolt goes into the pre-drilled large hole on the end of panel that will accommodate the cam lock.
2. Insert the cam lock into the pre-drilled large hole on the panel. Make sure the arrow on the face of cam lock faces out and points towards cam bolt.
3. Take a cross-head screwdriver and rotate the cam lock clockwise to lock the cam bolt in place.

 
 




SPECIAL NOTE

Please read the instruction sheets completely before assembly. Examine all packaging material before discarding carton. Remove all parts from carton and separate into groups as indicated on parts list. Please ensure all parts are included prior to assembly. Use of power tools to complete assembly is not recommended.

You are now ready to assemble the KD unit.


STEP-BY-STEP GUIDE

STEP 1

4 X1	5 X1	B X16	C X4	E X6	R X2
					


Insert sixteen cam bolts **B** into left side panel **4** and right side panel **5**. Do not over-tighten. Insert four wood dowels **C** into left side panel **4** and right side panel **5**.

 Attach two hanging rod supports **R** to left side panel **4** and right side panel **5** using three screws **E** each.

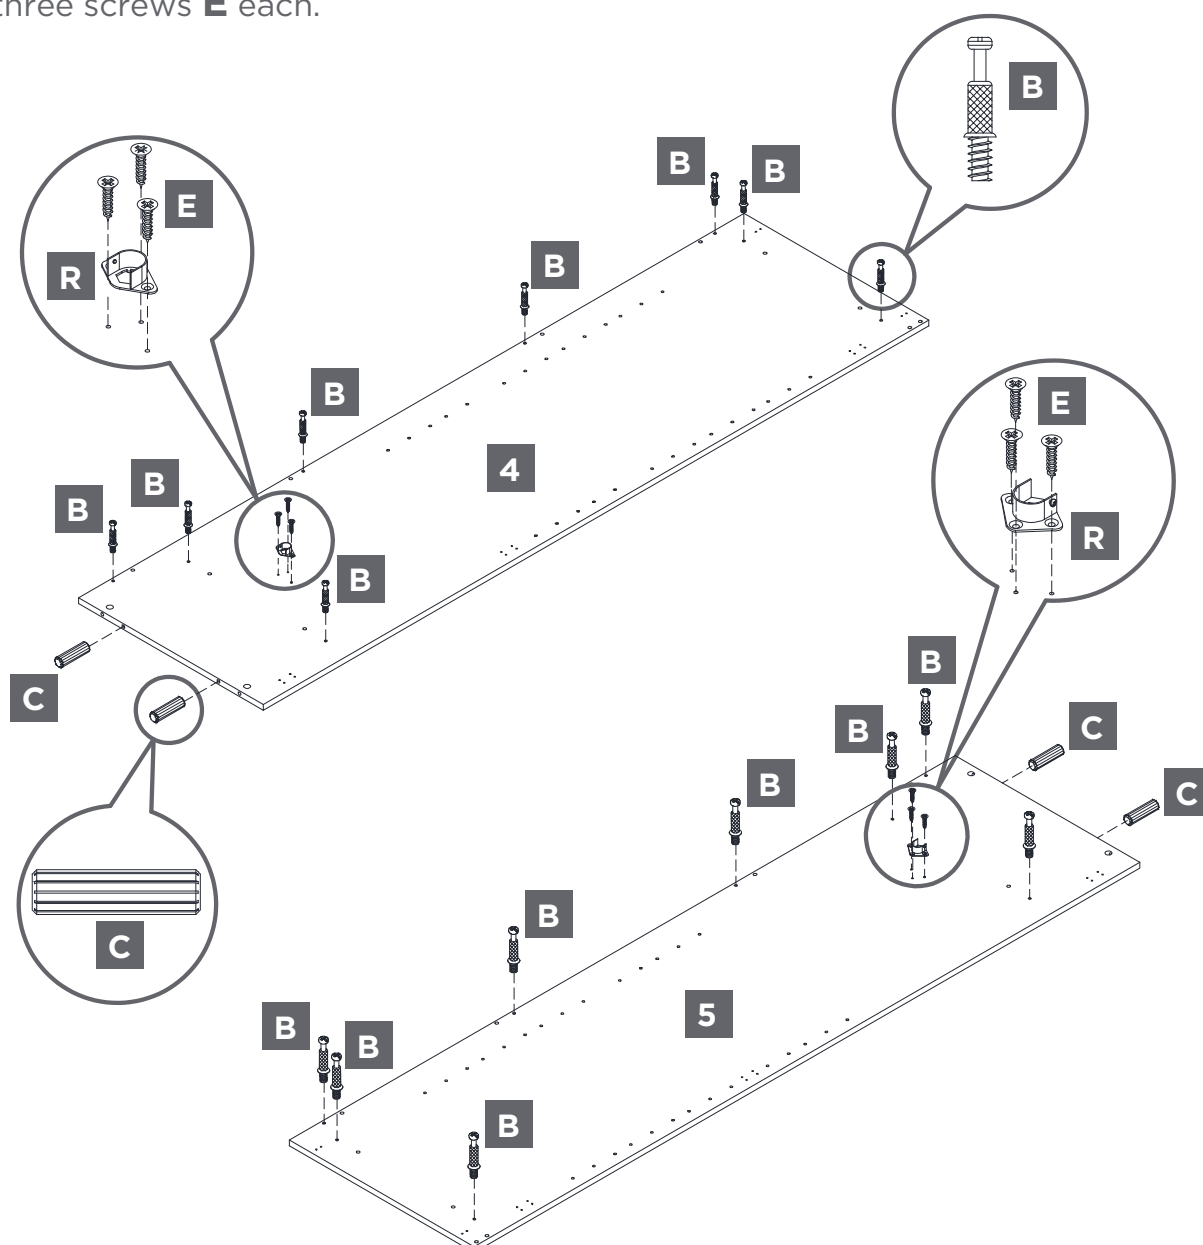

STEP-BY-STEP GUIDE

 
STEP 2

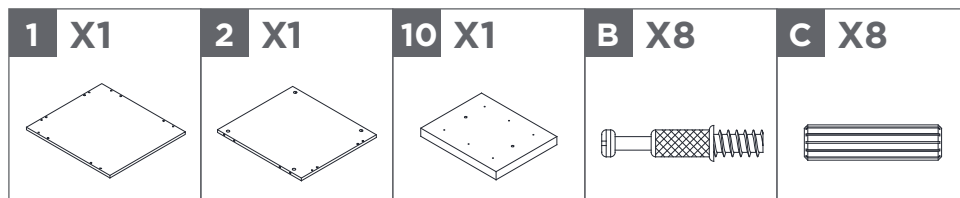

Insert six cam bolts **B** into top panel **1**. Do not over-tighten.





Insert two cam bolts **B** and six wood dowels **C** into bottom panel **2**. Do not over-tighten.

 Insert two wood dowels **C** into bottom frame **2**.

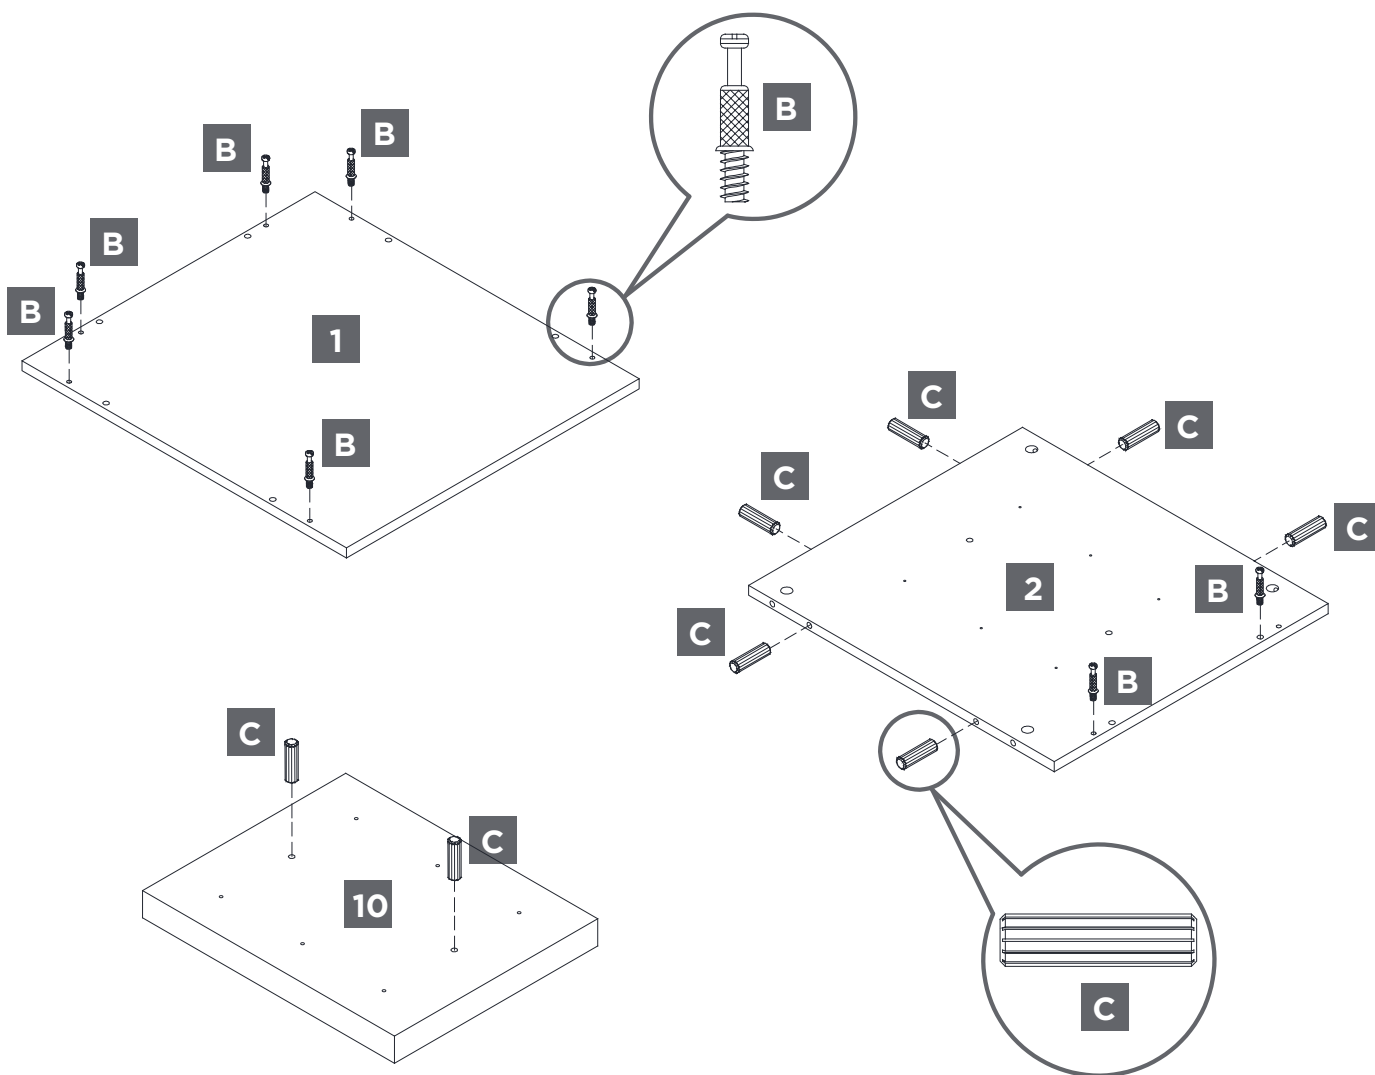

STEP-BY-STEP GUIDE

   
STEP 3

3 X1	7 X1	9 X1	C X20
			

 Insert ten wood dowels **C** into back panel **7**.

 

 



Insert six wood dowels **C** into front bottom rail **9**.

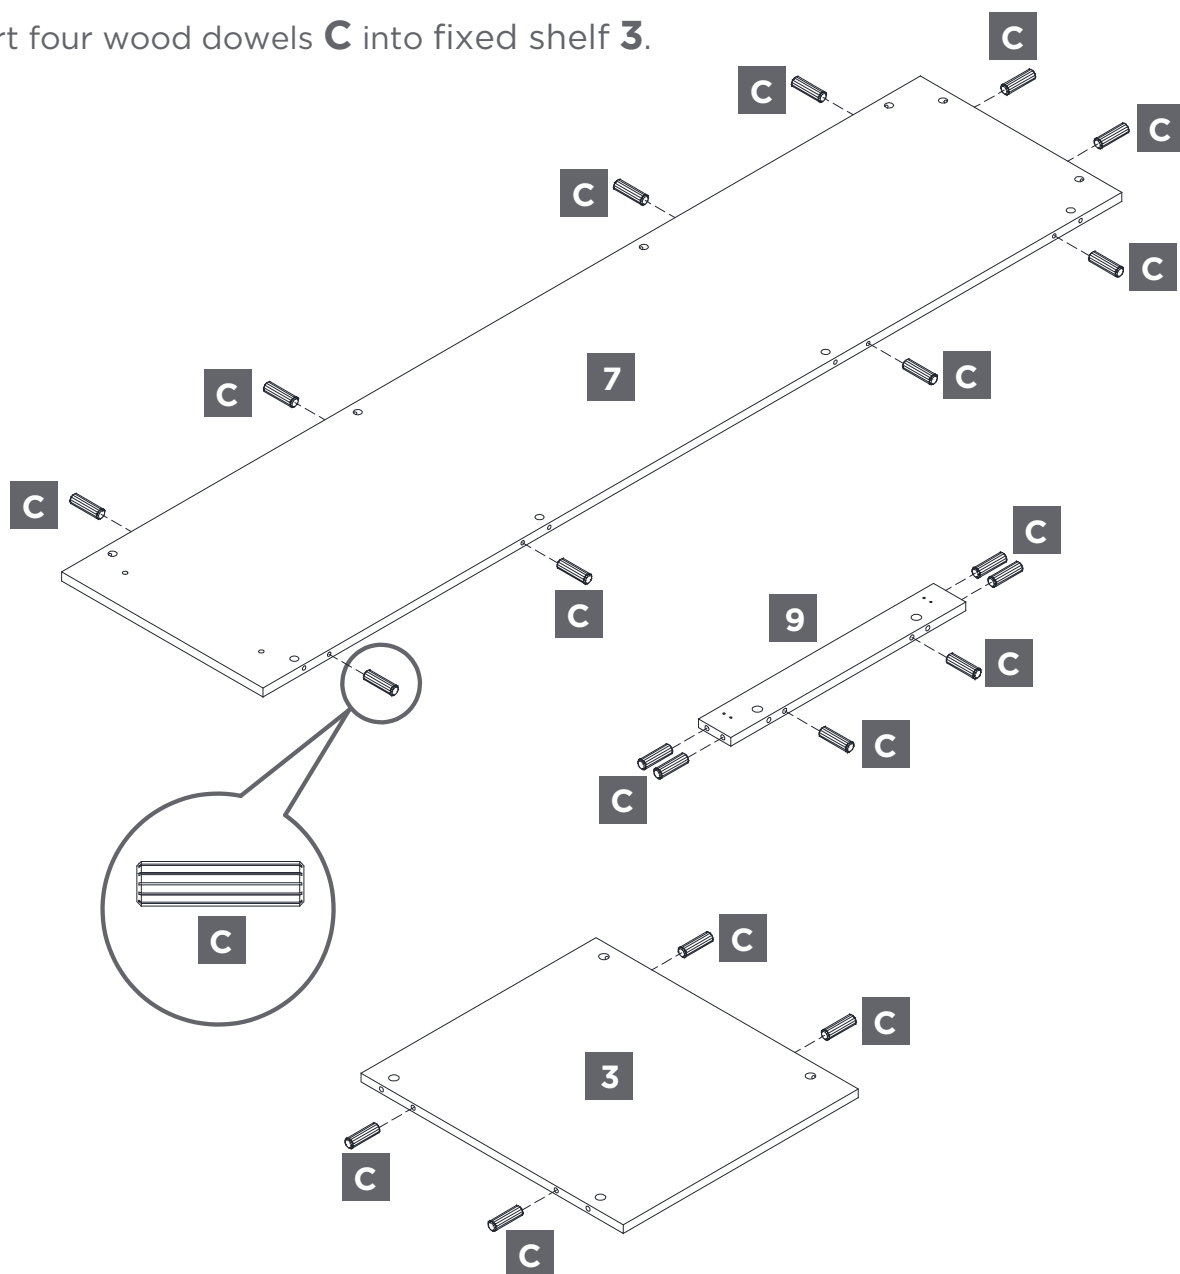Insert four wood dowels **C** into fixed shelf **3**.



STEP-BY-STEP GUIDE

 
STEP 4

6 X1	A X2	D X3	E X6	G X2	H X1
					

Attach front bottom rail **9** to bottom panel **2** using two cam locks **A**. Tighten cam locks **A**.


Attach three hinges **D** to door **6** using six screws **E**.

 Attach handle **H** to door **6** using two bolts **G**.

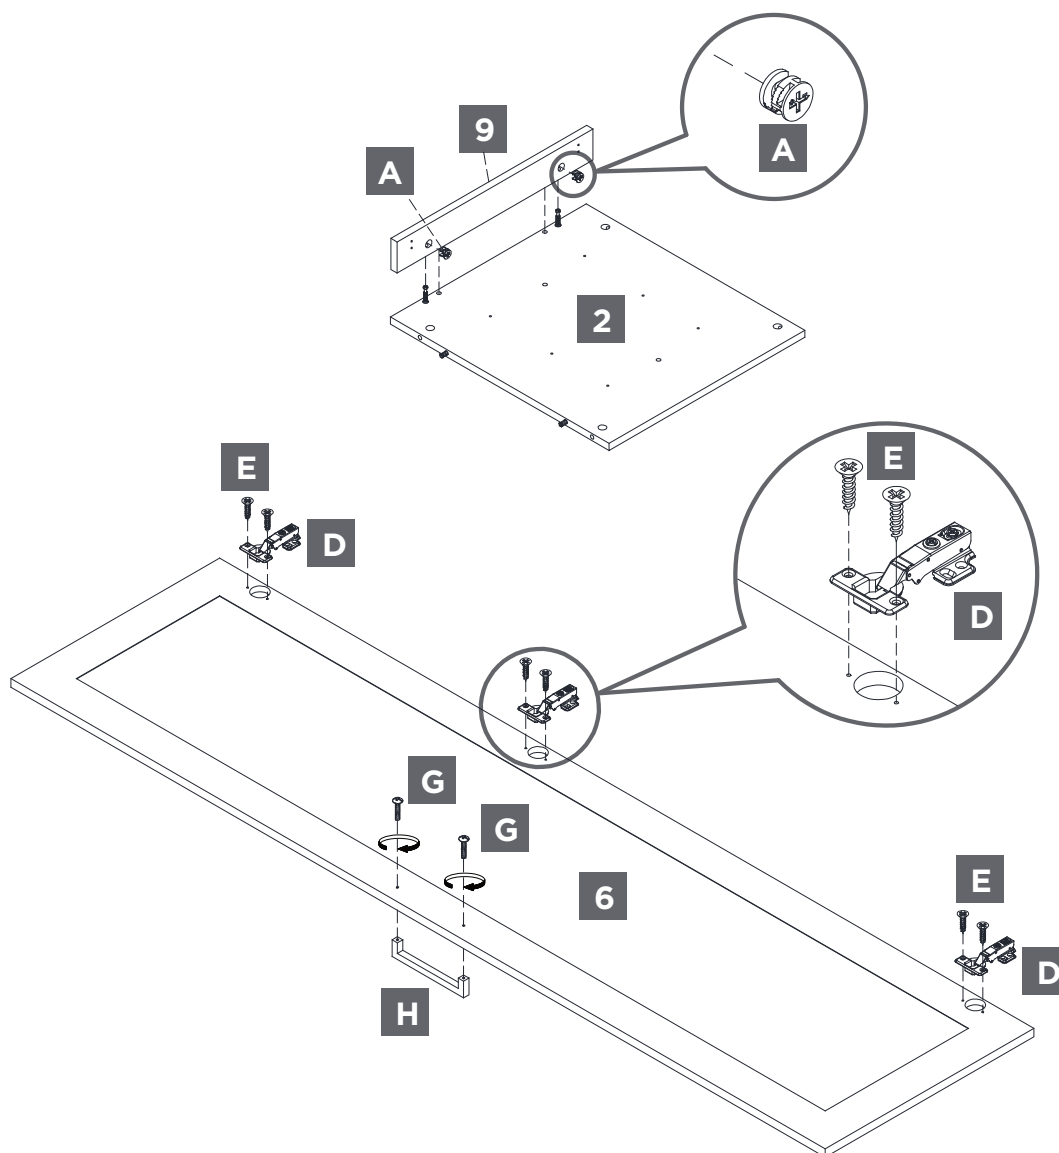


STEP-BY-STEP GUIDE

 STEP 5

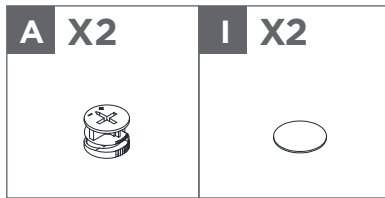

Attach fixed shelf **3** to right side panel **5** using two cam locks **A**.
Tighten cam locks **A**.

 Cover cam locks **A** using two coated paper stickers **I**.

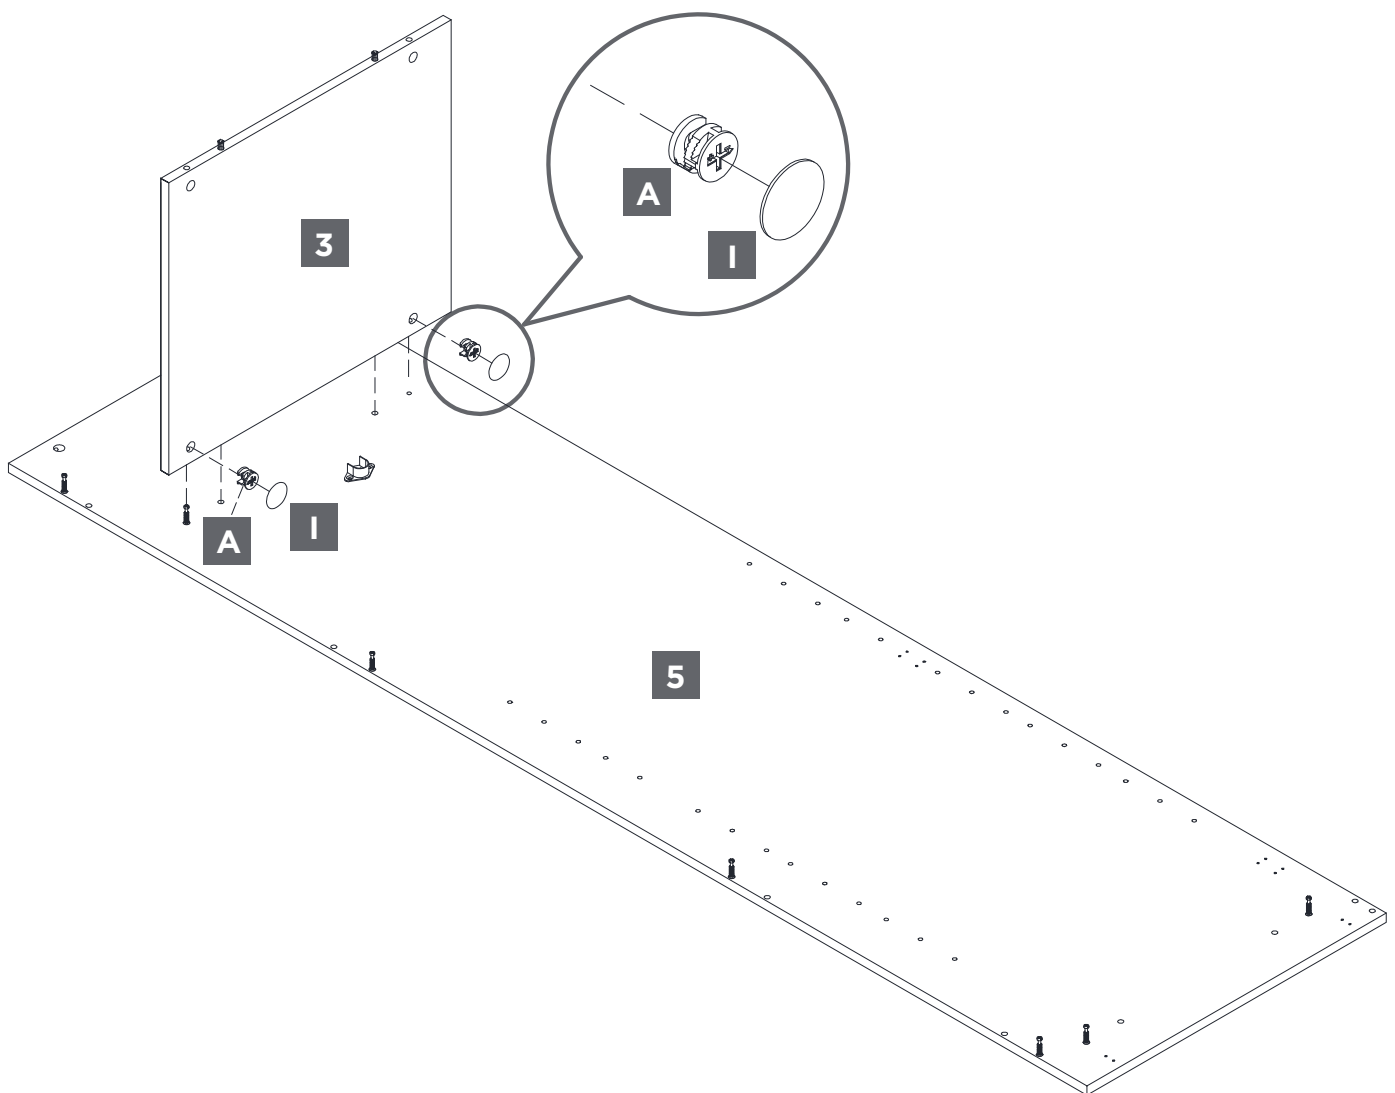


STEP-BY-STEP GUIDE

STEP 6

A X2



 Attach bottom panel **2** to right side panel **5** using two cam locks **A**.
Tighten cam locks **A**.

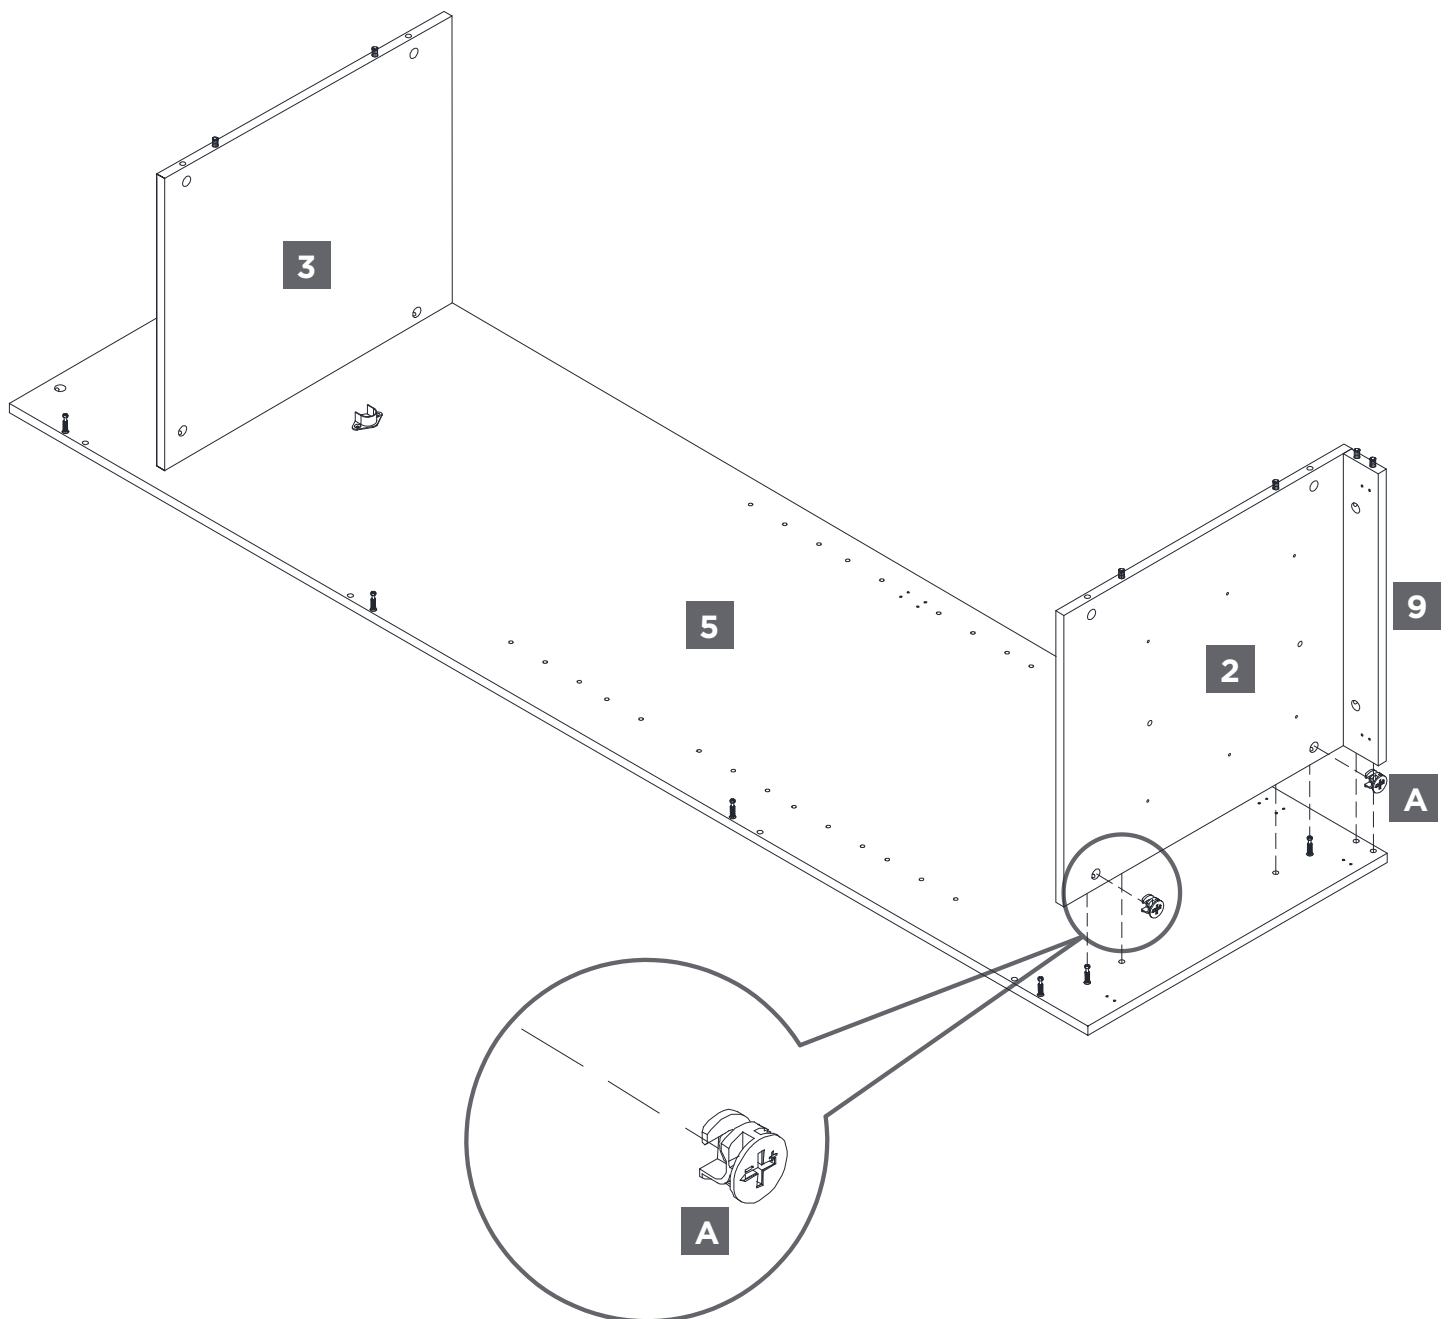


STEP-BY-STEP GUIDE

STEP 7

A X4



 Attach back panel **7** to right side panel **5** using four cam locks **A**. Tighten cam locks **A**.

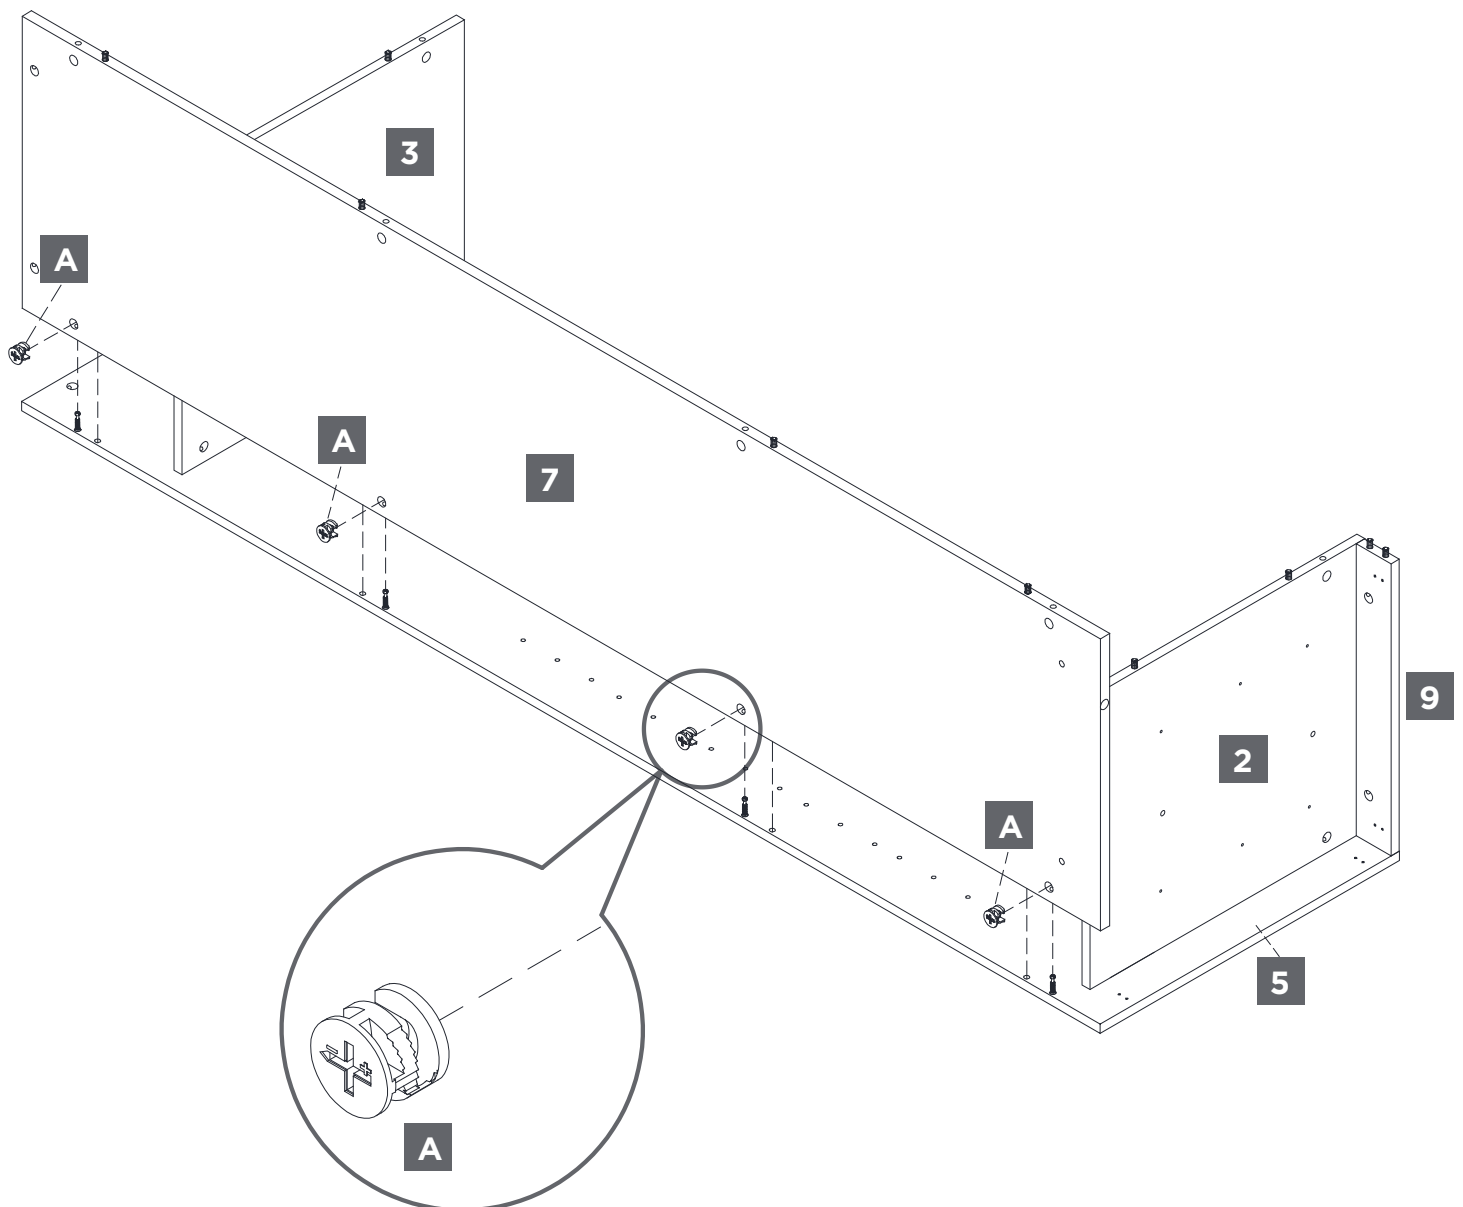


STEP-BY-STEP GUIDE

STEP 8

Q X2




 Attach back panel **7** to bottom panel **2** using two screws **Q**.

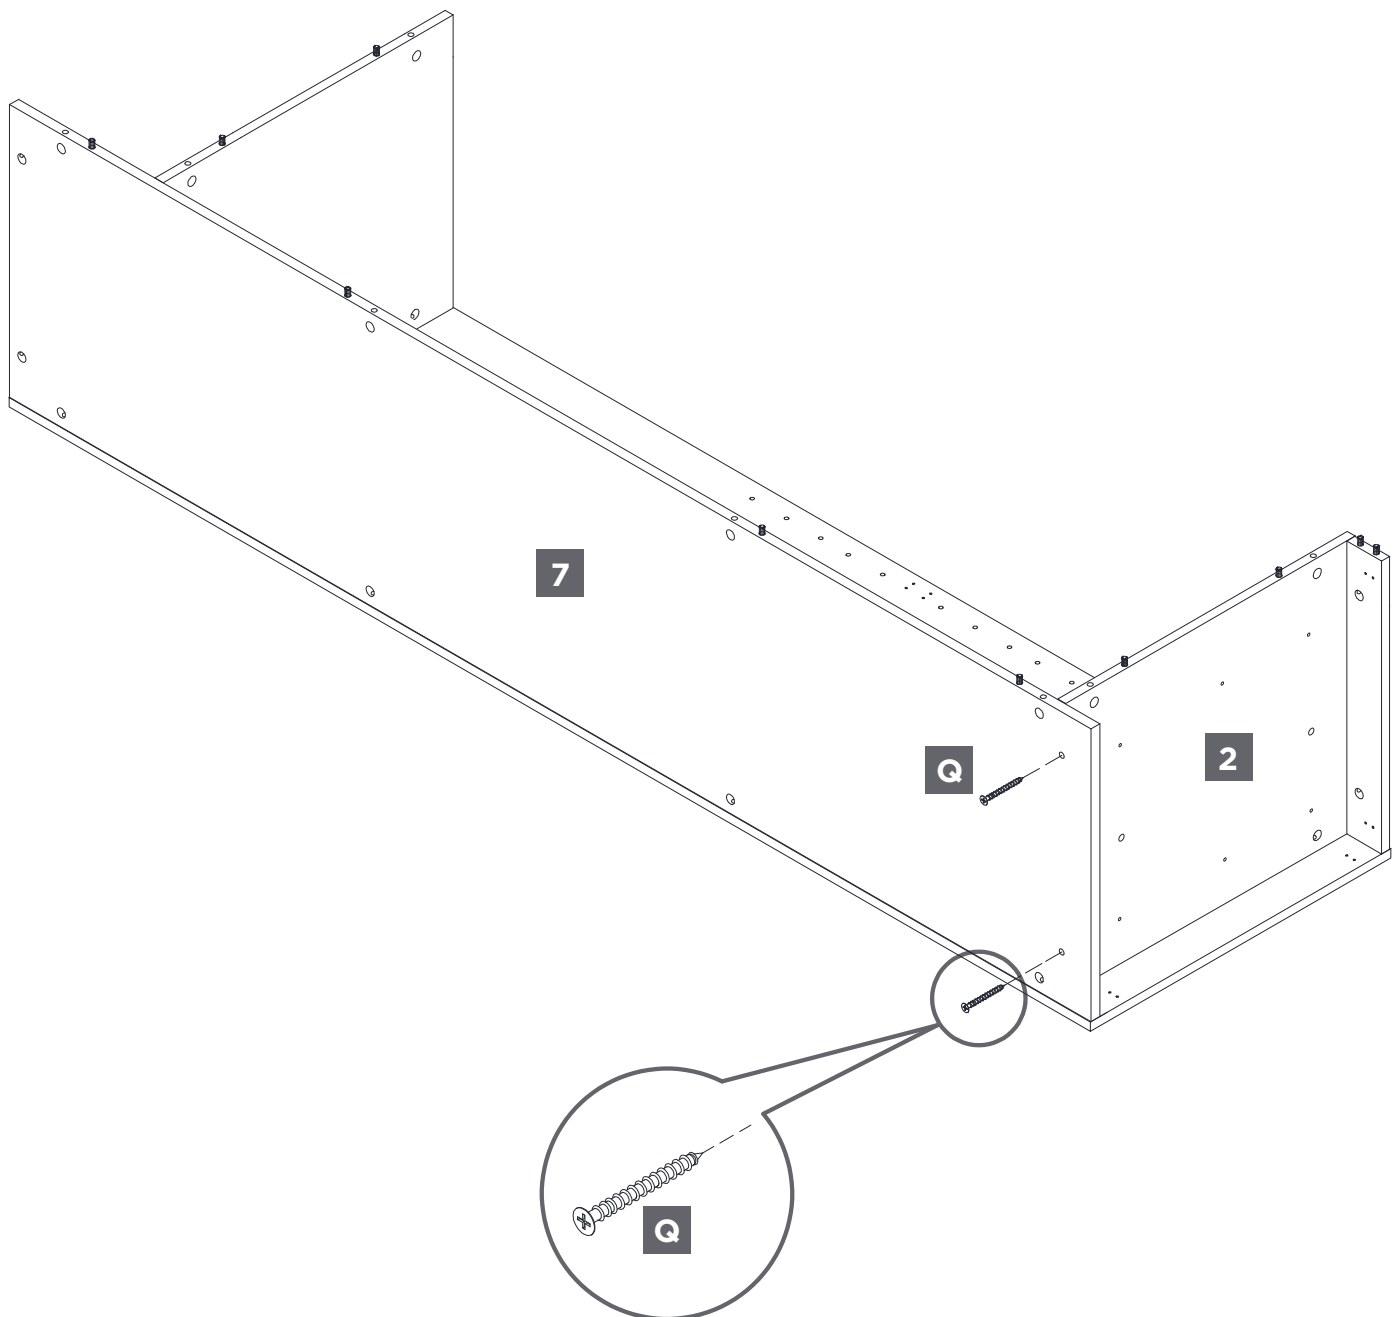


STEP-BY-STEP GUIDE

 STEP 9

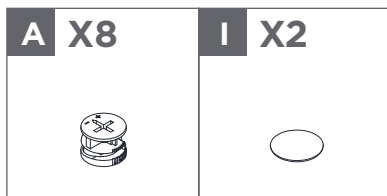


Attach left side panel **4** to bottom panel **2**, fixed shelf **3** and back panel **7** using eight cam locks **A**. Tighten cam locks **A**.

 Cover cam locks **A** using two coated paper stickers **I** on fixed shelf **3**.

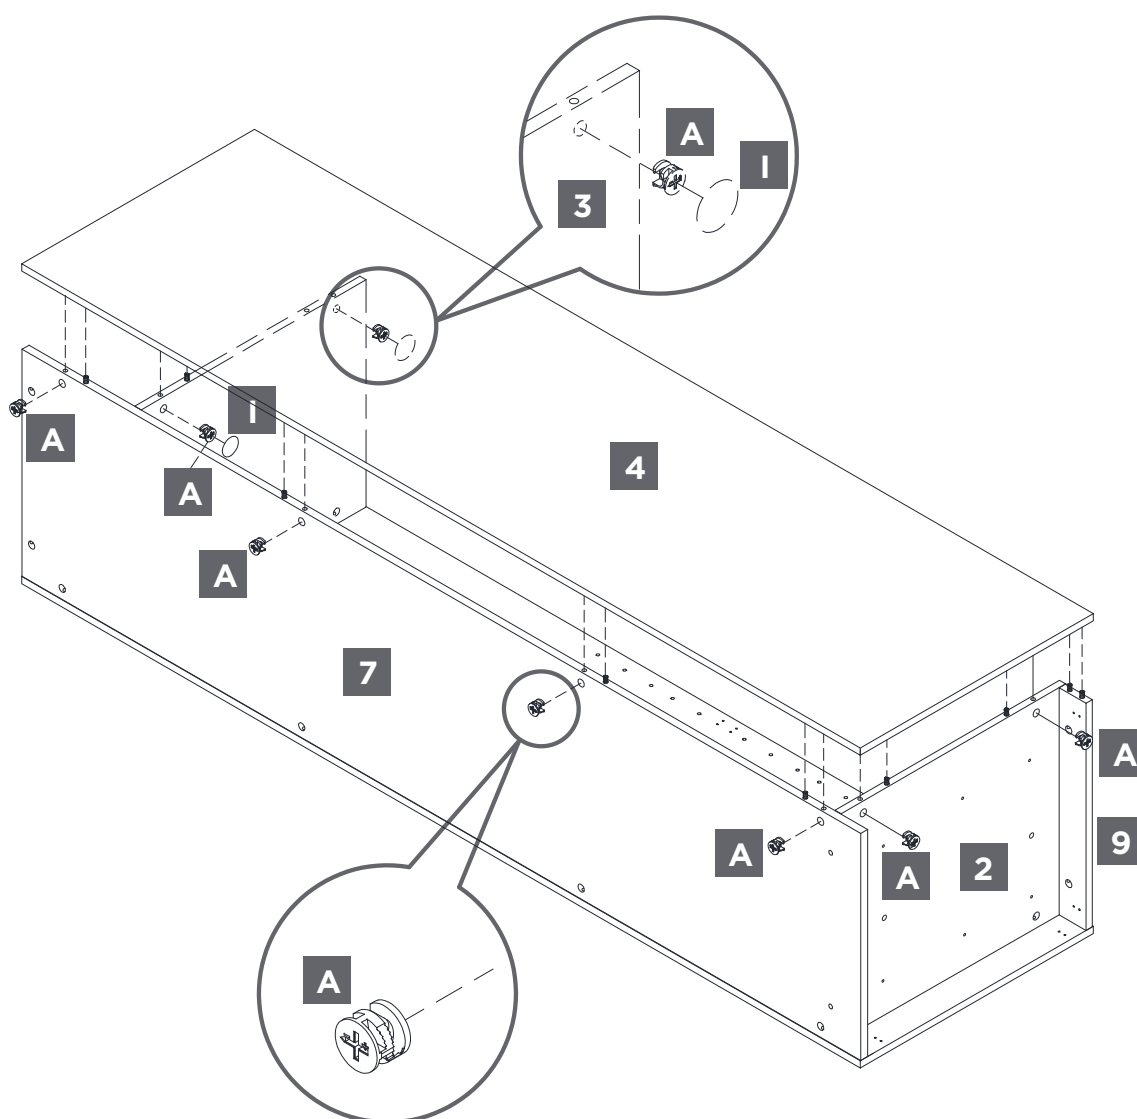


STEP-BY-STEP GUIDE

 STEP 10

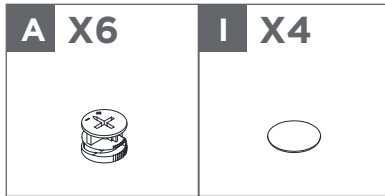


Attach top panel **1** to left side panel **4**, right side panel **5** and back panel **7** using six cam locks **A**. Tighten cam locks **A**.

 Cover cam locks **A** using two coated paper stickers **I** on left side panel **4** and right side panel **5** each.

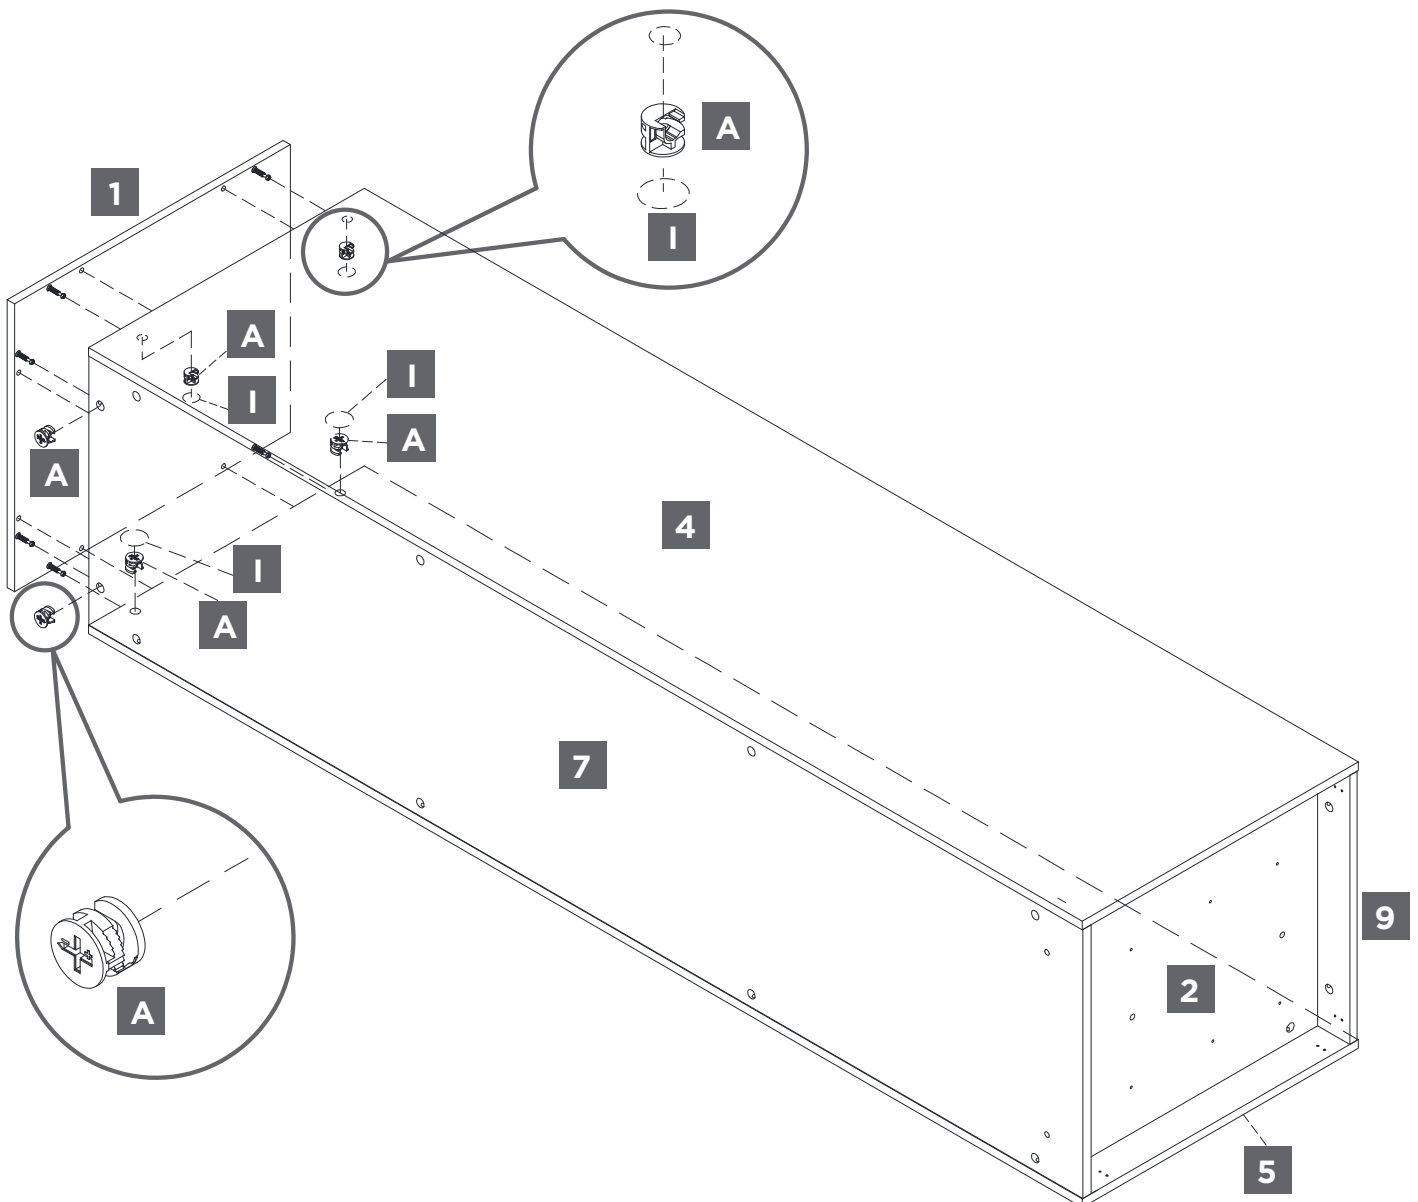


STEP-BY-STEP GUIDE

 STEP 11

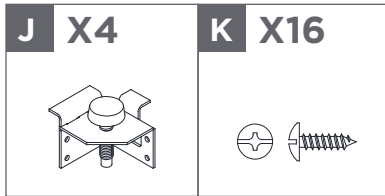

 Attach four adjustable levellers **J** to left side panel **4**, front bottom rail **9**, right side panel **5** and back panel **7** using four screws **K** each.

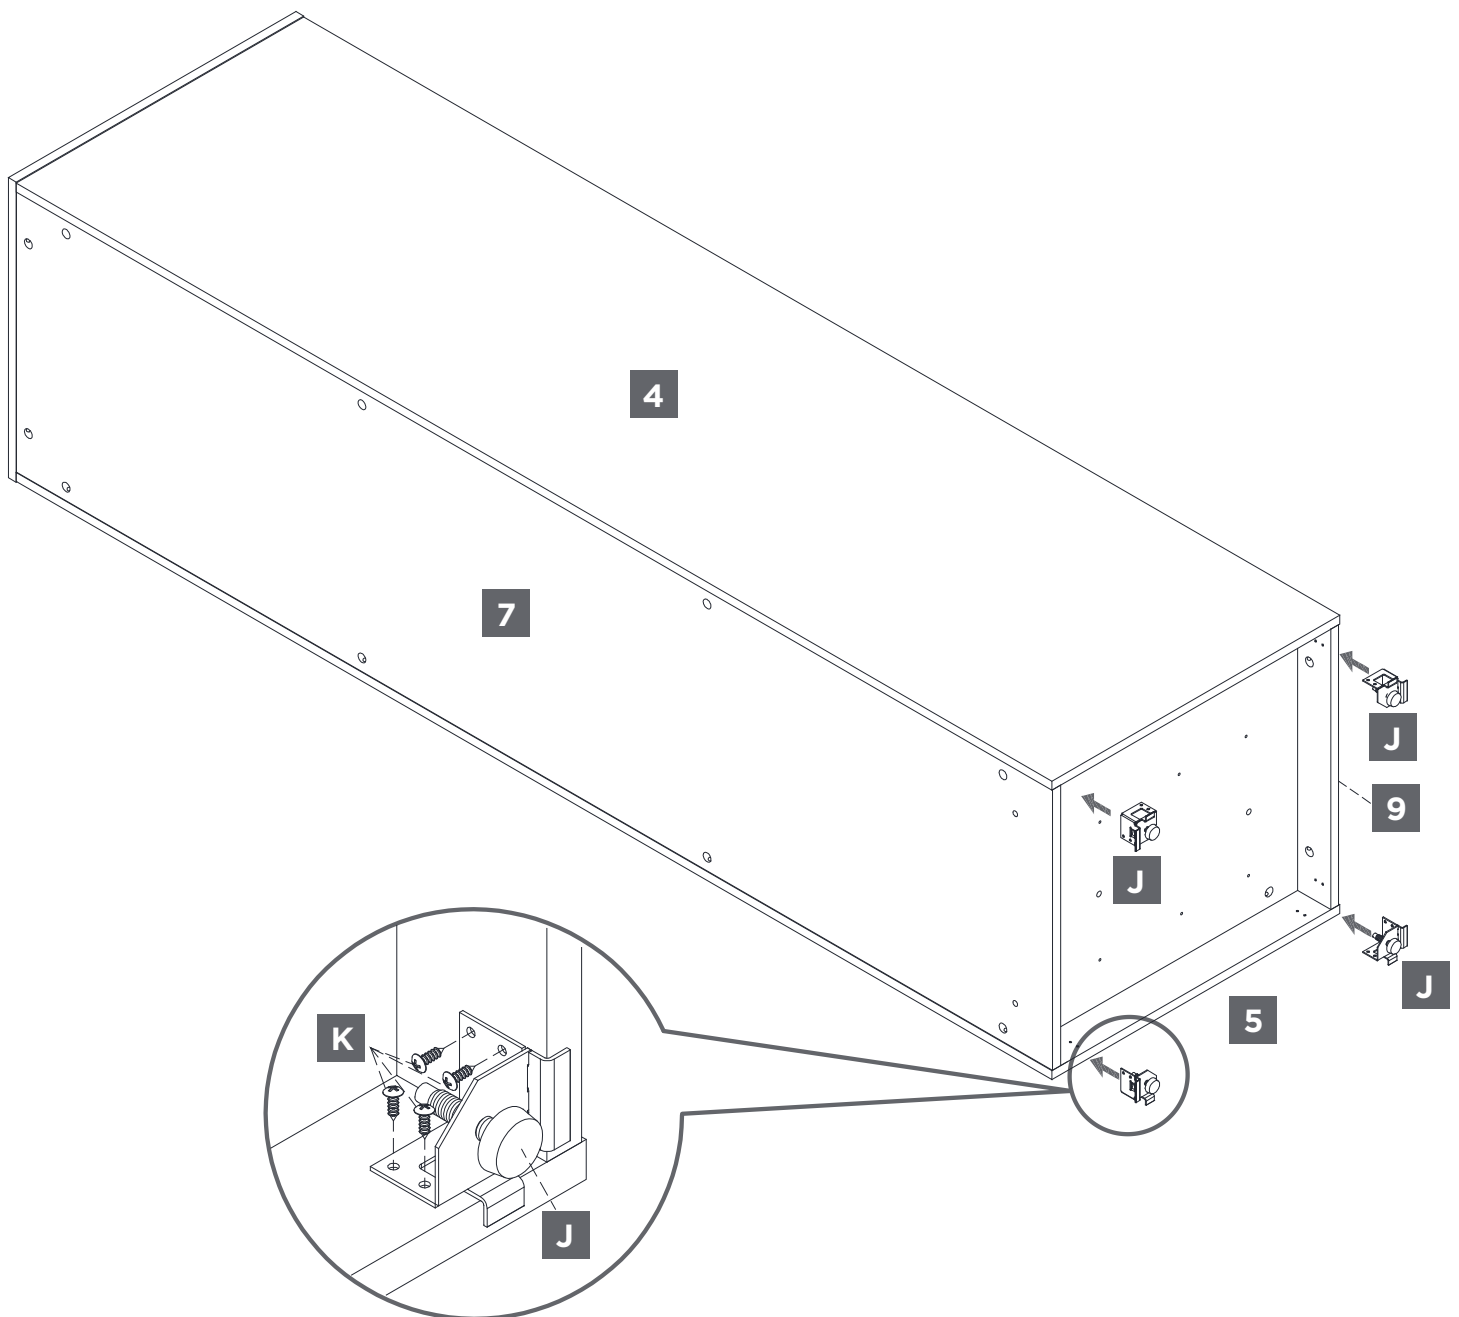


STEP-BY-STEP GUIDE

STEP 12

Q X6



 
Attach bottom frame **10** to bottom panel **2** using six screws **Q**.

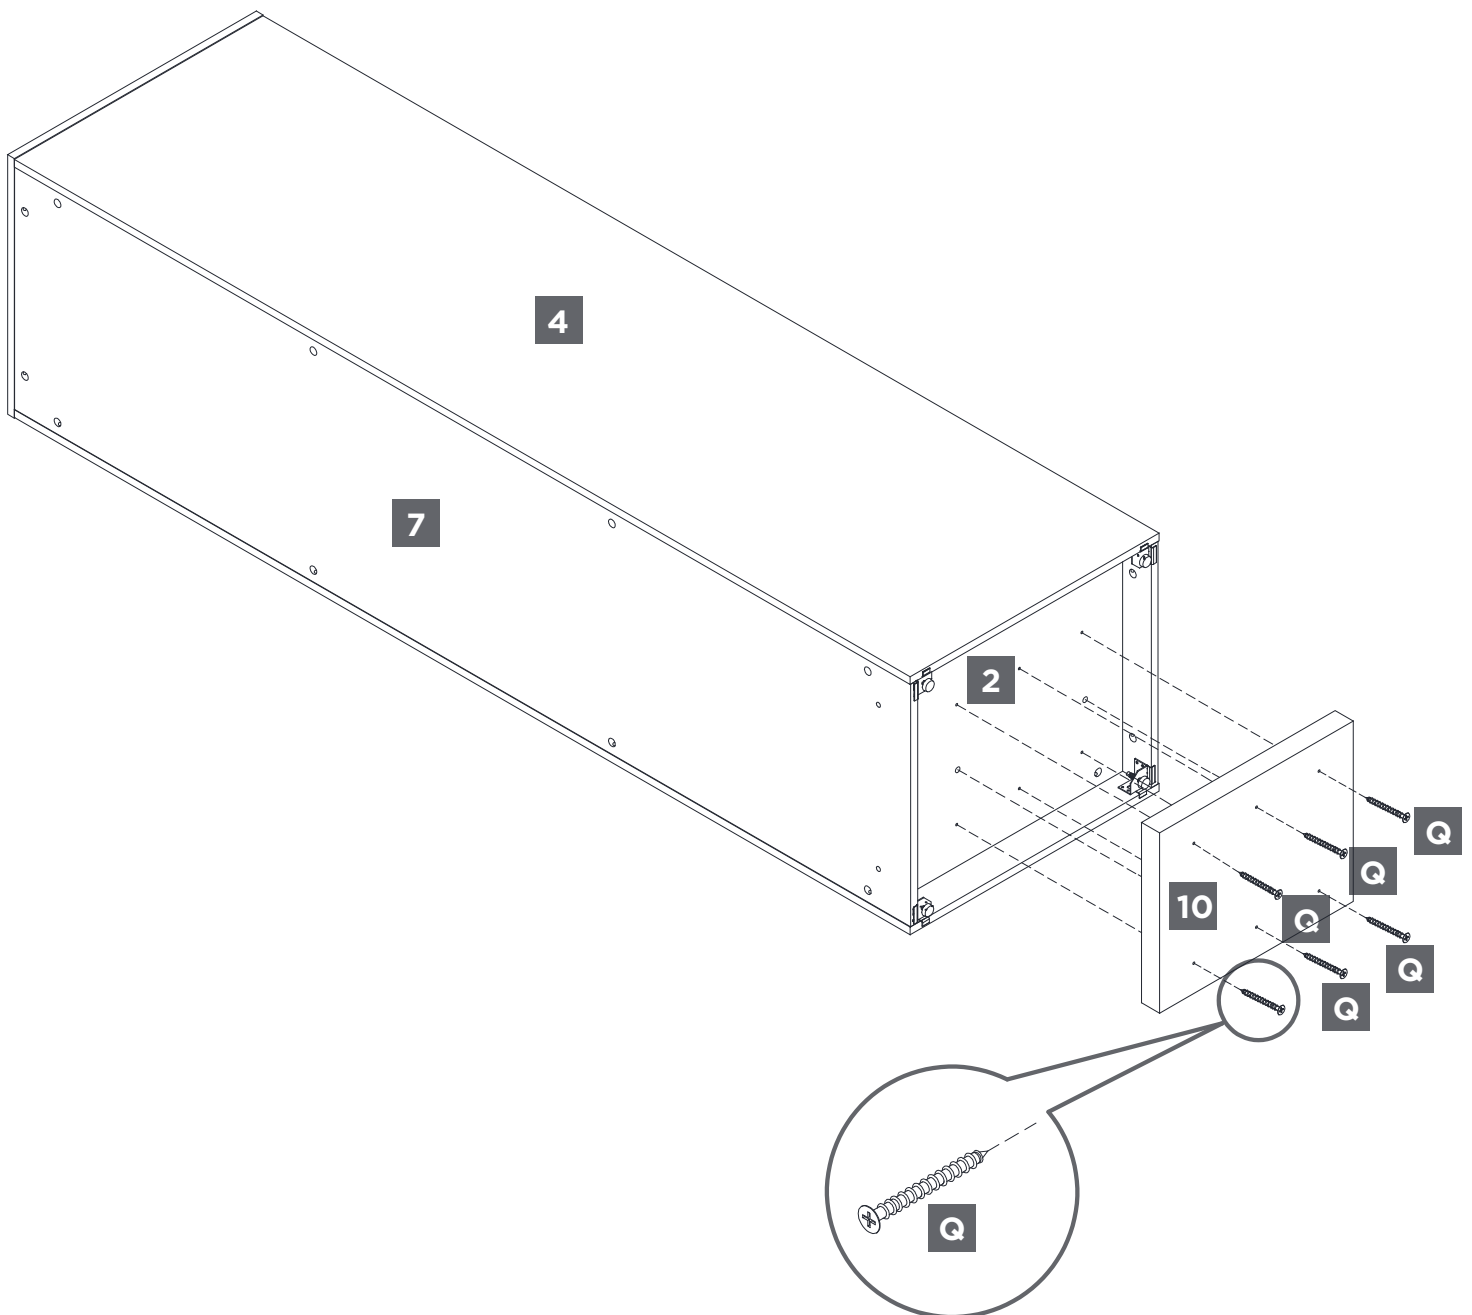


STEP-BY-STEP GUIDE

STEP 13

 
E X9

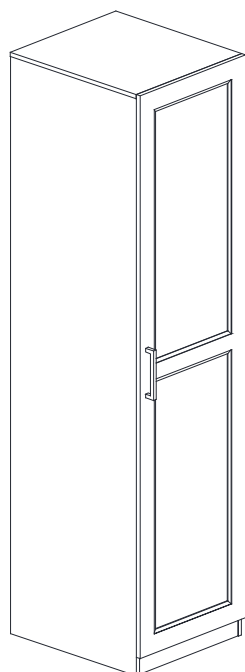

OR

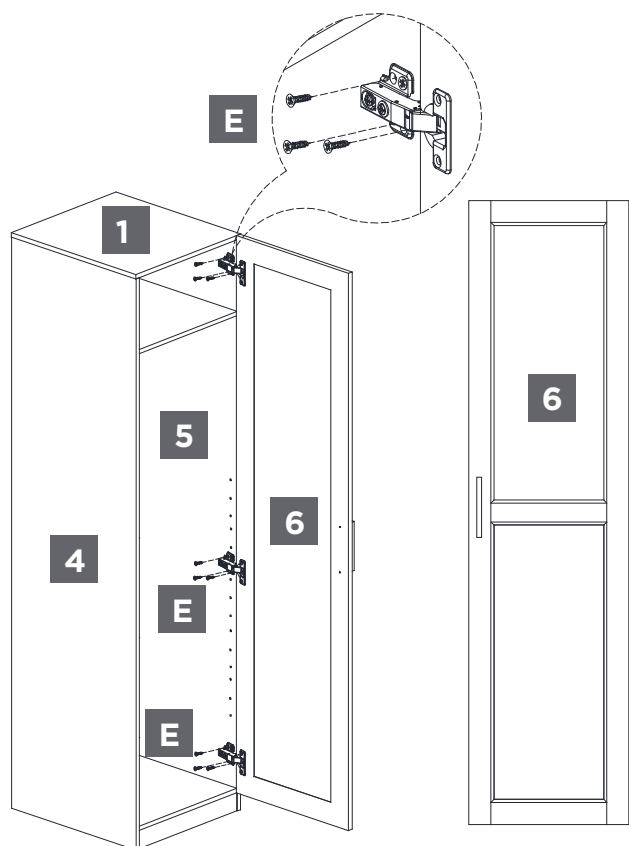 

 
1. Align 3 hinges D to right side panel 5.
Attach door 6 with 9 screws E.

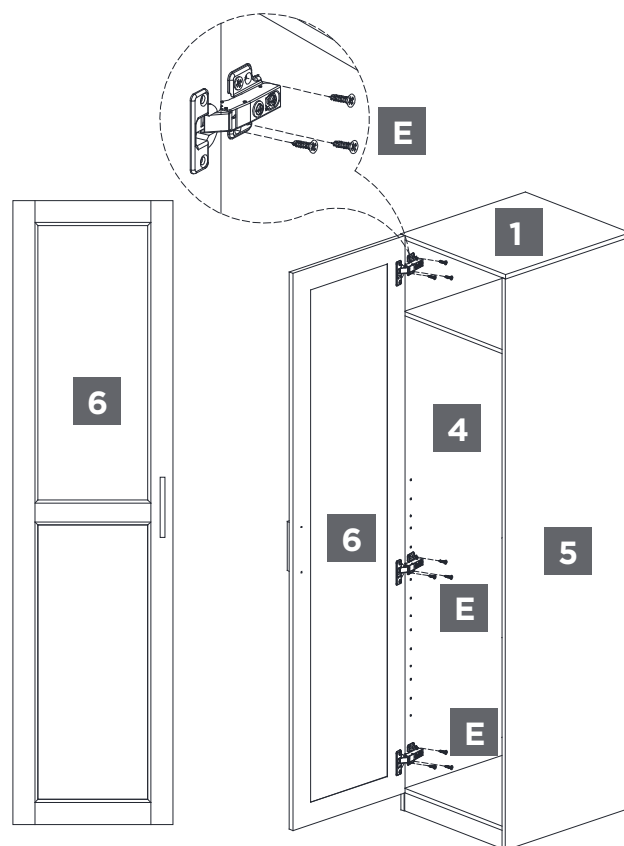

2. Align 3 hinges D to left side panel 4. Attach
door 6 with 9 screws E


STEP-BY-STEP GUIDE

 STEP 14

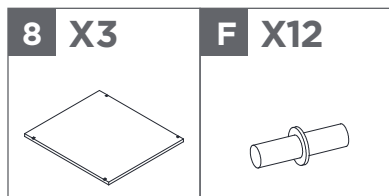

Insert twelve shelf supports **F** into left side panel **4** and right side panel **5**.

 
Place three adjustable shelves **8** on shelf supports **F**.

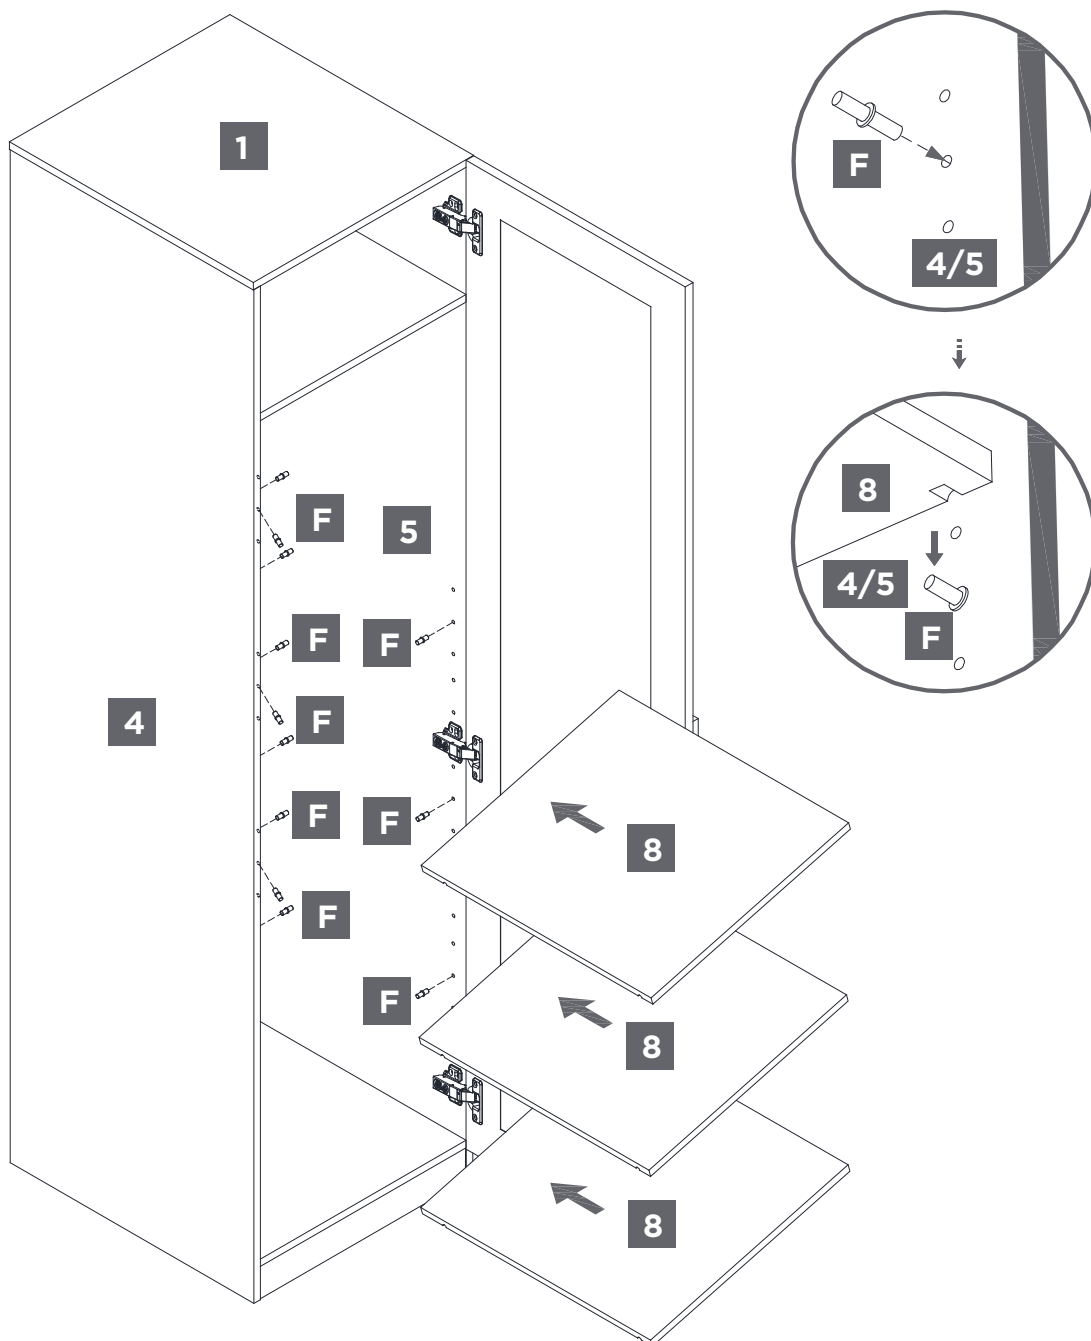


STEP-BY-STEP GUIDE

STEP 15

  S X1



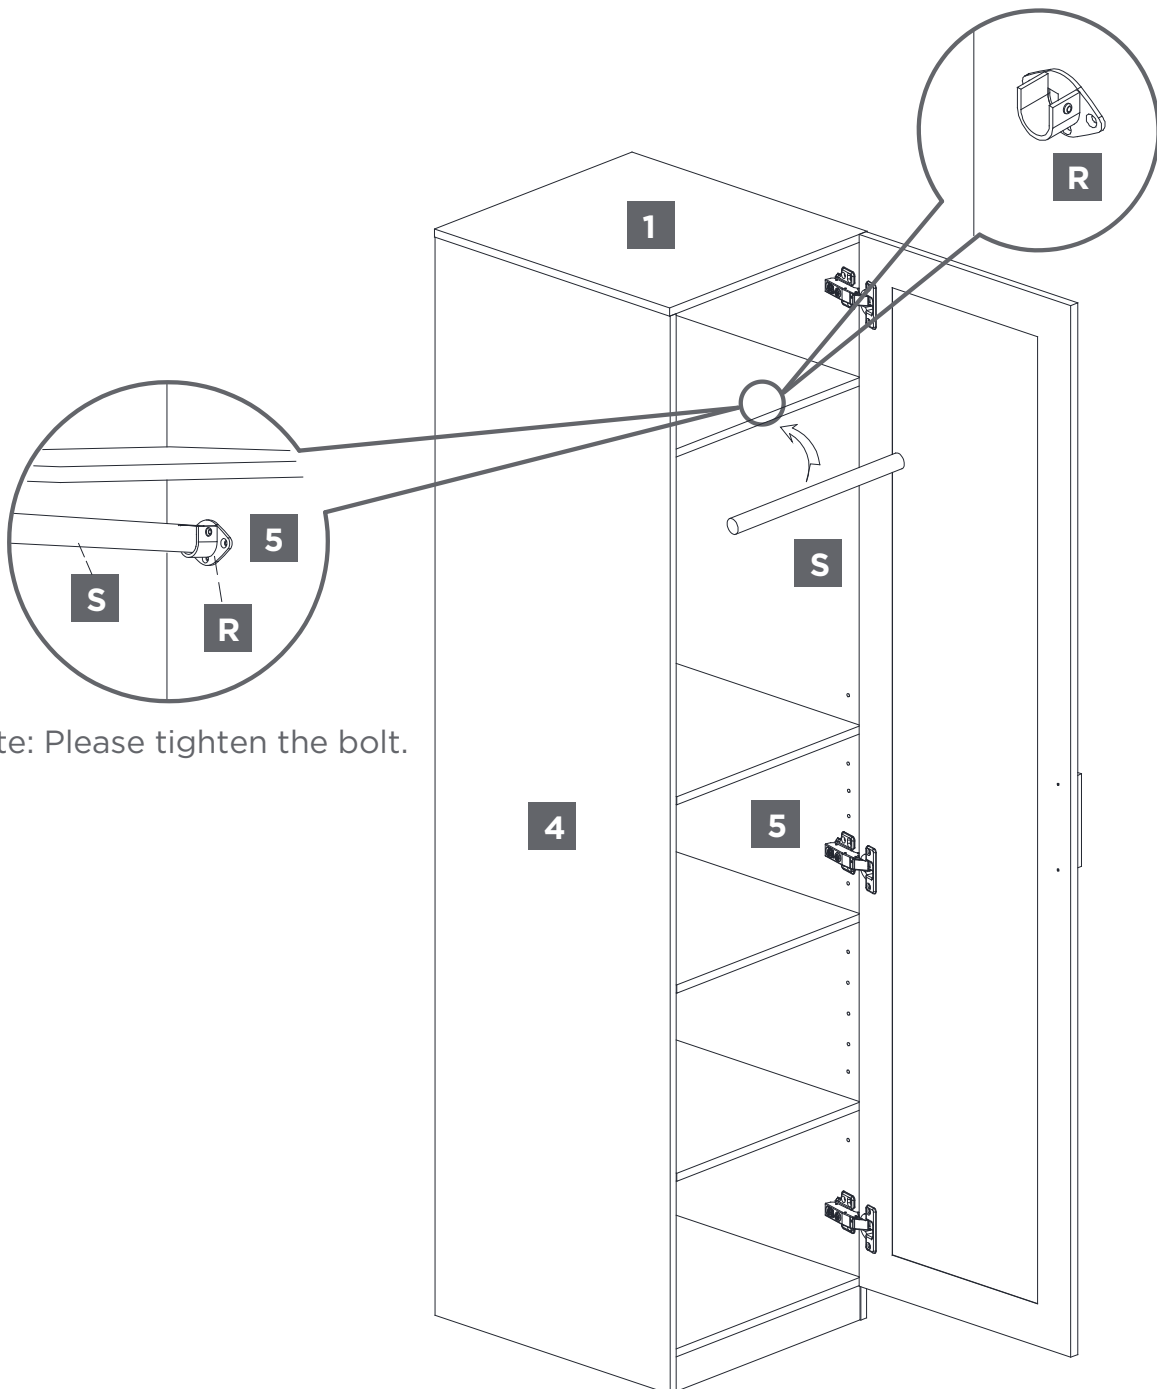


 
Place hanging rod **S** on hanging rod supports **R**.



Note: Please tighten the bolt.

TIP RESTRAINT


STEP 16

L X2	M X2	N X4	O X2
			

Pick your desired area of placement. Drill two small holes approximately 3/8" (9.5 mm) in diameter and approximately 2" (5 cm) deep. Use a level to make sure the two holes you drill are level. After you drill the holes, insert wall anchors **O** into wall.

Attach metal brackets **N** to wall using screws **L**.

 
Attach metal brackets **N** to top panel **1** using screws **M**.

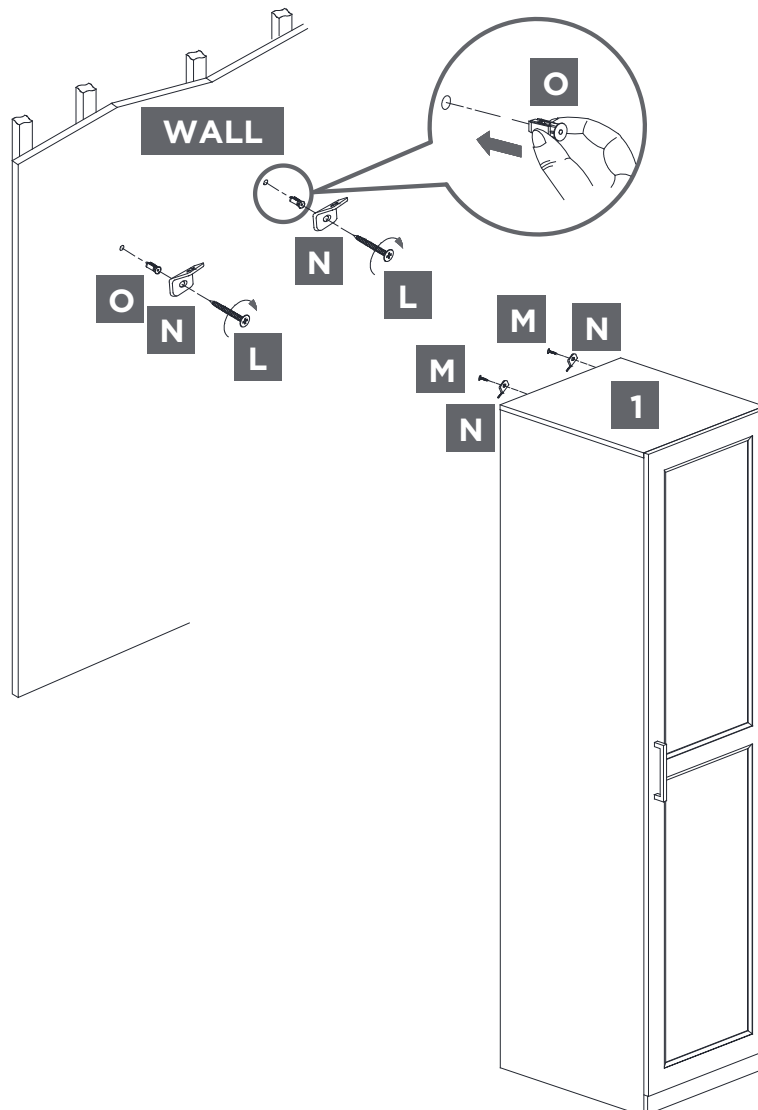

TIP RESTRAINT

STEP 17


 
P X2

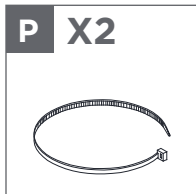



Attach cabinet to wall using two nylon straps **P** as shown.



  WARNING! TO REDUCE THE RISK OF SERIOUS INJURY AND AVOID THE POTENTIAL FOR FURNITURE TIPPING OVER, INSTALL THE TIP-OVER RESTRAINT HARDWARE.

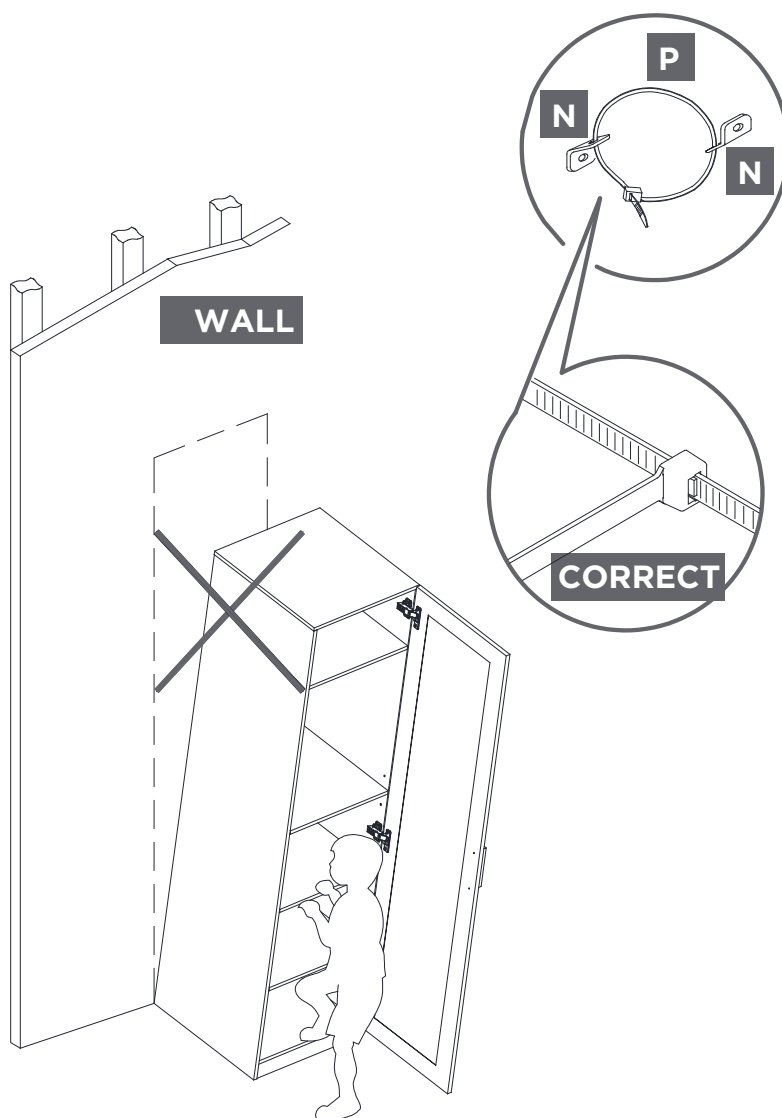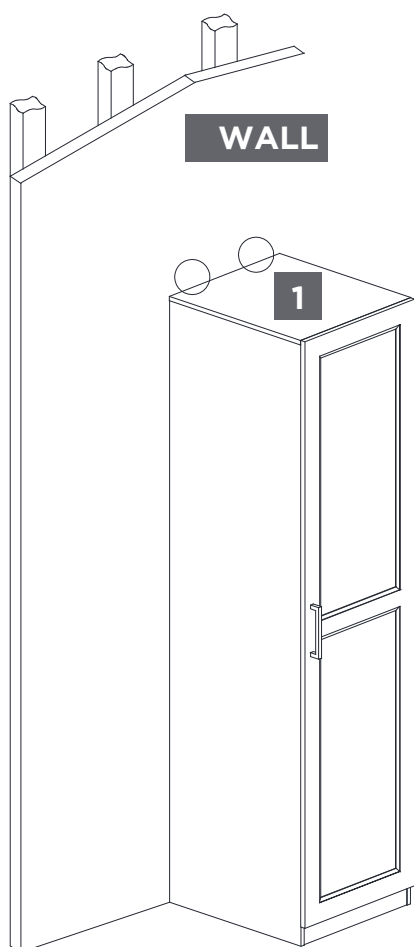


ADJUST DOOR

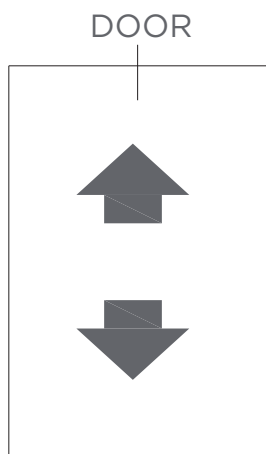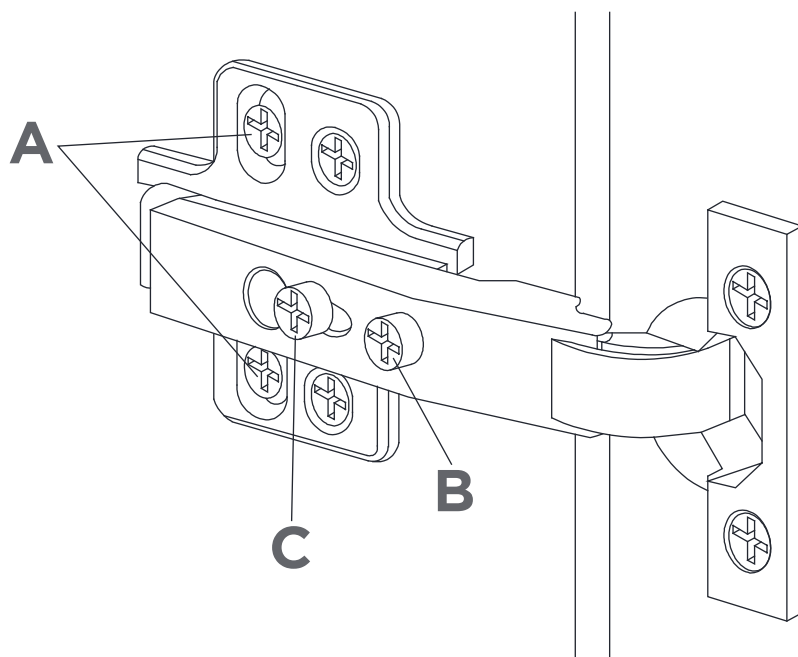  


(front view)

 If doors are not aligned:
Loosen "A" screws.
Adjust door.
Tighten "A" screws.

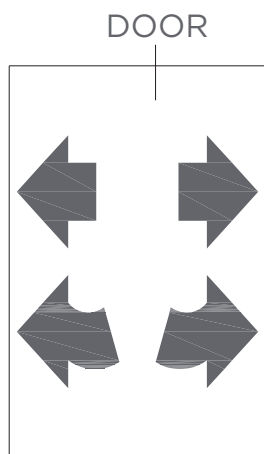

(front view)

 If there is a gap between doors:
Loosen "C" screw.
Turn "B" to move door.
Tighten "C" screw.

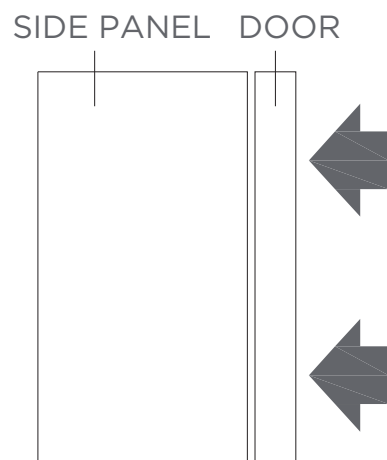


(side view)


If there is a gap between door and side panel:
Loosen "B" and "C" screw.
Adjust door.
Tighten "B" and "C" screw.

ADJUST LEVELLERS

 Note: If your item is not level, put it on a hard surface, then adjust the levellers.

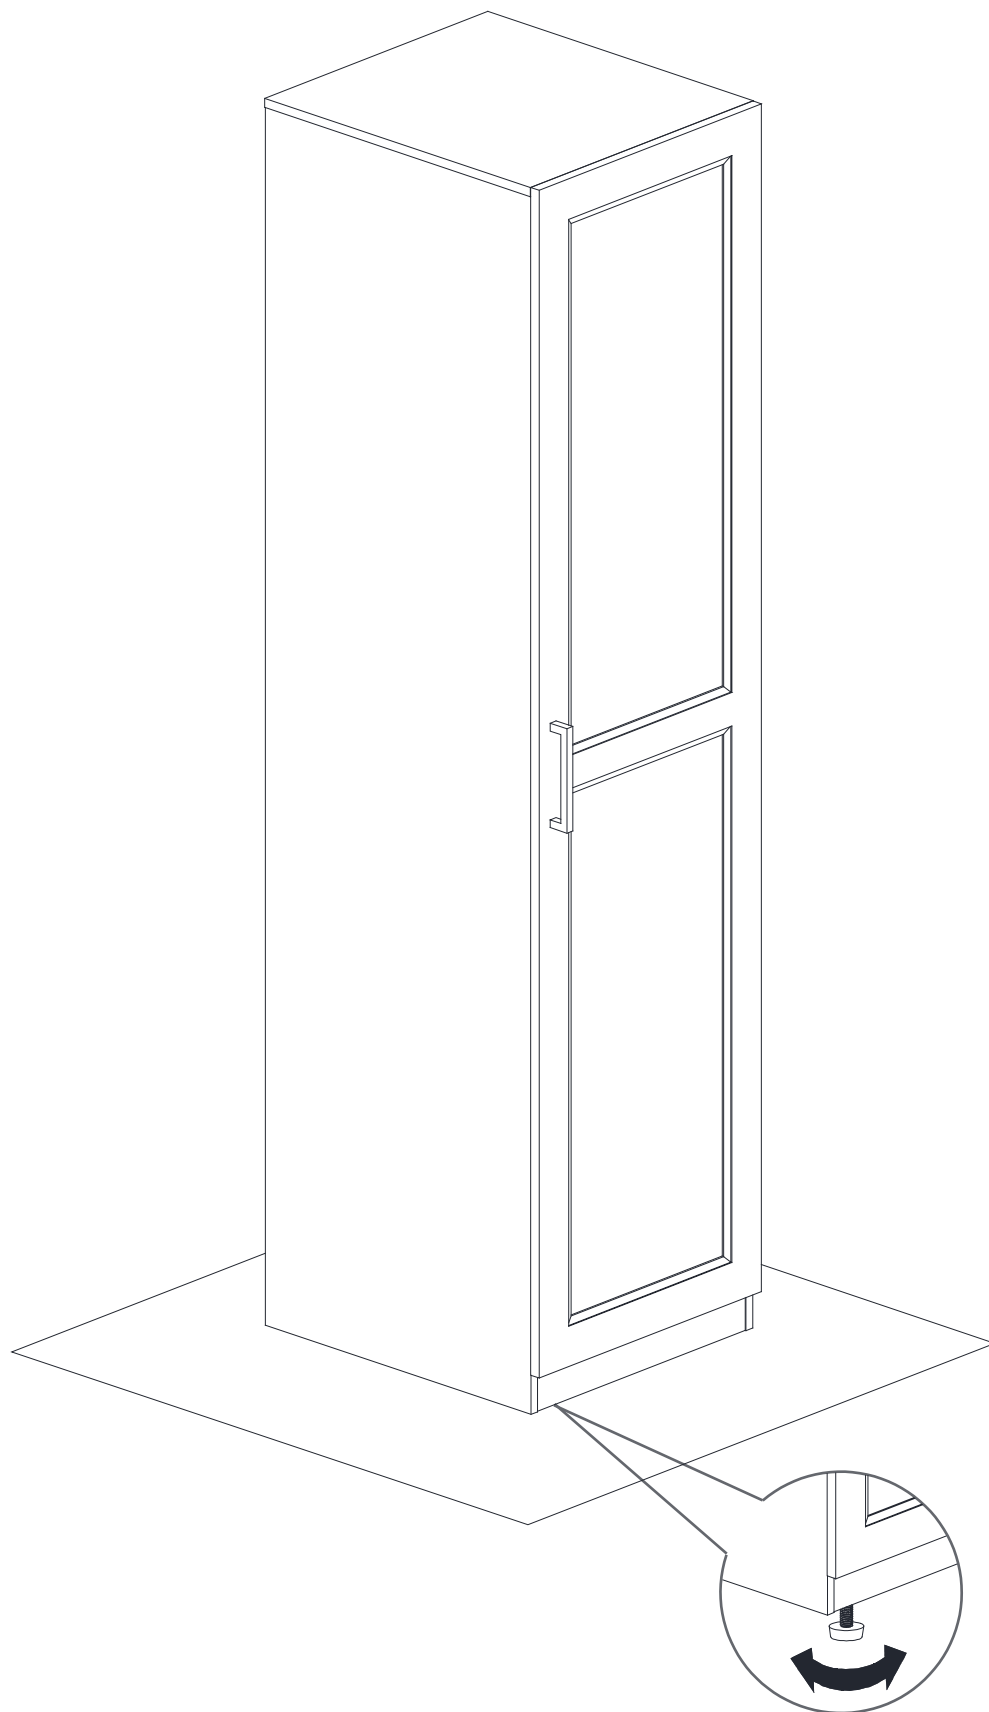

TECHNICAL DATA

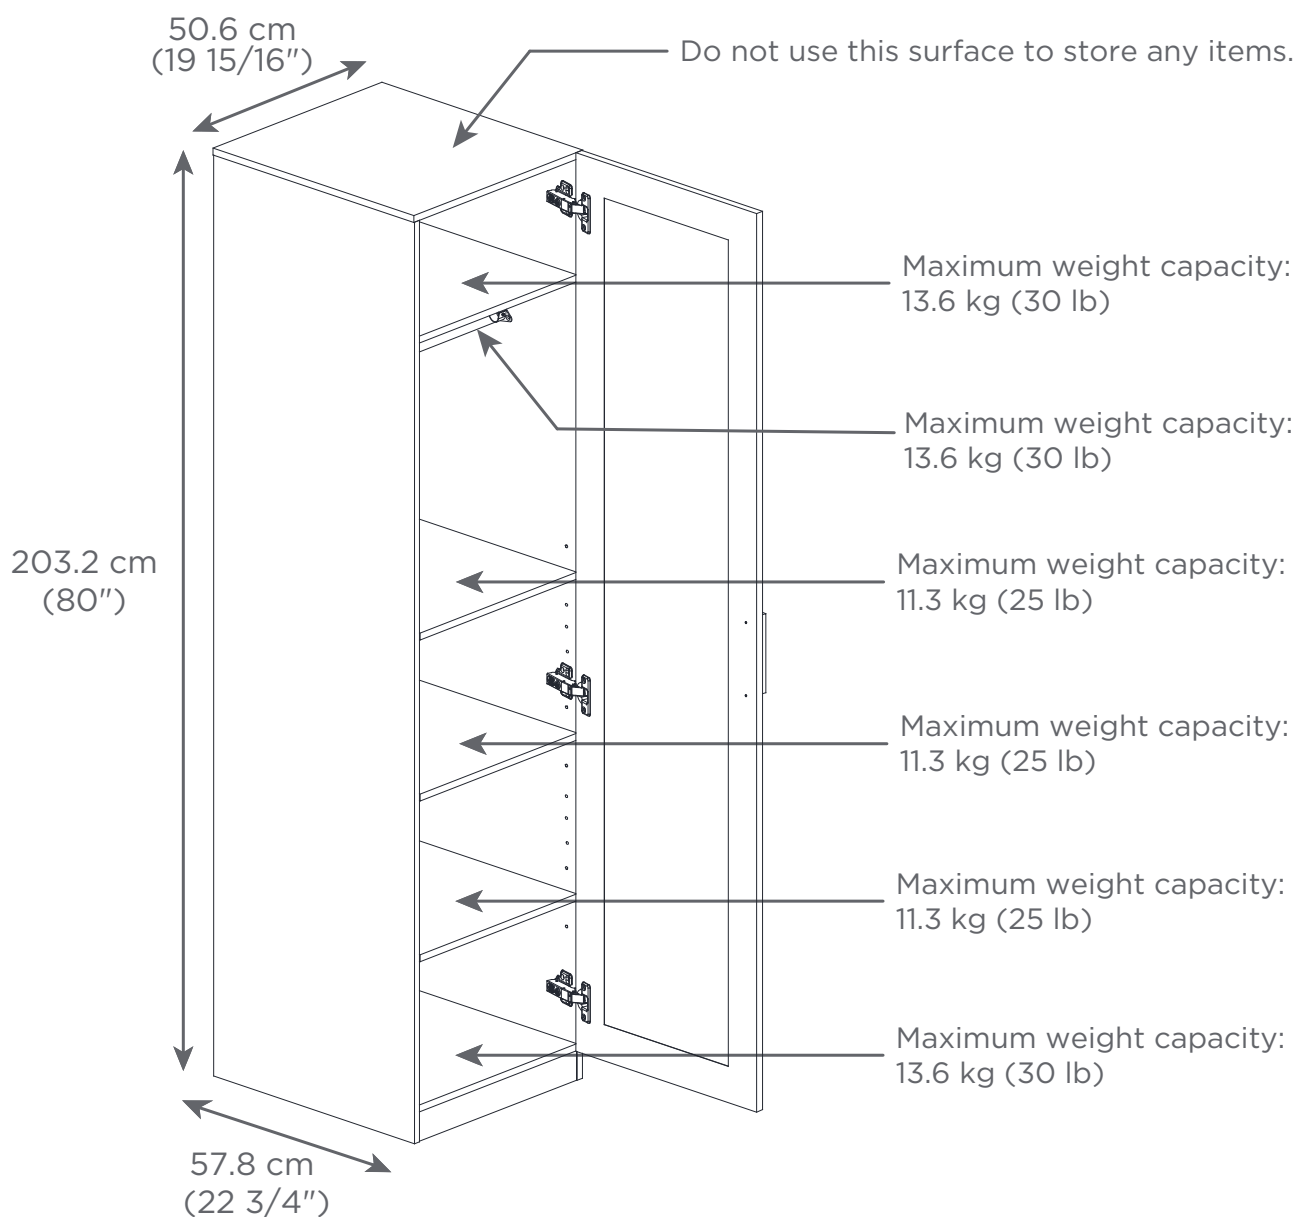 

SPECIFICATIONS

ASSEMBLED DIMENSIONS (W x D x H)

50.6 x 57.8 x 203.2 cm

19 15/16 x 22 3/4 x 80"

ASSEMBLED WEIGHT

76.3 kg

168 lb

MAXIMUM WEIGHT CAPACITY Adjustable shelf: 11.3 kg (25 lb); Fixed shelf: 13.6 kg (30 lb);
Bottom: 13.6 kg (30 lb); Rod: 13.6 kg (30 lb)

ASSEMBLY TROUBLESHOOTING



**BEFORE RETURNING
YOUR PRODUCT**

**HAVING TROUBLE?
LET US HELP YOU!**

**TOLL-FREE:
1-888-670-6684**

If you have questions regarding your product or require warranty assistance, please call our customer service helpline.



**CALL US;
WE CAN HELP**

CARING FOR YOUR ITEM

- 1 Always use unit with tip-restraints installed as per instructions.
- 2 Always keep children under close supervision while they are using or around this product. Never leave children unattended.
- 3 For household use only.
- 4 Wipe clean with damp cloth.

WARRANTY INFORMATION



1-YEAR LIMITED WARRANTY

This CANVAS™ product carries a one (1) year warranty against defects in workmanship and materials. Trileaf Distribution agrees to replace the defective product free of charge within the stated warranty period, when returned by the original purchaser with proof of purchase. This product is not guaranteed against wear or breakage due to misuse and/or abuse.

PRODUCT NO. 168-0188-6

Made in China

Imported by Trileaf Distribution Trifeuil Toronto, Canada M4S 2B8

CANVAS™

INSPIRED BY CANADA

