
# CANVAS

# WITTMORE MULTI-PURPOSE PANTRY CABINET

PRODUCT NO. 168-0200-6

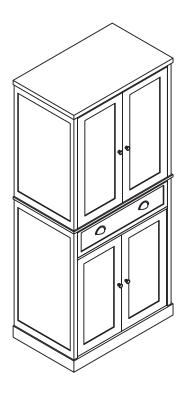

# **ASSEMBLY INSTRUCTIONS**



**HAVING TROUBLE?** 

**TOLL-FREE:** 

1-888-670-6684

IMPORTANT: Please read this manual carefully before beginning assembly of this product. Keep this manual for future reference.



To the trend seekers and design mavens,

CANVAS™ is the furniture and décor brand
that helps you imagine and create a space
you can be proud of.

That's because **CANVAS™** offers style with ease with products that are **made for real life** and Canadian inspired.

We would love to hear from you and welcome your thoughtful feedback. Visit our website at **canadiantire.ca** to tell us about your experience, and share your photos with us using **#myCANVASstyle**.

Show us how you bring **CANVAS™** products to life. We can't wait to see!

#### **TABLE OF CONTENTS**


Parts List	4
Before You Begin Assembly	9
Step-by-step Guide	11
Technical Data	33
Caring for Your Item	34
Warranty	34




WARNING! TO REDUCE THE RISK OF SERIOUS INJURY, READ THE FOLLOWING SAFETY INSTRUCTIONS BEFORE ASSEMBLING AND USING THE PRODUCT.


- Please read and understand this entire manual before attempting to assemble, operate, or install the product.
- Follow all warning labels.
- Any assembly or maintenance of the product must be carried out by adults only.
- Some parts may contain sharp edges. Wear protective gloves if necessary.
- To prevent damage, place all parts on a level surface during assembly. Add a layer of protective surface if needed.
- Due to the nature of steel, surface oxidation (rusting) will occur if the protective coating is scratched. This is a natural process. To minimize this condition, it is recommended that care be taken when assembling and handling the product in order to prevent the paint from being scratched.

#### **TOOLS REQUIRED**

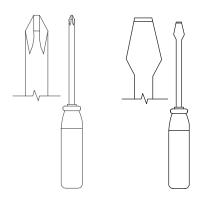

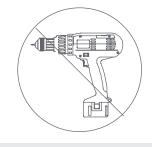

**NOTE:** Do not over drill. Be aware of over-drilling

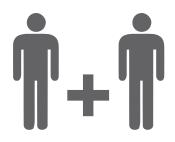


No. 2 Cross-head Screwdriver Tip Shown Actual Size 2 people

# PARTS LIST

ITEM	DESCRIPTION	THUMBNAIL	QUANTITY
1	Тор		1
2	Upper left side		1
3	Upper right side		1
4	Support rail		2
5	Shelf		2
6	Adjustable shelf		2
7	Middle shelf		1
8	Lower left side		1
9	Lower right side		1
10	Drawer support		1
11	Bottom		1
12	Upper back		2
13	Upper H-shaped strip		1
14	Lower left back		1
15	Upper door		2
16	Lower door		2
17	Drawer front		1

# **PARTS LIST**

ITEM	DESCRIPTION	THUMBNAIL	QUANTITY
18	Drawer left		1
19	Drawer right		1
20	Drawer back		1
21	Drawer support		1
22	Removable work surface		1
23	Drawer bottom		1
24	Lower right back		1

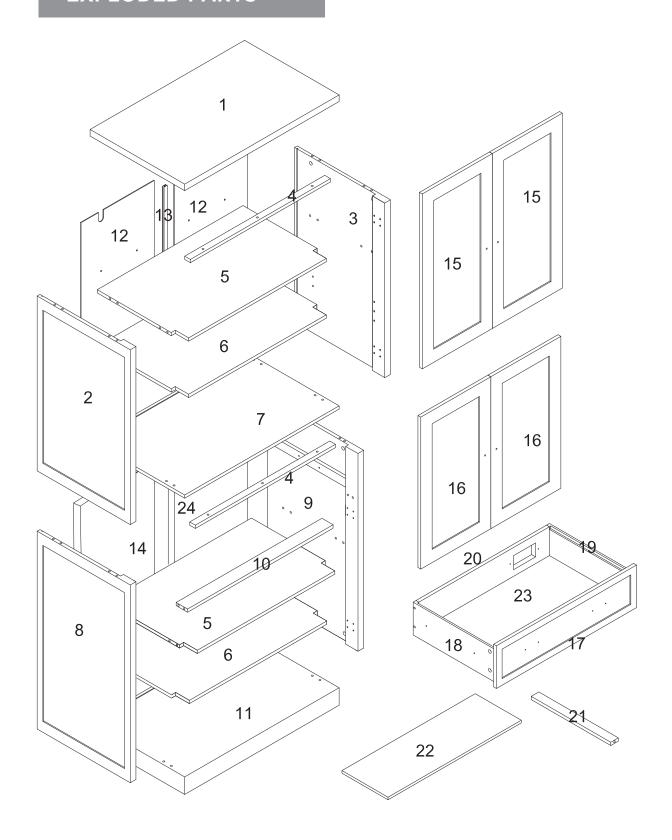

Warning: Before assembly, please check all accessories in the hardware box, and ensure parts are not missing.

# HARDWARE LIST

ITEM	DESCRIPTION	THUMBNAIL	QUANTITY
A	Cam bolt		33
В	Cam lock		33
С	Wood dowel		38
D	Screw M5X45	(A) THE TELEFORM	4
E	Door handle		4
F	Screw M3X12		4
G	Screw M4X30	@MATTATATA	5
н	Backboard locker	<b>€</b>	12
I	Hinge		8
J	Screw M4X12		48
K	Extension rail		2
L	Drawer handle		2
М	Screw M4X16		4
0	Power station	0.0 [2][2]	1
P	Screw M3.5X12	<b>Applica</b>	22

# HARDWARE LIST

ITEM	DESCRIPTION	THUMBNAIL	QUANTITY
Q	Shelf holder		8
R	Screw M4X12	E DEST	2
S	Anti-tip bracket		2
Т	Screw M4X35	8 Martinetar	2
U	Wall anchor		2
V	Screw M4X25	@WILLIAM .	6
Y	Screw M4X14		4
Z	Metal piece	0	3


#### MAKE SURE ALL PARTS ARE PRESENT

Compare all pieces to the parts and hardware lists, and make sure you have all tools required for assembly.




#### ASSEMBLE IN A CLEARED AREA

Place all parts from the box on the floor in front of you on a clean, dry, level surface to protect the product as it is being built.

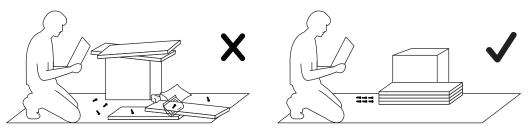


#### **REMOVE PACKAGING MATERIALS**

Place packing materials back in the box. Do not dispose of packaging materials until assembly is complete.

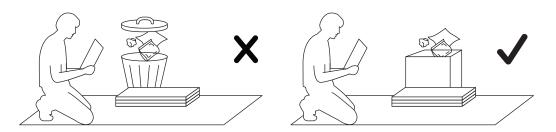


#### READ EACH STEP CAREFULLY

Make sure you understand each step. If you have any questions, contact CANVAS™ customer service at 1-888-670-6684 (toll free).

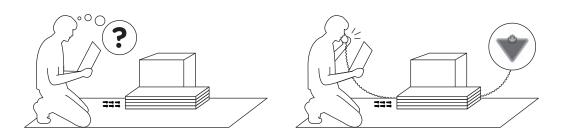


#### **CAM LOCK SYSTEM OPERATION**

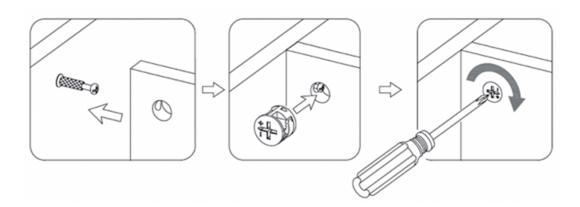

- 1. Screw cam bolt into the pre-drilled small holes on panel. Align the panels to be joined so that the cam bolt goes into the pre-drilled hole on the edge of the second panel and protrudes into the hole that will house the cam lock.
- 2. Insert the cam lock into pre-drilled large hole on panel. Make sure arrow on the cam lock is pointed toward the cam bolt.
- 3. Once the cam bolt is connected inside cam lock, take a cross-head screwdriver and tighten the cam lock by turning clockwise.

You are now ready to assemble the product.


#### STEP 1

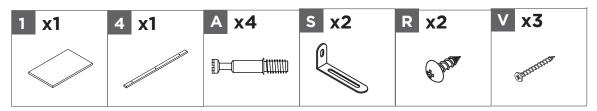


Insert four cam bolts A into the top 1.

Insert three screws M4X25 V through the support rail 4 into the top 1. Insert two screws M4X12 R through the anti-tip brackets S into the top 1. Tighten all cam bolts and screws V.


Note: Do not completely tighten screws R until the anti-tip brackets are secured to the wall.

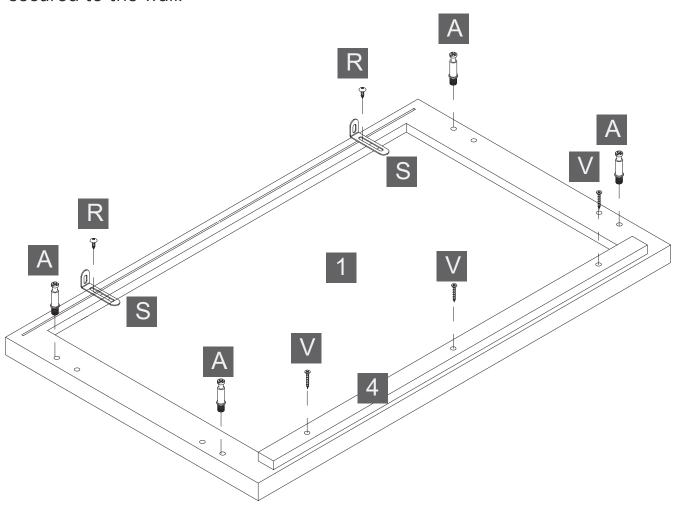


# STEP 2

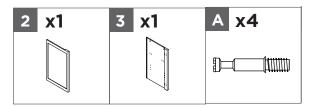

Insert four cam bolts A into the upper left side 2 and upper right side 3. Tighten all cam bolts.

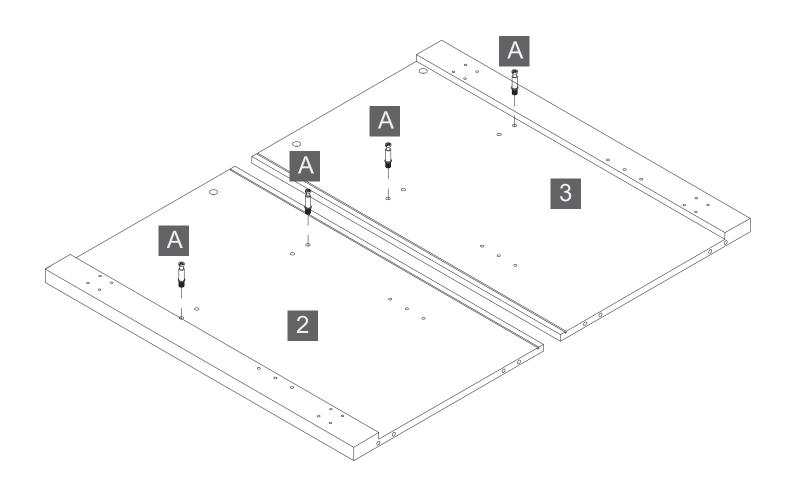

# STEP 3

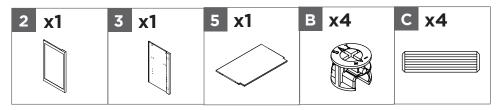


Insert four wood dowels **C** into the shelf **5**.


Attach the upper left side 2 and upper right side 3 to the shelf 5.

Insert four cam locks **B** into the shelf **5**.


Tighten all cam locks.

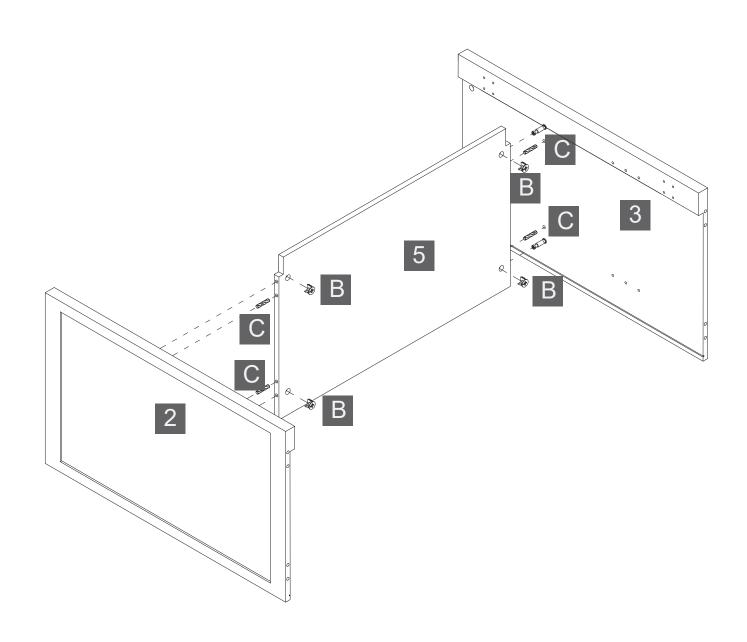


# STEP 4

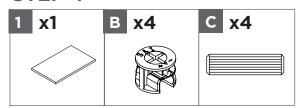

Insert four wood dowels C into the upper left side 2 and upper right side 3. Attach the top 1 to the upper left side 2 and upper right side 3. Insert four cam locks **B** into the upper left side **2** and upper right side **3**. Tighten all cam locks.

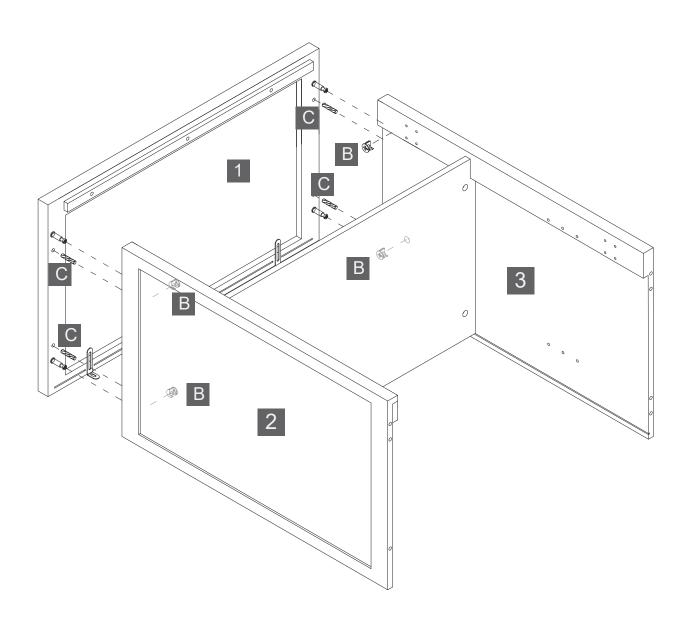


#### STEP 5

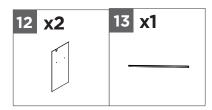


Insert the upper backs 12 and upper H-shaped strip 13 into the groove between the upper left side 2 and upper right side 3.

Make equal margins along all four edges of the upper backs 12.


Push on opposite corners of your unit if needed to make it "square".

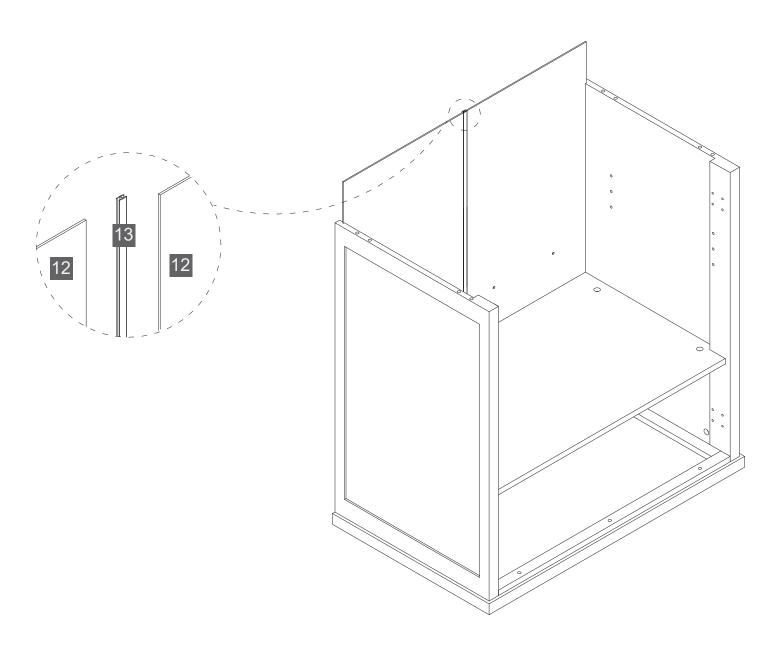


# STEP 6

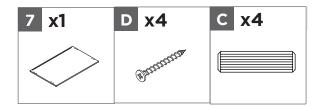


Insert four wood dowels C into the upper left side 2 and upper right side 3. Insert four screws M5X45 **D** through the middle shelf **7** into the upper left side **2** and upper right side 3.

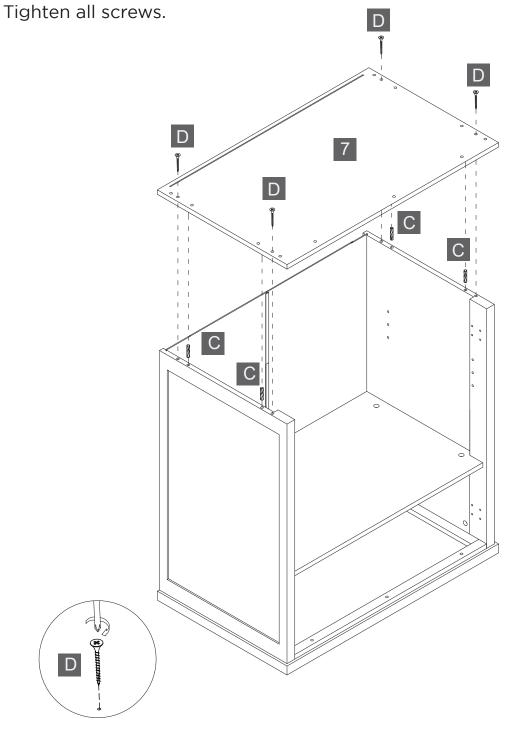


# STEP 7

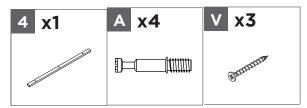

Insert four cam bolts A into the middle shelf 7. Insert three screws M4X35 V through the support rail 4 into the middle shelf 7. Tighten all cam bolts and screws.

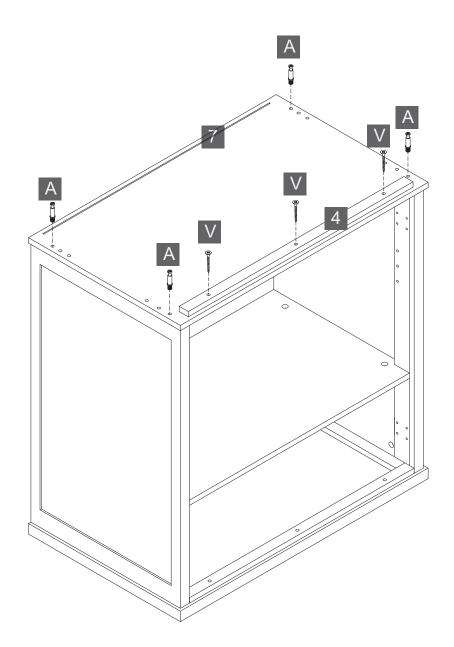

#### STEP 8

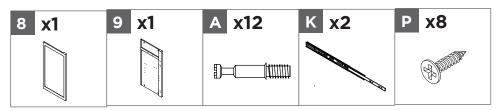


The slide track **K2** and the slide runner **K1** will need to be separated for assembly. To do so, slide the slide track **K2** slightly out from inside the slide runner **K1** until the trigger disconnect lever is visible.


In the groove of the slide runner **K1**, press the trigger disconnect lever upwards as the same time sliding the slide track **K2** out.

Insert eight screws M3.5X12 **P** through the slide runners **K1** into the lower left side **8** and lower right side **9**.


Insert twelve cam bolts **A** into the lower left side **8** and lower right side **9**. Tighten all screws and cam bolts.

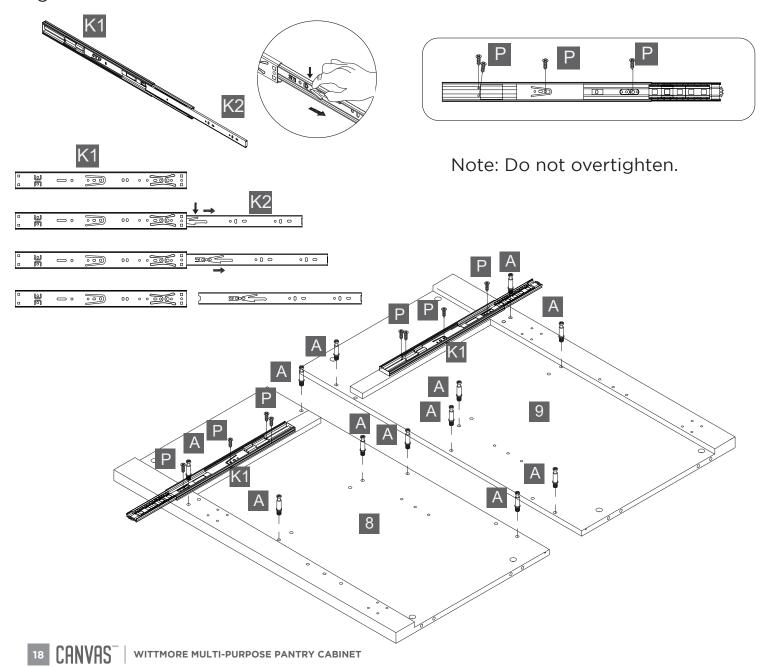


#### STEP 9

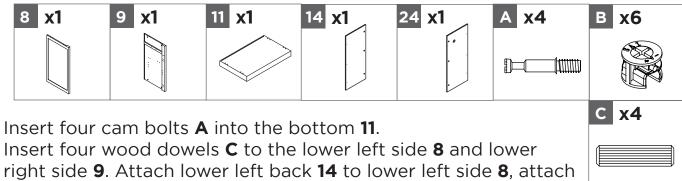

Insert four wood dowels C to the lower left side 8 and lower lower right back 24 to lower left side 9. Insert six cam locks B into lower left back 14 and lower right back 24. Tighten all cam bolts.

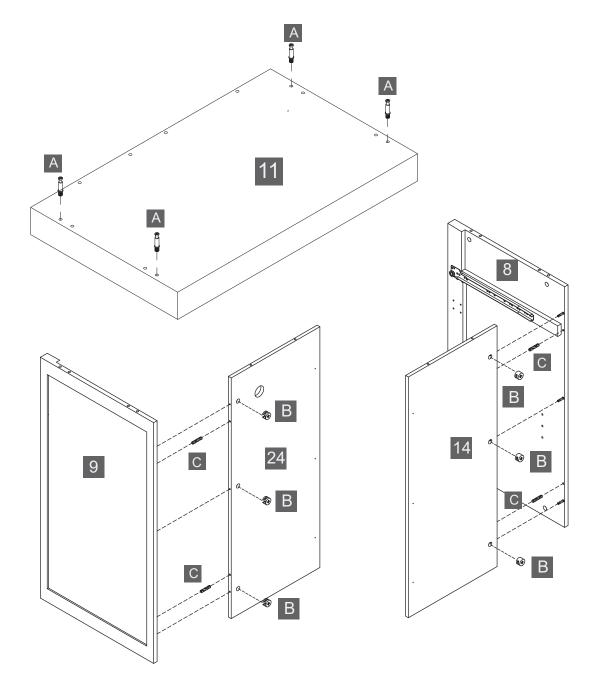


# **STEP 10**

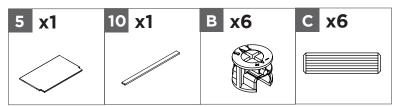


Insert six wood dowels C into the shelf 5 and drawer support 10. Attach the lower left side 8 and lower right side 9 to the shelf 5 and drawer support 10.


Insert six cam locks **B** into the shelf **5** and drawer support **10**. Tighten all cam locks.

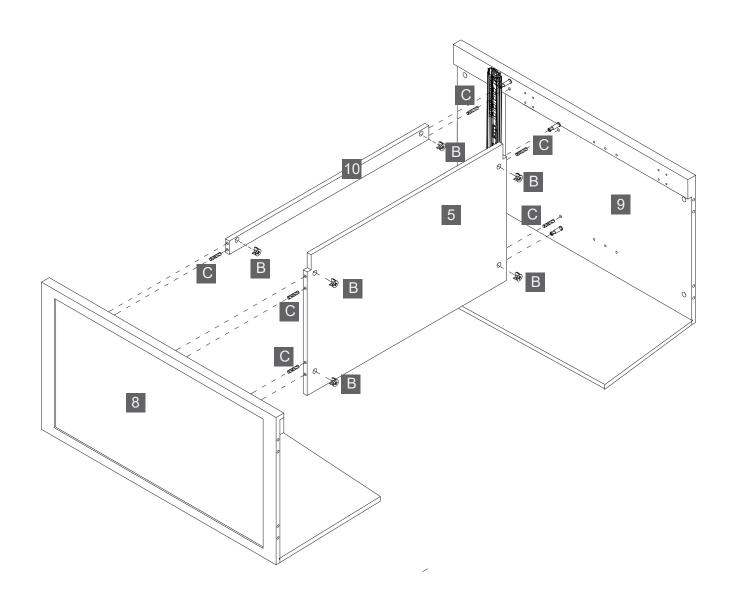


# **STEP 11**

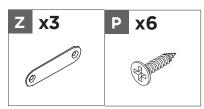

Insert six screws M3.5X12 **P** through metal piece **Z** into back panel. Tighten all screws.

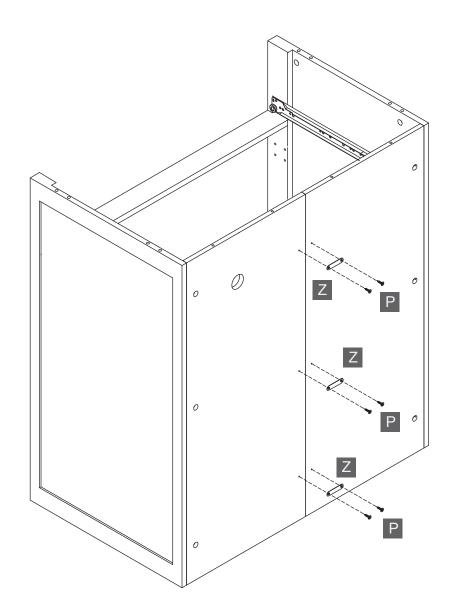


# **STEP 12**

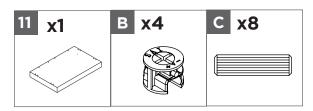


Insert eight wood dowel **C** into the bottom **11**.

Attach the lower left side 8, lower right side 9, lower left back 14 and lower right back 24 to the bottom 11.

Insert four cam locks B into the lower left side 8 and lower right side 9, Tighten all cam locks.

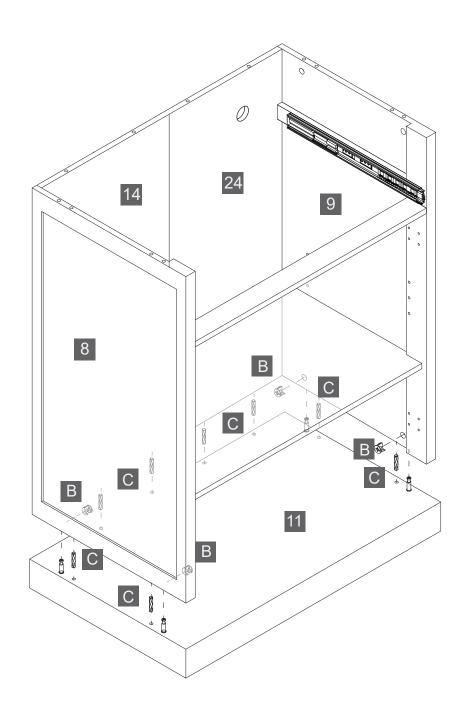


#### **STEP 13**

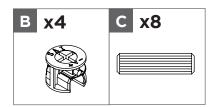


Insert eight wood dowels C into the lower left side 8, lower right side 9, lower left back 14 and lower right back 24. Attach the middle shelf 7 to the lower left side 8, lower right side 9, lower left back 14 and lower right back 24. Insert four cam locks B into the lower left side 8 and lower right side 9.

Tighten all cam locks.

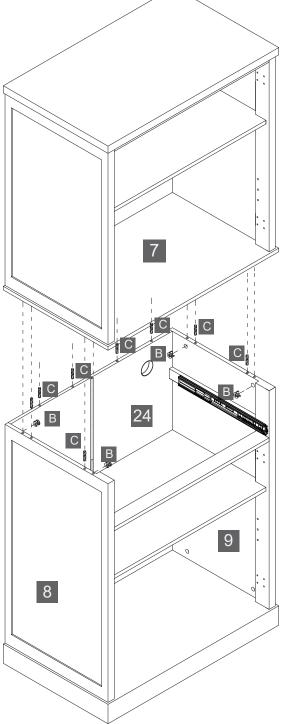


# **STEP 14**

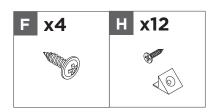


Insert twelve screws  ${\bf H}$  through the backboard locker  ${\bf H}$  into the groove as shown.


Insert four screws M3X12 **F** through the backs into the shelves. Tighten all screws.

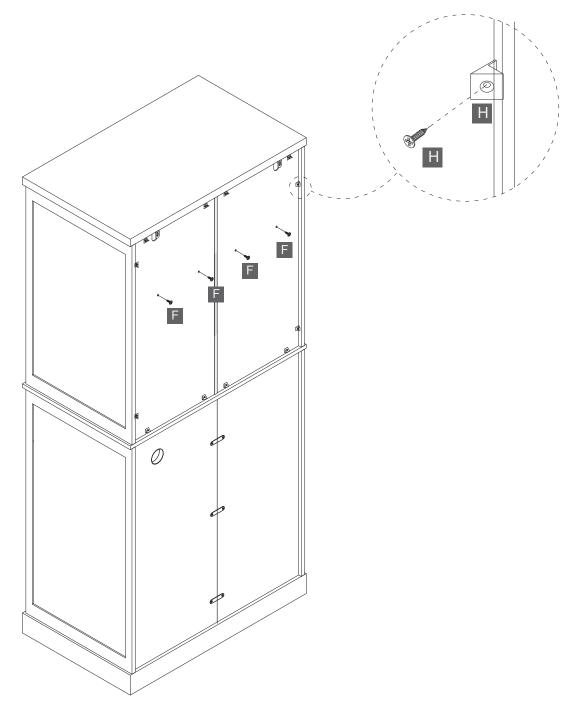


#### **STEP 15**

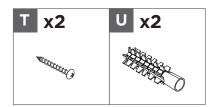


Using the anti-tip brackets **S** as a guide, mark four spots on the wall, drill a hole at each mark into a wall stud, hammer four wall anchors **U** into the wall, and fasten the anti-tip brackets **S** using two screws M4X35 **T** screwed into the wall anchors **U**.

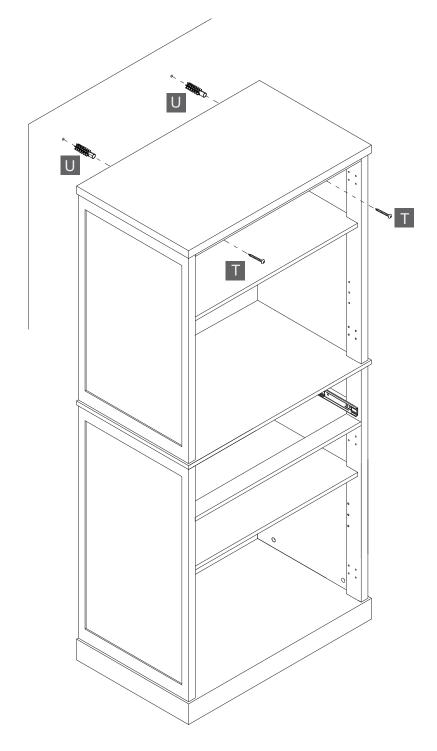


# **STEP 16**

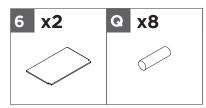

Insert eight shelf holders **Q** into the pre-drilled holes as shown. Place the adjustable shelves 6 on the shelf holders Q.

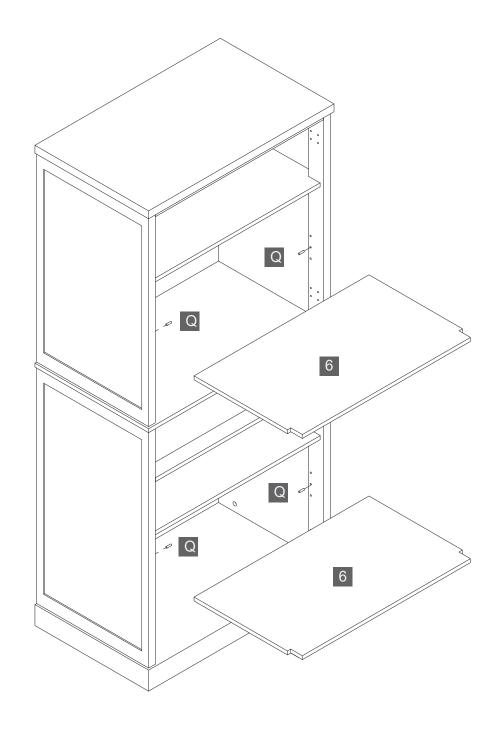


# **STEP 17**

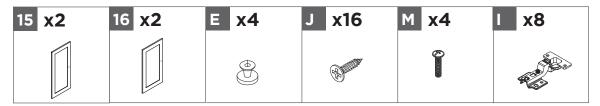


Insert four screws M4X12 M through the upper doors 15 and lower doors 16 into the door handles **E**.

Insert sixteen screws M4X12 J through the hinges I into the upper doors 15 and lower doors 16.


Tighten all screws.

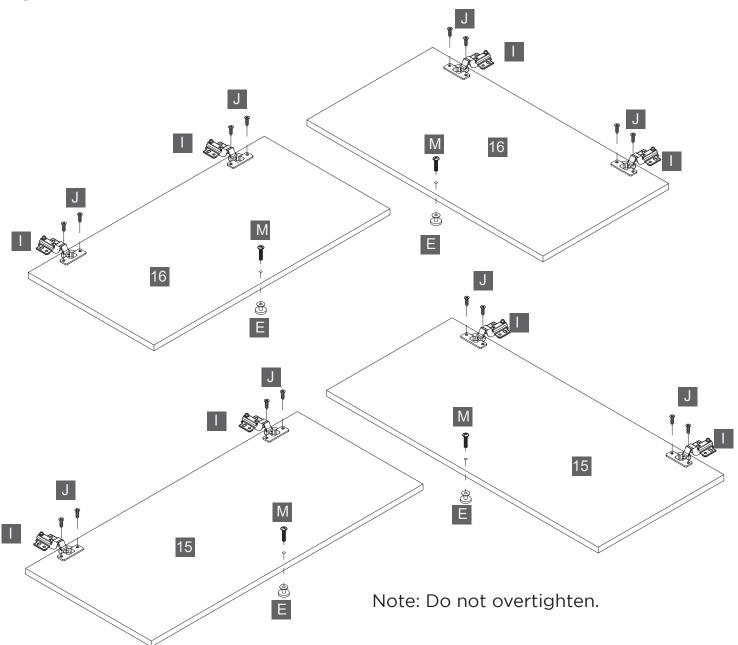


#### **STEP 18**

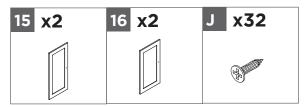

Insert thirty two screws M4X12 J through the hinges I into the upper left side 2, upper right side 3, lower left side 8 and lower right side 9, and fasten the hinges to the upper left side 2, upper right side 3, lower left side 8 and lower right side 9. Tighten all screws.

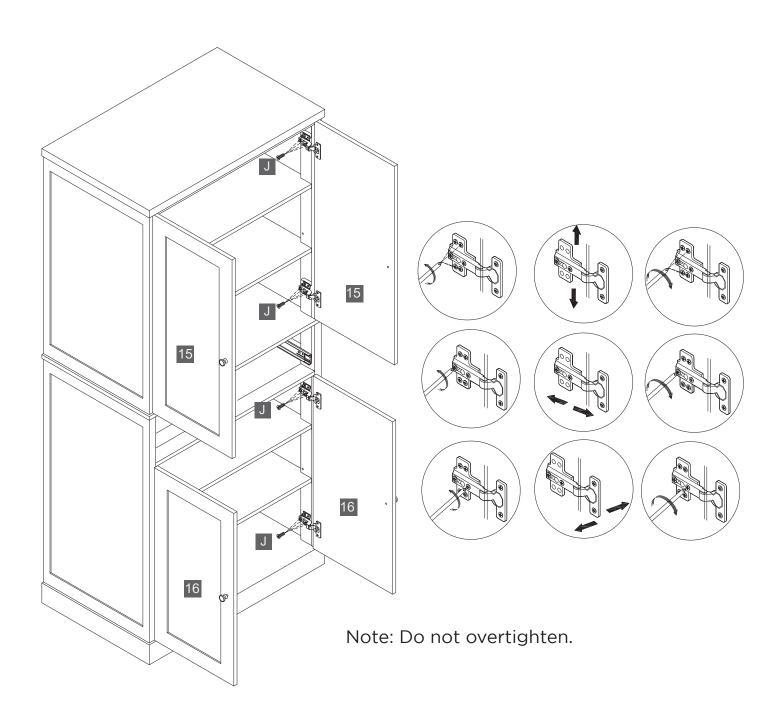


#### **STEP 19**

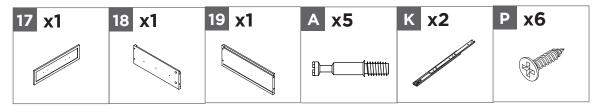


Insert five cam bolts **A** into the drawer front **17**.

Insert six screws M3.5X12 P through the slide tracks K2 into the drawer left 18 and drawer right 19.

Tighten all cam bolts and screws.

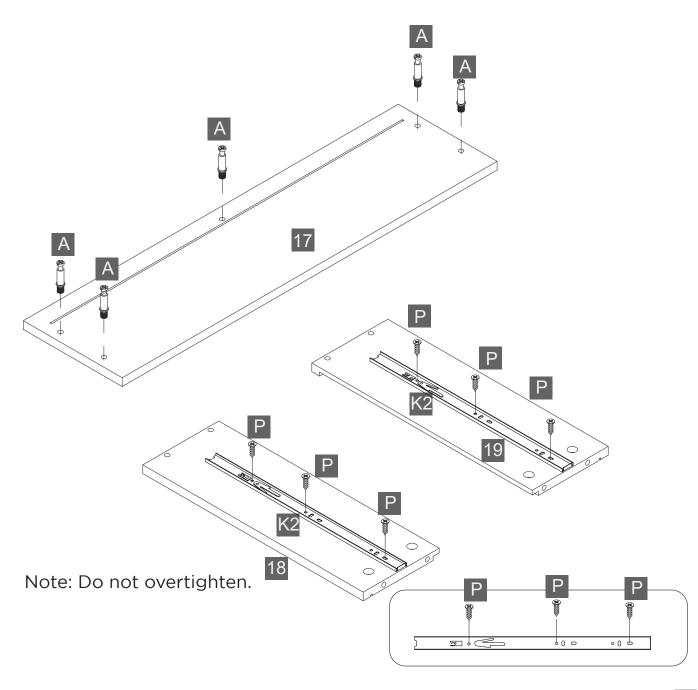


#### **STEP 20**

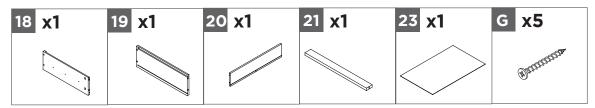


Insert four screws M4X30 G through the drawer left 18 and drawer right 19 into the drawer back 20.

Insert one screw M4X30 G through the drawer back 20 into the drawer support 21. Tighten all screws.

Insert the drawer bottom 23 into the groove around the bottom of the drawer left 18, drawer right 19 and drawer back 20.

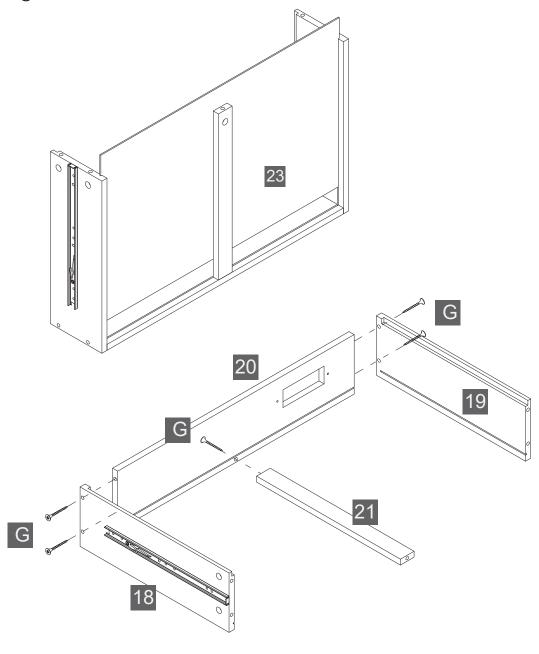


#### **STEP 21**

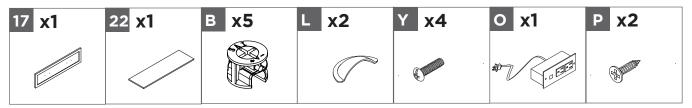


Attach the drawer front 17 to the drawer left 18 and drawer right 19. Insert four cam lock B into the drawer left 18 and drawer right 19. Insert four screws M4X14 Y through the drawer front into the drawer handles L. Insert two screws M3.5X12 P through the power station O into the drawer back 20. Tighten all screws.


Put the removable work surface 22 on the groove in the drawer left 18 and drawer right 19 as shown.

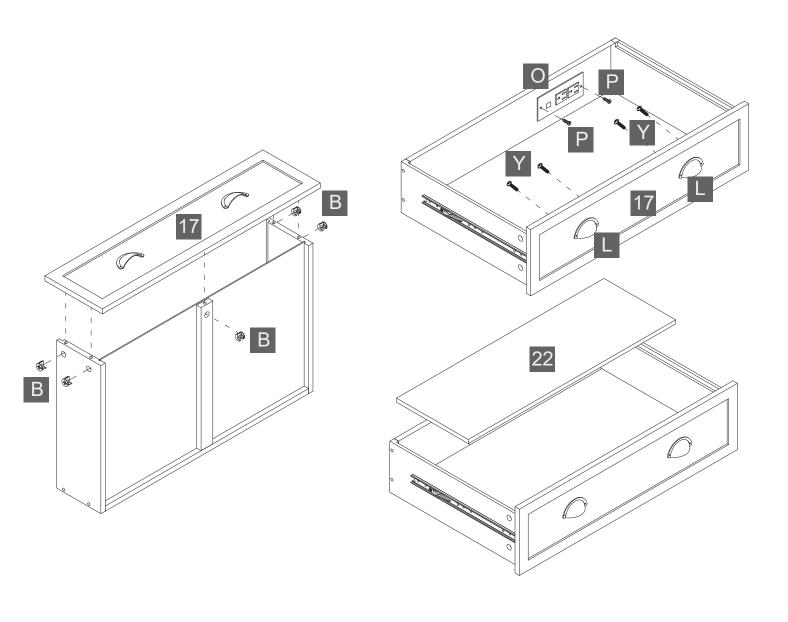


#### **STEP 22**

Insert the drawer into the unit by lining up the slide track on the drawer with the slide runner on the unit.

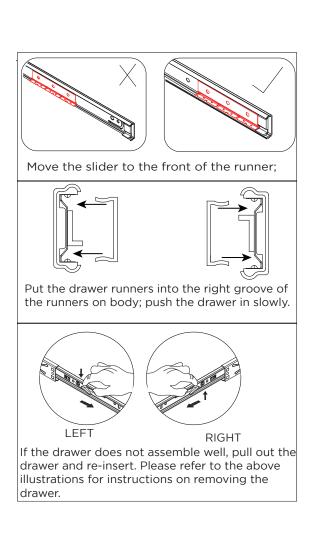

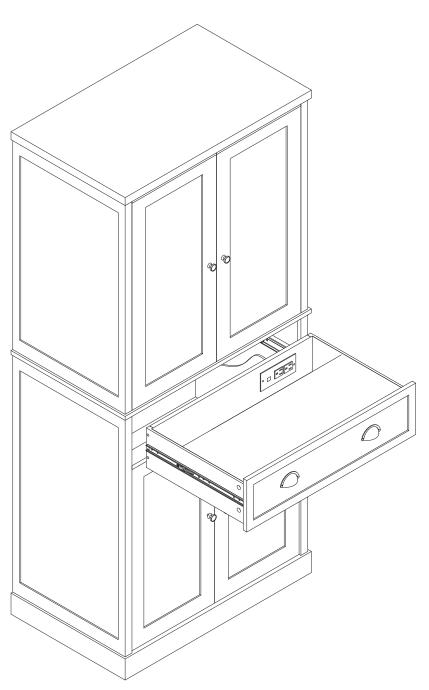

# TECHNICAL DATA

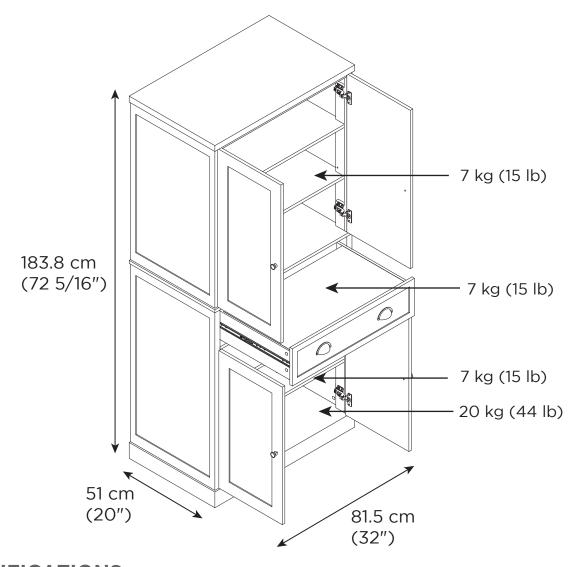

# **SPECIFICATIONS**

ASSEMBLED DIMENSIONS (W x D x H)	81.5 x 51 x 183.8 cm
	32 x 20 x 72 5/16"
ASSEMBLED WEIGHT	81 kg
	178 lb 9 oz
MAXIMUM WEIGHT CAPACITY (Drawer and removable s	surface) 7 kg
	15 lb
MAXIMUM WEIGHT CAPACITY (Each shelf)	7 kg
	15 lb
MAXIMUM WEIGHT CAPACITY (Bottom shelf)	20 kg
	44 lb

# **ASSEMBLY TROUBLESHOOTING**



#### **HAVING TROUBLE? LET US HELP YOU!**

TOLL-FREE: 1-888-670-6684

If you have questions regarding your product or require warranty assistance, please call our customer service helpline.



#### CARING FOR YOUR ITEM



Weight Capacity:

- Do not exceed maximum weight capacity of 7 kg (15 lb) on drawer and removable surface.
- Do not exceed maximum weight capacity of 7 kg (15 lb) on each shelf.
- Do not exceed maximum weight capacity of 20 kg (44 lb) on bottom shelf.



Furniture tipping over can be dangerous. To reduce your risk:

- Do not stand on, sit on or climb this unit.
- Do not sit on top of unit.
- For indoor use only.
- Always place the unit on a flat, level surface.
- Regularly tighten all hardware to ensure unit is secure and stable.



Wipe clean with a damp cloth.



Avoid direct sunlight.

#### WARRANTY INFORMATION



#### 1-YEAR LIMITED WARRANTY\*

This CANVAS™ product carries a one (1) year warranty against defects in workmanship and materials. Trileaf Distribution agrees to replace the defective product free of charge within the stated warranty period, when returned by the original purchaser with proof of purchase. This product is not guaranteed against wear or breakage due to misuse and/or abuse.

PRODUCT NO. 168-0200-6

Made in China

Imported by Trileaf Distribution Trifeuil Toronto, Canada M4S 2B8

# CANVAS



