


1-Door Pantry Storage Cabinet

Product No. 168-0203-0

Assembly Instructions

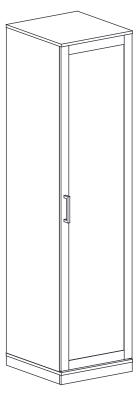



NEED HELP? GIVE US A CALL! WE'RE HERE FOR YOU.

TOLL-FREE: 1-877-483-6759

IMPORTANT: Please read this manual carefully before beginning assembly of this product. Keep this manual for future reference.



From your first apartment to downsizing your family home, For LIVING* is a great place to start.

Uncomplicate your life with timeless style and reliable quality that delivers everyday solutions for your home.

Let us know how our products work for you. Rate and review at canadiantire.ca

Table of Contents



Parts List	4	Flip Door Opening	25
Exploded Parts	5	Adjust Levellers	26
Hardware List	6	Technical Data	27
Before You Begin Assembly	8	Assembly Troubleshooting	28
Step-by-step Guide	10	Caring for Your Item	28
Tip Restraint	22	Warranty	29
Adjust Door	24		



Warning! Please use your furniture correctly and safely. Improper use can cause safety hazards or damage to your furniture or household items. Carefully read the following safety information.

- Please read and understand this entire manual before attempting to assemble, operate, or install the product.
- Any assembly or maintenance of the product must be carried out by adults only.
- Some parts may contain sharp edges. Wear protective gloves if necessary.
- To prevent damage, place all parts on a level surface during assembly.
 Add a layer of protective cover if needed.

Needed for Assembly:



Screwdriver (Not provided)




Level (Not provided)



Hammer (Not provided)



Power drill (Not provided)

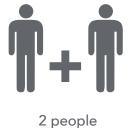




NOTE: Do not over-drill. Be aware of over-drilling.

Parts List

Item	Description	Thumbnail	Quantity
1	Top panel		1
2	Bottom panel		1
3	Left side panel		1
4	Right side panel		1
5	Fixed shelf		1
6	Back panel		1
7	Back bottom rail		1
8	Left bottom rail		1
9	Right bottom rail		1
10	Front bottom rail		1
11	Adjustable shelf		4
12	Door		1

Exploded Parts



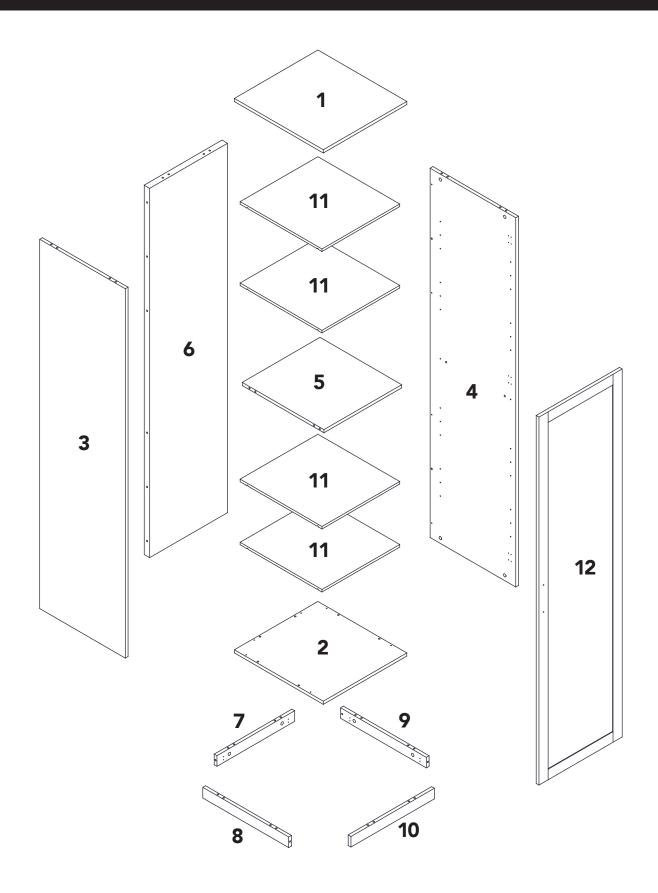

Hardware List

Item	Description	Thumbnail	Quantity
А	Cam lock		32
В	Cam bolt		32
С	Wood dowel		32
D	Hinge		3
E	Screw ø4 x 14 mm	(2) FILLIN	18
F	Shelf support		16
G	Bolt ø4 x 22 mm		2
Н	Handle		1
I	Coated paper sticker		24
J	Adjustable leveller		4
K	Screw ø3.5 x 12 mm		16
L	Screw ø4 x 55 mm	- 	2

Hardware List




Item	Description	Thumbnail	Quantity
М	Screw ø4 x 18 mm		2
N	Metal bracket		4
0	Anchor		2
Р	Nylon strap		2

Before You Begin Assembly

Make Sure All Parts Are Present

 Compare all pieces to the parts and hardware lists, and make sure you have all tools required for assembly.



Assemble in a Cleared Area

Place all parts from the box on the floor in front of you on a clean, dry, level surface to protect the product as it is being built.




Remove Packaging Materials

Place packing materials back in the box. Do not dispose of packaging materials until assembly is complete.



Read Each Step Carefully

Make sure you understand each step. If you have any questions, contact the For LIVING® customer service centre at 1-877-483-6759 (toll free).

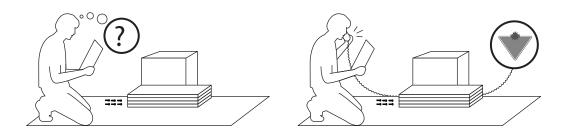



Before You Begin Assembly




<u>NOTE:</u> IT IS VERY IMPORTANT TO USE GLUE WITH DOWELS. EXCESS GLUE CAN BE WIPED OFF WITH DAMP CLOTH.


Insert the dowel at least half way by tapping lightly with a rubber mallet IF NECESSARY.

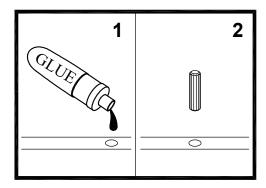

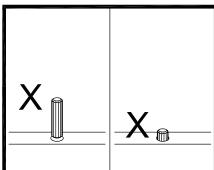

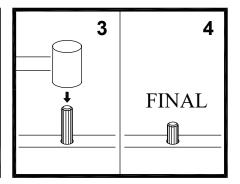

CAM LOCK SYSTEM OPERATION

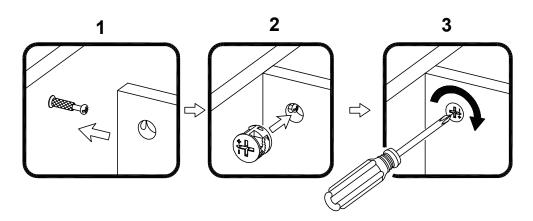

HOW THE KNOCK DOWN (KD) ASSEMBLY SYSTEM WORKS

 
- 1. Screw the cam bolt into the pre-drilled threaded holes on the panel. Connect both panels together making sure cam bolt goes into the pre-drilled large hole on the end of panel that will accommodate the cam lock.
- 2. Insert the cam lock into the pre-drilled large hole on the panel. Make sure the arrow on the face of cam lock faces out and points towards cam bolt.
- 3. Take a cross-head screwdriver and rotate the cam lock clockwise to lock the cam bolt in place.

SPECIAL NOTE

Please read the instruction sheets completely before assembly. Examine all packaging material before discarding carton. Remove all parts from carton and separate into groups as indicated on parts list. Please ensure all parts are included prior to assembly. Use of power tools to complete assembly is not recommended.


You are now ready to assemble the KD unit.

Step 1

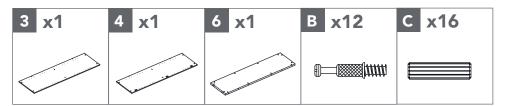


Attach 12 cam bolts (B) to left side panel (3) and right side panel (4). Do not over-tighten.

Insert 16 wood dowels (C) into left side panel (3), right side panel (4) and back panel (6).

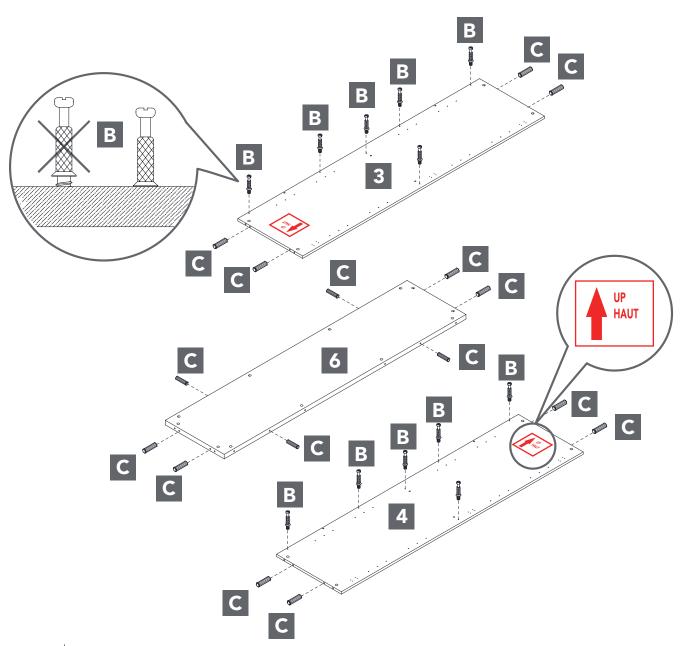




 Step 2

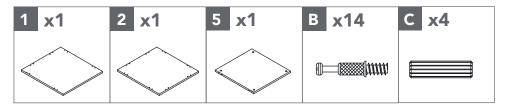


Attach 14 cam bolts (B) to top panel (1) and bottom panel (2). Do not over-tighten.


Insert four wood dowels (C) into fixed shelf (5).

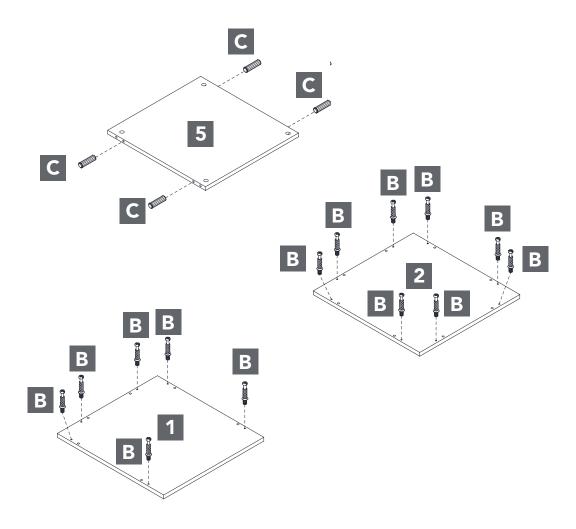

 Step 3

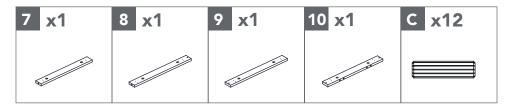


Insert 12 wood dowels (C) into back bottom rail (7), left bottom rail (8), right bottom rail (9) and front bottom rail (10).

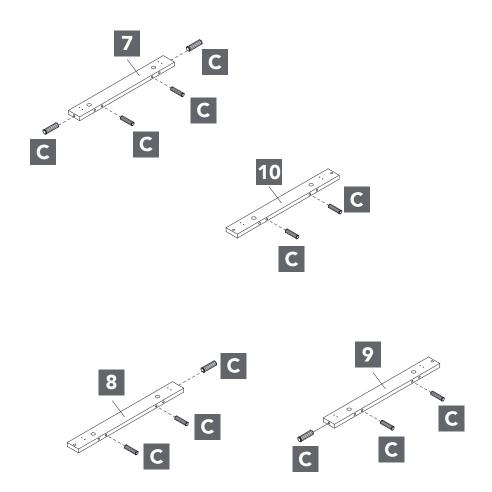




 Step 4

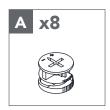


Attach back bottom rail (7), left bottom rail (8), right bottom rail (9) and front bottom rail (10) together.


Attach bottom panel (2) to back bottom rail (7), left bottom rail (8), right bottom rail (9) and front bottom rail (10) using eight cam locks (A). Tighten cam locks (A).

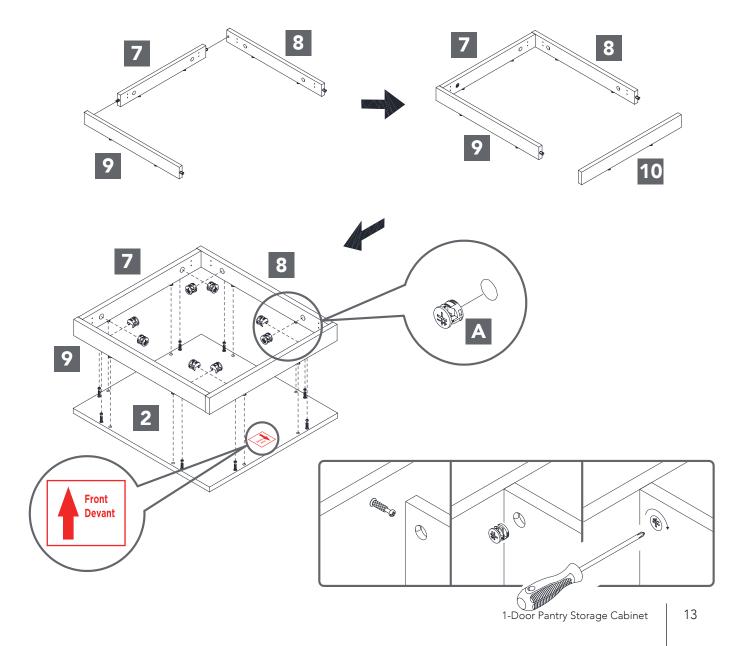

 Step 5

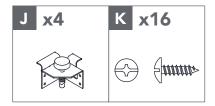


Attach four adjustable levellers (J) using four screws (K) each.

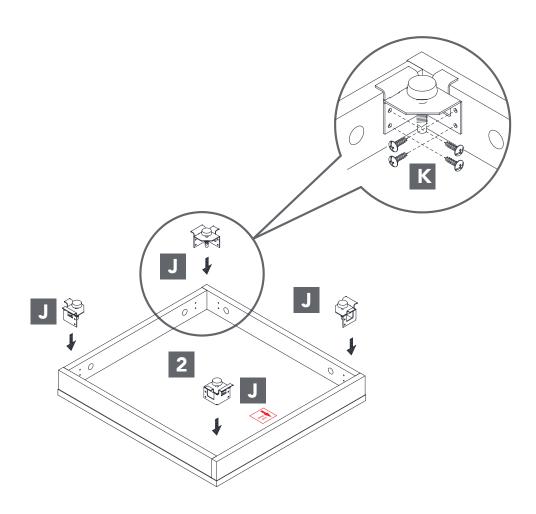




 
Step 6

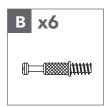

Attach six cam bolts (B) to bottom panel (2).

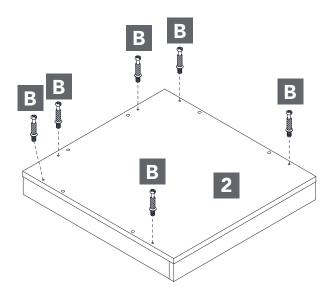


 Step 7

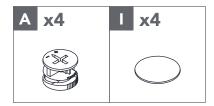


Attach left side panel (3) and right side panel (4) to fixed shelf (5) and back panel (6) using four cam locks (A). Tighten cam locks (A).

Cover cam locks (A) using four coated paper stickers (I).

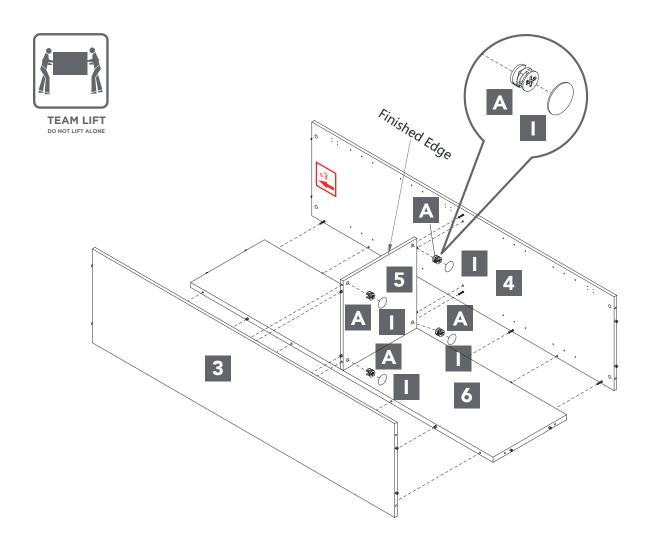




 Step 8

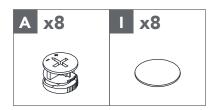


Attach top panel (1) and bottom panel (2) to left side panel (3) and right side panel (4) using eight cam locks (A). Tighten cam locks (A).

Cover cam locks (A) using eight coated paper stickers (I).

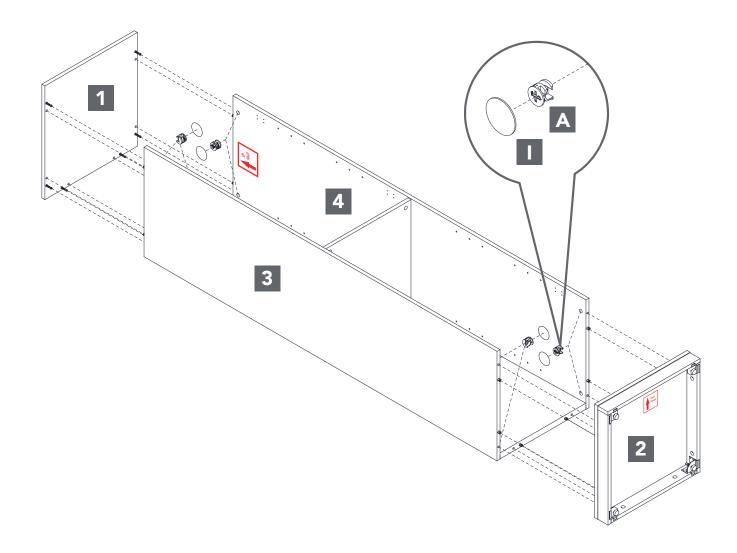

 
Step 9

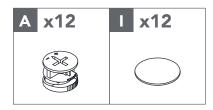

Move the unit to its upright position. Then attach top panel (1), bottom panel (2), left side panel (3) and right side panel (4) to back panel (6) using 12 cam locks (A). Tighten cam locks (A).


Cover cam locks (A) using twelve coated paper stickers (I).



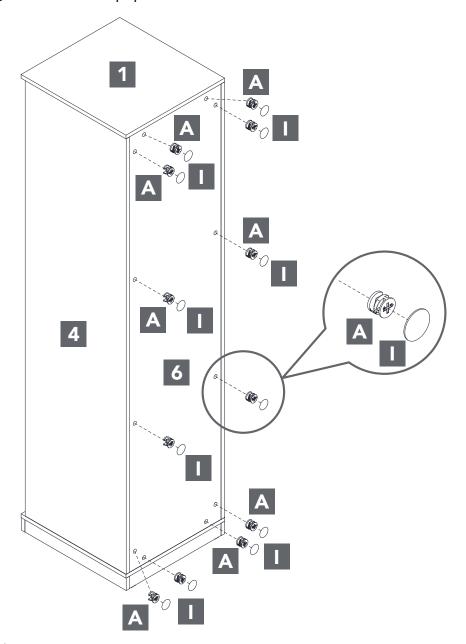




 Step 10

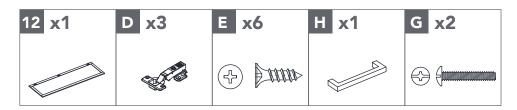


Attach three hinges (D) to door (12) using two screws (E) each.

Attach handle (H) to door (12) using two bolts (G).

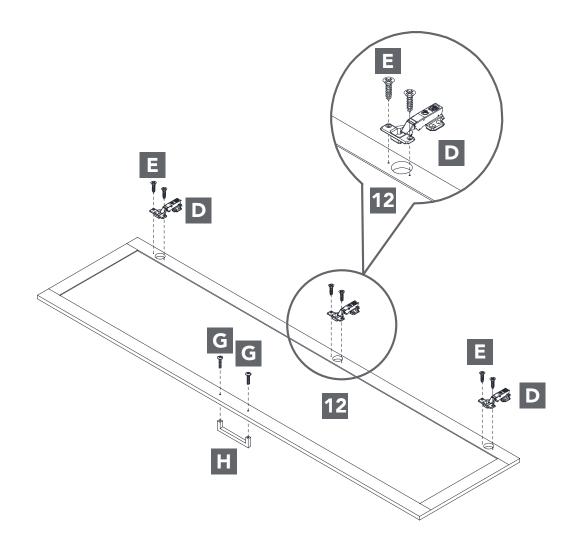


 Step 11

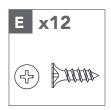


Attach door (12) to right side panel (4) using 12 screws (E).



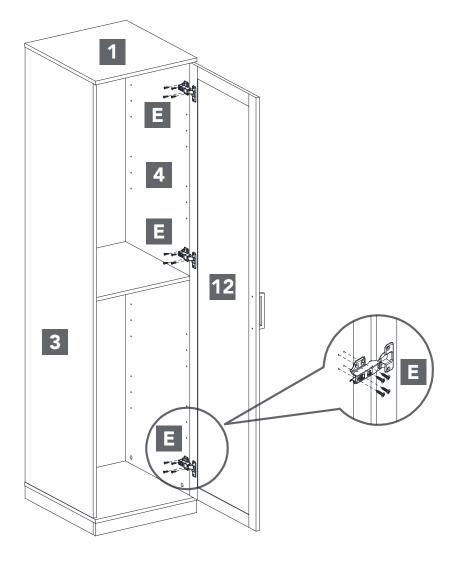




 Step 12

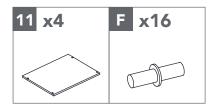


Insert 16 shelf supports (F) into corresponding holes in left side panel (3) and right side panel (4), then place four adjustable shelves (11) as shown.

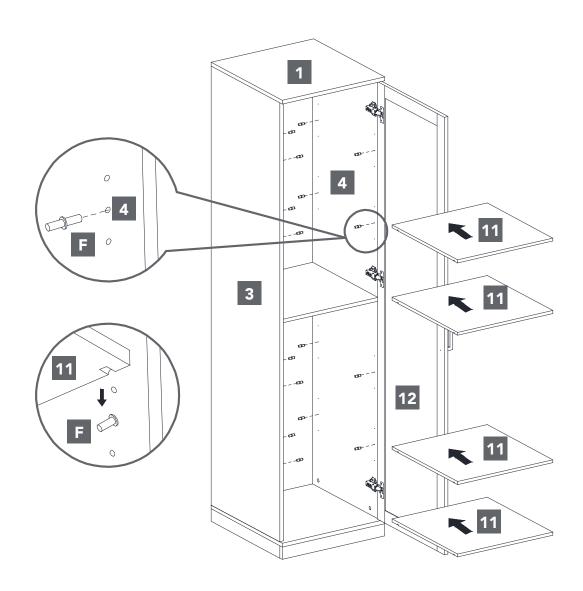

Tip Restraint

 Step 13

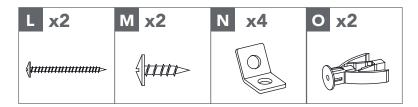

Pick your desired area of placement. Drill two small holes approximately 3/8" (9.5 mm) in diameter and approximately 2" (5 cm) deep. Use a level to make sure the two holes are level. After you drill the holes, insert wall anchors (**O**) into wall.

Attach metal brackets (N) to wall using screws (L).

Attach metal brackets (N) to top panel (1) using screws (M).



Caution! If installing the unit on drywall or other hollow wall applications, the metal bracket must be fastened to studs, headers, or other structural wall supports. The included anchors are intended for use with solid wall applications only (tile or concrete).

DO NOT USE WITH DRYWALL OR OTHER HOLLOW WALL APPLICATIONS.

Tip Restraint




Step 14




Attach cabinet to wall using two nylon straps (P) as shown.




Warning! To reduce the risk of serious injury and avoid the potential for furniture tipping over, install the tip restraint hardware.

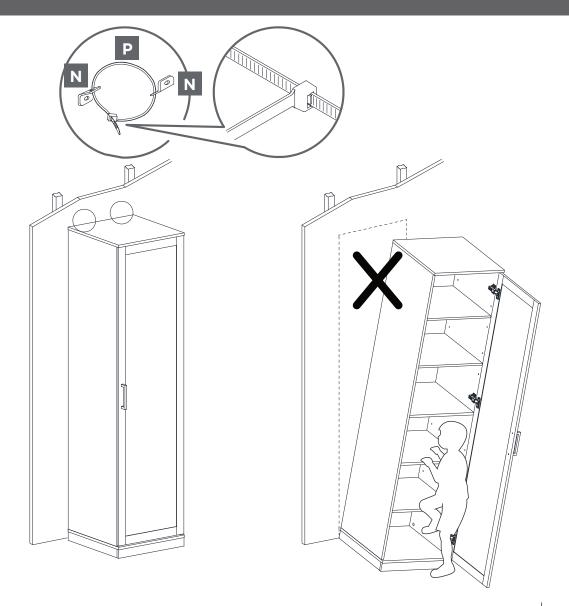

Adjust Door

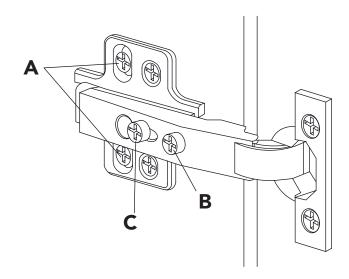


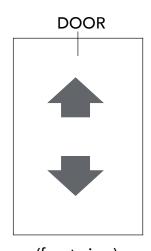

(front view)

DOOR

(front view)

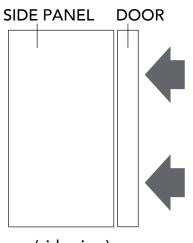

(side view)

If doors are not aligned:

Loosen "A" screws. Adjust door. Tighten "A" screws. If there is a gap between doors:


Loosen "C" screw. Turn "B" to move door. Tighten "C" screw. If there is a gap between door and side panel:

Loosen "B" and "C" screw. Adjust door. Tighten "B" and "C" screw.

Flip Door Opening

door from right panel.




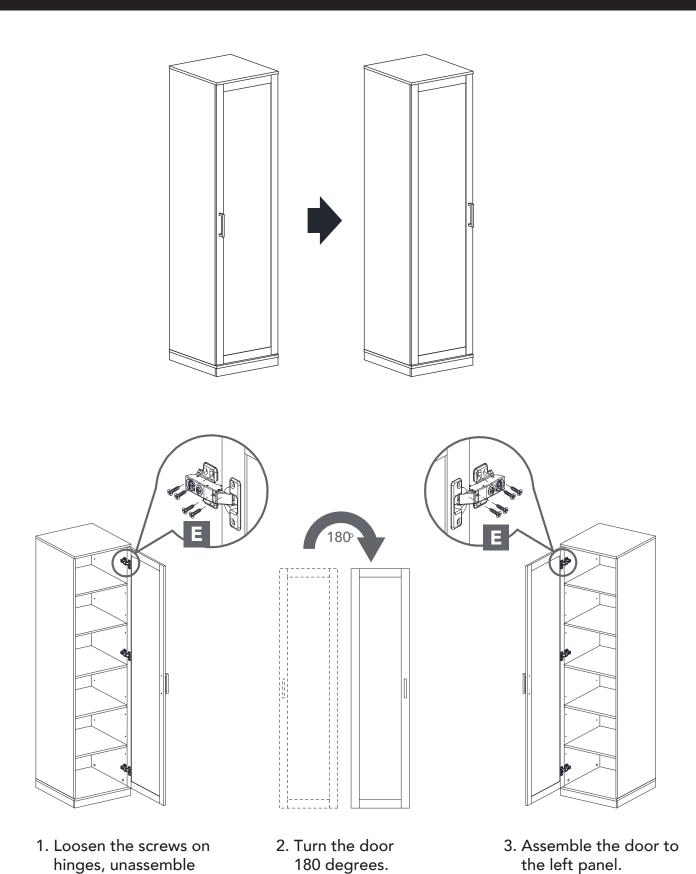

1-Door Pantry Storage Cabinet


Adjust Levellers

Note: If your item is not level, put it on a hard surface, then adjust the levellers.

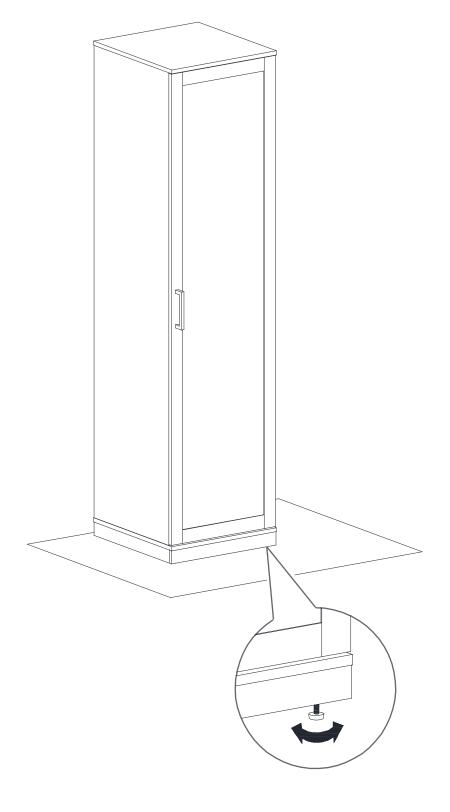

Technical Data



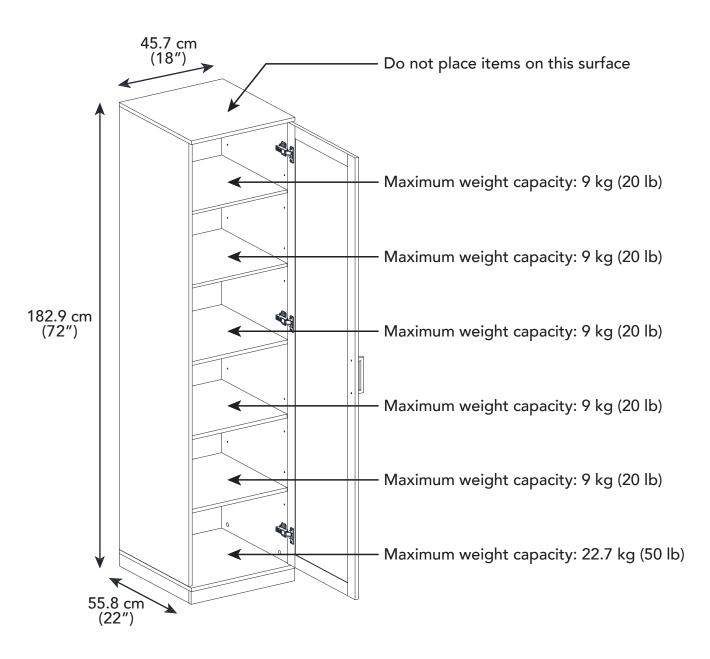

Specifications

Assembled Dimensions (W x D x H)	45.7 x 55.8 x 182.9 cm
	18 x 22 x 72"
Assembled Weight	60.1 kg

132 lb 8 oz

Maximum Weight Capacity Shelf: 9 kg; Bottom: 22.7 kg

Shelf: 20 lb; Bottom: 50 lb

Assembly Troubleshooting

Need help?

Give us a call! We're here for you.



Before returning your product to store



we can help!

If you have questions regarding your product or require warranty assistance, please call our customer service helpline.

Toll-free: 1-877-483-6759

Caring for Your Item

- Check all screws and bolts periodically for tightness. When required, tighten them again.
- Always keep children under close supervision while they are using or around this product. Never leave children unattended.
- 3 For household use only.
- 4 Wipe clean with damp cloth.
- Always use unit with tip-restraints installed as per instructions.

Warranty





1-Year Limited Warranty

This For LIVING® product carries a one (1) year warranty against defects in workmanship and materials. Trileaf Distribution agrees to replace the defective product free of charge within the stated warranty period, when returned by the original purchaser with proof of purchase. This product is not guaranteed against wear or breakage due to misuse and/or abuse.

Model No. 168-0203-0

Made in China

Imported by Trileaf Distribution Trifeuil Toronto, Canada M4S 2B8