




# 2-Door Tall Storage Cabinet

---

Product No. 168-0206-4

## Assembly Instructions

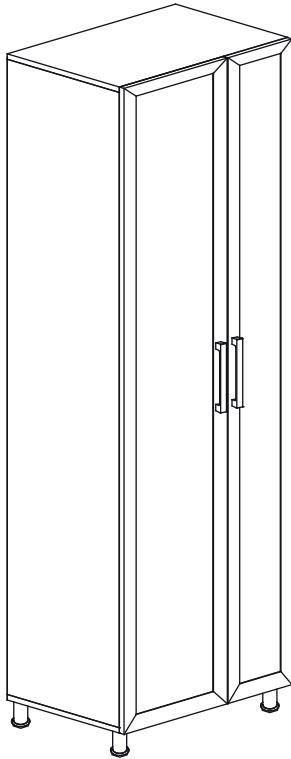

**NEED HELP? GIVE US A CALL!  
WE'RE HERE FOR YOU.**

TOLL-FREE:  
**1-877-483-6759**

IMPORTANT: Please read this manual carefully  
before beginning assembly of this product.  
Keep this manual for future reference.





# Table of Contents



Parts List	4	Adjust Levellers	24
Exploded Parts	5	Technical Data	25
Hardware List	6	Assembly Troubleshooting	26
Before You Begin Assembly	8	Caring for Your Item	26
Step-by-step Guide	10	Warranty	27
Adjust Doors	23		




**Warning!** Please use your furniture correctly and safely. Improper use can cause safety hazards or damage to your furniture or household items. Carefully read the following safety information.


- Please read and understand this entire manual before attempting to assemble, operate, or install the product.
- Any assembly or maintenance of the product must be carried out by adults only.
- Some parts may contain sharp edges. Wear protective gloves if necessary.
- To prevent damage, place all parts on a level surface during assembly.

Add a layer of protective cover if needed.


## Needed for Assembly:

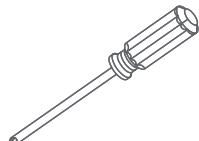

Screwdriver  
(Not provided)

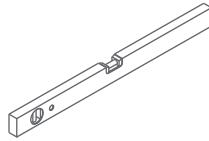


Level  
(Not provided)

 


Hammer  
(Not provided)



Power Drill  
(Not provided)

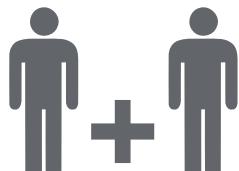

2 people

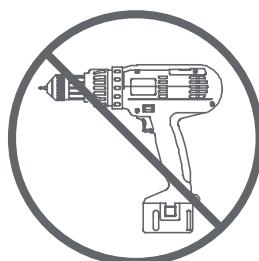


**NOTE:** Do not over-drill.  
Be aware of over-drilling.

# Parts List





Item	Description	Thumbnail	Quantity
1	Top panel		1
2	Bottom panel		1
3	Left side panel		1
4	Right side panel		1
5	Middle panel		1
6	Fixed shelf		2
7	Left back panel		1
8	Right back panel		1
9	Left door		1
10	Right door		1
11	Adjustable shelf		2

# Exploded Parts

for LIVING®

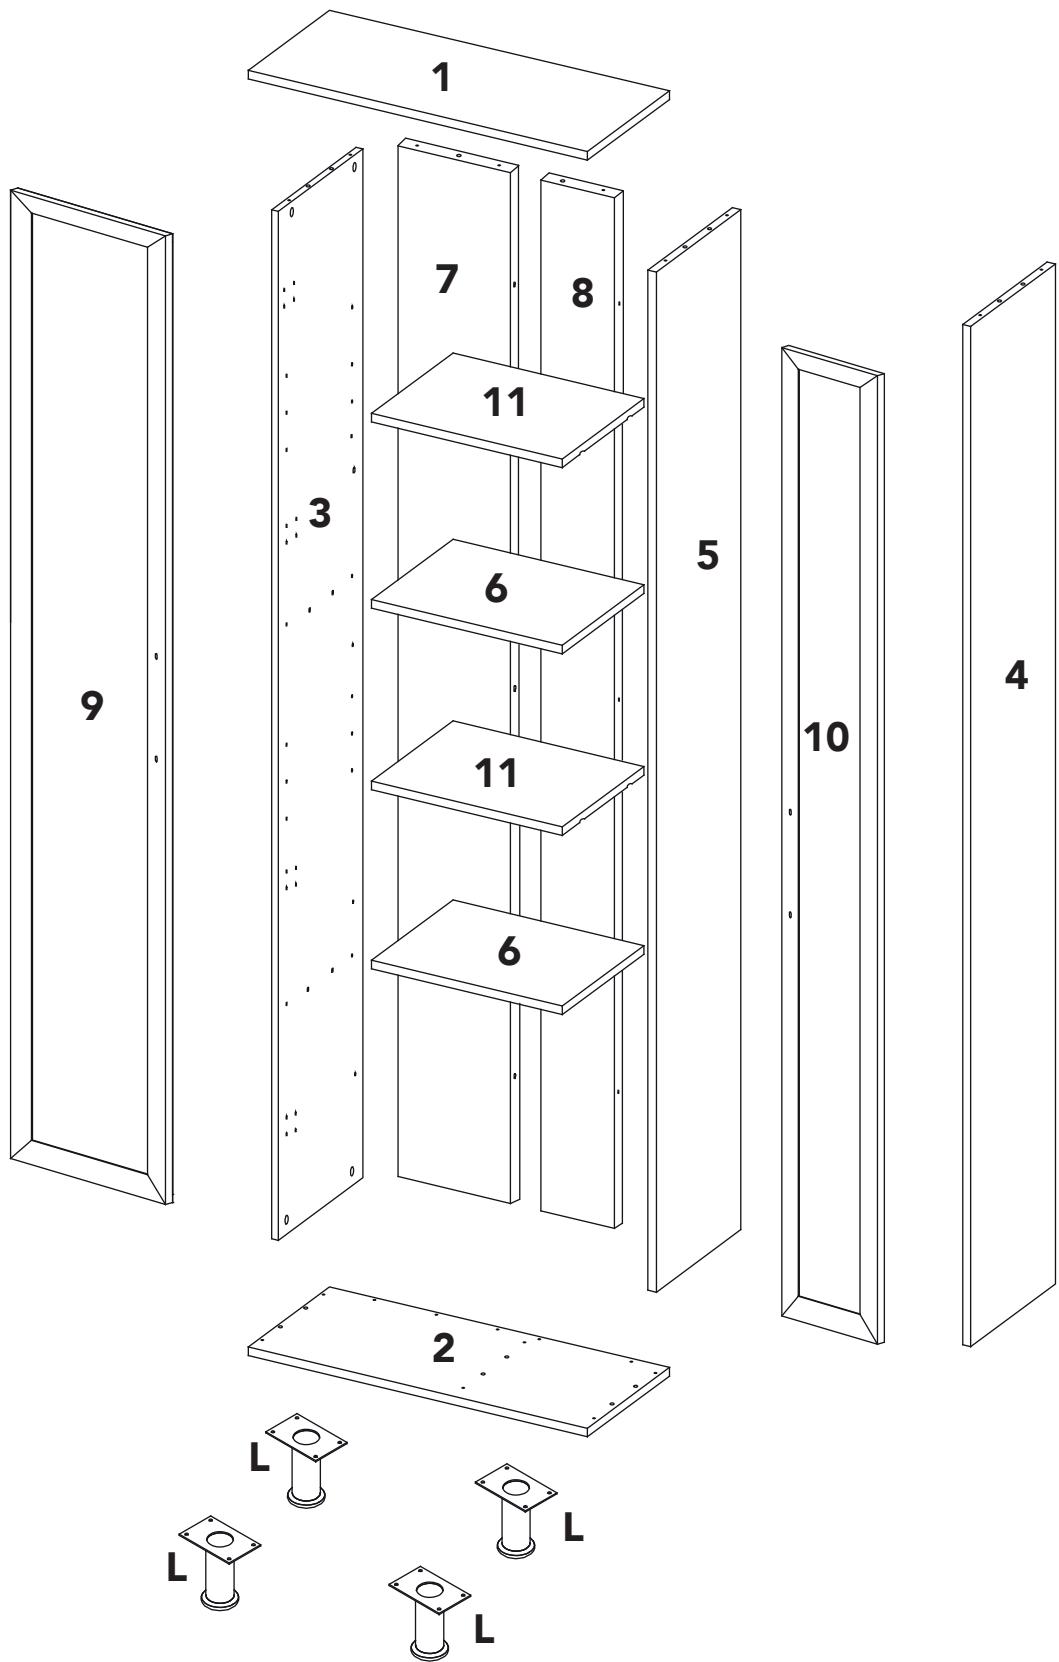

# Hardware List

    Item	Description	Thumbnail	Quantity
A	Door bumper		4
B	Cam lock Ø15x12mm		32
C	Cam bolt Ø6x34mm		32
D	Coated paper sticker		32
E	Wood dowel Ø8x30mm		33
F	Bolt Ø6x12mm		16
G	Hinge		8
H	Handle		2
I	Bolt Ø4x22mm		4
J	Screw Ø4x14mm		50
K	Hook		1
L	Foot		4

# Hardware List




Item	Description	Thumbnail	Quantity
M	Hex key		1
N	Shelf support		8
O	Screw Ø4x55mm		2
P	Screw Ø4x18mm		2
Q	Metal bracket		4
R	Anchor		2
S	Nylon strap		2

# Before You Begin Assembly


## Make Sure All Parts Are Present

Compare all pieces to the parts and hardware lists, and make sure you have all tools required for assembly.

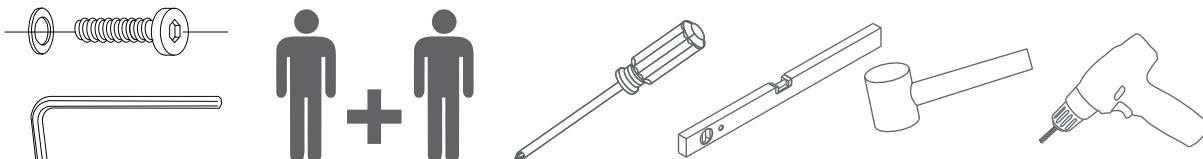

## Assemble in a Cleared Area

Place all parts from the box on the floor in front of you on a clean, dry, level surface to protect the product as it is being built.

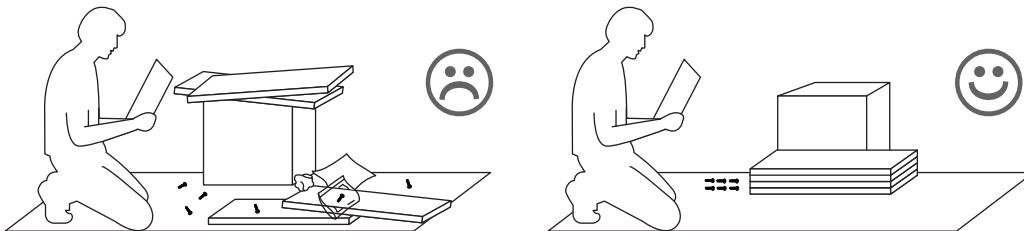


## Remove Packaging Materials

Place packing materials back in the box. Do not dispose of packaging materials until assembly is complete.



## Read Each Step Carefully

Make sure you understand each step. If you have any questions, contact the For LIVING® customer service centre at 1-877-483-6759 (toll free).

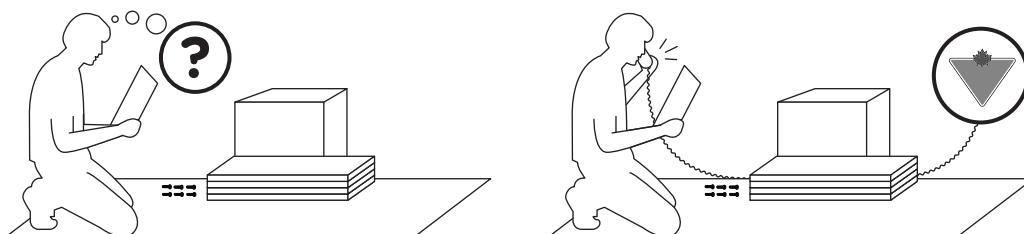


# Step-by-step Guide




**NOTE:** IT IS VERY IMPORTANT TO USE GLUE WITH DOWELS. EXCESS GLUE CAN BE WIPED OFF WITH DAMP CLOTH.

Insert the dowel at least half way by tapping lightly with a rubber mallet IF NECESSARY.

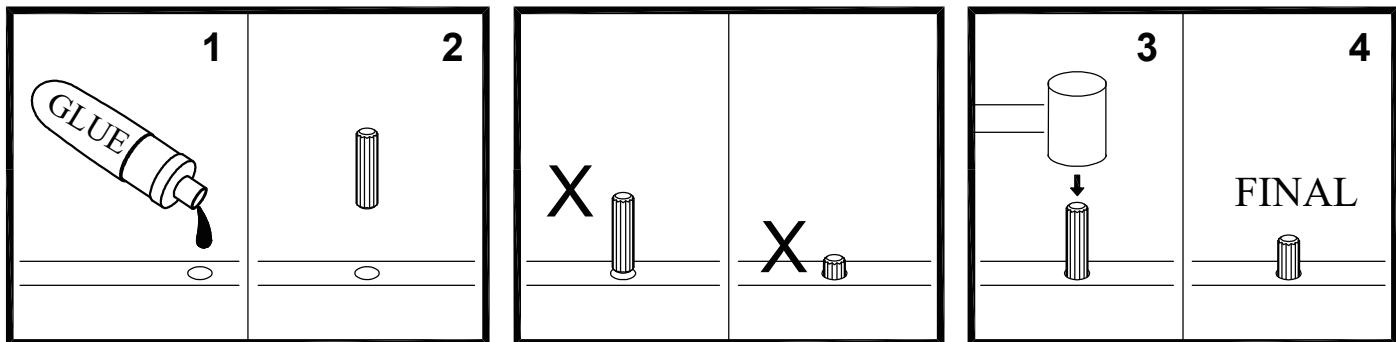

## CAM LOCK SYSTEM OPERATION

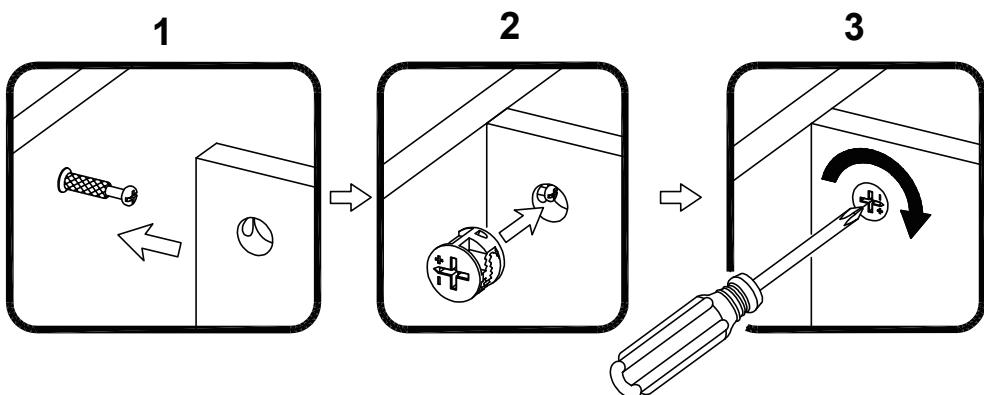

## HOW THE KNOCK DOWN (KD) ASSEMBLY SYSTEM WORKS

1. Screw the cam bolt into the pre-drilled threaded holes on the panel. Connect both panels together making sure cam bolt goes into the pre-drilled large hole on the end of panel that will accommodate the cam lock.
2. Insert the cam lock into the pre-drilled large hole on the panel. Make sure the arrow on the face of cam lock faces out and points towards cam bolt.
3. Take a cross-head screwdriver and rotate the cam lock clockwise to lock the cam bolt in place.


## SPECIAL NOTE

Please read the instruction sheets completely before assembly. Examine all packaging material before discarding carton. Remove all parts from carton and separate into groups as indicated on parts list. Please ensure all parts are included prior to assembly. Use of power tools to complete assembly is not recommended.

**You are now ready to assemble the KD unit.**

# Step-by-step Guide


## Step 1

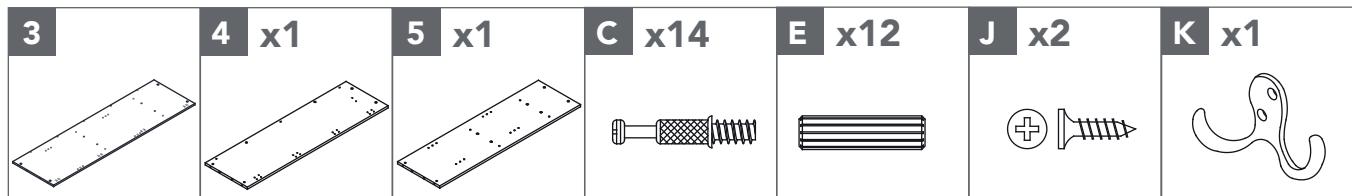

Attach 14 cam bolts (C) to left side panel (3), right side panel (4) and middle panel (5). Do not over tighten.

Attach 12 wood dowels (E) to left side panel (3), right side panel (4) and middle panel (5).


Attach hook (K) to right side panel (4) using two screws (J).

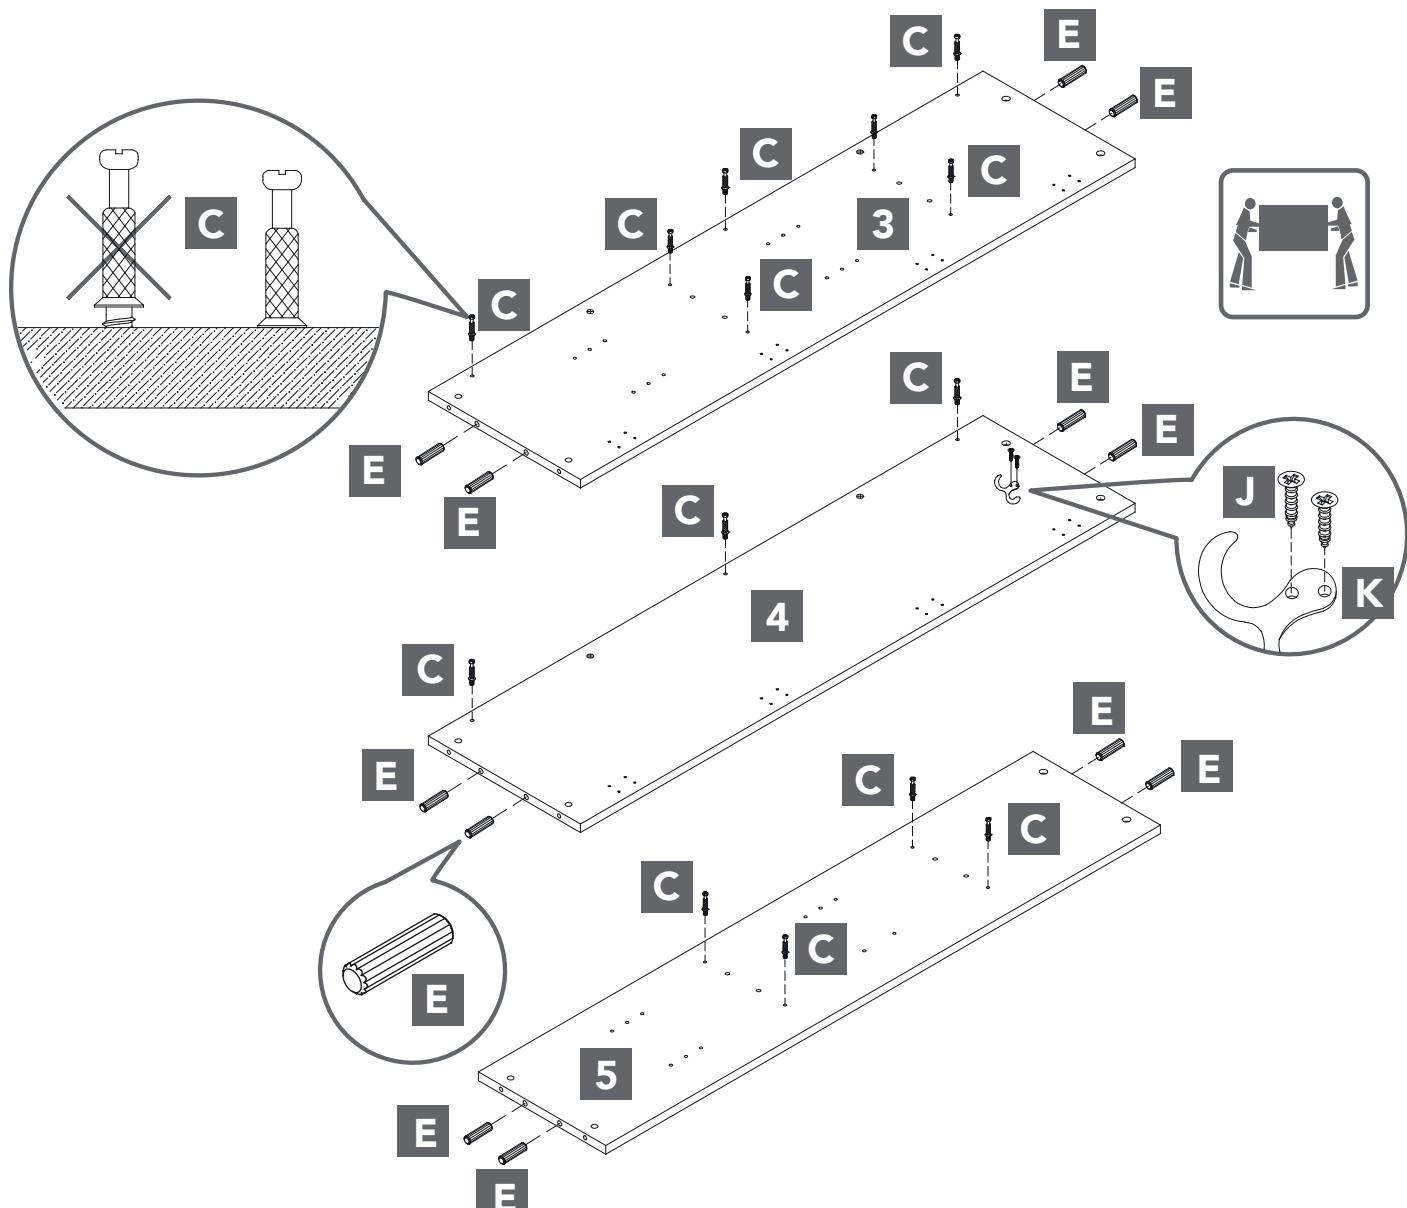


# Step-by-step Guide



## Step 2

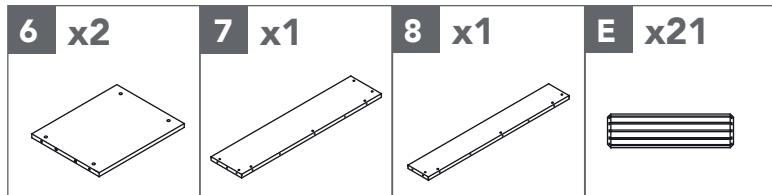


Attach 21 wood dowels (E) to two fixed shelves (6), left back panel (7) and right back panel (8).

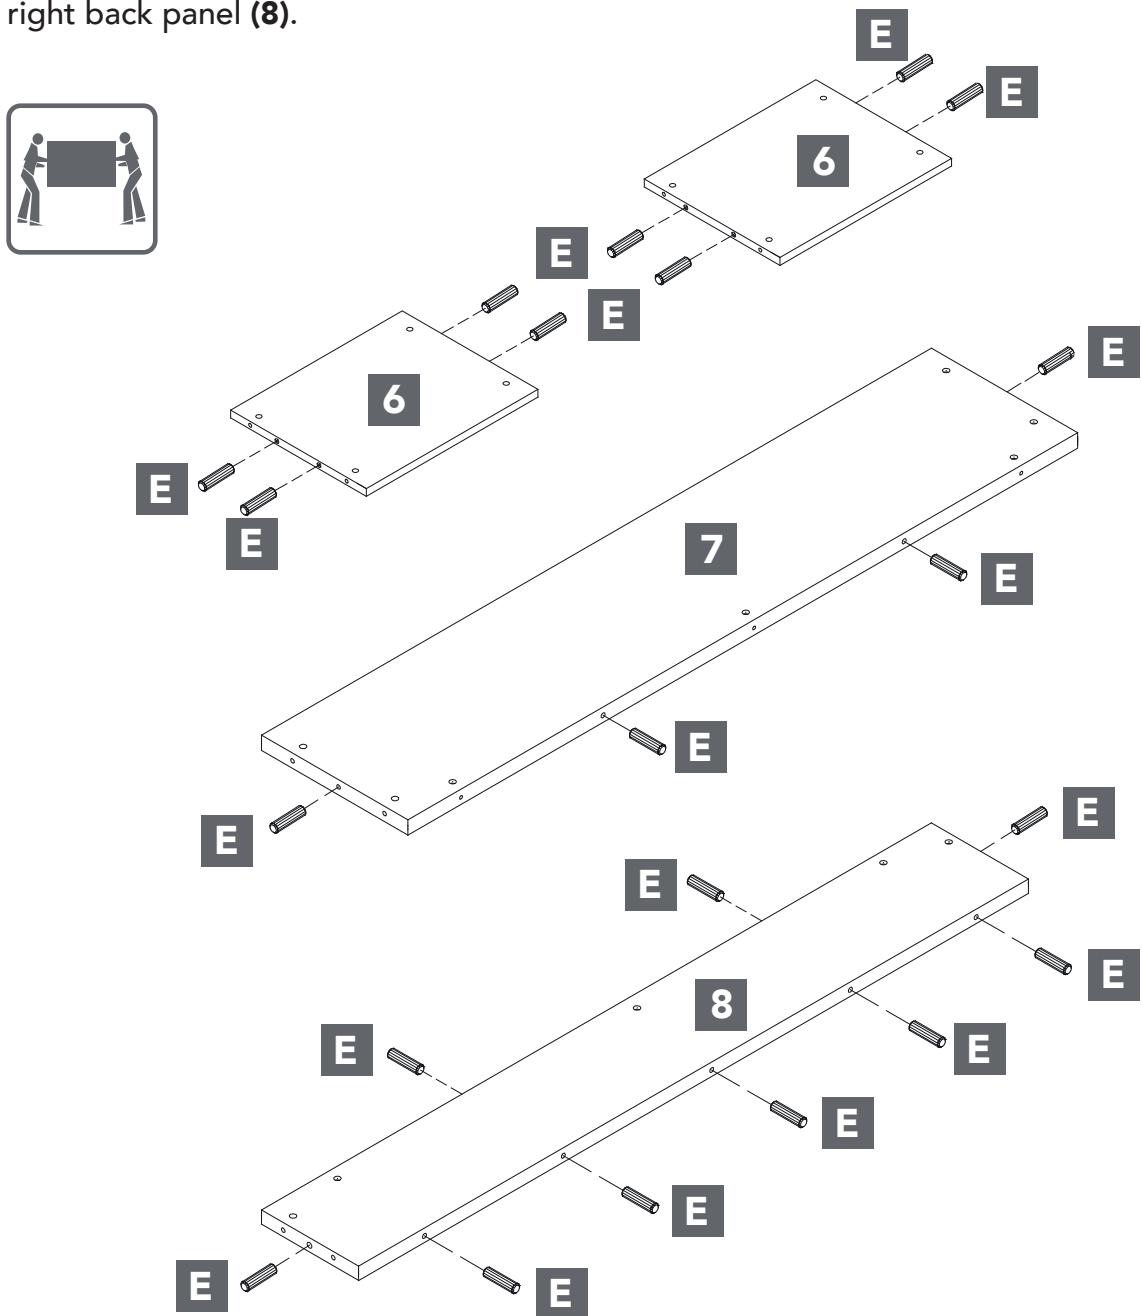


# Step-by-step Guide

## Step 3

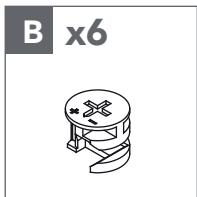

Attach left back panel (7) to left side panel (3) and right back panel (8) to right side panel (4) using six cam locks (B). Tighten cam locks (B).

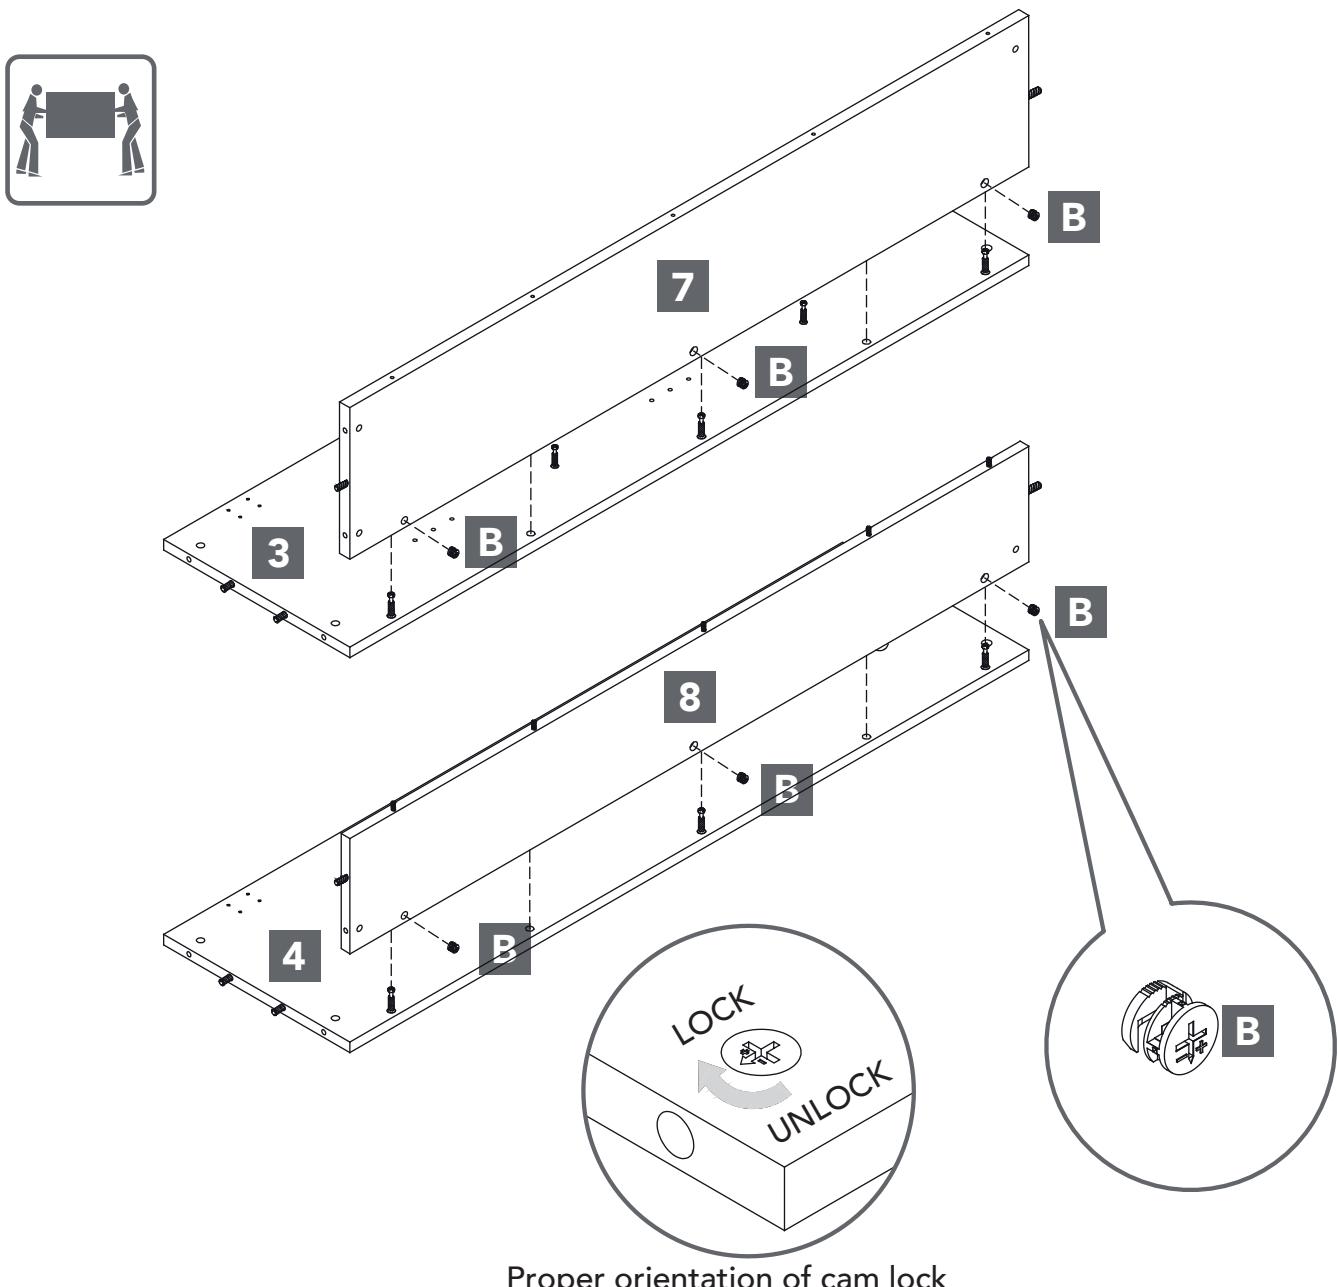


# Step-by-step Guide




## Step 4

Attach left back panel (7) and right back panel (8) together.

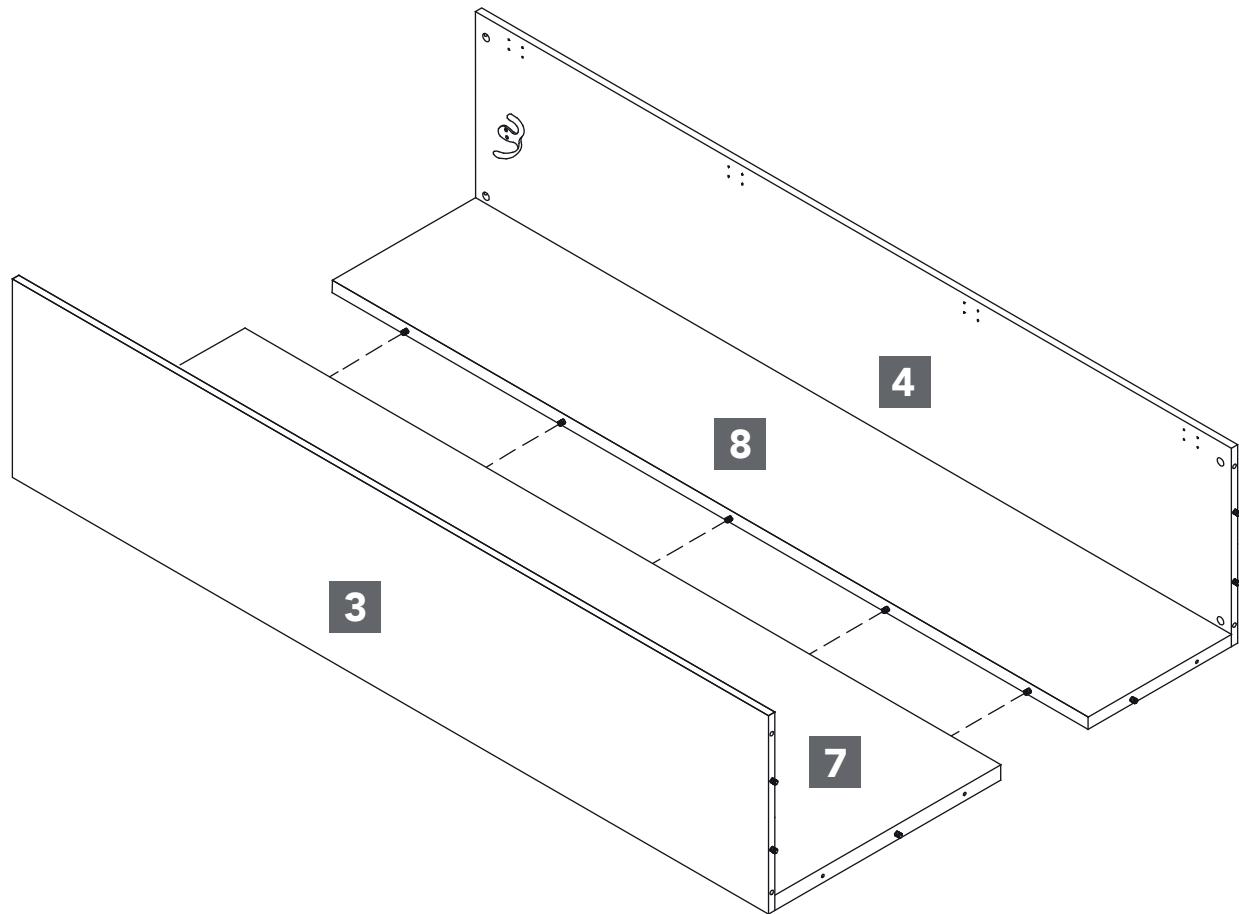


# Step-by-step Guide

## Step 5

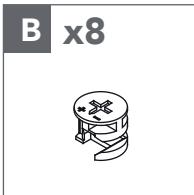

Attach two fixed shelves (6) to left side panel (3) using two cam locks (B) each.


Attach middle panel (5) to two fixed shelves (6) using four cam locks (B).  
Tighten cam locks (B).

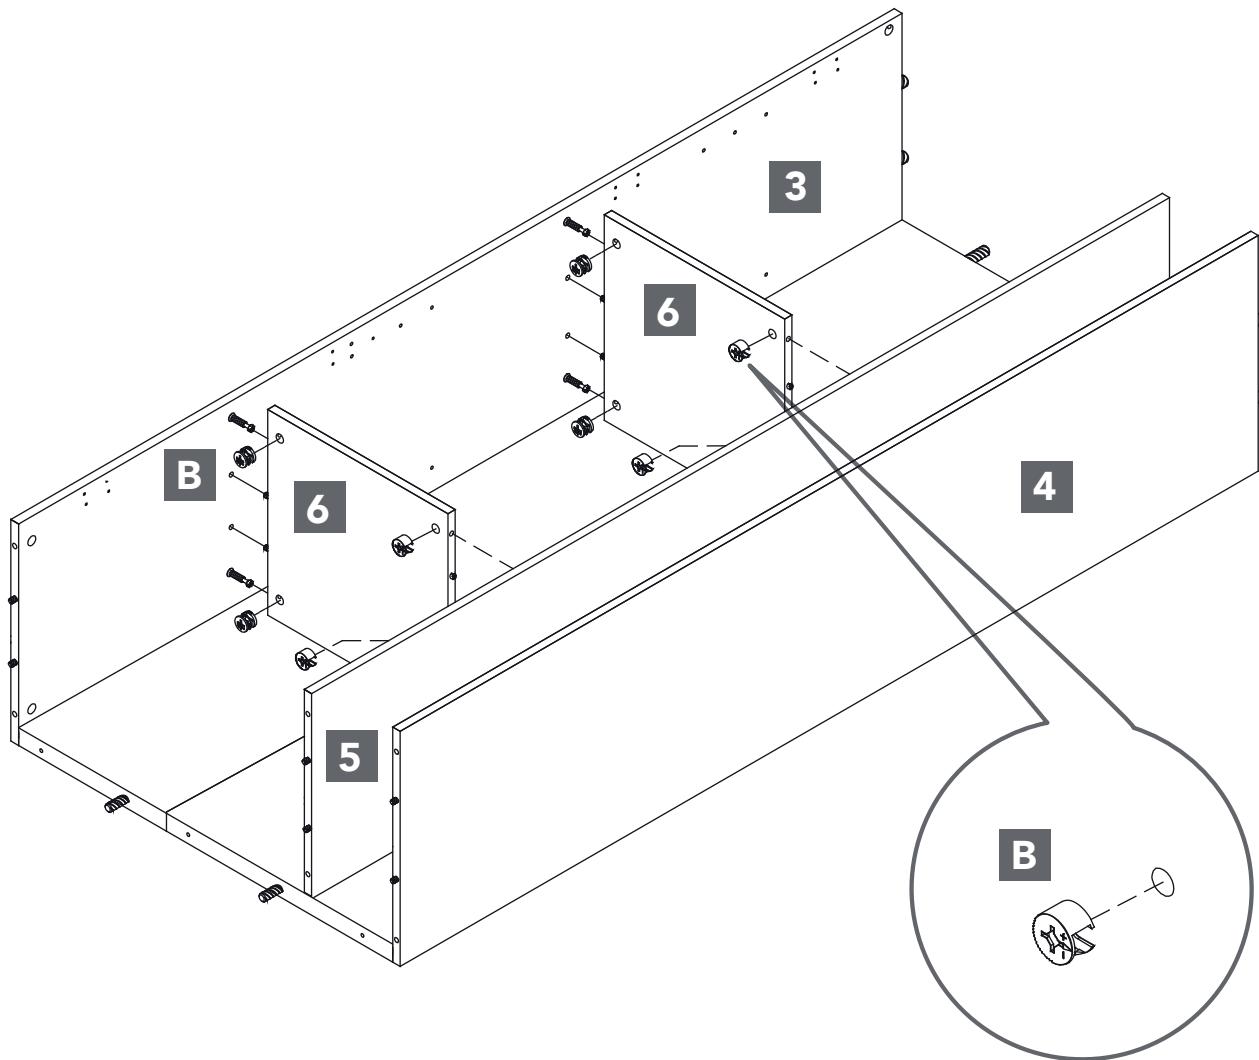


# Step-by-step Guide



## Step 6

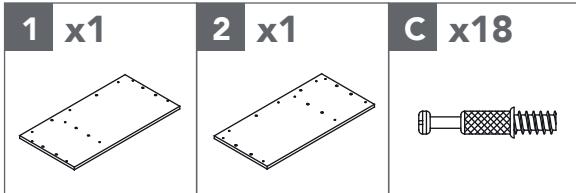


Attach 18 cam bolts (C) to top panel (1) and bottom panel (2). Do not over tighten.

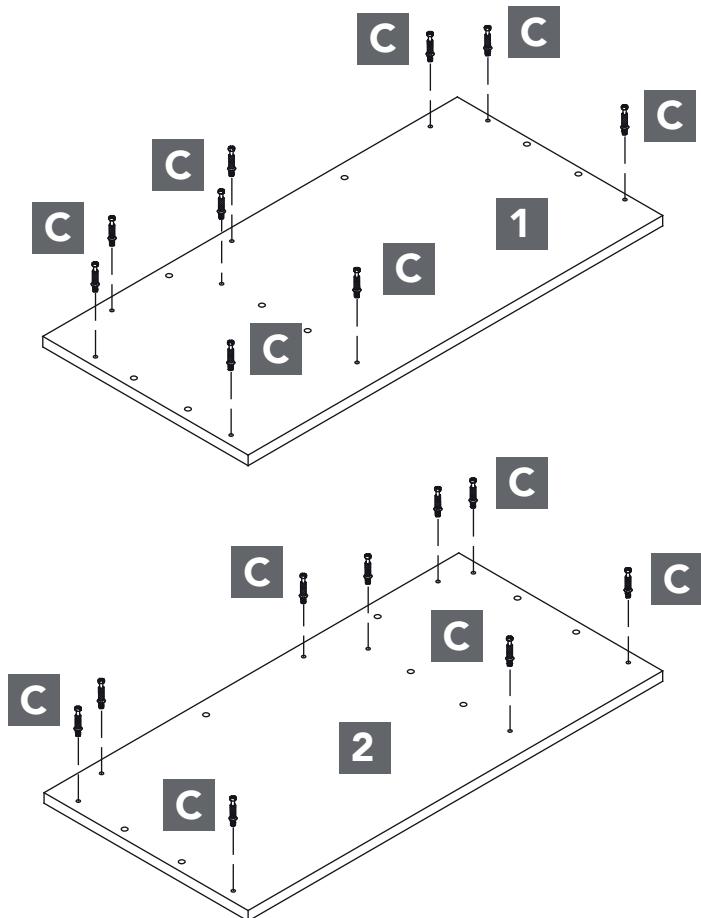


# Step-by-step Guide

## Step 7

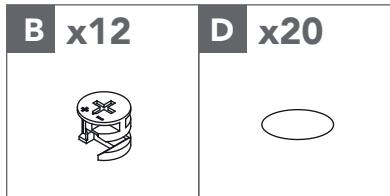

Attach top panel (1) and bottom panel (2) to left side panel (3), right side panel (4) and middle panel (5) using 12 cam locks (B). Tighten cam locks (B).


Cover all cam locks (B) using 20 coated paper stickers (D).

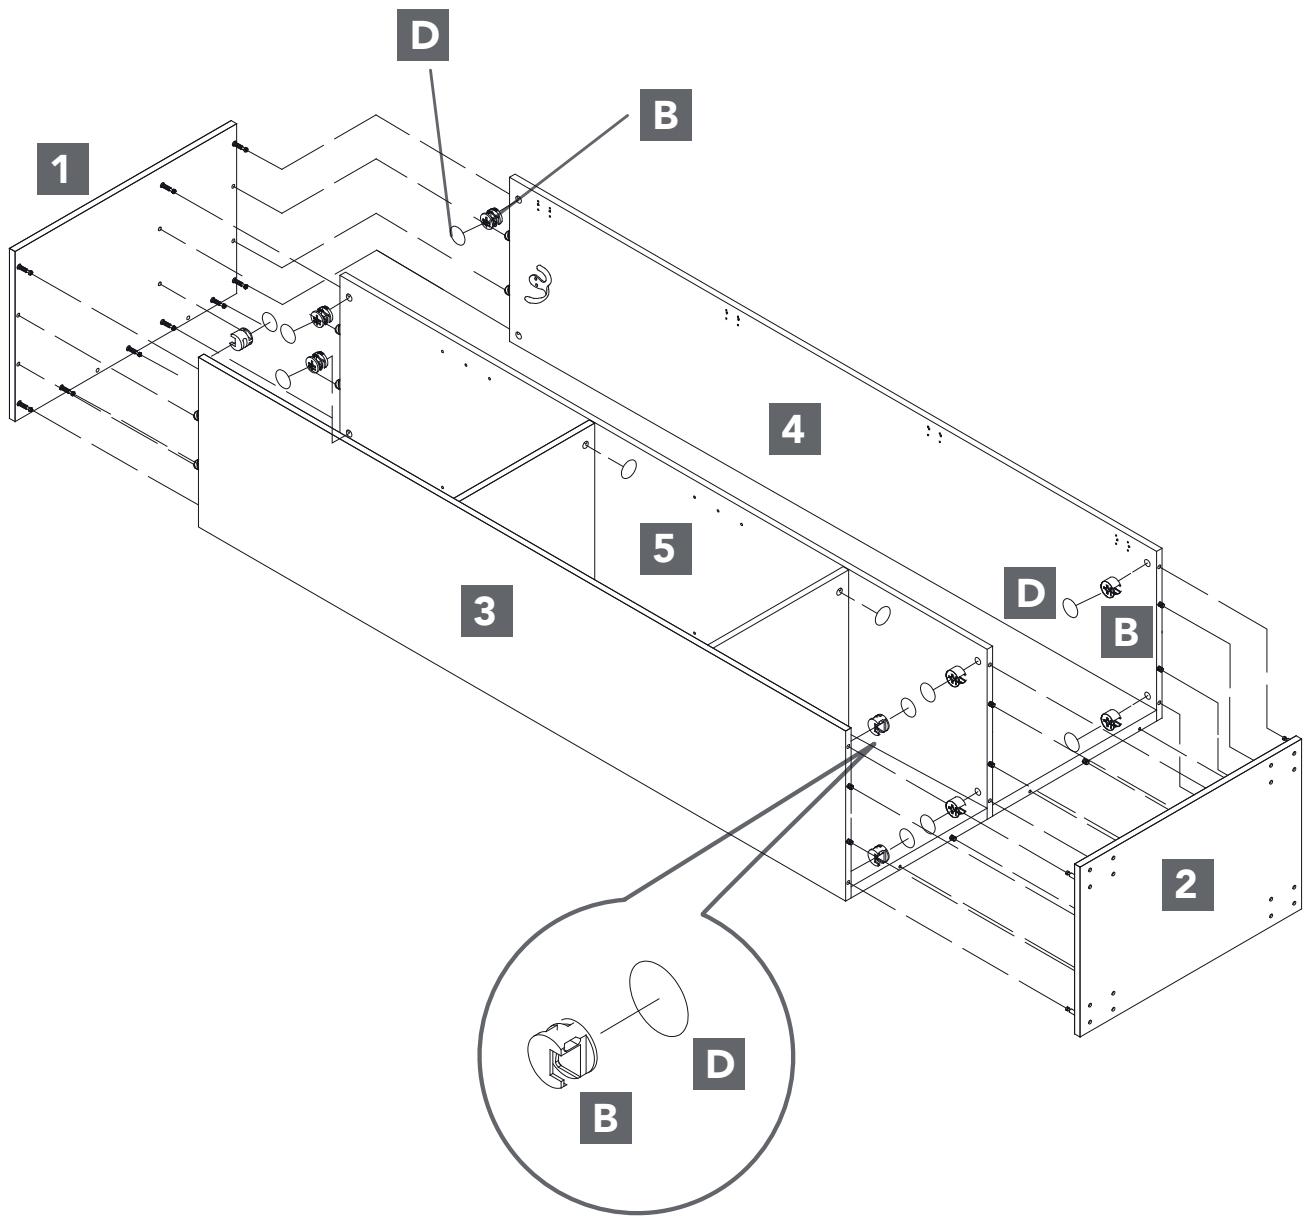

# Step-by-step Guide




## Step 8

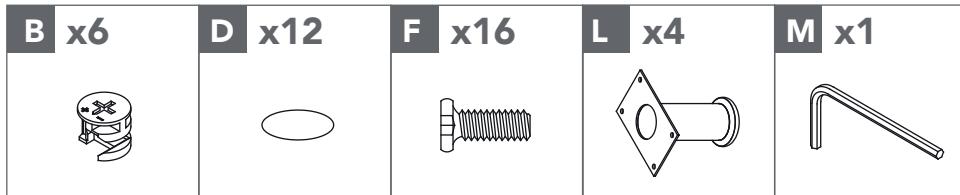

Attach 6 cam locks (B) to left back panel (7) and right back panel (8). Tighten cam locks (B).


Cover all cam locks (B) using 12 coated paper stickers (D).

Attach four feet (L) to bottom panel (2) using four bolts (F) each. Tighten bolts (F) using hex key (M).

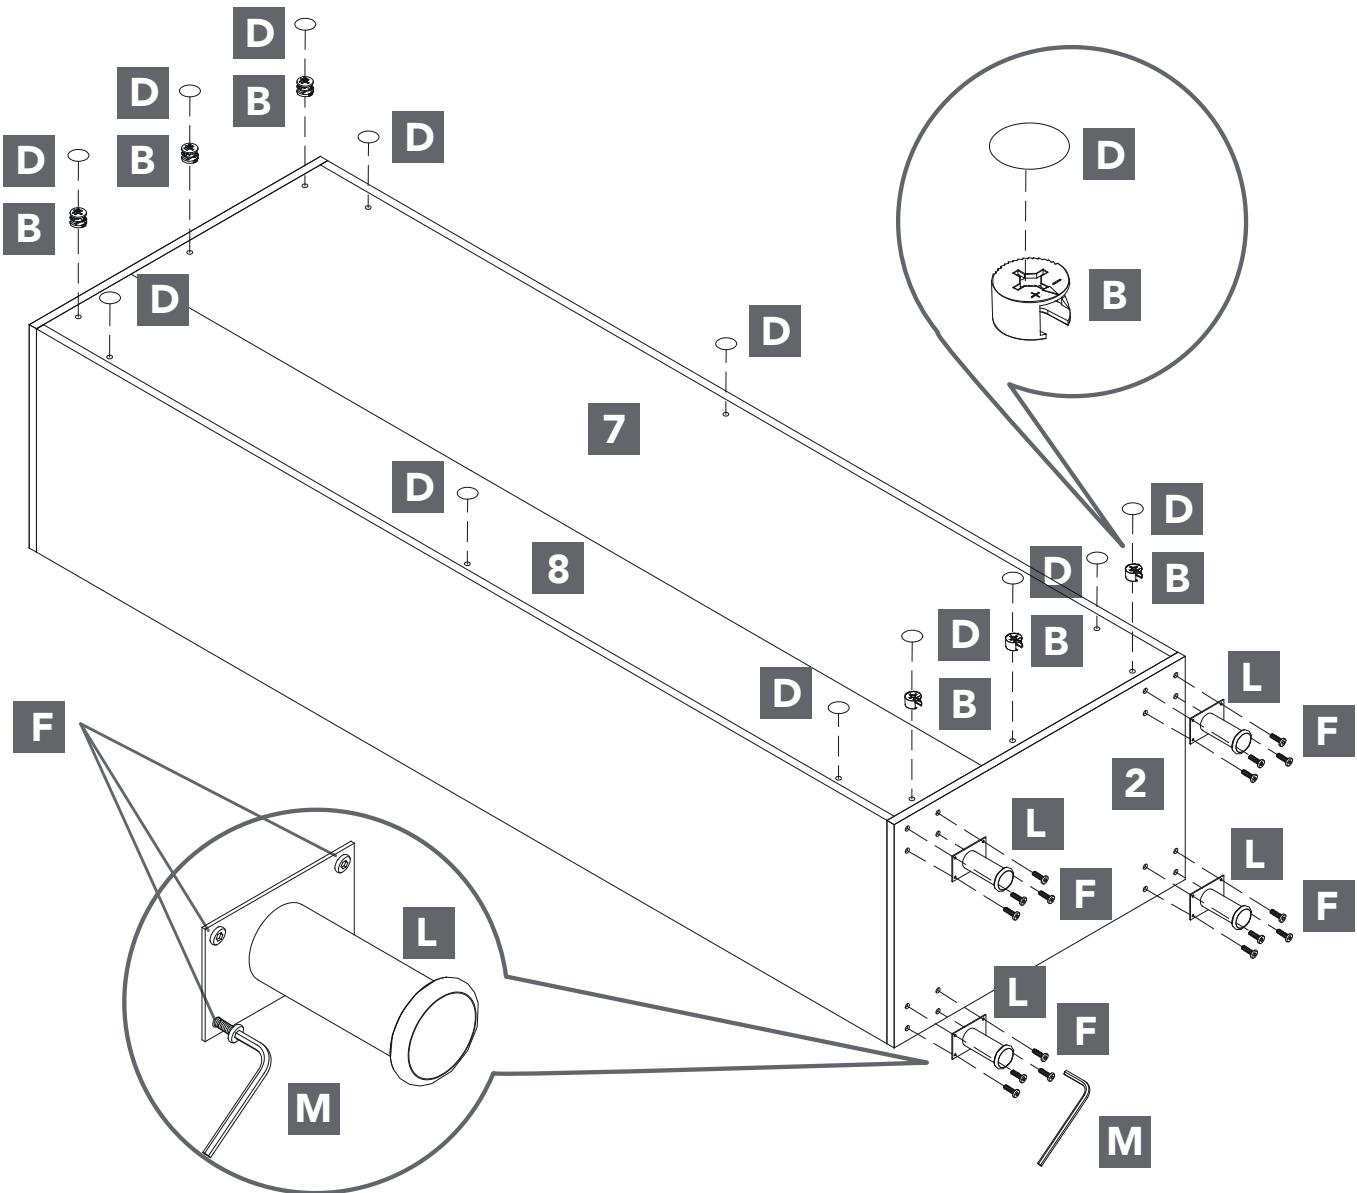

# Step-by-step Guide


## Step 9

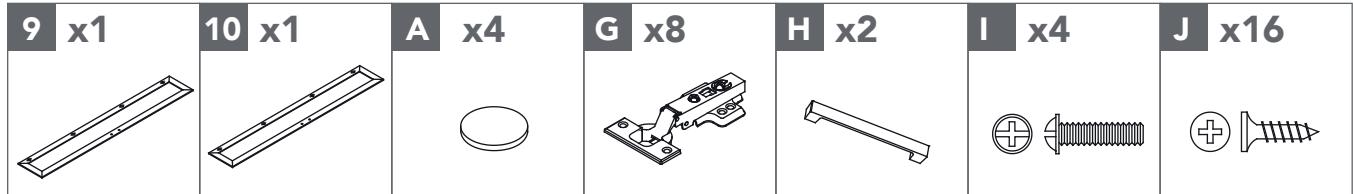

Attach four hinges (G) to left door (9) and right door (10) using two screws (J) each.

Attach handle (H) to left door (9) and right door (10) using two bolts (I) each.


Place four door bumpers (A) on the corners of left door (9) and right door (10) as shown.

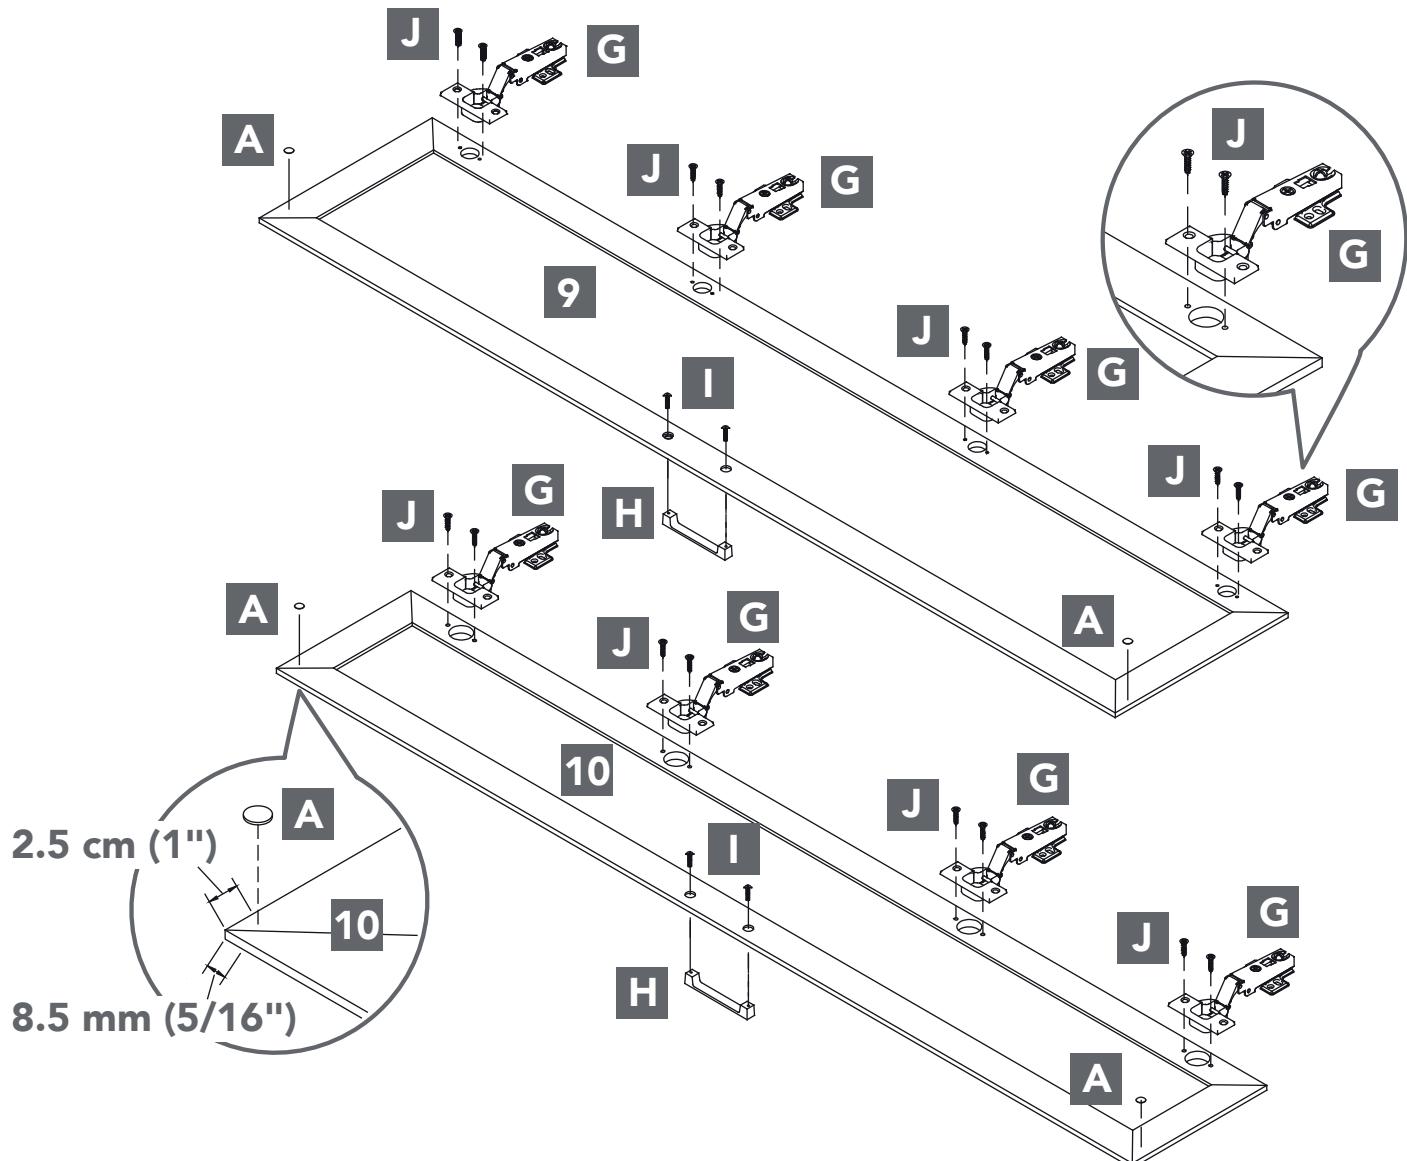


# Step-by-step Guide



## Step 10

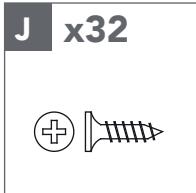


Attach left door (9) to left side panel (3) and right door (10) to right side panel (4) using 32 screws (J).

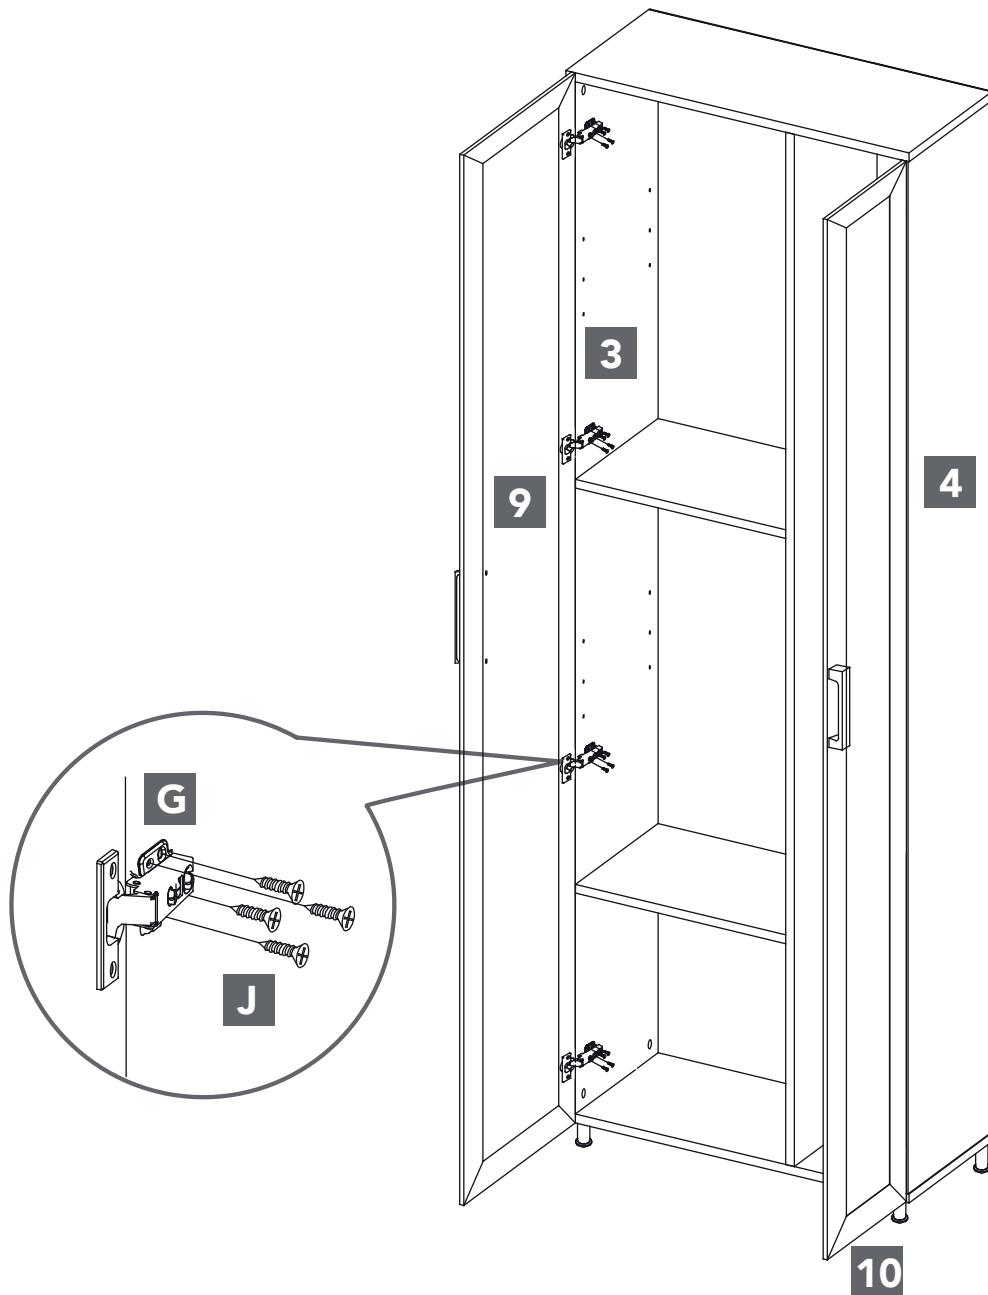

# Step-by-step Guide


## Step 11

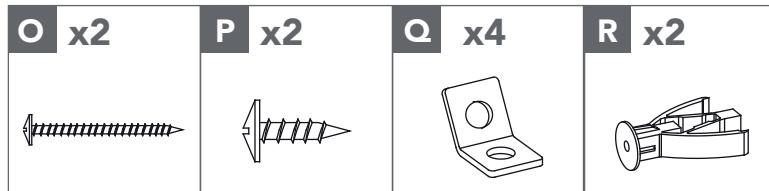

Pick your desired area of placement. Drill two small holes approximately 3/8" (9.5 mm) in diameter and approximately 2" (5 cm) deep. Use a level to make sure the two holes you drill are level. After you drill the holes, insert wall anchors (R) into wall.

Attach metal brackets (Q) to wall using screws (O).

Attach metal brackets (Q) to cabinet using screws (P).

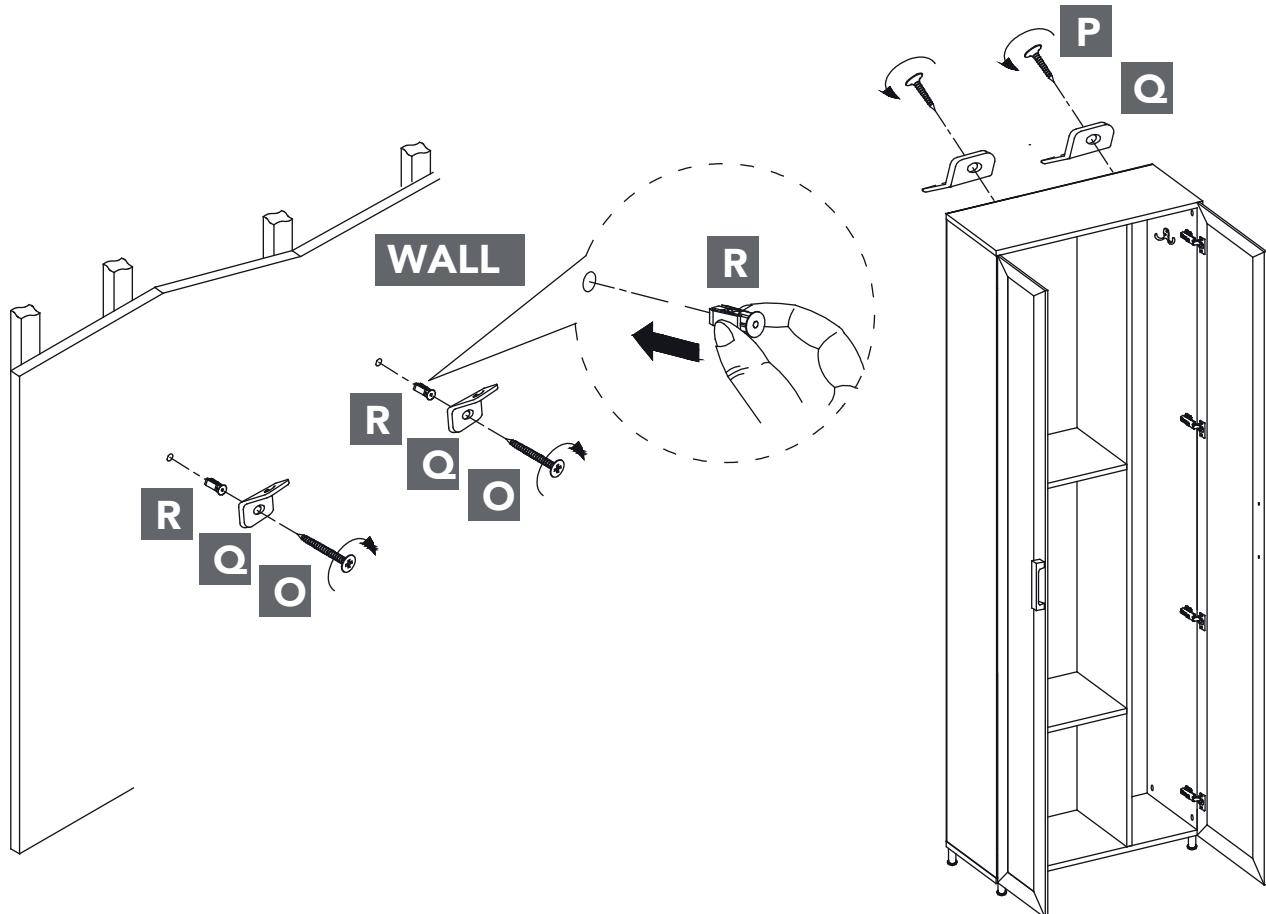

# Step-by-step Guide




## Step 12




Attach cabinet to wall using two nylon straps (S) as shown.

Note: The tipping restraint hardware included is for wooden stud wall construction. It must be attached to a wall stud. Depending upon your wall construction, different anchor hardware may be required. Please contact your local hardware store for assistance. Young children can be seriously injured by tipping furniture. You must install the tipping restraint hardware with the unit to prevent the unit from tipping, which can cause accidents or damage. The tipping restraints are intended only as a deterrent, they are not a substitute for proper adult supervision. The tipping restraints are not earthquake restraints.

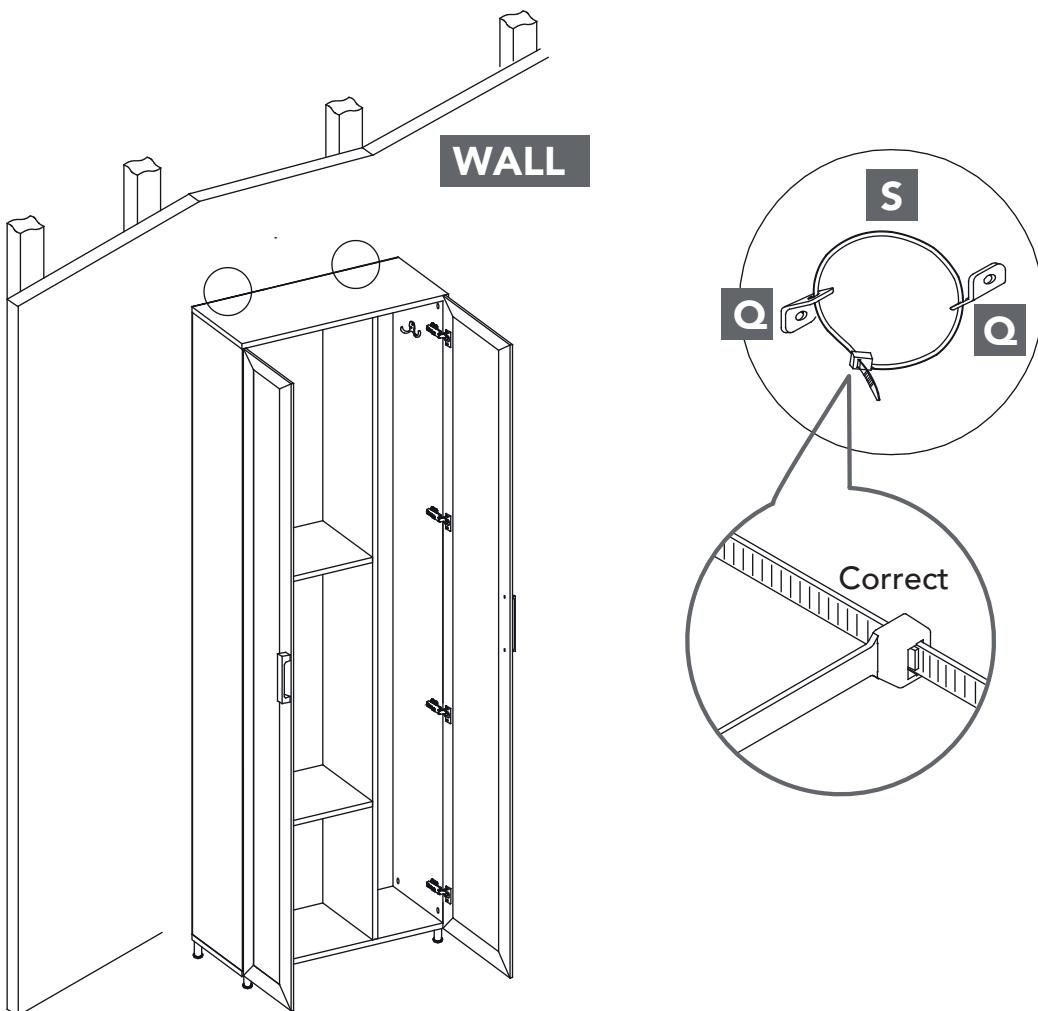


# Step-by-step Guide



## Step 13

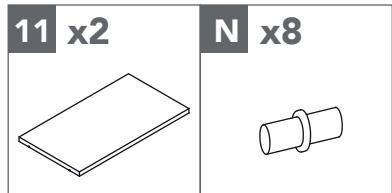


Insert eight shelf supports (N) into corresponding holes in left side panel (3) and middle panel (5), then place two adjustable shelves (11) as shown.

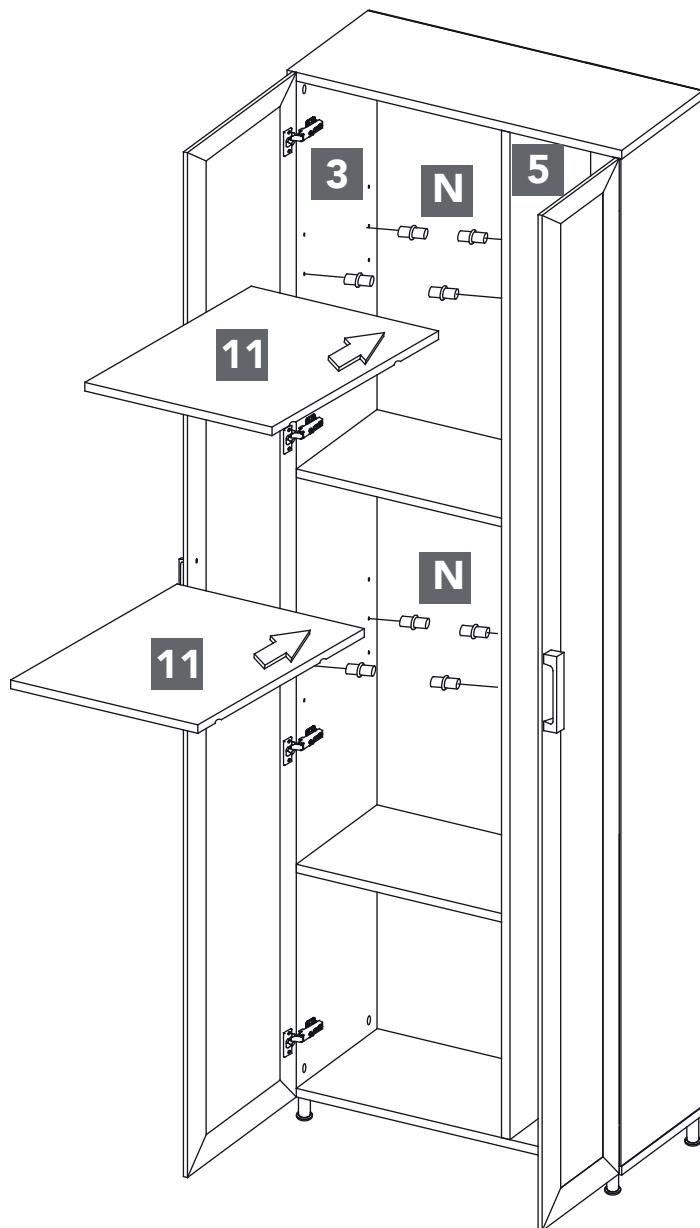


# Adjust Doors

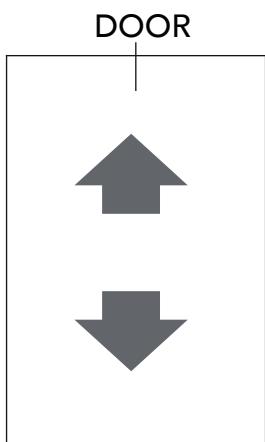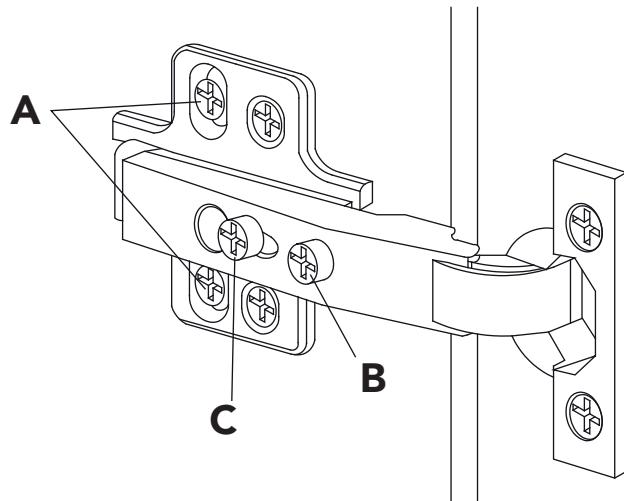

(front view)

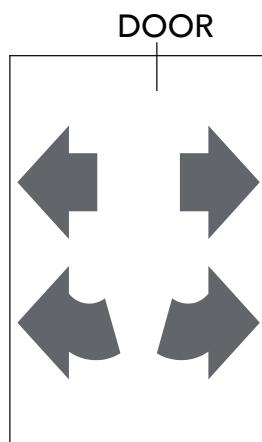

(front view)

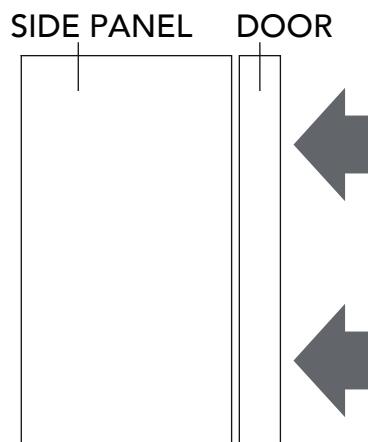

(side view)

If doors are not aligned:

Loosen "A" screws.  
Adjust door.  
Tighten "A" screws.

If there is a gap between doors:


Loosen "C" screw.  
Turn "B" to move door.  
Tighten "C" screw.

If there is a gap between door and side panel:


Loosen "B" and "C" screw.  
Adjust door.  
Tighten "B" and "C" screw.

# Adjust Levellers

Note: If your item is not level, put it on a hard surface, then adjust the levellers.

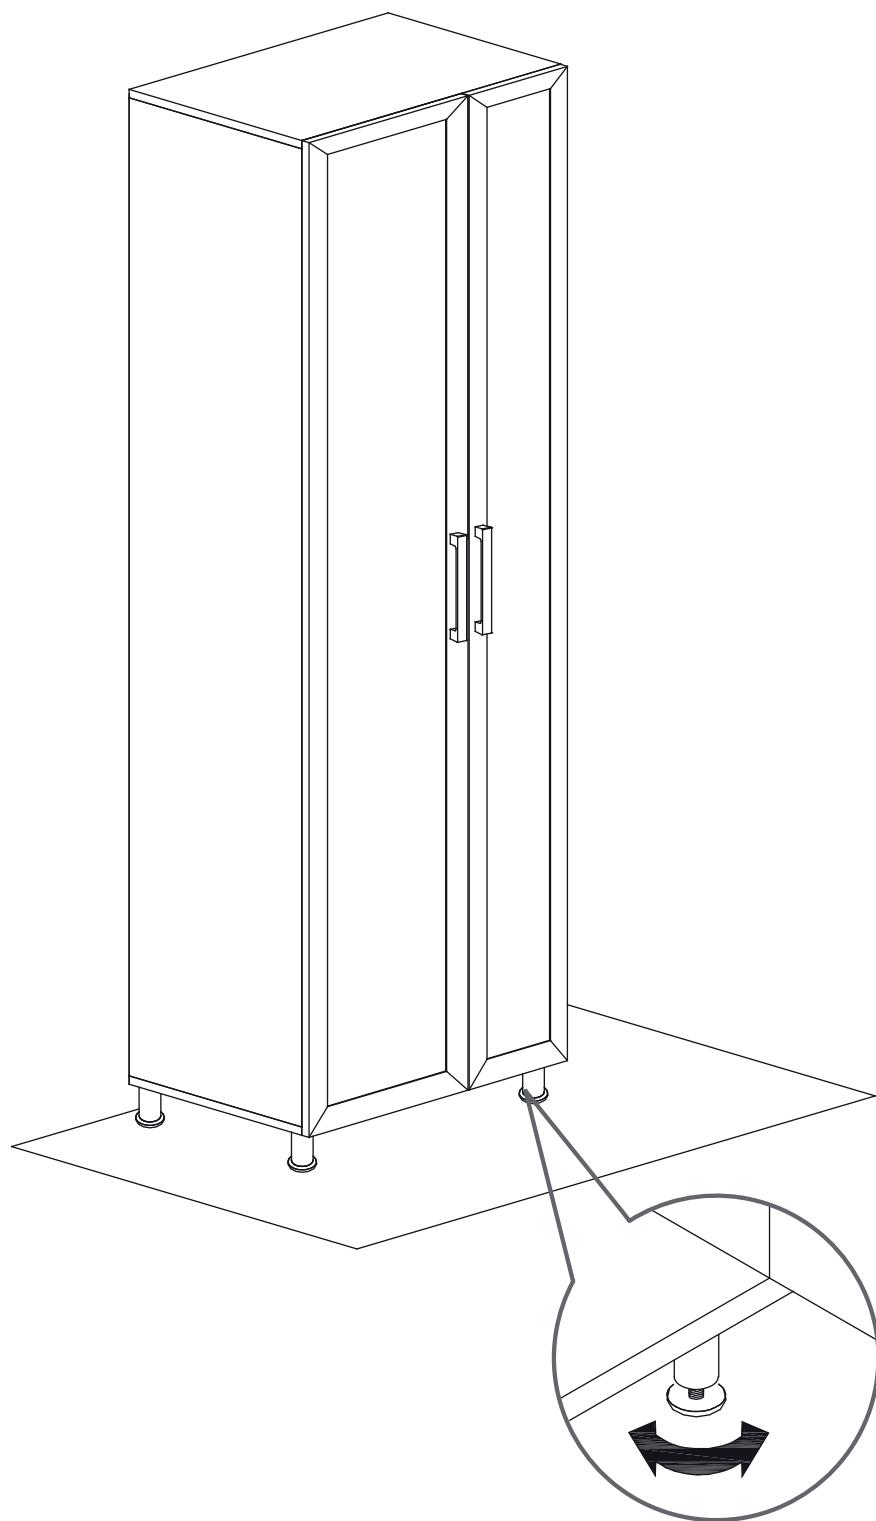

# Technical Data

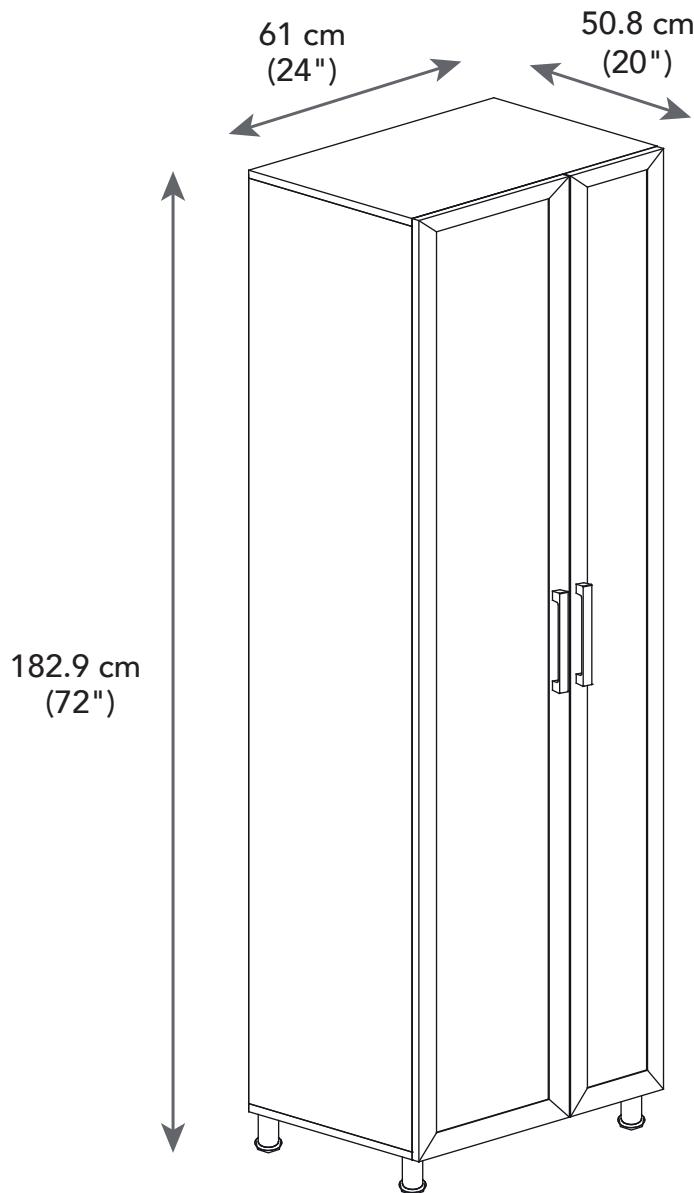

## Specifications

### Assembled Dimensions (W x D x H)

61x 50.8 x 182.9 cm

24 x 20 x 72"

### Assembled Weight

72.6 kg

160 lb 1 oz

### Maximum Weight Capacity

Top: 9 kg; Shelf: 6.8 kg; Hook: 4.5 kg

Top: 20 lb; Shelf: 15 lb; Hook: 10 lb

# Assembly Troubleshooting

Need help?

Give us a call! We're here for you.

Toll-free: 1-877-483-6759



Before returning your  
product to store



Call us;  
we can help!

If you have questions regarding your product  
or require warranty assistance, please call our  
customer service helpline.

## Caring for Your Item

- 1** Check all nuts and bolts periodically for tightness. When required, tighten them again.
- 2** Always keep children under close supervision while they are using or around this product. Never leave children unattended.
- 3** For household use only.
- 4** Wipe clean with damp cloth.
- 5** Always use unit with tip-restraints installed as per instructions.

# Warranty



## 1-Year Limited Warranty

This For LIVING® product carries a one (1) year warranty against defects in workmanship and materials. Trileaf Distribution agrees to replace the defective product free of charge within the stated warranty period, when returned by the original purchaser with proof of purchase. This product is not guaranteed against wear or breakage due to misuse and/or abuse.

## Model No. 168-0206-4

Made in China

Imported by Trileaf Distribution Trifeuil Toronto, Canada M4S 2B8