
CANVAS

AURORA 10 x 12' GAZEBO

PRODUCT NO. 188-1360-0

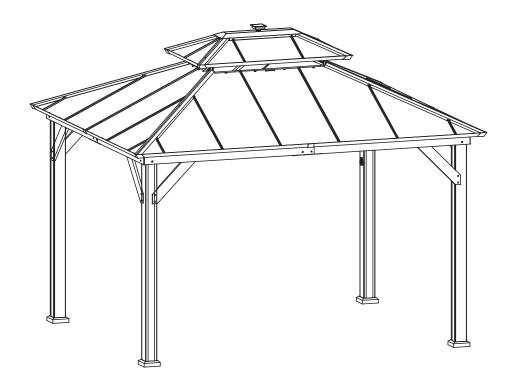

ASSEMBLY INSTRUCTIONS



HAVING TROUBLE? TOLL-FREE:

1-888-670-6684

IMPORTANT: Please read this manual carefully before beginning assembly of this product. Keep this manual for future reference.







To the trend seekers and design mavens,


CANVAS™ is the furniture and décor brand
that helps you imagine and create a space
you can be proud of.

That's because **CANVAS™** offers style with ease with products that are **made for real life** and Canadian inspired.

We would love to hear from you and welcome your thoughtful feedback. Visit our website at **canadiantire.ca** to tell us about your experience, and share your photos with us using **#myCANVASstyle**.

Show us how you bring **CANVAS™** products to life. We can't wait to see!

DIMENSIONS

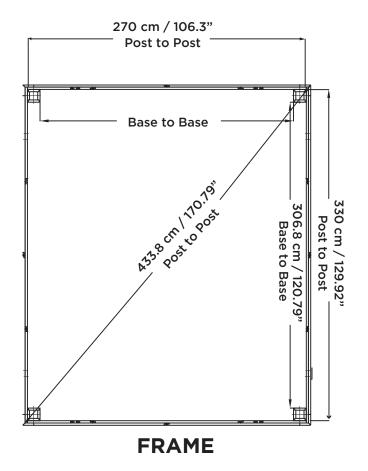

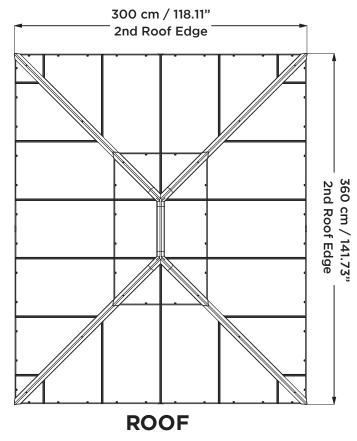


TABLE OF CONTENTS

Important Safety Instructions Parts List	4 7
Before You Begin Assembly	13
Step-by-step Guide	15
Technical Data	50
Caring for Your Item	51
Troubleshooting	52
Limited Warranty	53

IMPORTANT SAFETY INSTRUCTIONS

CAUTION!



- Proper placement of your gazebo is essential.
 Do not place the product underneath electrical lines.
- Keep children away during assembly. This product contains small parts which can be swallowed by children.
- Keep fingers away from places where they can be pinched or trapped.
- Do not attempt to assemble the gazebo if any parts are missing.
- Wood is NOT flame-resistant and will burn.
 Grills, fire pits and chimneys are a fire hazard if placed too close to wooden structures. Consult user's manual of the grill, fire pit or chimney for safe distances from any flammable materials.

IMPORTANT: Wood components are manufactured with cedar wood which is coated with a water-based stain. Knots and small checks (cracks) are naturally occurring and do not affect the strength of the product. It is advisable to annually maintain the wooden parts of the gazebo with a coat of water-based water repellent sealant or outdoor wax or oil to protect & enhance the beauty of the wood.

- This product is intended for outdoor use only.
- The product should be assembled on a flat stable surface.
- Do not assemble the gazebo on unstable surfaces.
- Ensure the location and clearance of your gazebo is acceptable.

 The gazebo must be anchored with stakes into the ground for added safety. It is recommended that it should not be permanently attached to a concrete floor or platform.
- This gazebo is not to be regarded as part of a building/house structure. The gazebo is to be anchored onto the ground for added safety. Do not assemble the gazebo onto soil/earth ground. It is best to have the gazebo built onto a wooden deck or concrete base for stability. If it is to be built onto a wooden deck over the ground, do ensure that the deck over the ground has a strong foundation. It is advisable to use appropriate floor plugs (not provided) to anchor the gazebo onto the wooden deck or concrete base.
- Some structures may require two or more people to install safely. Check for underground utilities before digging or driving stakes into the ground.

IMPORTANT SAFETY INSTRUCTIONS

- During installation, follow all safety warnings provided with your tools, and use safety glasses.
- In case you set up more than one gazebo, keep a minimum distance of 3 m (10') between the gazebos.
- Arrange the necessary manpower when assembling or moving the product.
- Some parts may contain sharp edges. Wear protective gloves and glasses if necessary.
- Keep children and pets away while setting up the gazebo.
- Check all nuts and bolts periodically for tightness. When required, tighten them again.
- Repairing and replacing parts should be done by a qualified technician.
- The gazebo is intended for decorative and shade purposes only, and is not designed to withstand harsh weather, including high winds, rain and snow.
- If the product is not being used for long periods of time (e.g., winter), it should be stored in a clean, dry environment.
- Do not put a liquid-propane or wood-burning firepit or fireplace inside the product.
- Do not climb or place heavy objects onto the gazebo roof.
- Retain the original packaging to store and protect the gazebo during the winter months.
- •Do not use or enter the gazebo if any of the following conditions exist:
- -Visible movement of supports, roofing panels or a sagging roof;
- -Unusual noise from the gazebo:
- -Deformed roof panels:
- -Damaged or missing bolts/fasteners.
- •Please check your HOA and local government agencies prior to purchasing and assembling gazebos. These local organizations may require permits and may have specific requirements for installation.
- Maintain your instruction manual for future reference.
- Warranty: Please retain you receipt for proof of purchase.

IMPORTANT SAFETY INSTRUCTIONS



Let us help you! DO NOT RETURN YOUR PRODUCT TO THE STORE. CALL US FIRST! 1-888-670-6684


If you have questions regarding your product, require warranty assistance, or have damaged or missing parts, please call our customer service toll-free helpline. Contact us for assistance; we're here to help.

IMPORTANT: Please read and understand this manual before any assembly. Before beginning assembly of product, make sure all parts are present. Compare parts with packaging contents list. If any part is missing, or if you have any questions, contact the service centre at 1-888-670-6684 (toll free).

When assembling wooden parts, do not overtorque the bolts to avoid splitting the wood. See image illustration.

Place all parts from the box in a cleared area and position them on the floor in front of you. Remove all packing materials and place them back into the box. Do not dispose of the packing materials until assembly is complete. Read each step carefully before beginning any assembly and make sure you understand each step. If you are missing a part, please call our toll-free number for assistance: 1-888-670-6684.

Needed for assembly: (The following tools are not included)

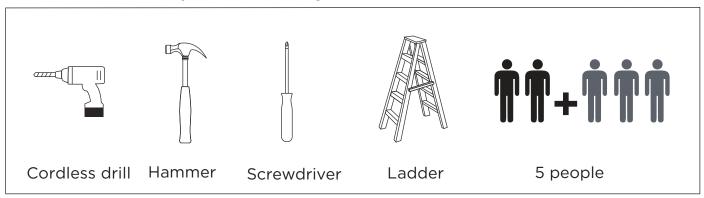

ITEM	DESCRIPTION	THUMBNAIL	QUANTITY
W1 P00020086803	Post		4
W2 P00040166003	Left Cross Beam (Short Side)	::	2
W3 P00040166103	Right Cross Beam (Short Side)	• • •	2
W4 PO0040165803	Left Cross Beam (Long Side)		2
W5 PO0040165903	Right Cross Beam (Long Side)	:	
W6 PO05000320	Support Bar 1	<u>(· · · · · · · · · · · · · · · · · · · </u>	4
W7 P005000321	Support Bar 2	⟨.·/·››	4
A P00610026905	Post Base Cover		4
B P00010026503	Post Base		4
c P00220042605	Cross Beam Cap		4
D P00050189705	Middle Beam Connector		4
E P00050210403	Rafter Connector		4
F1 P00050210503	Large Roof Short Frame	<u> </u>	2

ITEM	DESCRIPTION	THUMBNAIL	QUANTITY
F2 P00050210603	Large Roof Long Frame		≥ 2
F3 P00050210703	Large Roof Corner Frame		4
G1 P00060290403	Large Roof Rafter =		4
G2 P00060290503	Large Roof Middle Beam		4
G3 P00060322601	Small Roof Rafter		4
G4 P00060322701	Small Roof Short Panel Flashing (Upper		2
G5 P00060322801	Small Roof Long Pane Flashing (Upper)		a 2
G6 P00600005701	Lights	1	4
P6 P00050236001	Small Roof Connector		1
P7 P00580015401	Hook		1
L1 P00060322901	Small Roof Short Pane Flashing (Lower)	اج	2
L2 P00060323001	Small Roof Long Pane Flashing (Lower)		 2
L3 P00060290903	Large Roof Short Panel Flashing 1		=== 2

ITEM	DESCRIPTION	THUMBNAIL	QUANTITY
L4 P00060291003	Large Roof Short Panel Flashing 2		2
L5 P00060291103	Large Roof Long Panel Flashing 1		=== 2
L6 P00060291203	Large Roof Long Panel Flashing 2		2
M1 P00070159001	Small Roof Short Roof Panel		2
M2 P00070159101	Small Roof Long Roof Panel		2
N1 P00080053201	Small Roof Rafter Cap		4
N2 P00080049503	Large Roof Rafter Cap		4
P1 P00090023501	Small Roof Cover		1
P2 P00560062601	Solar Panel Fixed Rir	ng 🛱	1
P3 P00760028201	Power Supply		1
P4 P00760028101	Solar Panel		1
P5 P00760029901	Line Stockpile		12
Q1 P00060291303	Large Roof Short Small Beam		4


ITEM	DESCRIPTION	THUMBNAIL	QUANTITY
Q2 P00060291403	Large Roof Long Small Beam		⊒ 4
R1 P00570054804	Left Short Mosquito Netting Rod		2
R2 P00570054904	Right Short Mosquito Netting Rod		2
R3 P00570055006	Left Long Mosquito Netting Rod	e	2
R4 P00570055106	Right long Mosquito Netting Rod		2
S1 P00070139203	Large Roof Middle Roo Panel (Long Side)	of	2
\$2 P00070139303	Large Roof Left Large Roof Panel		4
S3 P00070139403	Large Roof Right Large Roof Panel		4
S4 P00070139503	Large Roof Left Middle Roof Panel		4
S5 P00070139603	Large Roof Right Middle Roof Panel		4
\$6 P00070139703	Large Roof Left Small Roof Panel		4
S7 P00070139803	Large Roof Right Small Roof Panel		4
T P00760028001	Solar Remote Control		1

HARDWARE LIST

ITEM	DESCRIPTION	THUMBNAIL	QUANTITY
H1 H100010047	Bolt M6*20		2 05 + 11 Spare
H2 H100010059	Bolt M6*45		12 + 1 Spare
H3 H100040020	Bolt M8*30		16 + 1 Spare
H4 H040010004	Nut M6		1 + 1 Spare
H5 H100010179	Bolt M10*165 _○	DE SE SECULOS DE CONTROLOS DE CO	8 + 1 Spare
H6 H030071111	Screw ST4.8*25		56+3 Spare
H7 H030050058	Screw ST4.8*30		48 + 3 Spare
H8 H030030013	Screw ST8*35		32 + 5 Spare
H9 H030010131	ST9.5*65	<i>,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,</i>	8 + 1 Spare
H10 HO50080007	Flat Washer M8		32 + 2 Spare
H11 H050080008	Flat Washer M10		16 + 1 Spare
H12 H040050026	Nut M10		8 + 1 Spare
H13 H040090004	T-Nut M8*8		16 + 1 Spare


HARDWARE LIST

ITEM	DESCRIPTION	THUMBNAIL	QUANTITY
H14 H990040012	Bolt M6*15		12 + 1 Spare
H15 H090990002	M3 Drill ←		2 + 0 Spare
HS H070010003	Stake Φ8*180 (=		8 + 0 Spare
HW1 HO90010017	Wrench M6		2 + 0 Spare
HW2 HO90030005	Hex Wrench M8		1 + 0 Spare
HW3 HO90010015	Wrench M10		2 + 0 Spare
HH1 H050050018	M6 Rubber Washer		12 + 0 Spare

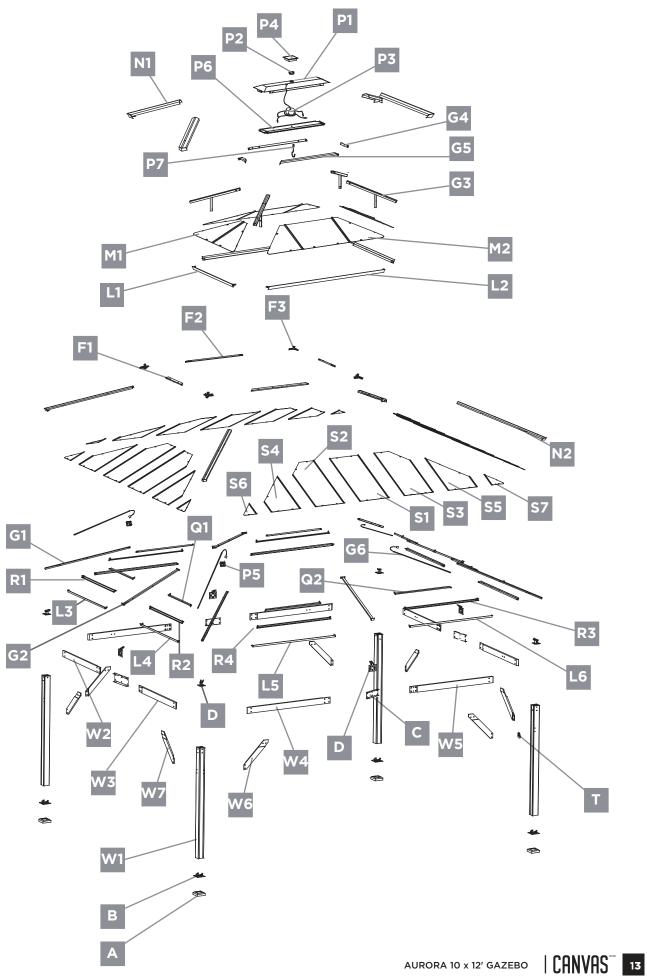

MAKE SURE ALL PARTS ARE PRESENT

 Compare all pieces to the parts and hardware lists, and make sure you have all tools required for assembly.




ASSEMBLE IN A CLEARED AREA

Place all parts from the box on the floor in front of you on a clean, dry, level surface to protect the product as it is being built.




REMOVE PACKAGING MATERIALS


Place packing materials back in the box. Do not dispose of packaging materials until assembly is complete.

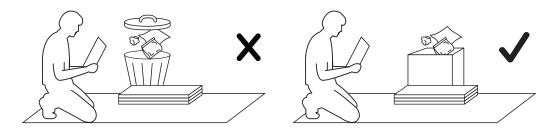



READ EACH STEP CAREFULLY

  Make sure you understand each step. If you have any questions, contact CANVAS™ customer service at 1-888-670-6684 (toll free).






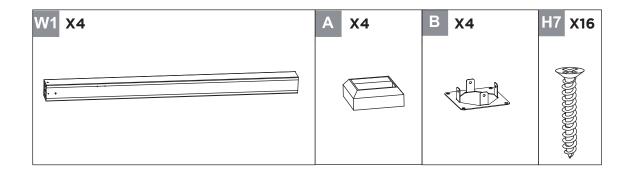

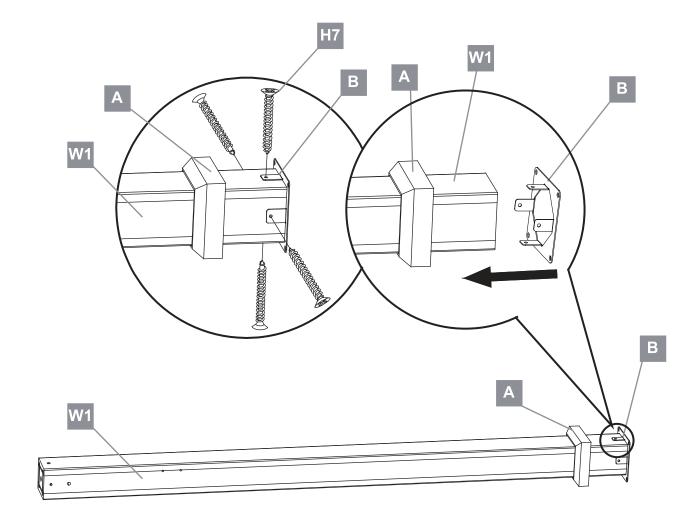





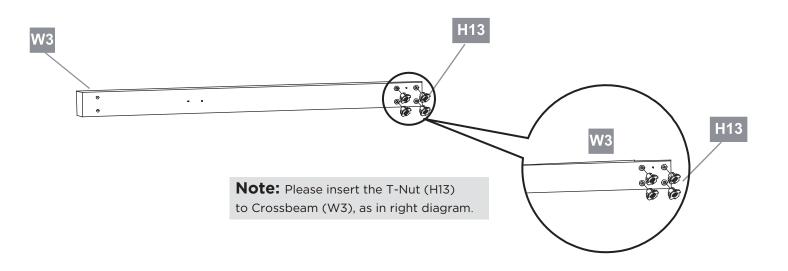



STEP 3

 
Note: Do not tighten screws all the way until you have assembled the unit. Once assembly is complete, tighten each screw.

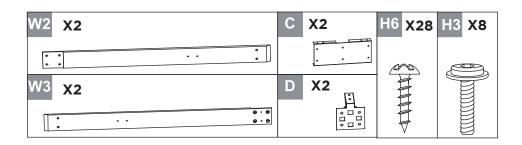

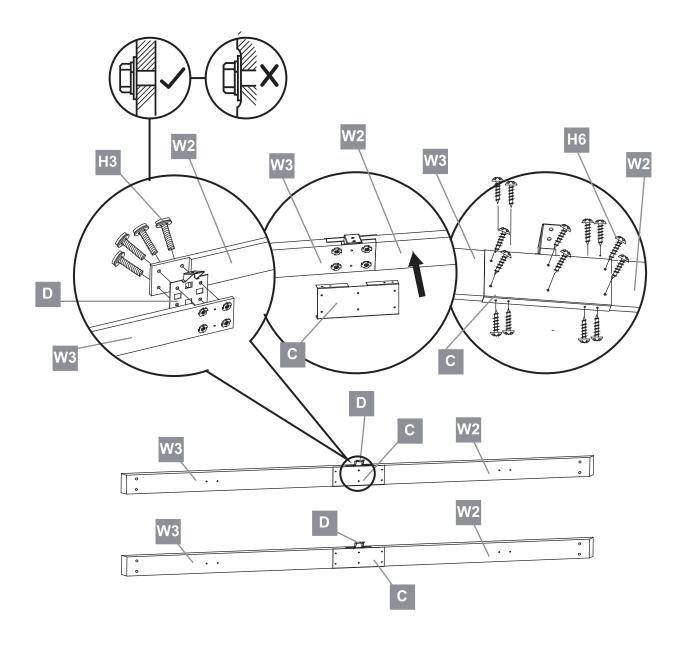

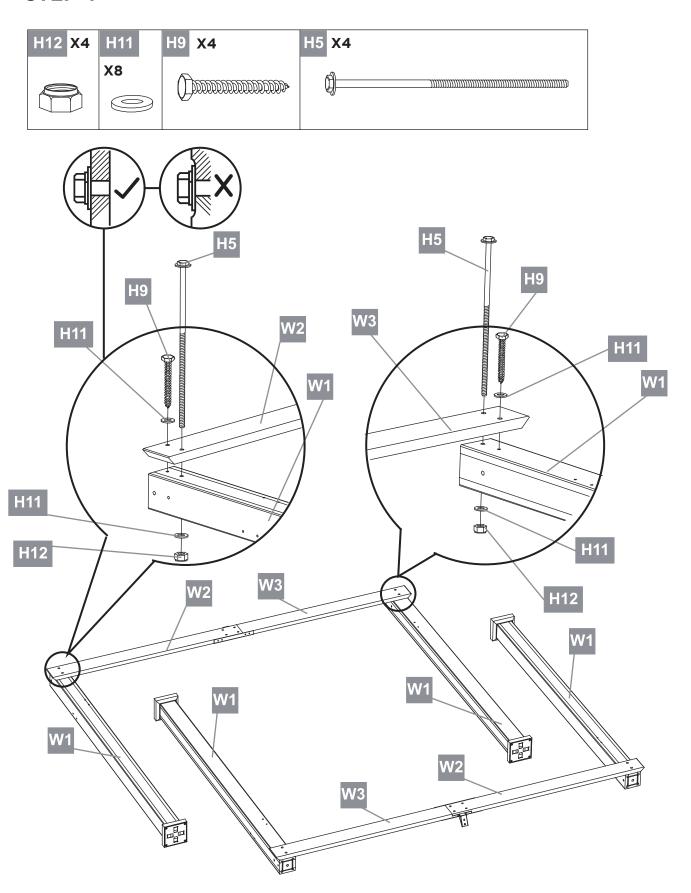




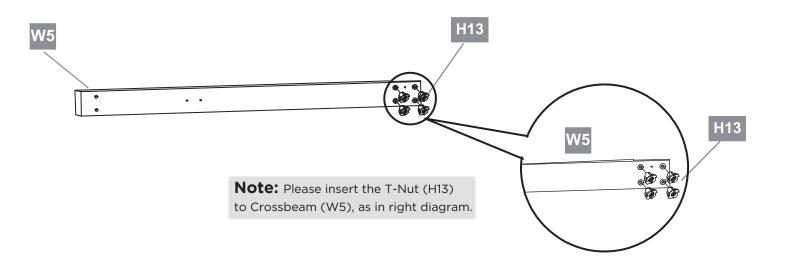


STEP 6

Note: Do not tighten screws all the way until you have assembled the unit.

Once assembly is complete, tighten each screw.

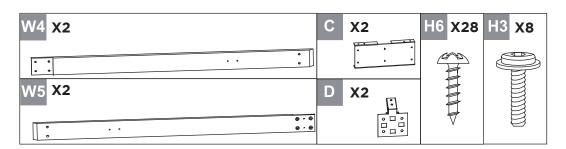


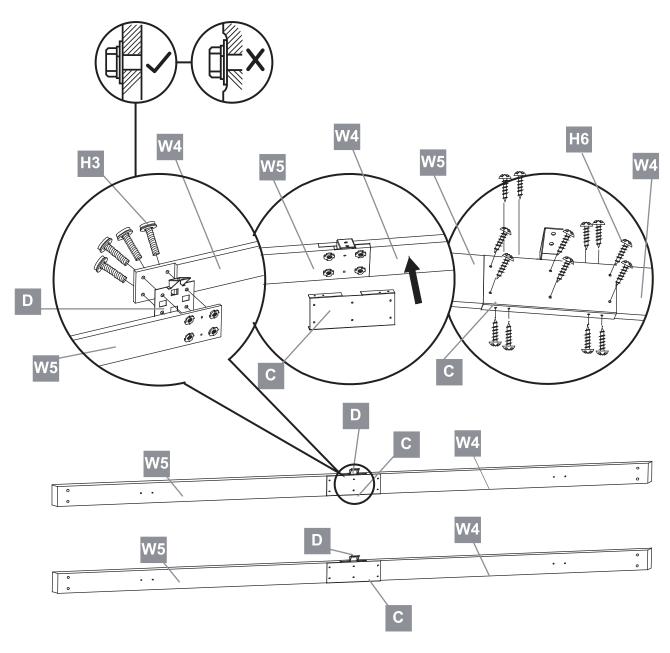



STEP 7

 
Note: Posts from the ground must be upright in order to install the last two crossbeams.





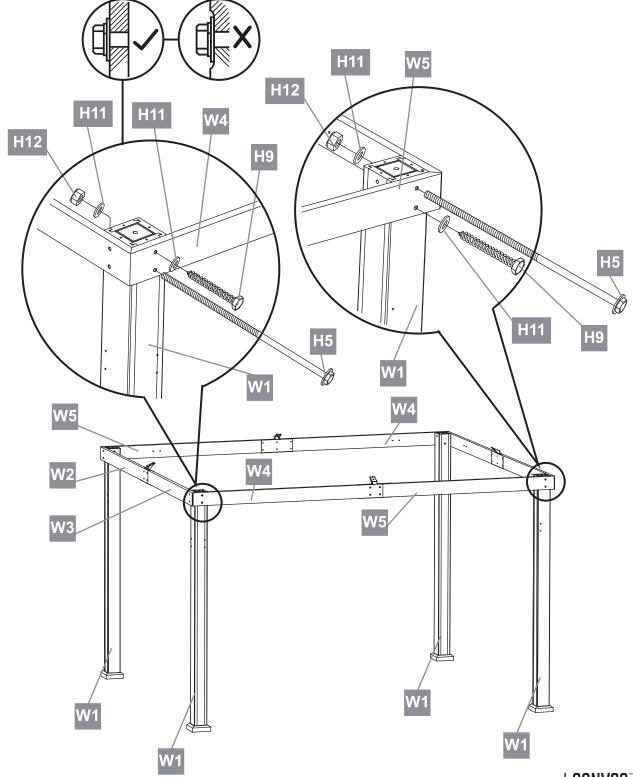

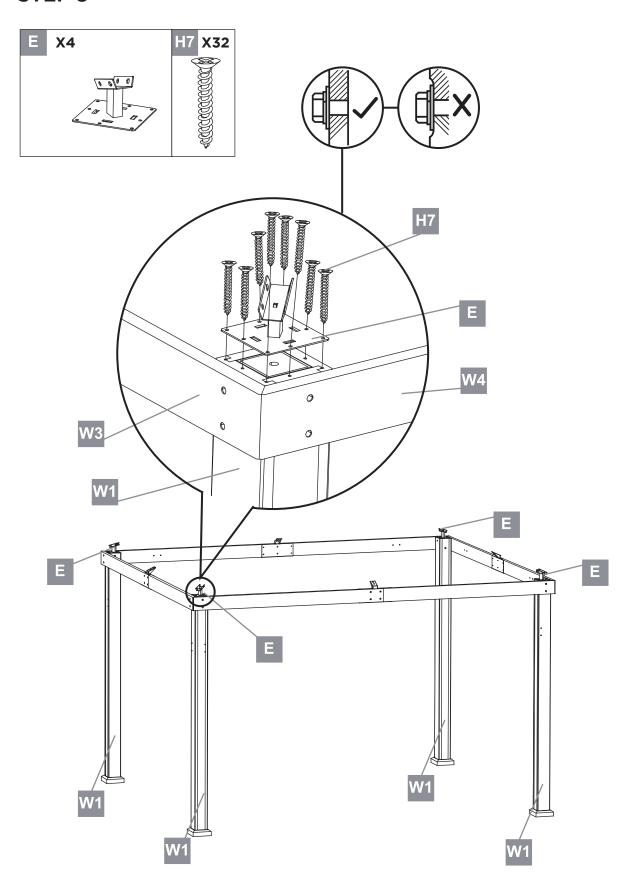

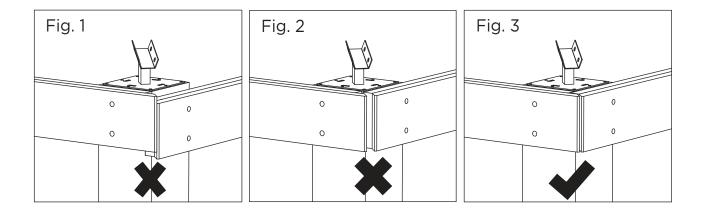

Do note that all 4 horizontal beams are to be horizontal and aligned (please see Fig 1, which shows wrong alignment). At the 4 corners of the horizontal beams, the beam when installed has a small gap to allow for expansion of the wood.

While installing the horizontal beams & ensuring the consistency of the gap at all four corners, it may be necessary to loosen the bolts and make the adjustment to achieve a consistent gap at all 4 corners before tightening the bolts again.


Important notes:

- 1) Adjustment must be made prior to the installation of the roof.
- 2) Do not over-torque the mounting bolts. Over-torqueing the bolts will crush the cedar wood.


STEP 9

Note: Do not tighten screws all the way until you have assembled the unit.

 
Once assembly is complete, tighten each screw.

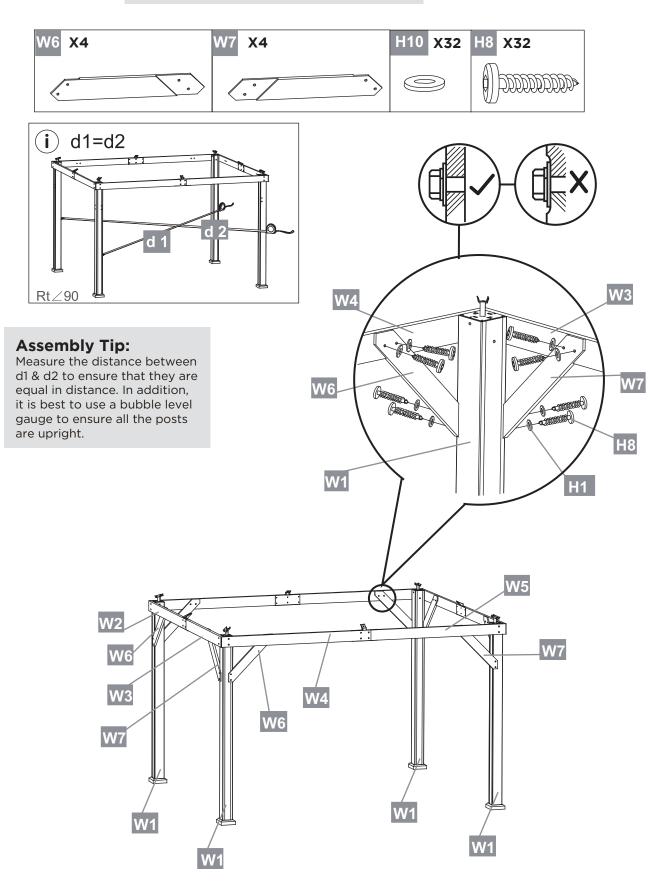




 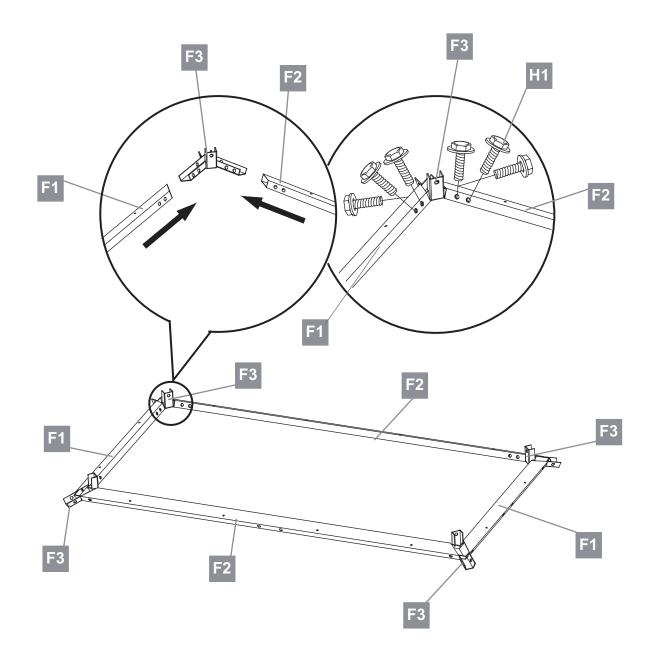





 


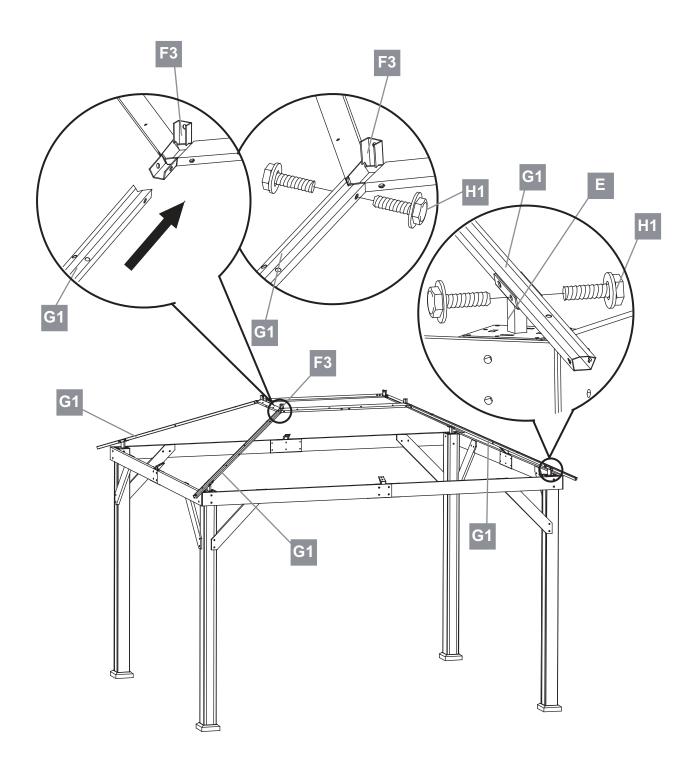








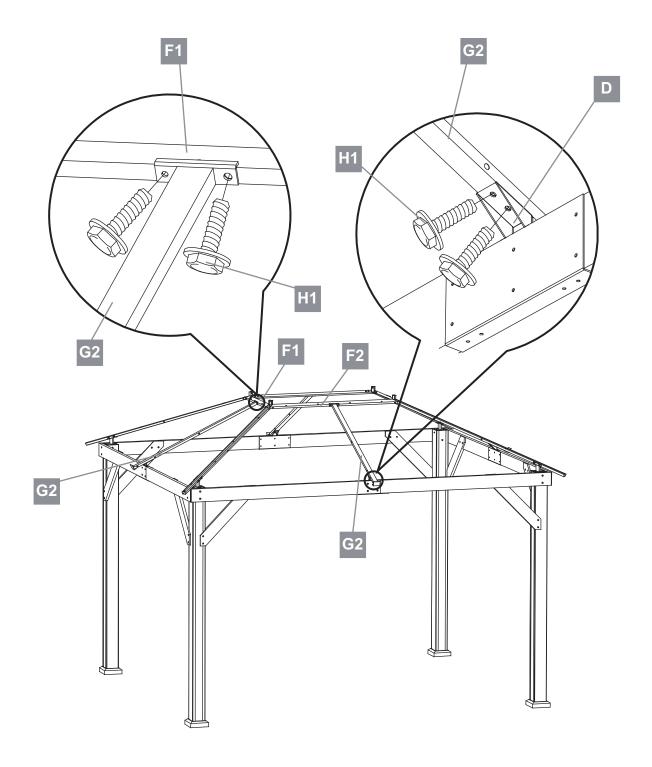




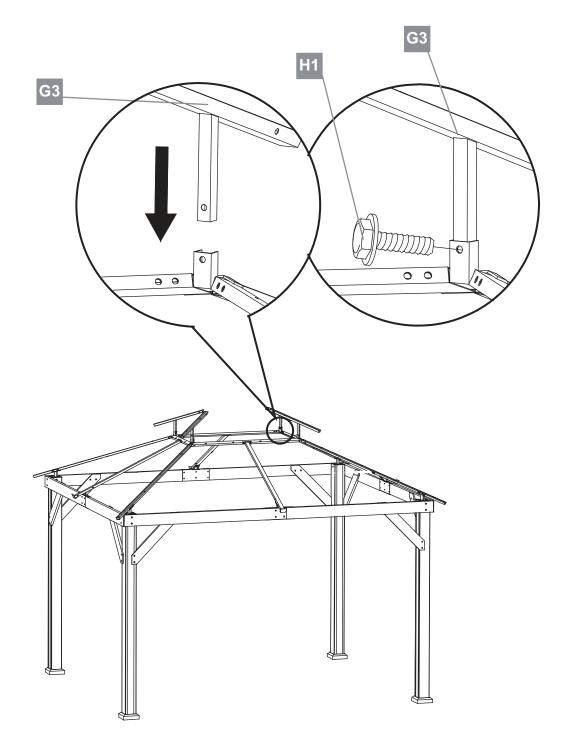


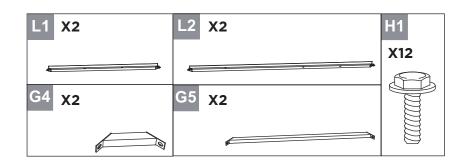


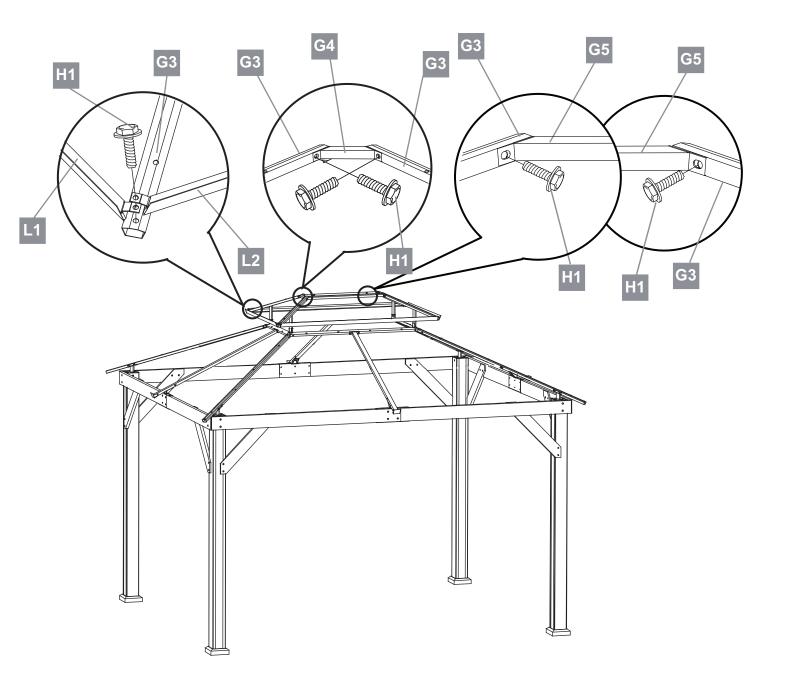


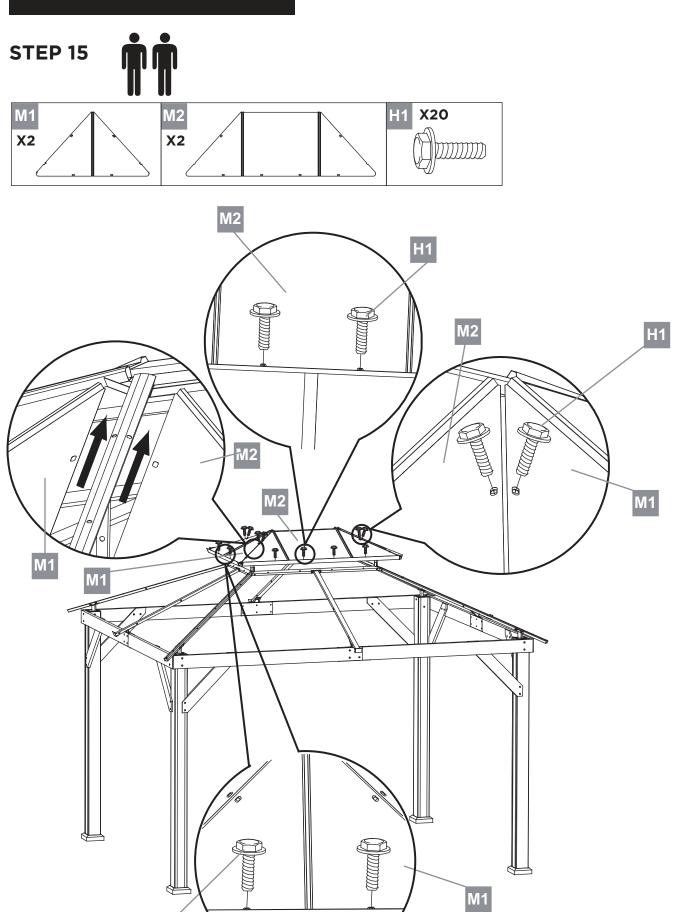



H1

 


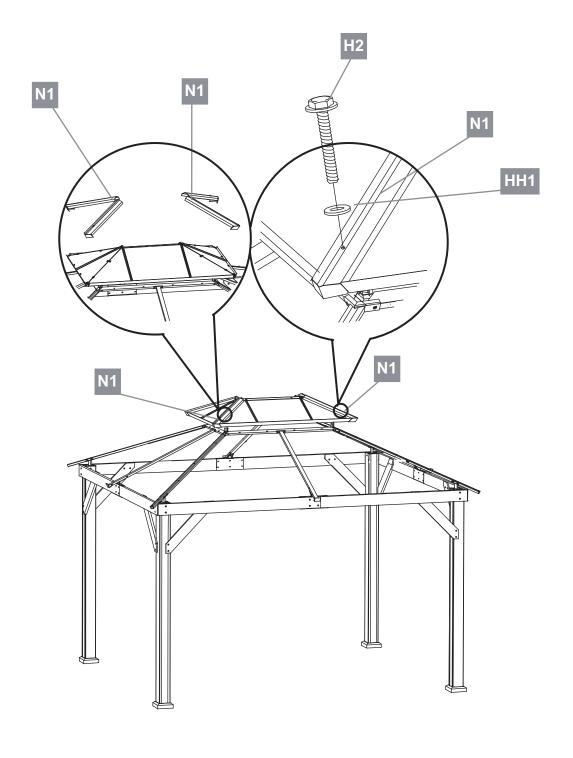


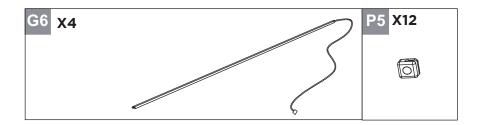


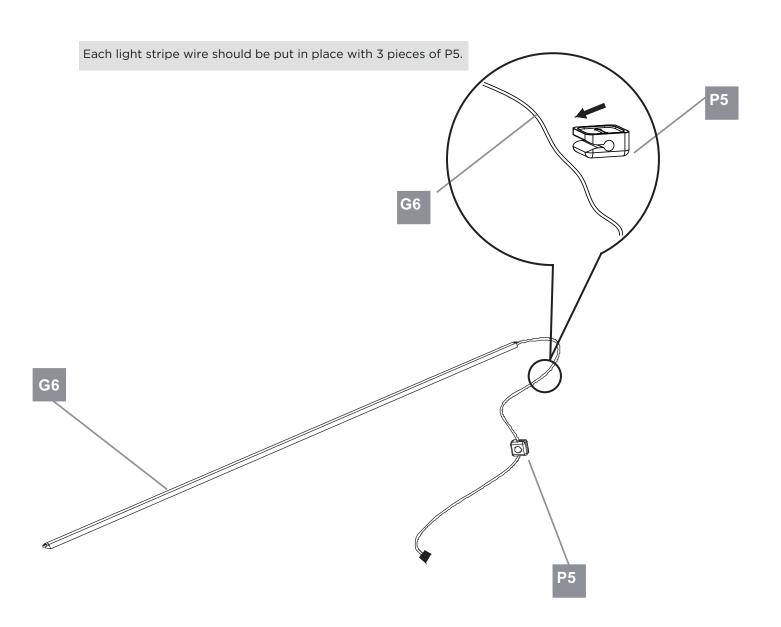


 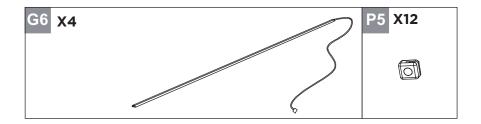


 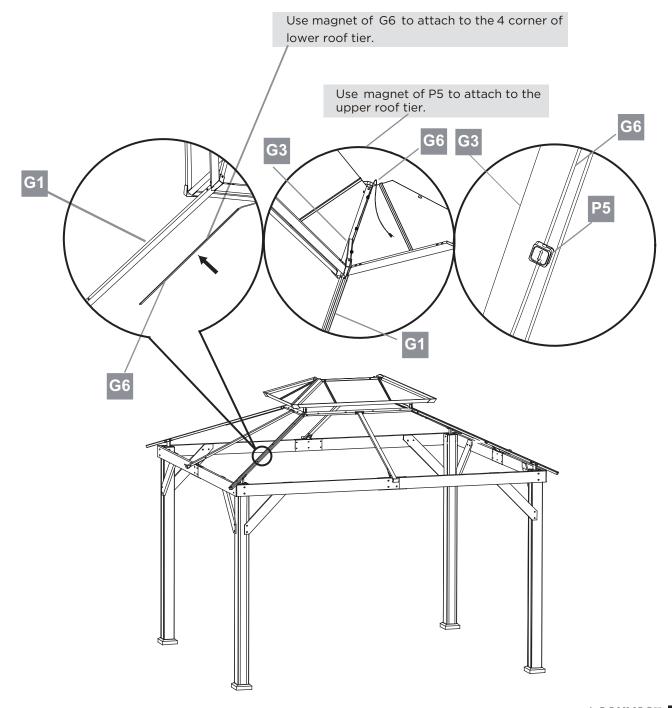


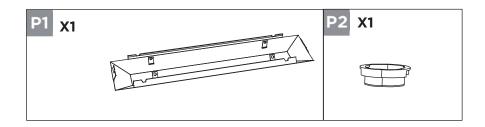


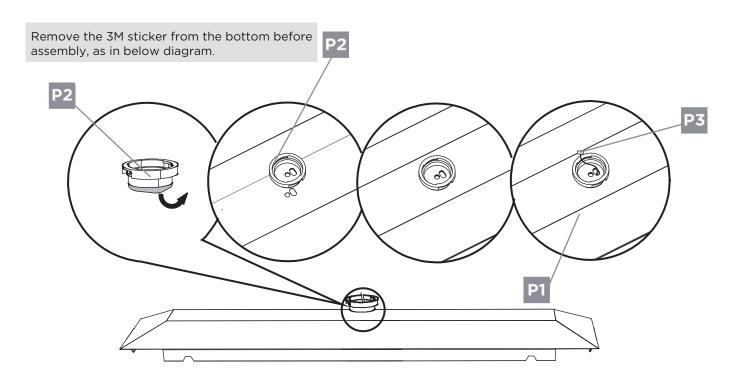




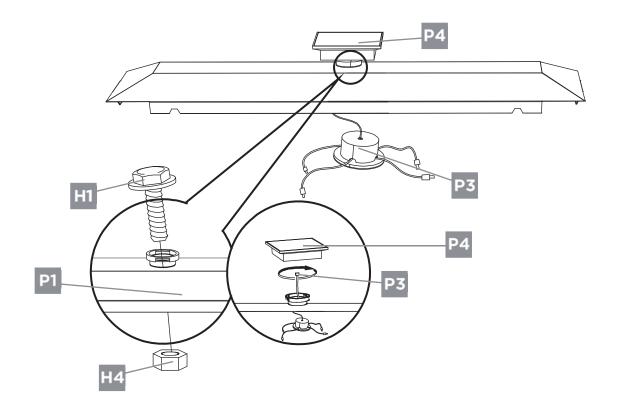





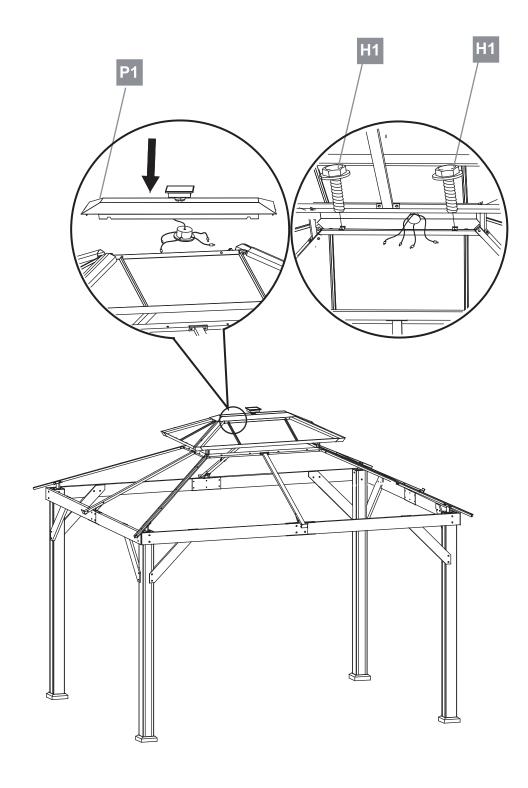


 
STEP 22

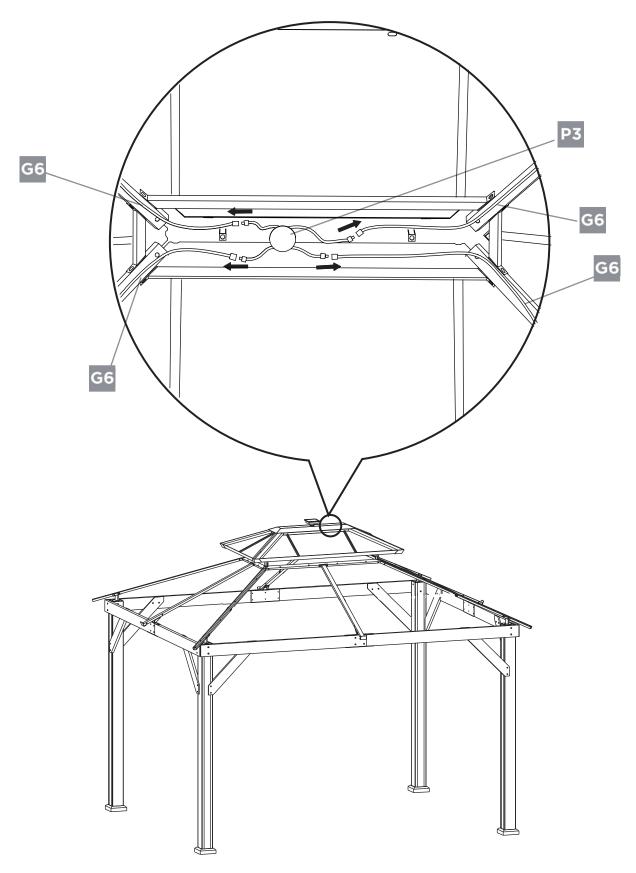


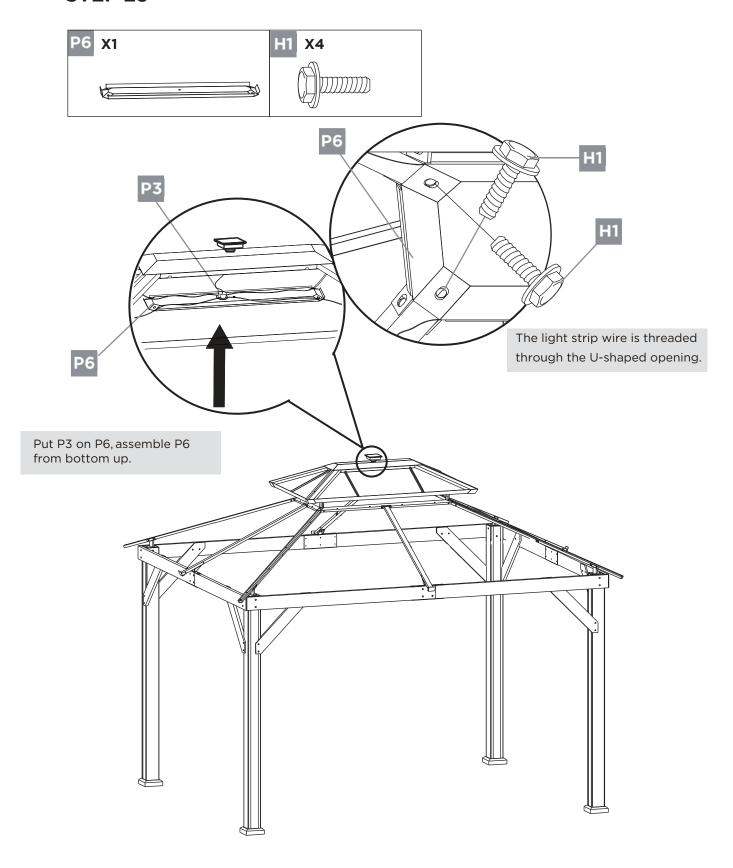


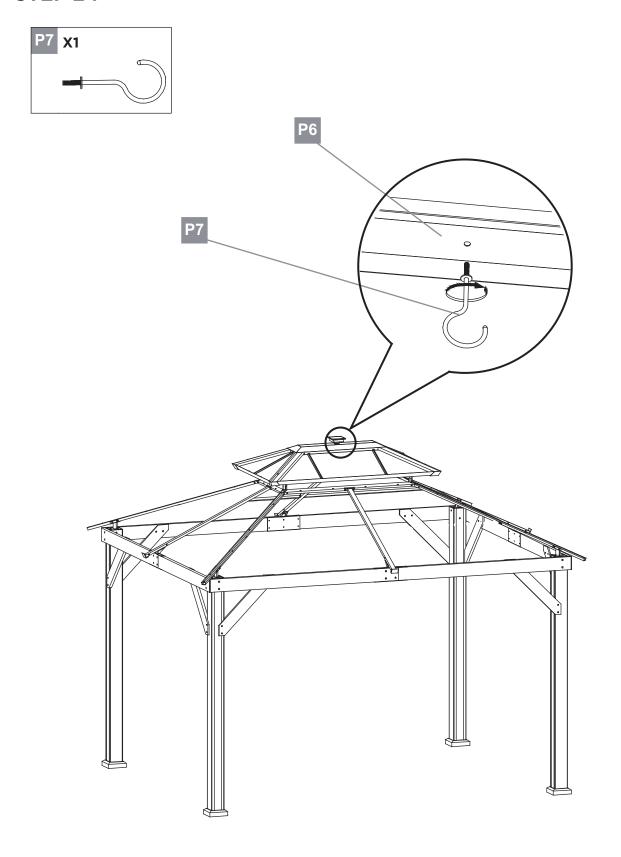





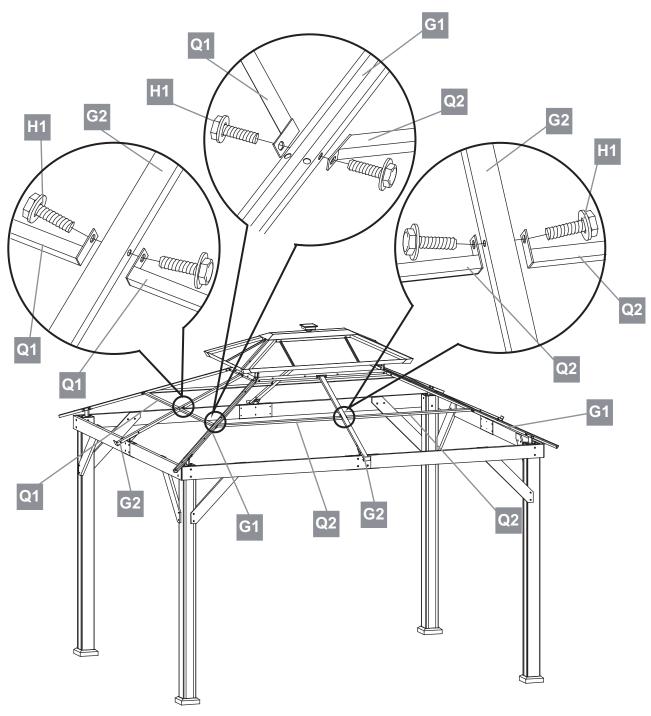


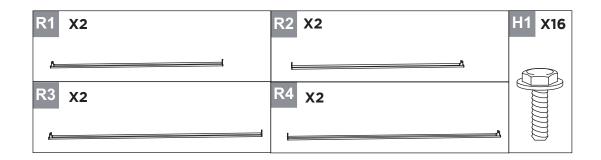


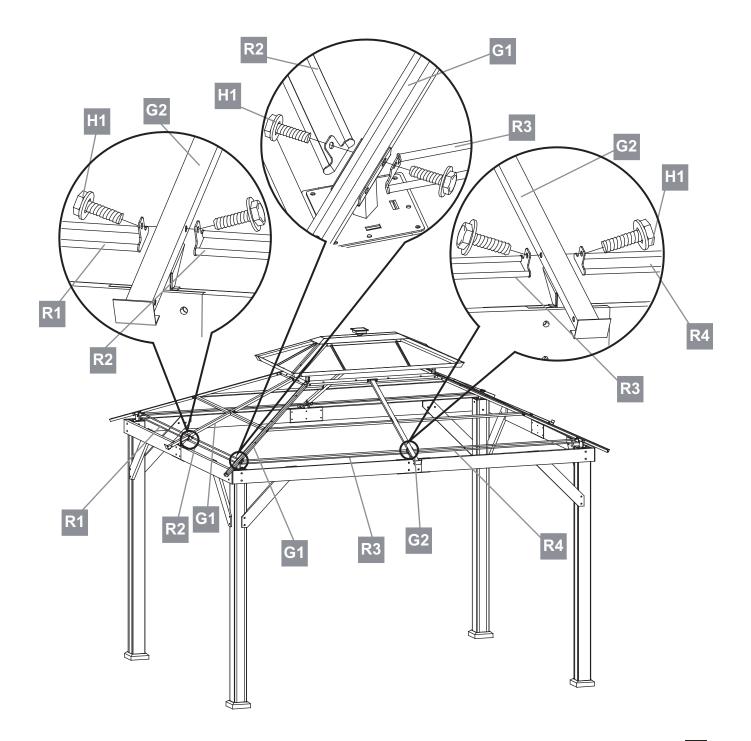


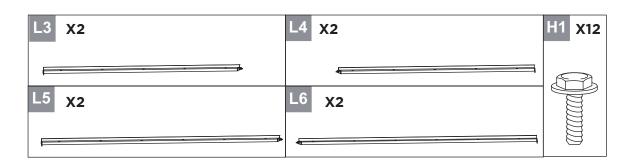


 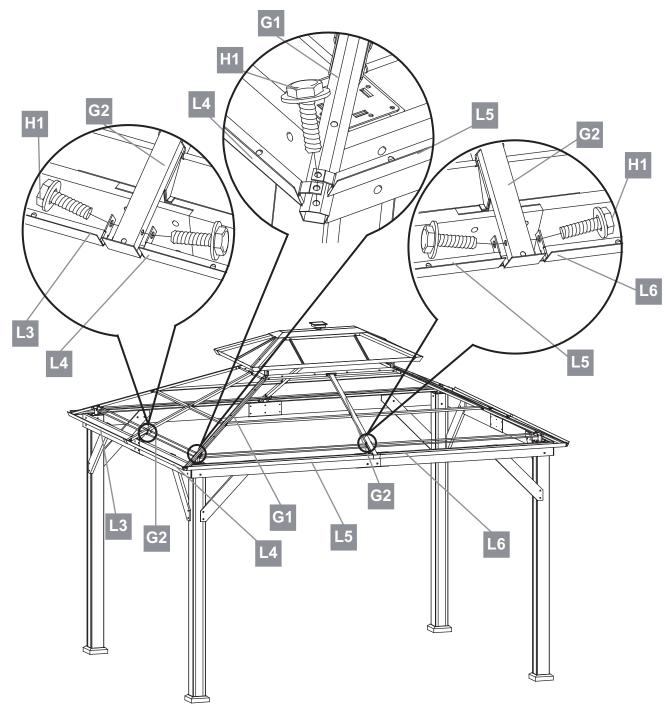


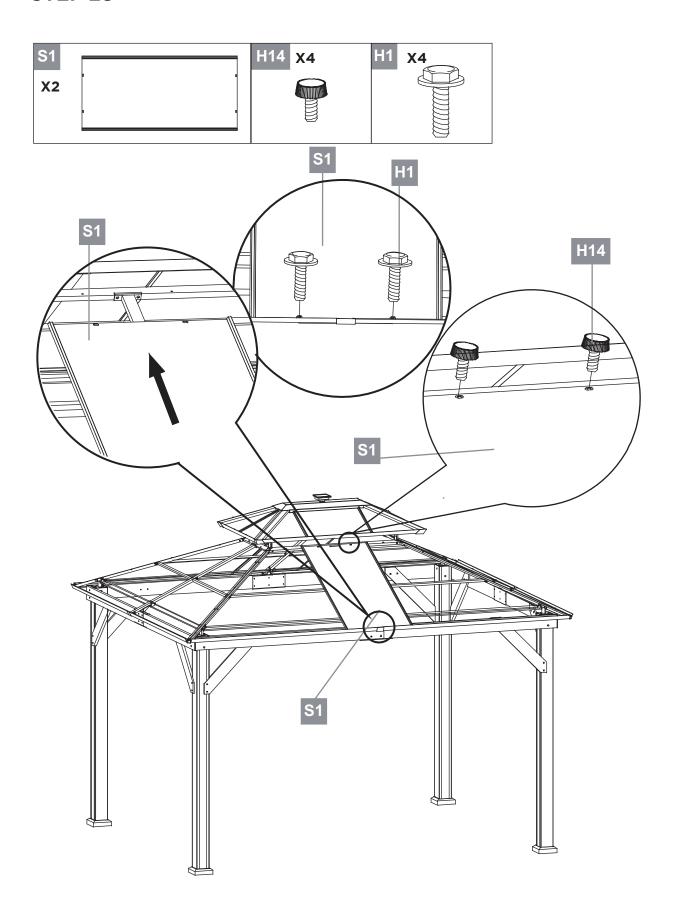


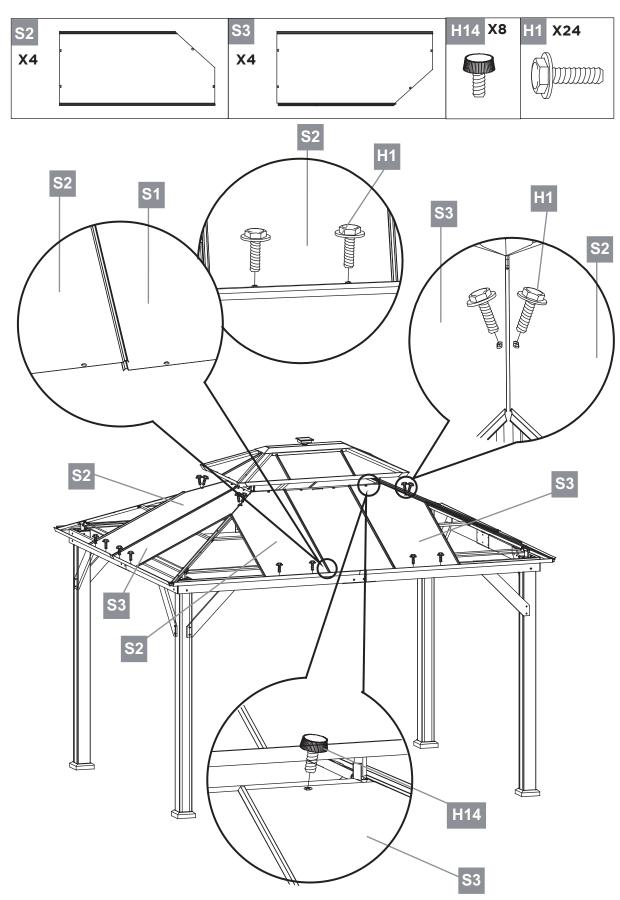


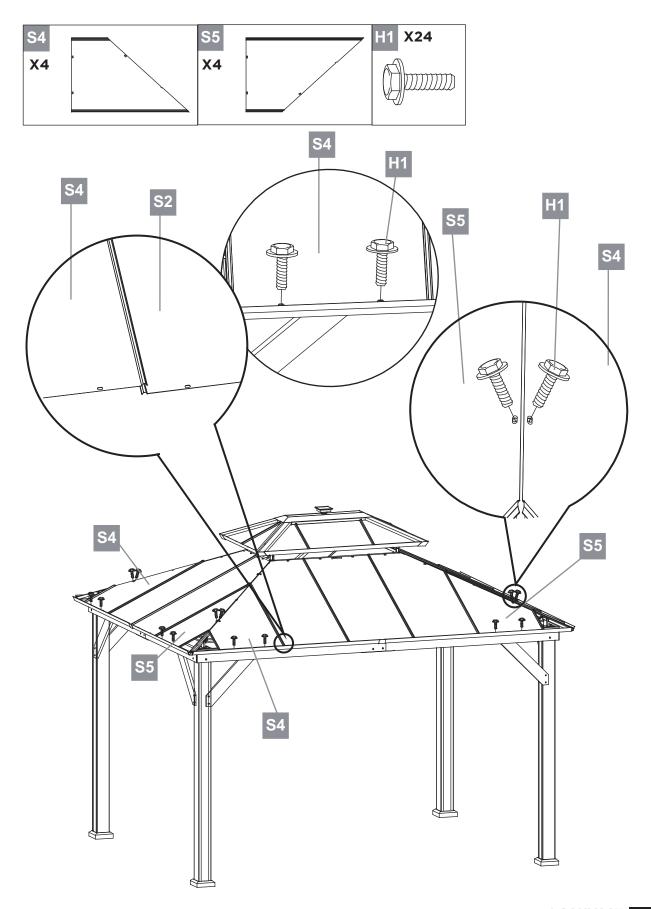


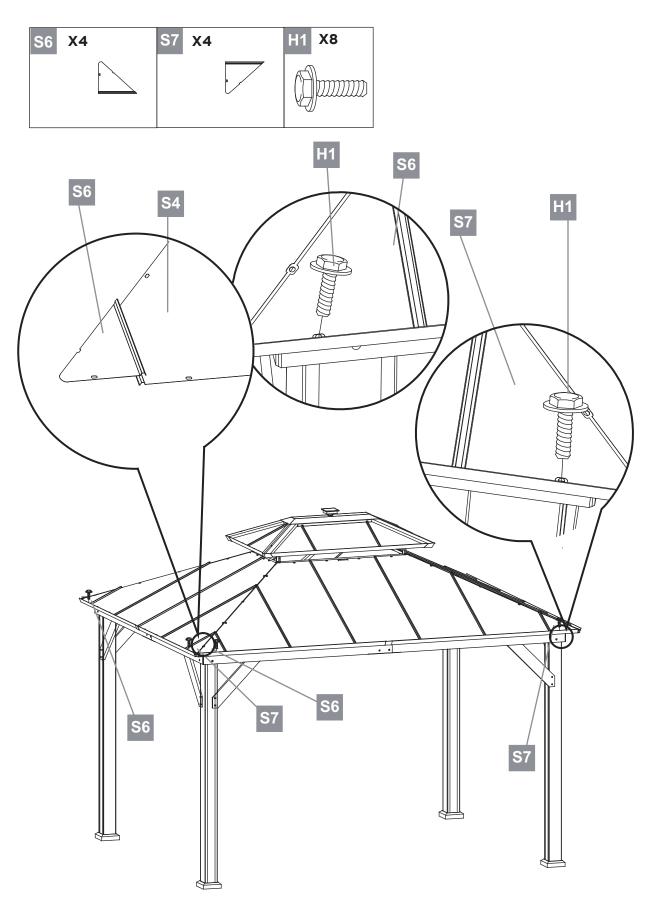




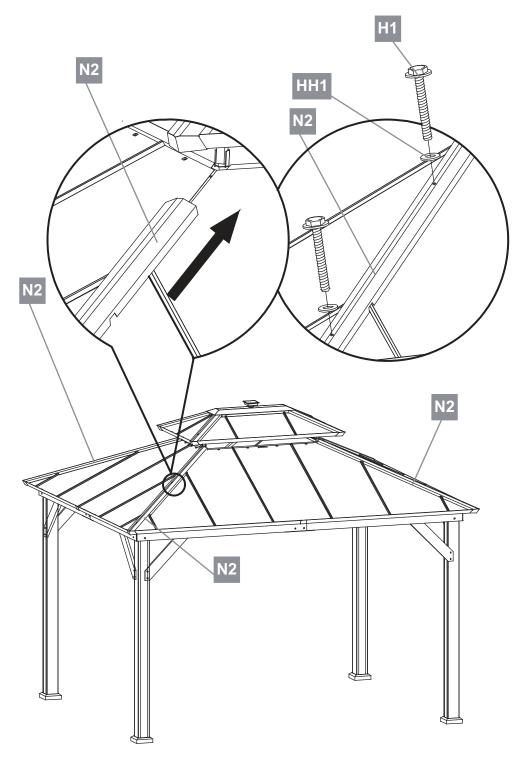

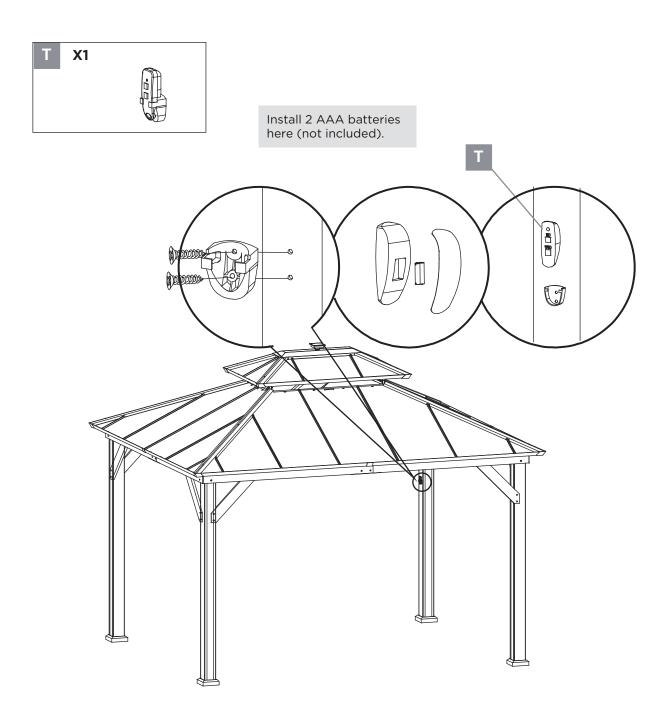

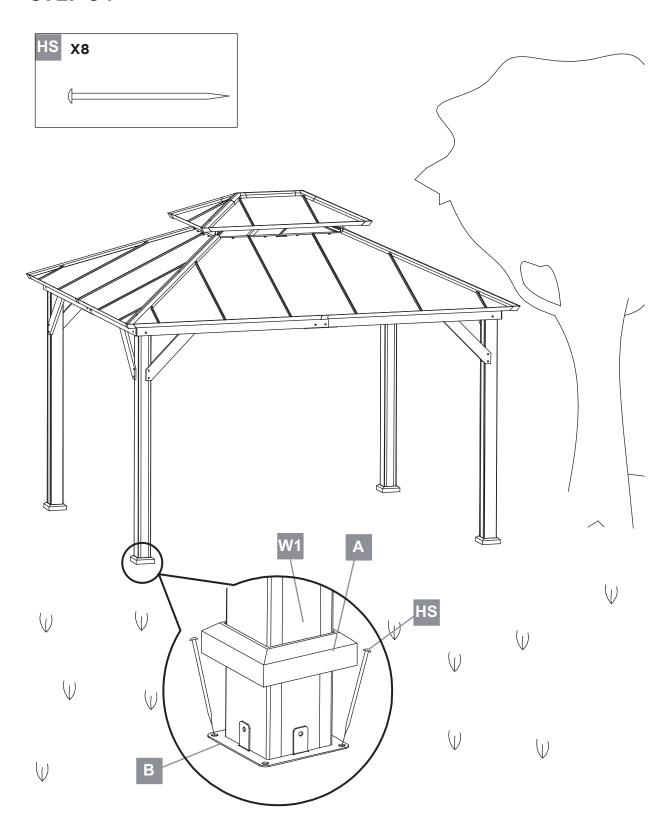

TECHNICAL DATA

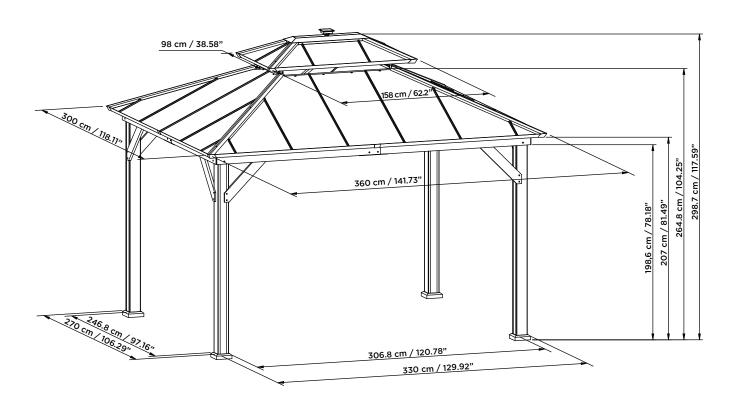

SPECIFICATIONS

ASSEMBLED DIMENSIONS (W x D x H)

 $3.6 \times 3 \times 3 \text{ m}$

11' 10" x 9' 10" x 9' 10"

ASSEMBLED PRODUCT WEIGHT

188 kg

414 lb 8 oz

CARING FOR YOUR ITEM



CAUTION! CHECK ALL SCREWS AND NUTS PERIODICALLY FOR TIGHTNESS, FASTENING THEM AGAIN AS REQUIRED.

Always keep children under close supervision while they are using or around this product. Never leave children unattended.

This product is intended for outdoor use only.

Do not light any fires below or near the product.

Clean the gazebo with mild soap and water. Rinse thoroughly and wait until the product is dry before reassembling it.

Check all nuts and bolts periodically for tightness. When required, tighten them again.

Disassemble the gazebo in the reverse order of the assembly steps. Always disassemble the gazebo completely. A partially disassembled gazebo is not stable enough to resist wind and bad weather, and therefore can be damaged and/or cause damage.

Remove all excess snow from the roof.

Cleaning & **Use & Care** Instructions

Do not shake, lean or climb on gazebo.

Clean and dry before storing in a dry, sheltered area. Do not use bleach, acid, or other abrasive cleaners on the canopies or frame parts.

Steel components for this gazebo are treated with rust inhibiting paint to prevent and limit rusting. However, due to the nature of steel, surface oxidation (rusting) will occur if these protective coatings are scratched. This is not a defect and thus not covered by the warranty. To minimize this condition, it is recommended to use care when assembling and handling the product to prevent scratching of the paint. Should any scratching or damage occur, it is recommended to cover the scratch immediately with rust inhibiting paint (not included). Surface rust can also be easily removed with a very light application of regular cooking oil. If surface oxidation (rusting) occurs and if no measure is taken to prevent this, the oxidation may start dripping onto deck or patio and cause damaging stains, which may be difficult to remove. This can be prevented if the above-mentioned measures are taken to keep the product from oxidizing.

In the maintenance of the wooden posts or beams of the gazebo, use wood sandpaper of grit 180 to sand the wood surface to remove any foreign stains or dirt. Wipe off the sanding powder and any dirt with a clean dry cloth before applying a coat of protective varnish/wax.

Carefully read the instructions of the varnish/wax oil before application. It is best to try on a small section of wood, check the result and if satisfied with the result, then apply the varnish/wax oil onto the remaining wooden parts.

Keep instruction manual for future reference.

Keep the original packaging to store the gazebo.

TROUBLESHOOTING



HAVING TROUBLE? LET US HELP YOU!

TOLL-FREE: 1-888-670-6684



If you have questions regarding your product or require warranty assistance, please call our customer service helpline.

BATTERY SAFETY WARNING

- 1. DO NOT DISPOSE OF BATTERIES IN FIRE, BATTERIES MAY EXPLODE OR LEAK.
- 2. Batteries must be recycled or disposed of properly. Dispose of as per the requirements of your local municipality.
- 3. Battery performance is affected by weather and temperature. Expect reduced performance in adverse conditions of cold, extreme cold, extreme heat, plus humidity and dampness.

CAUTION

SOLAR LIGHT: CONTAINS RECHARGEABLE LI-ION BATTERY / REMOTE CONTROL: REQUIRES 2 AAA BATTERIES (NOT INCLUDED).

DO NOT mix old and new batteries, different brands or types of batteries, such as alkaline, carbon-zinc or rechargeable batteries.

TROUBLESHOOTING

IF THE LIGHT DOES NOT WORK:

- 1) Check to ensure there are no obstructions over the top of the solar panel.
- 2) Check that the battery is installed correctly and ensure nothing is preventing the battery terminals from making contact.
- 3) Check to ensure the solar panel is positioned to sense both daylight and nighttime. If bright light shines near or into the solar panel, these lights may trigger the sensor and the lights may turn off, Bright lights can act like daylight and prevent the unit from functioning correctly.
- 4) Batteries may need to be changed as they vary by use, temperature, weather conditions and heat. Replace the batteries with the same type of rechargeable batteries.
- 5) Ensure the batteries are fully charged. It is important to charge the battery for 12 hours in full sun before use. Cloudy or rainy days may require a longer charging time.
- 6) In some cases, you may need to open the battery compartment and "seat" the battery correctly between metal clips as some dislodging may occur during shipment, and to ensure the correct polarity position.

LIMITED WARRANTY



1-YEAR LIMITED WARRANTY*

This CANVAS™ product carries a one (1) year warranty against defects in workmanship and materials. Trileaf Distribution agrees to replace the defective product free of charge within the stated warranty period, when returned by the original purchaser with proof of purchase. This product is not guaranteed against wear or breakage due to misuse and/or abuse.

PRODUCT NO. 188-1360-0

Made in China

Imported by Trileaf Distribution Trifeuil Toronto, Canada M4S 2B8

CANVAS REDISCOVER YOUR SPACE

