 




Parkway 11x11' Gazebo

Model No. 188-1361-8

Assembly Instructions

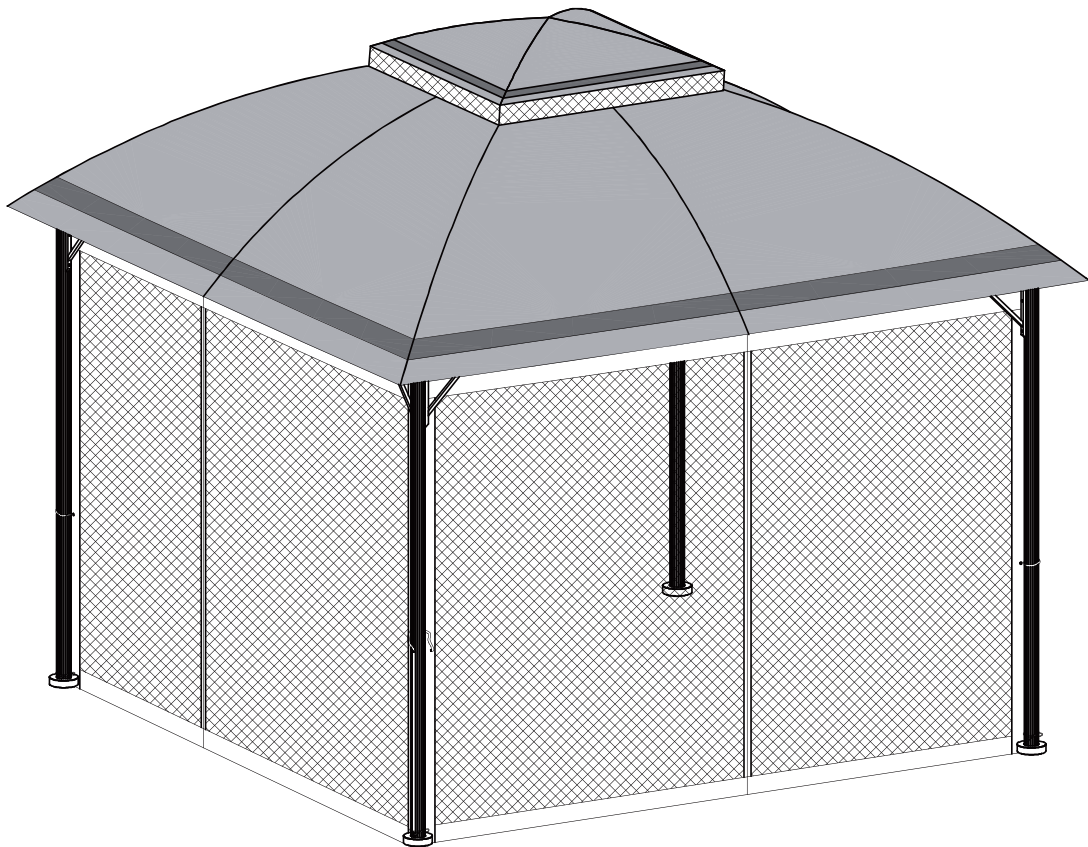

NEED HELP? GIVE US A CALL!
WE'RE HERE FOR YOU.

TOLL-FREE:
1-877-483-6759

IMPORTANT: Please read this manual carefully
before beginning assembly of this product.
Keep this manual for future reference.

Product  Number: xxxxxxxx



From your first apartment to
downsizing your family home,
For LIVING® is a great place to start.

Uncomplicate your life with timeless
style and reliable quality that delivers
everyday solutions for your home.

Let us know how our products
work for you. Rate and review at
canadiantire.ca.

Table of Contents

Important Safety Instructions	4	Technical Data	30
Parts List	5	Troubleshooting	31
Before You Begin Assembly	9	Caring for Your Item	31
Step-by-step Guide	10	Warranty	32

Caution!



- Proper placement of your gazebo is essential.
- Do not place the product underneath electrical lines.
- Keep children away during assembly.
- This product contains small parts which can be swallowed by children.
- Keep fingers away from the places where they can be pinched or trapped.
- Do not attempt to assemble the gazebo if any parts are missing.



Let us help you!

DO NOT RETURN YOUR PRODUCT TO THE STORE. CALL US FIRST!

 
1-877-483-6759

If you have questions regarding your product, require warranty assistance, or have damaged or missing parts, please call our customer service toll-free helpline. Contact us for assistance; we're here to help.

IMPORTANT: Please read and understand this manual before any assembly. Before beginning the assembly of product, make sure all parts are available. Compare parts list with packaging contents. If any part is missing, or if you have any questions, contact the service centre at 1-877-483-6759 (toll free).

Take all parts from the packaging box and position them on a clean floor. Remove all packing materials and place them back into the box. Do not dispose of the packing materials until assembly is complete. Read each step carefully before beginning any assembly and make sure you understand each step. If you are missing a part, please call our toll-free number for assistance: 1-877-483-6759.


Needed for Assembly: (The following are not included)




Hammer



 Screwdriver

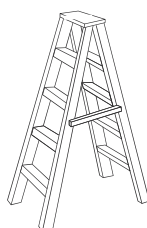

Ladder

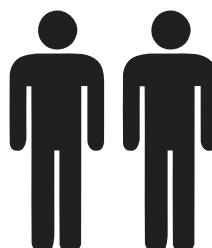 

2 people

Safety Instructions



Warning!

To reduce the risk of serious injury, read the following safety instructions before assembling and using the gazebo.

Caution!





 




 

Always keep children under close supervision while they are playing around this product. Never leave children unattended. Keep pets away while setting up the gazebo.

Caution!

Check municipal by-laws prior to installing the gazebo.




 



 
- This product is intended for domestic, outdoor use only.
- Always place and assemble the gazebo on flat, horizontal ground.
- Consult with your local governing authority/local municipal codes regarding installation of temporary structures before assembly.
- Ensure there is enough clearance around the product. Before assembling the gazebo, make sure to leave a distance of not less than 1.8 m (6') from any structures or obstructions, such as fences, garages, houses, overhanging branches, laundry lines, or electrical wires.
- Anchor the gazebo to the ground with stakes for added safety. Stakes are provided to secure the gazebo to the ground. If you wish to secure the gazebo to a concrete and wood surfaces, use anchors suited for these surfaces (anchors not included). Do not assemble the gazebo on sandy, muddy or loose soil, as stakes are not strong enough to anchor in these types of soil.
- If more than one gazebo is set up, keep a minimum distance of 3 m (10') between the gazebos.
- Any assembly or maintenance of the gazebo must be carried out by adults only.
- Make sure there is sufficient manpower when assembling or moving the gazebo.
- Some parts may contain sharp edges. Wear protective gloves if necessary.
- Check all nuts and bolts periodically for tightness. If required, tighten them.
- Repairing and replacing parts should be done by a qualified technician.
- This gazebo is intended for decorative and sunshade purposes only, and is not designed to withstand harsh weather, including high winds, rain, and snow.
- Always disassemble the gazebo in heavy wind conditions. If not, it might tip over and could cause injury to bystanders.
- Always ensure that the canvas is taut to avoid water accumulation on the roof. If water accumulates on the roof, remove it immediately or disassemble the gazebo in order to avoid damages.
- Do not light any fires inside or near the gazebo.
- Do not panic if fire breaks out inside the gazebo. Search for the nearest exit. Do not return to the gazebo until the firemen allow you to do so.
- Do not hang any weights on the roof frame.
- Do not climb onto the roof of the gazebo. Doing so may cause the gazebo to fall down, thereby resulting in serious injury.
- Retain the original packaging to store the gazebo.
- If the gazebo will not be used for a long period of time (e.g., during winter time), disassemble and store it in a clean, dry environment.

Parts List

 
 

 

 

Item		Description	Thumbnail	Quantity
A	P00020098901	Post		4
B	P00010059801	Post Base		4
C	P00610031301	Base Cover		4
D1	P00040184601	Cross Beam Left		4
D2	P00040184701	Cross Beam Right		4
D3	P00560065101	Decoration Cap		4
E	P00500098501	Brace		8
F	P00050236801	Middle Beam Connector		4
G	P00570048101	Mosquito Netting Rod		8
J1	P00060325001	Rafter 1		4
J2	P00060325101	Rafter 2		3
J3	P00060325201	Rafter 3		1

Parts List




Item		Description	Thumbnail	Quantity
K	P00570062001	Adjustment Tube		4
L	P00060325301	Middle Beam		4
M	P00050236901	Big Roof Connector		1
N	P005800001	Hook		1
P	P00110076801	Big Canopy		1
Q	P00110076701	Small Canopy		1
R	P00500098601	Tie		4
S	P00120034101	Mosquito Netting		1

Hardware List

Item	Description	Thumbnail	Quantity
H1 H010030546	Bolt M5*12		64+4 Spare
H2 H010030543	Bolt M5*25		32+2 Spare
H3 H050010025	Rubber Washer M5		96+5 Spare
H4 H990040003	Adjust Bolt M6		4+1 Spare
HR H990050001	Plastic Ring		48+3 Spare
HS H070010003	Stake D8*180~230		8
HW H090030002	Hex Key M6x140		2

 Exploded View

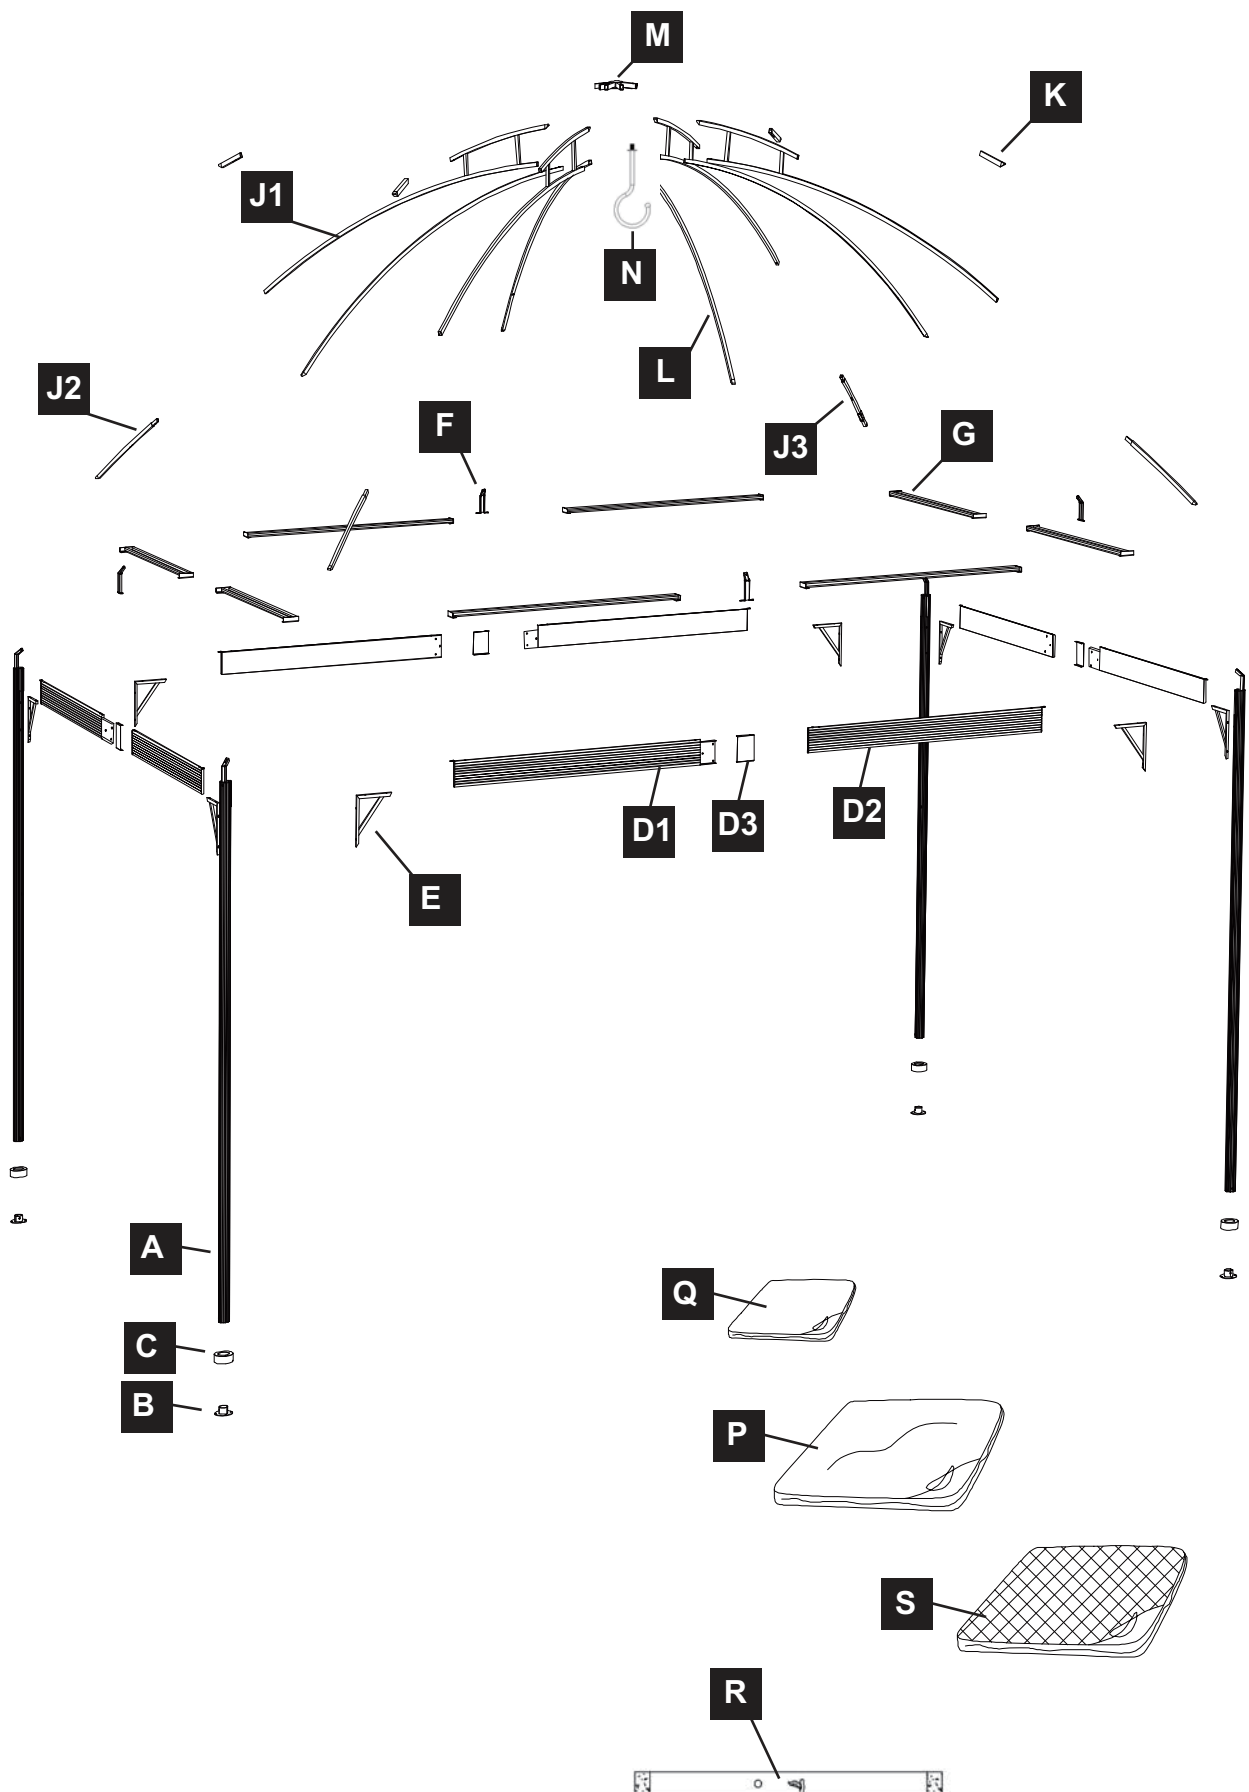

Before You Begin Assembly

 
Make Sure All Parts Are Present

Compare all pieces to the parts and hardware lists, and make sure you have all tools required for assembly.



Assemble in a Cleared Area

Place all parts from the box on the floor in front of you on a clean, dry, level surface to protect the product as it is being assembled.

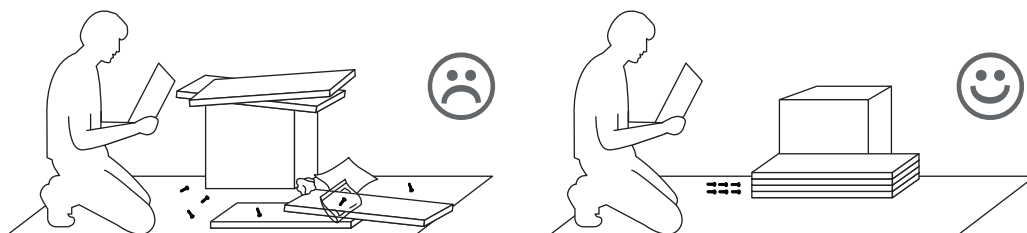


Remove Packaging Materials

Place packing materials back in the box. Do not dispose of packaging materials until assembly is complete.



Read Each Step Carefully



 
Make sure you understand each step. For any questions, contact the For LIVING® customer service centre at 1-877-483-6759 (toll free).

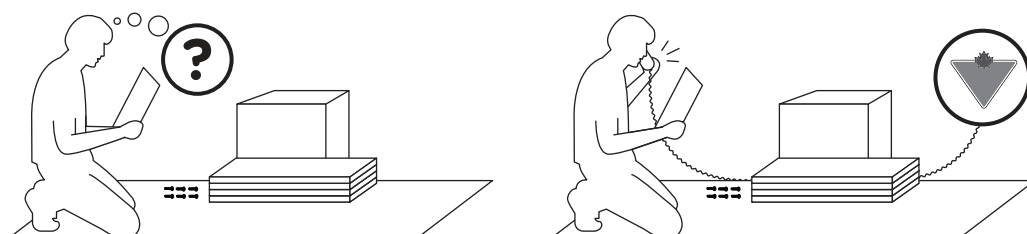

Step-by-step Guide






   Step 1

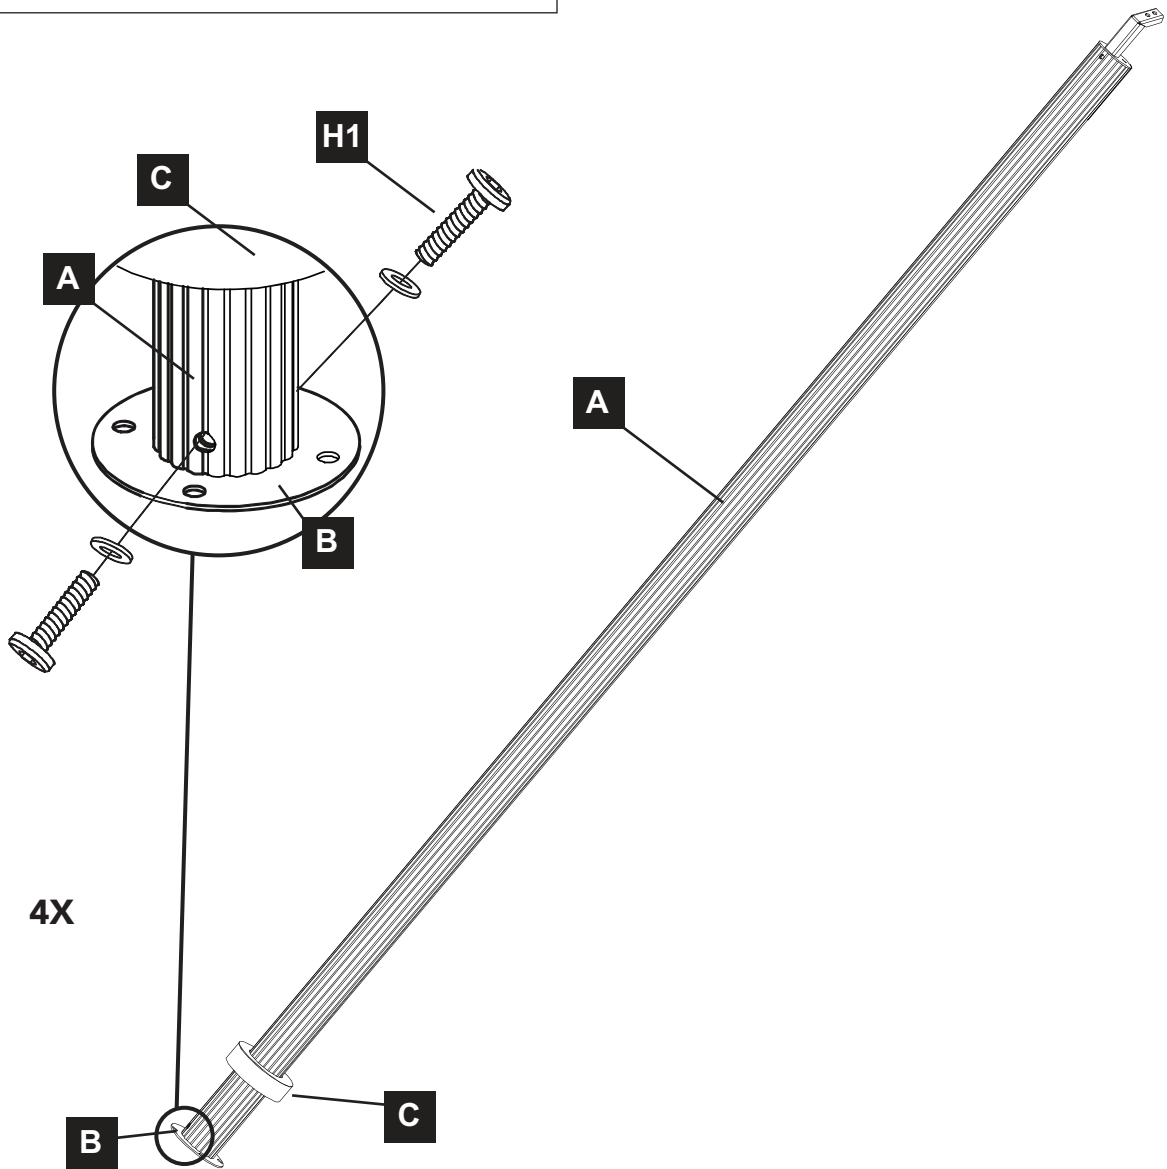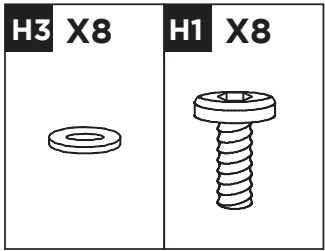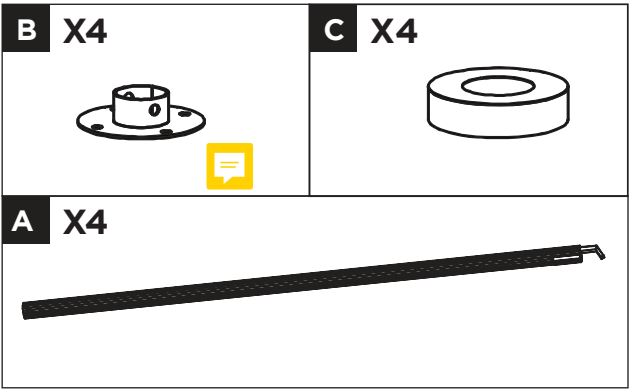

Step-by-step Guide

 
 
 
Step 2

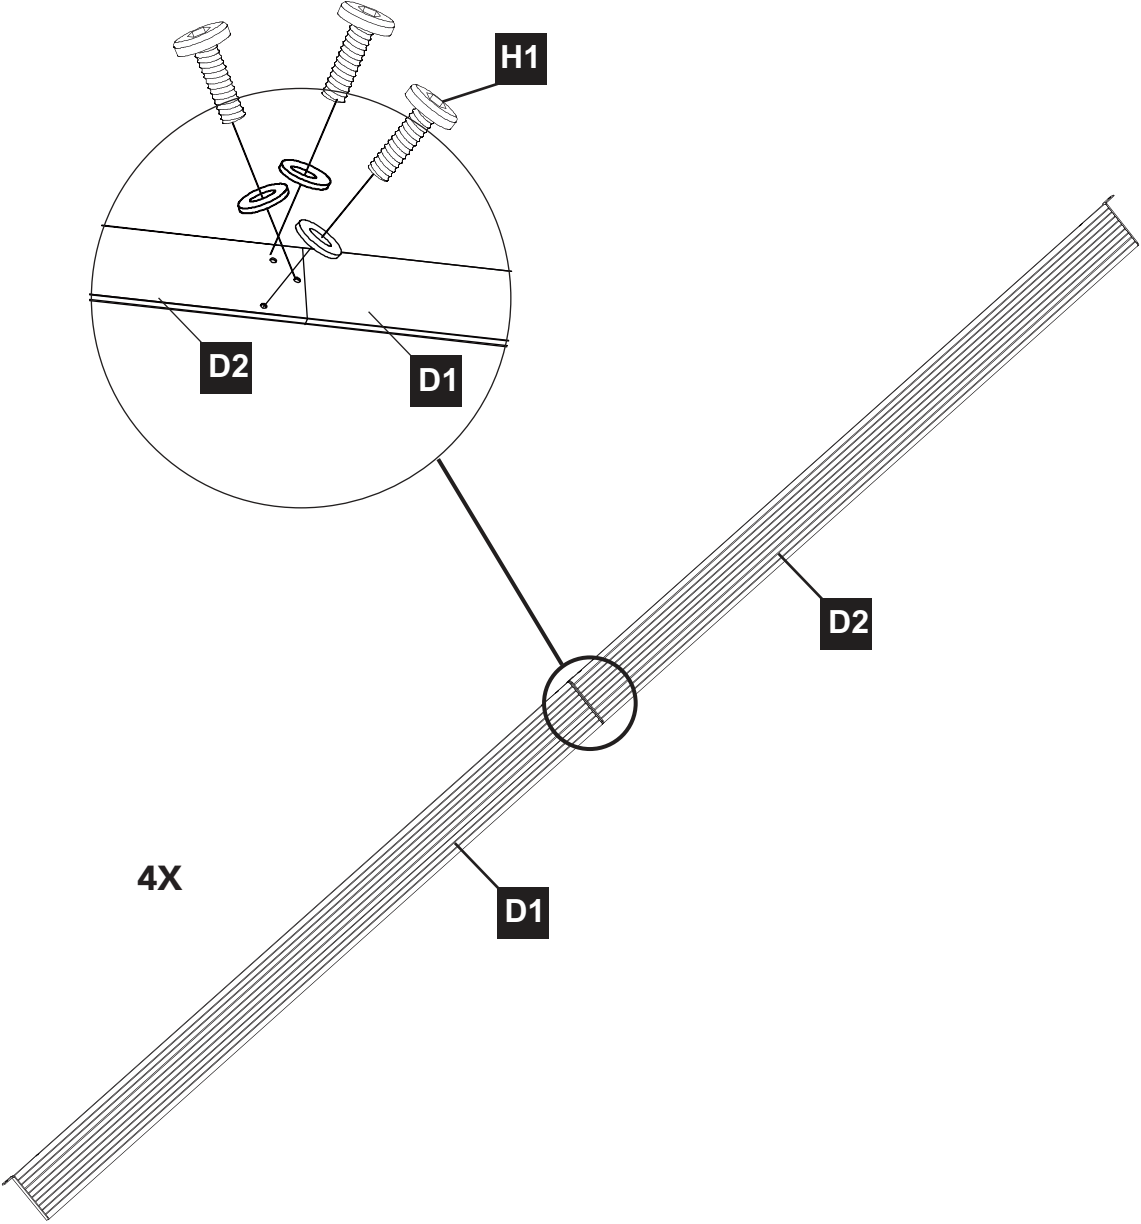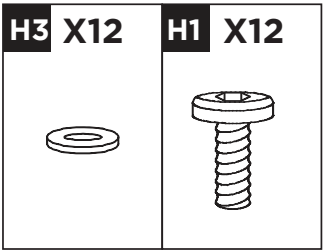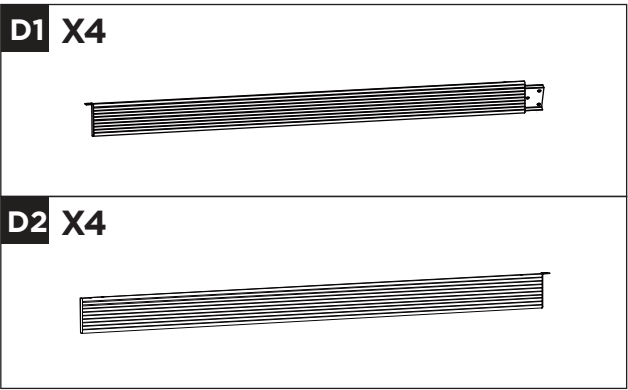

Step-by-step Guide






   Step 3

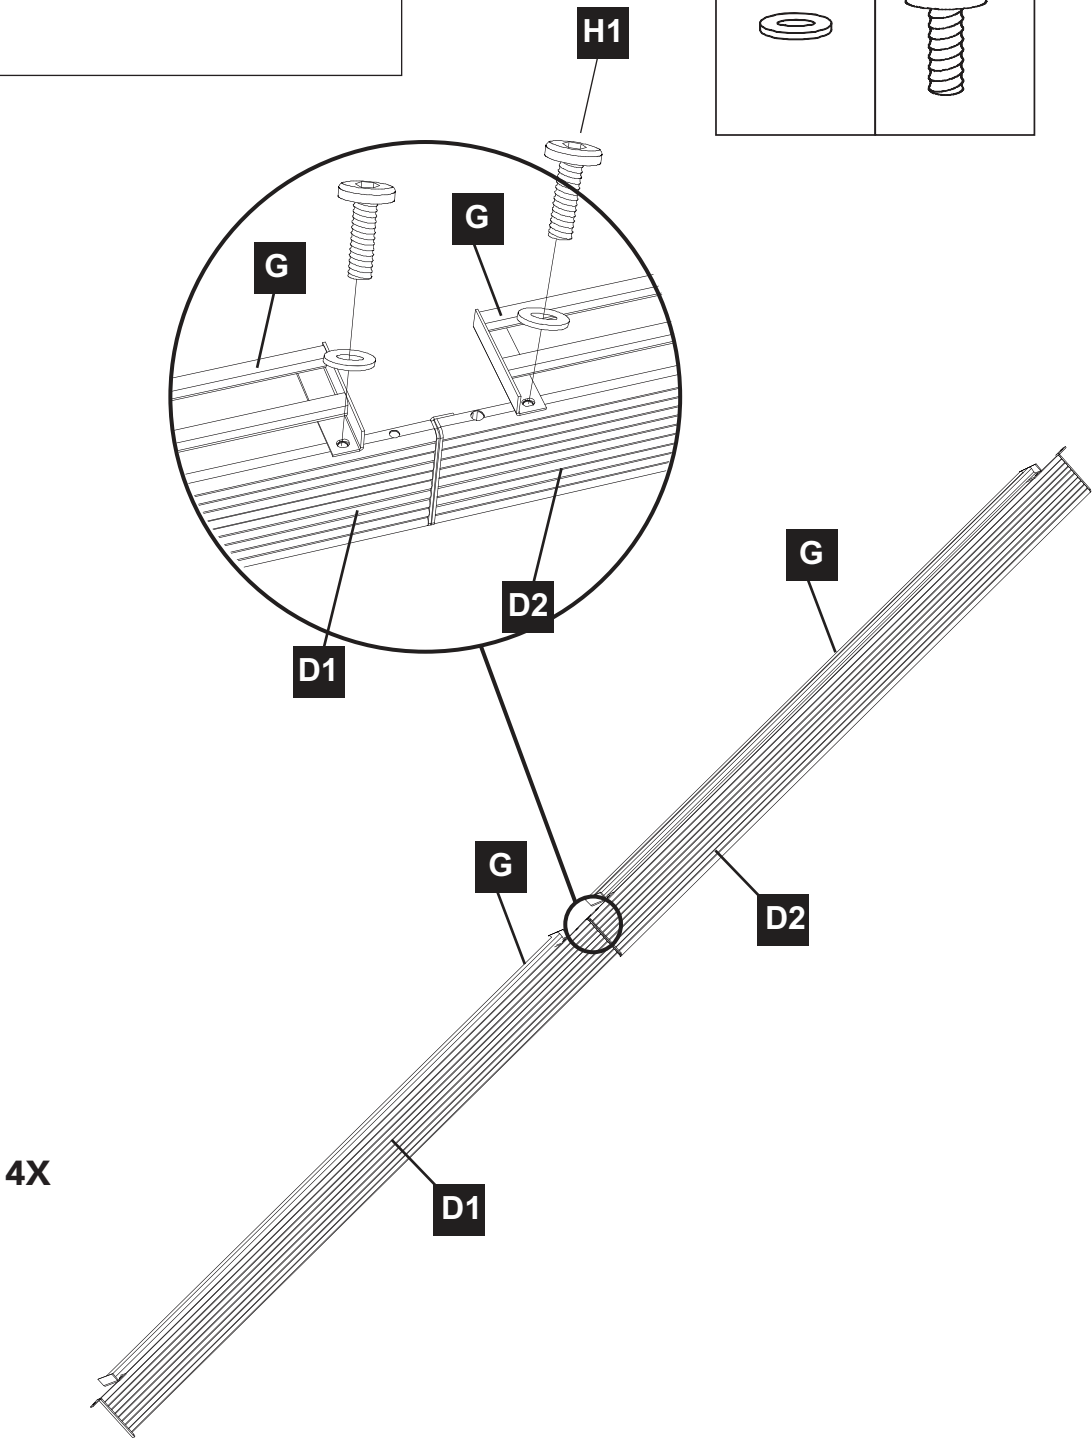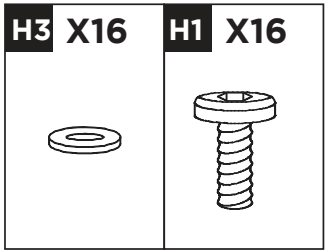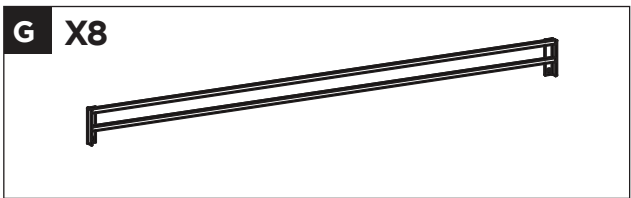

Step-by-step Guide

   
Step 4

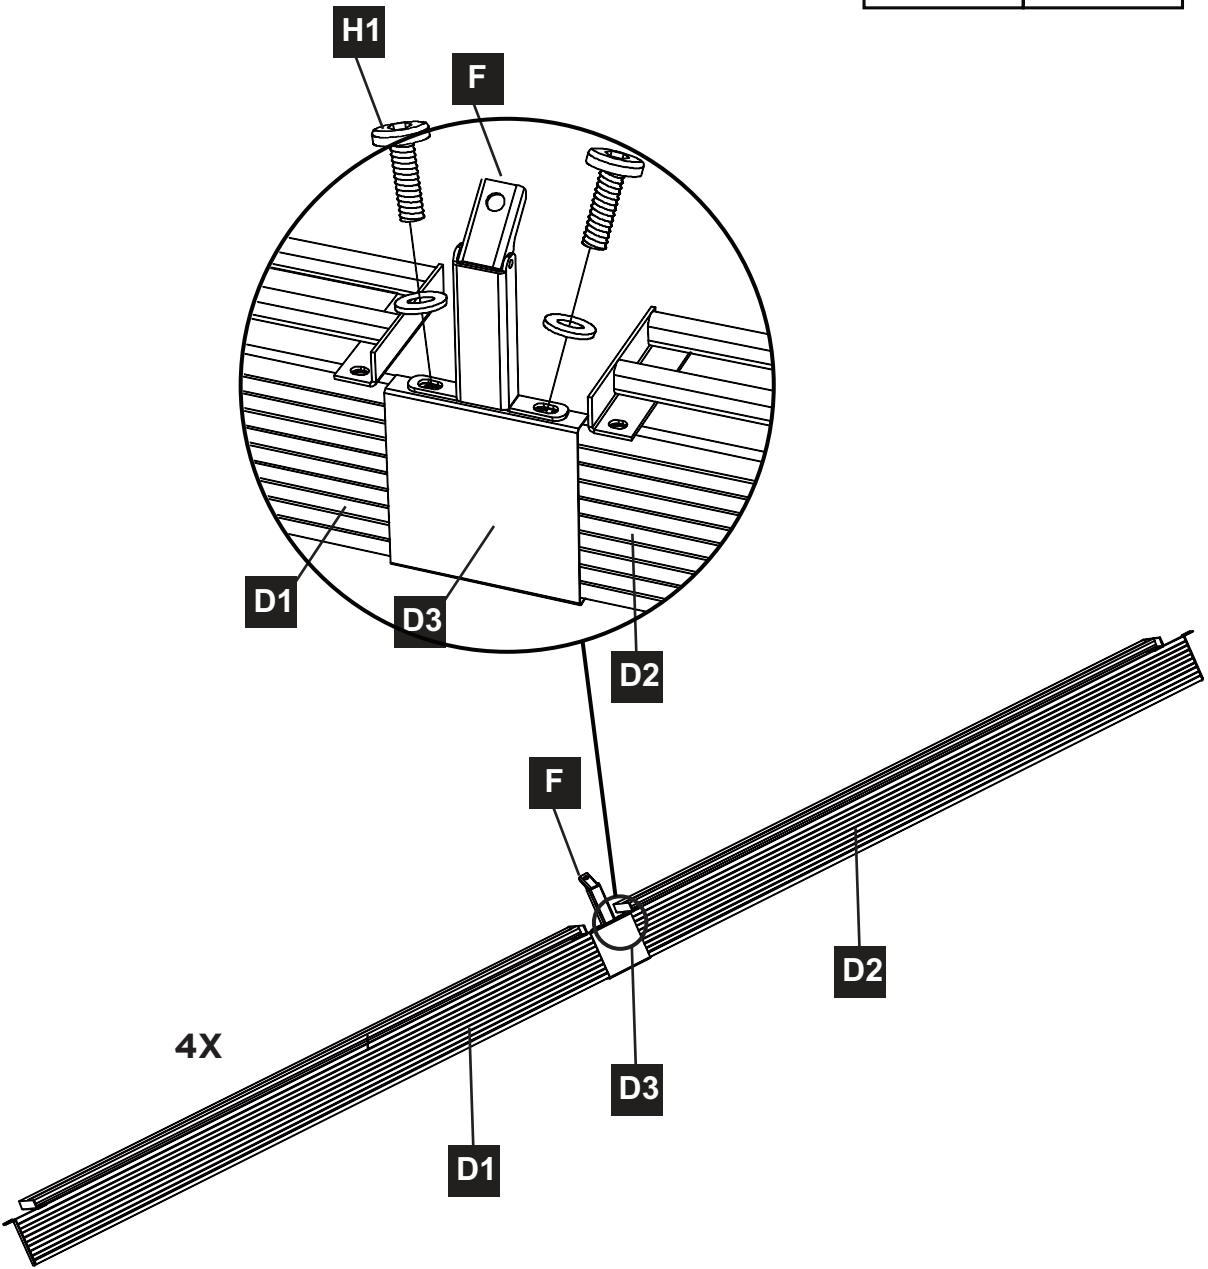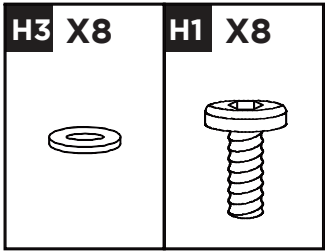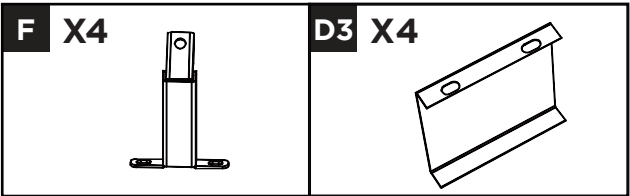

Step-by-step Guide






 Step 5

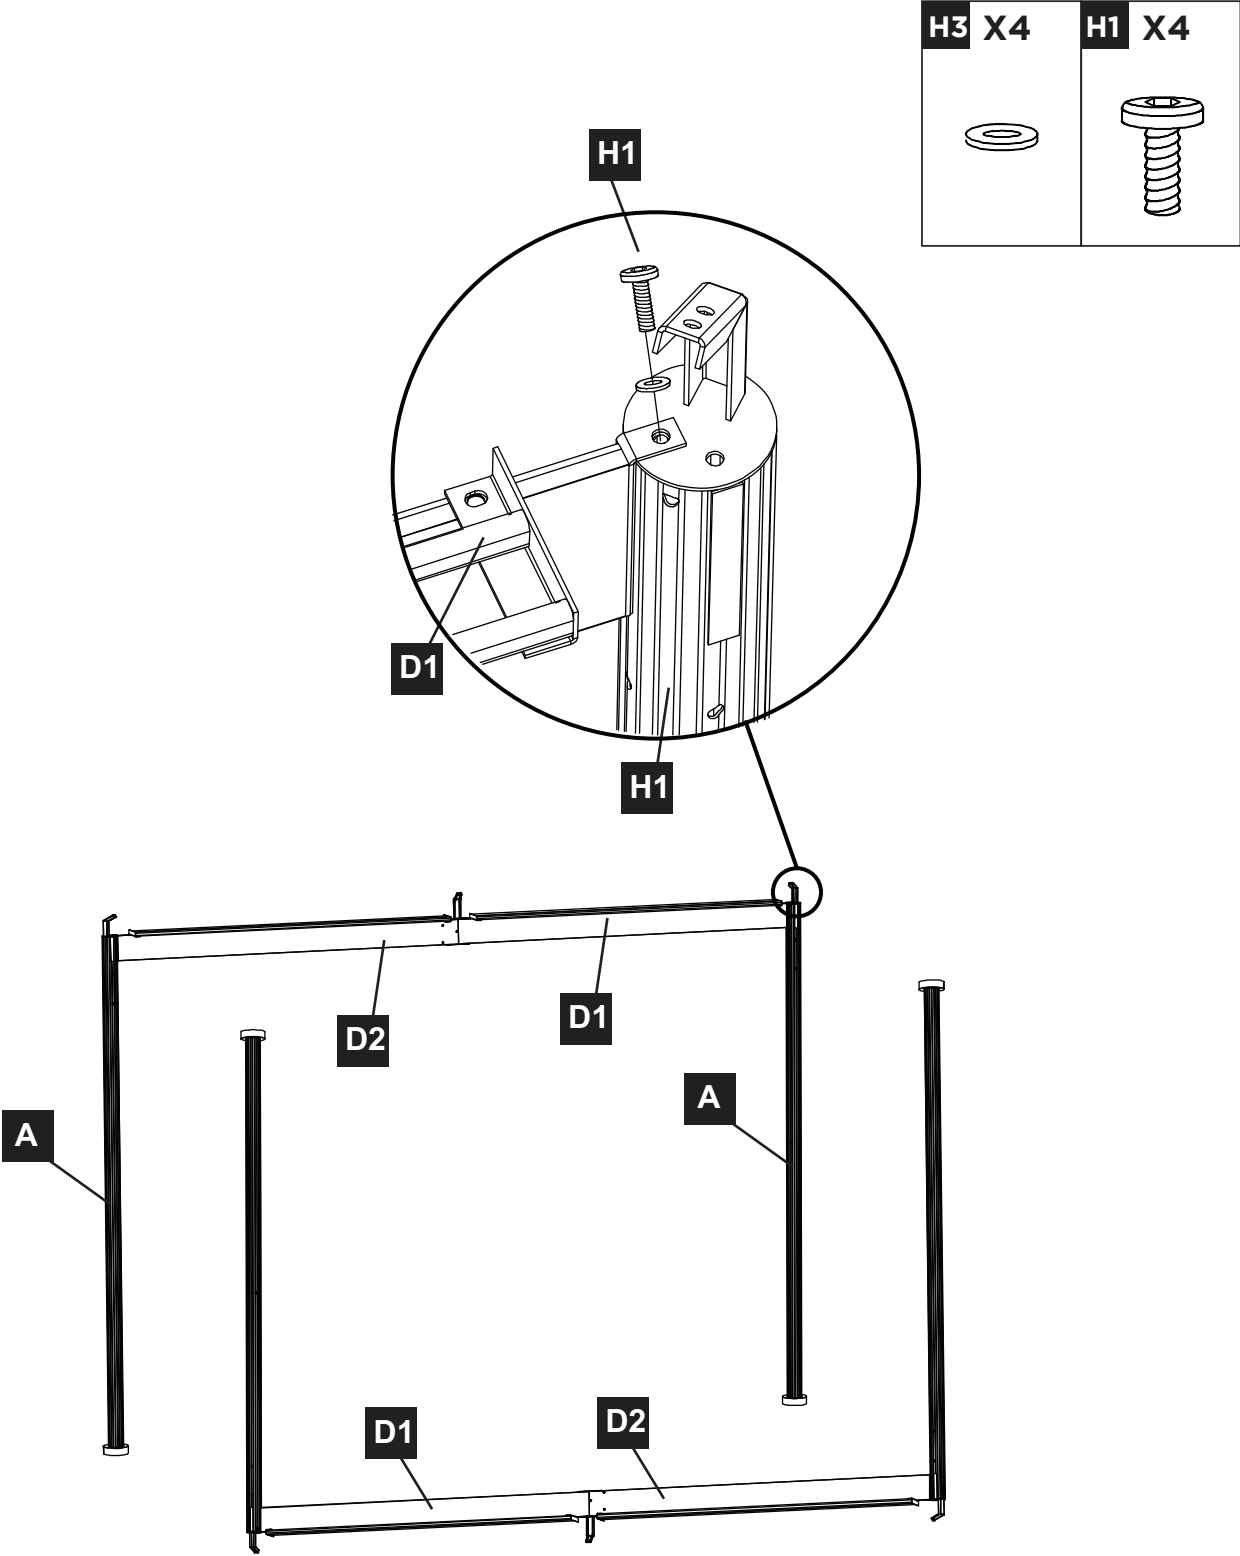

Step-by-step Guide

   
Step 6

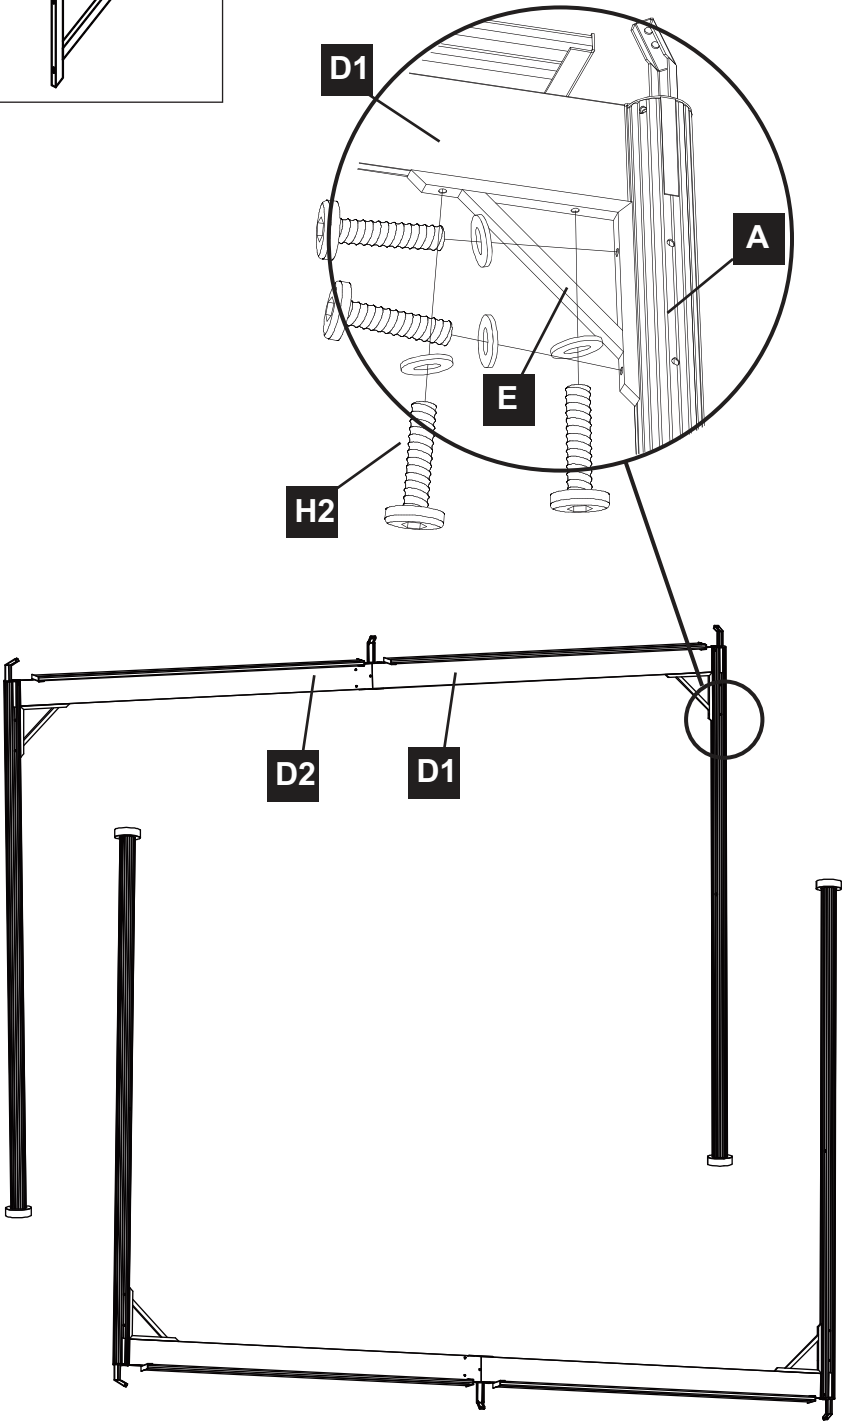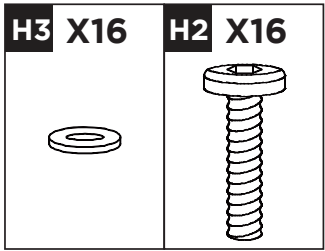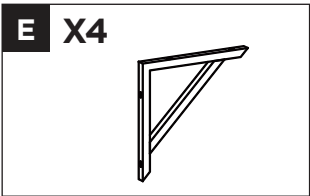

Step-by-step Guide






 Step 7


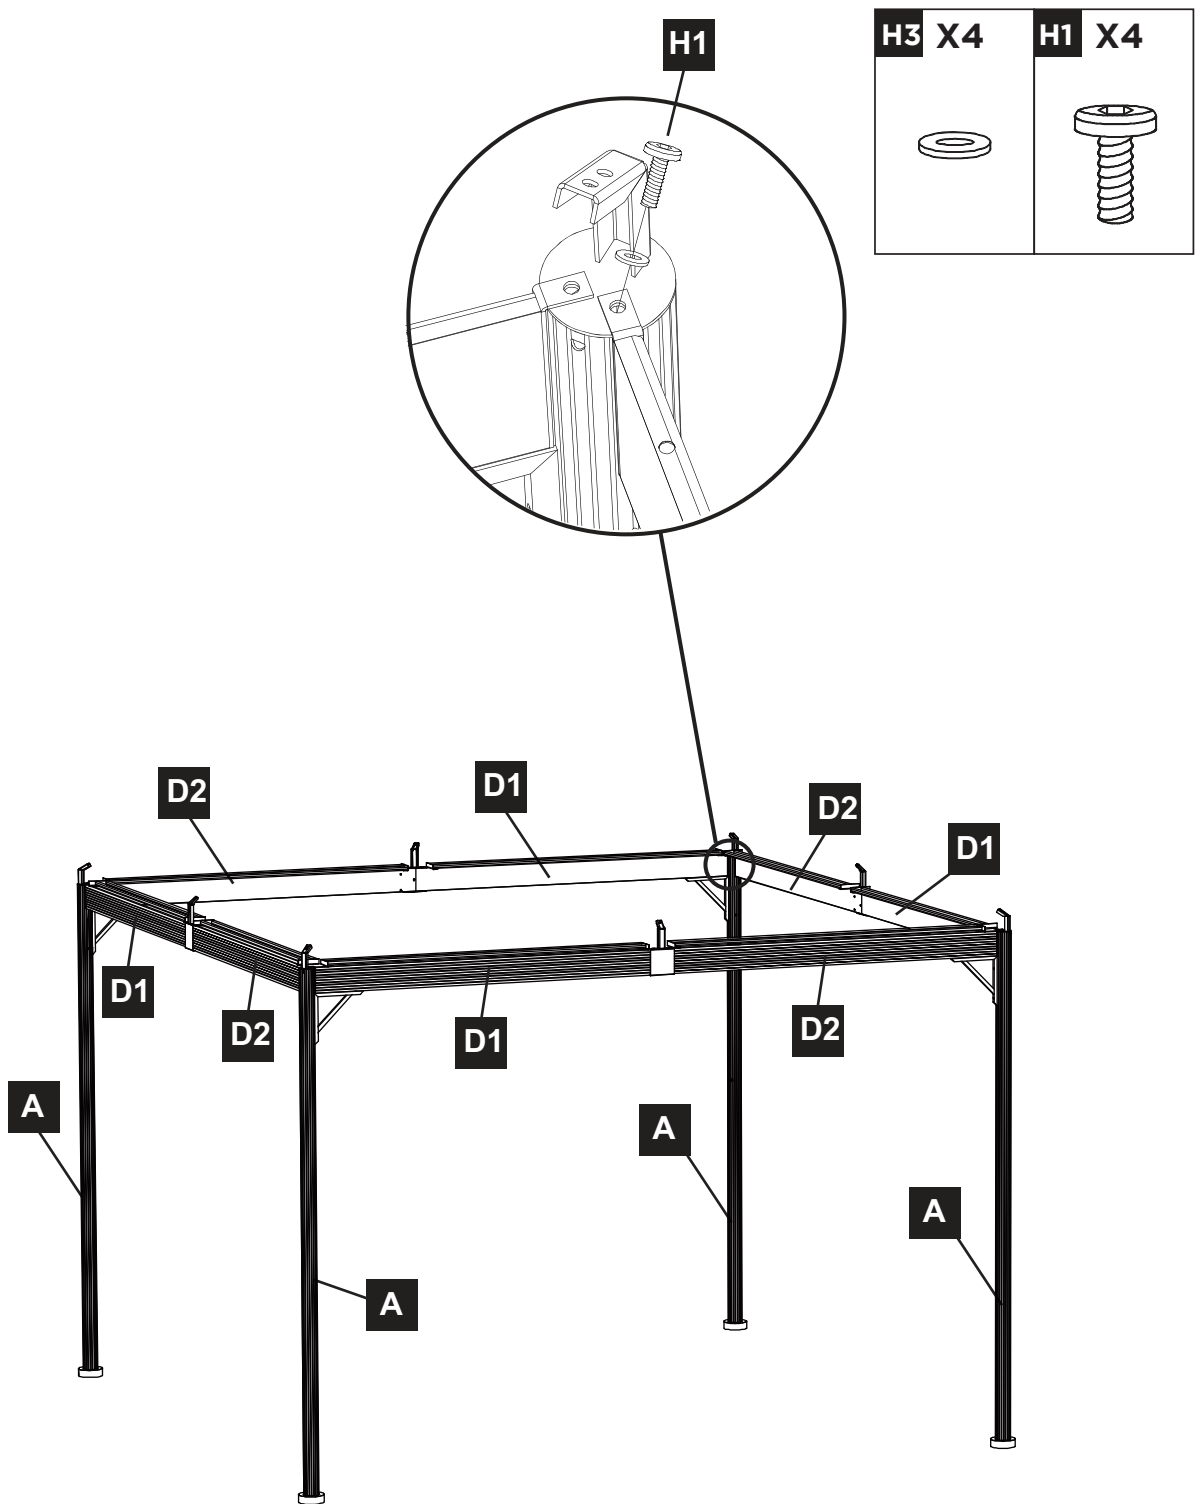


Step-by-step Guide

   Step 8

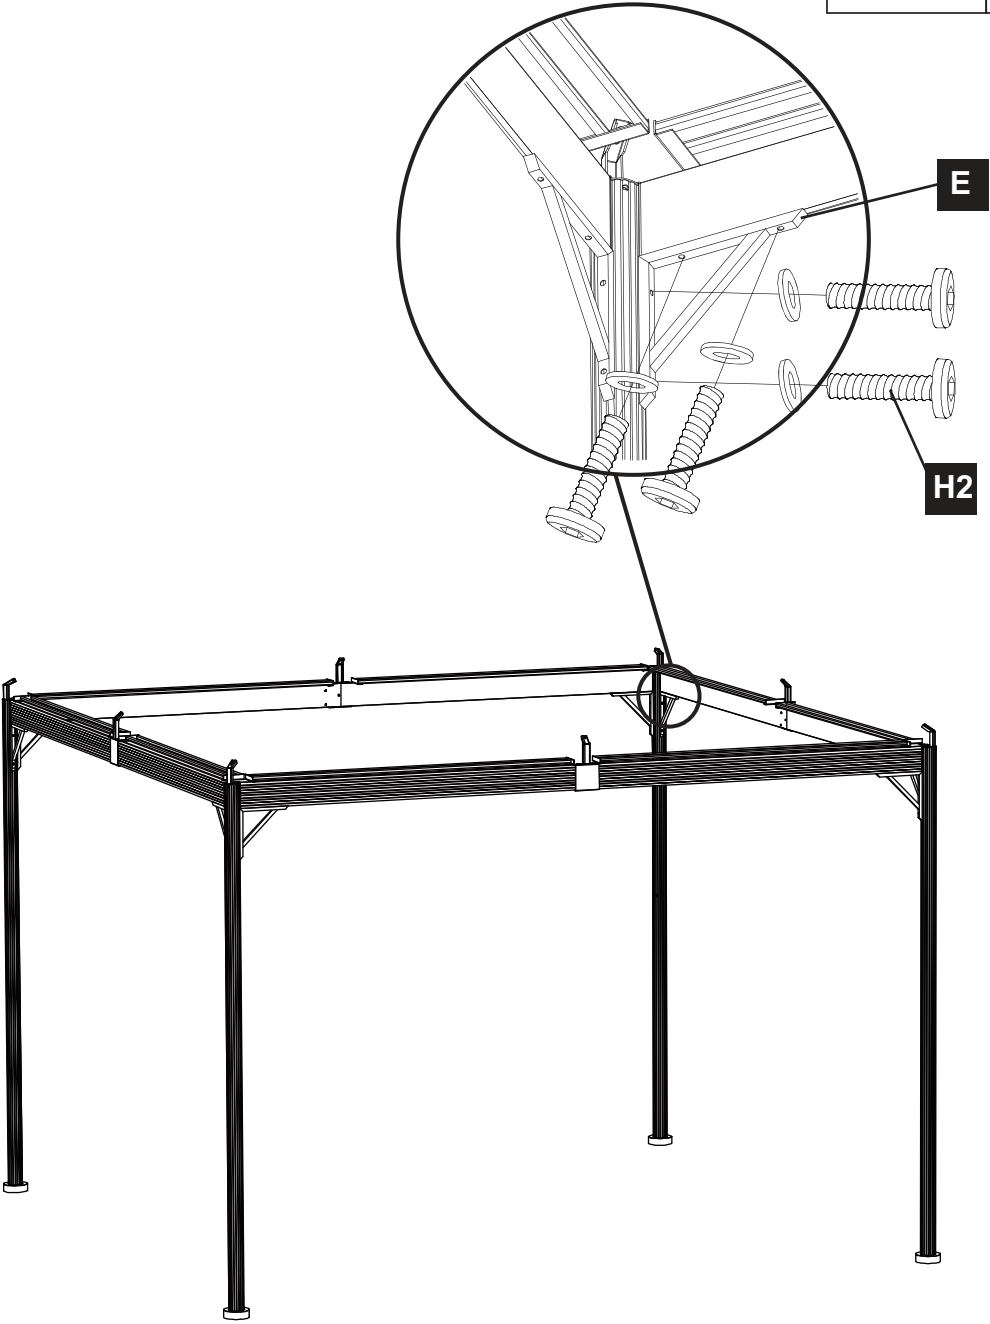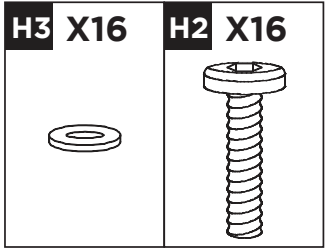
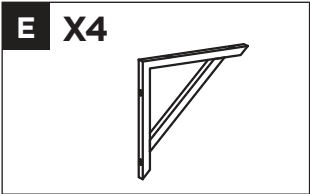


  Step 9

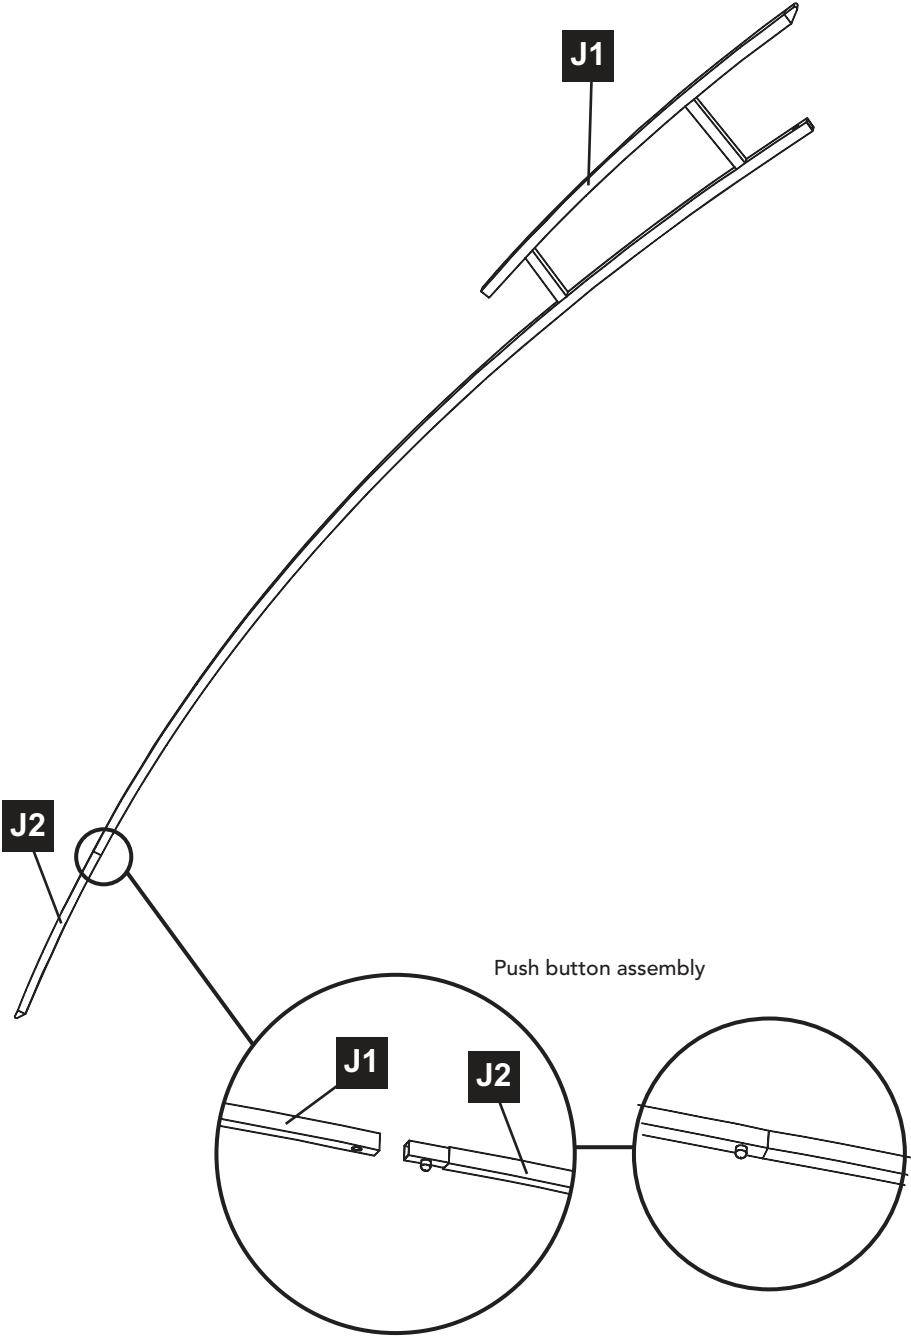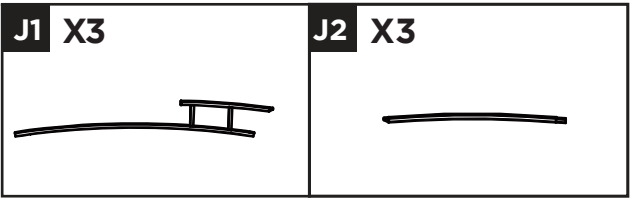

Step-by-step Guide

 
 
Step 10

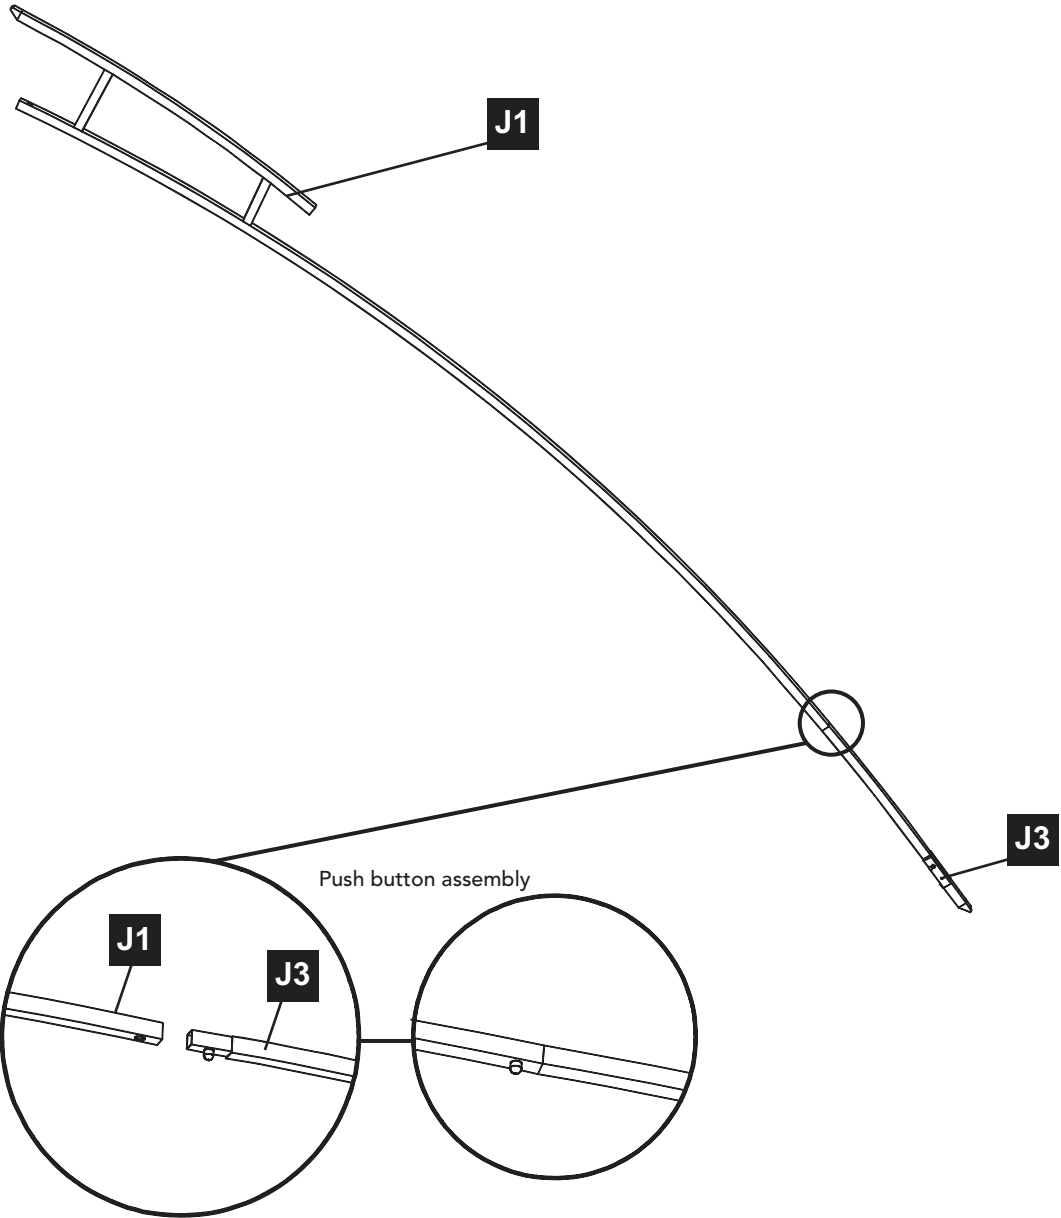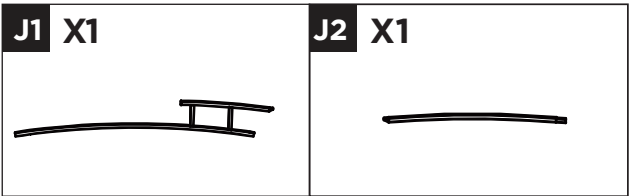

Step-by-step Guide

  
 



Step 11

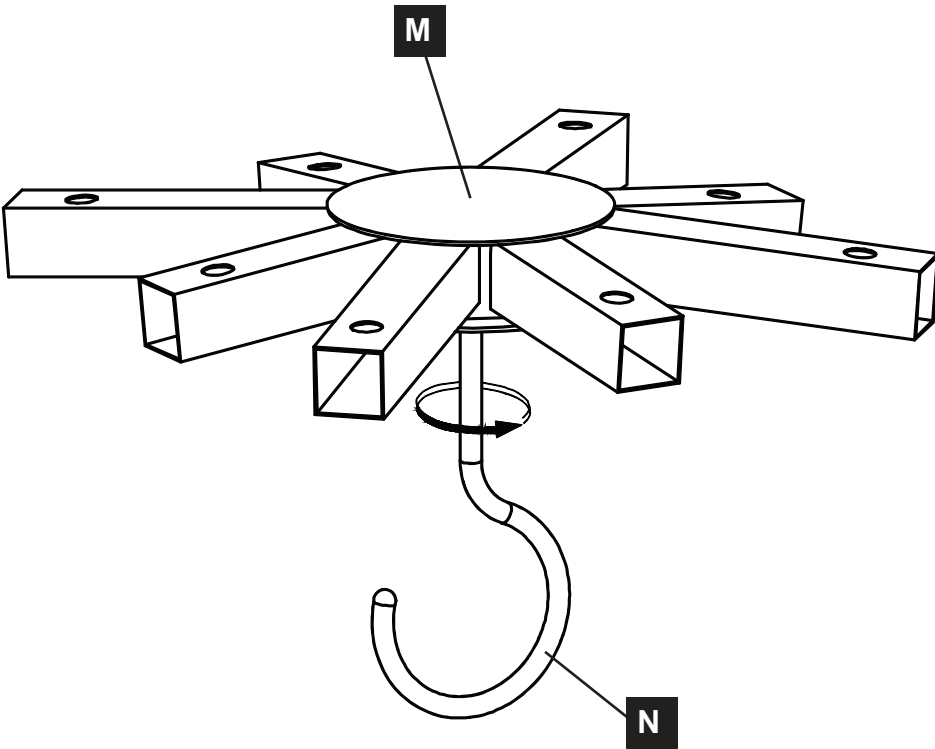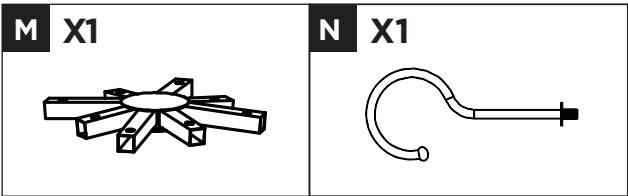

Step-by-step Guide

Step 12




H3 X8	H1 X8
	

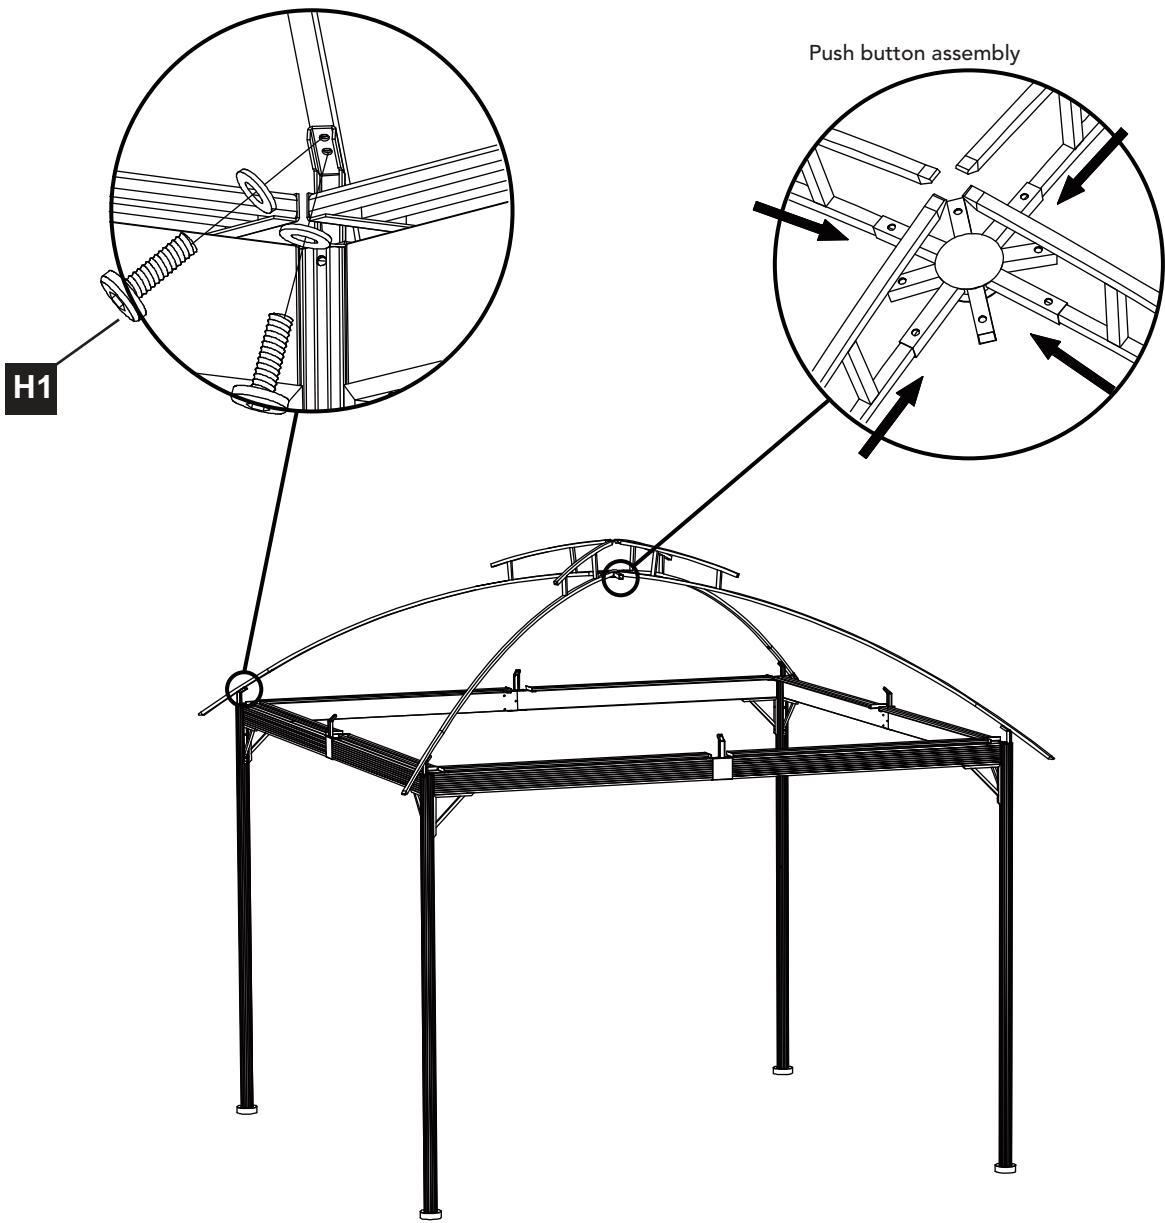 

Step-by-step Guide




   Step 13

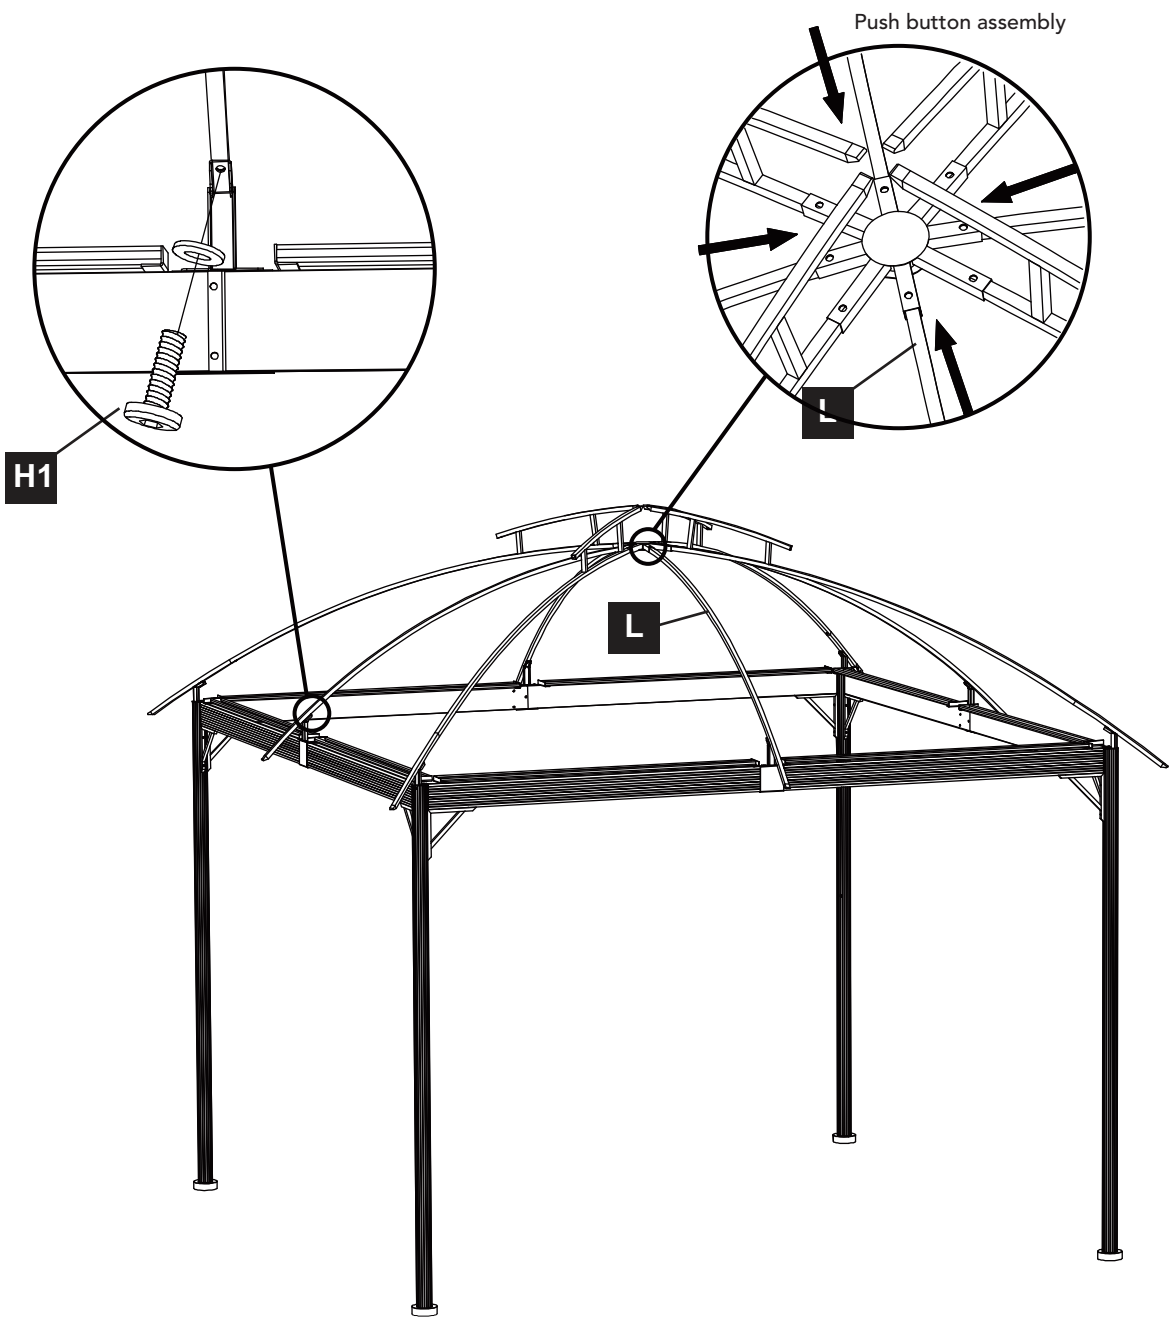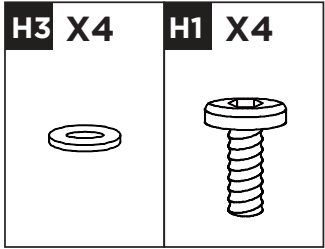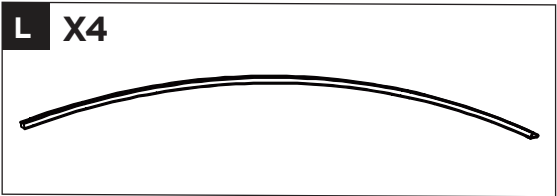

Step-by-step Guide


 
Step 14

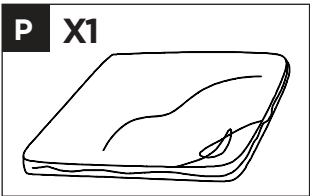

Step-by-step Guide




  Step 15

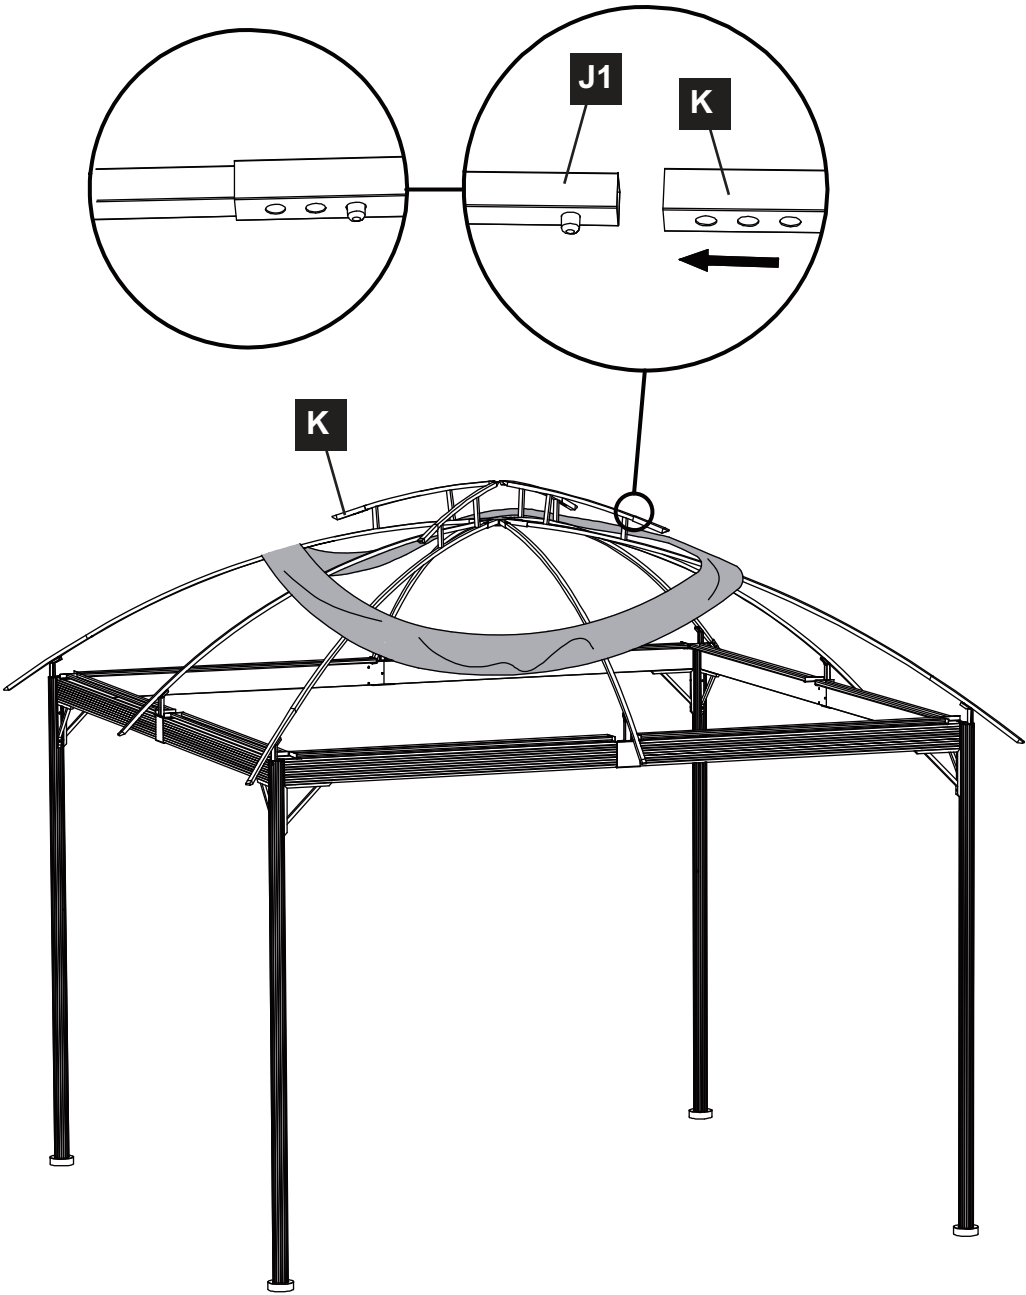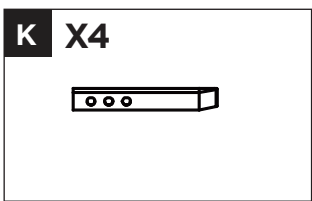


Step-by-step Guide

 Step 16

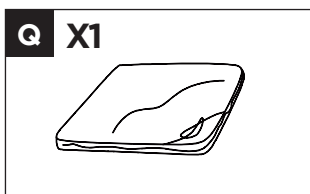

 
To achieve a snug fit for the canopy, adjust the position of K using a different hole as shown below.

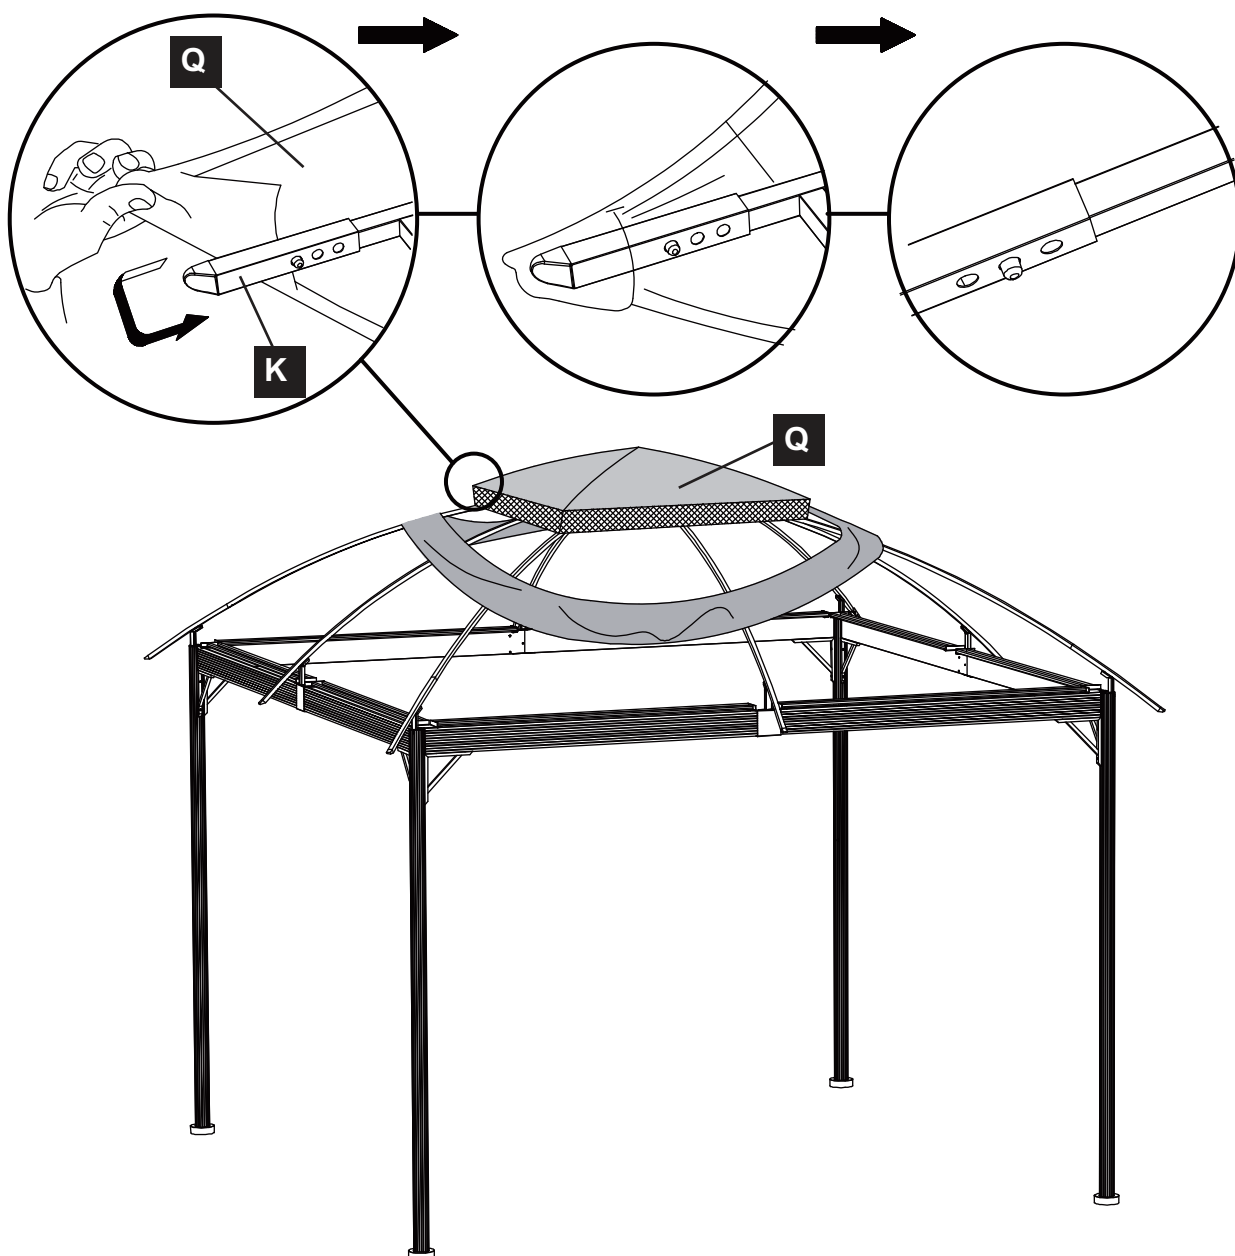

Step-by-step Guide





 Step 17

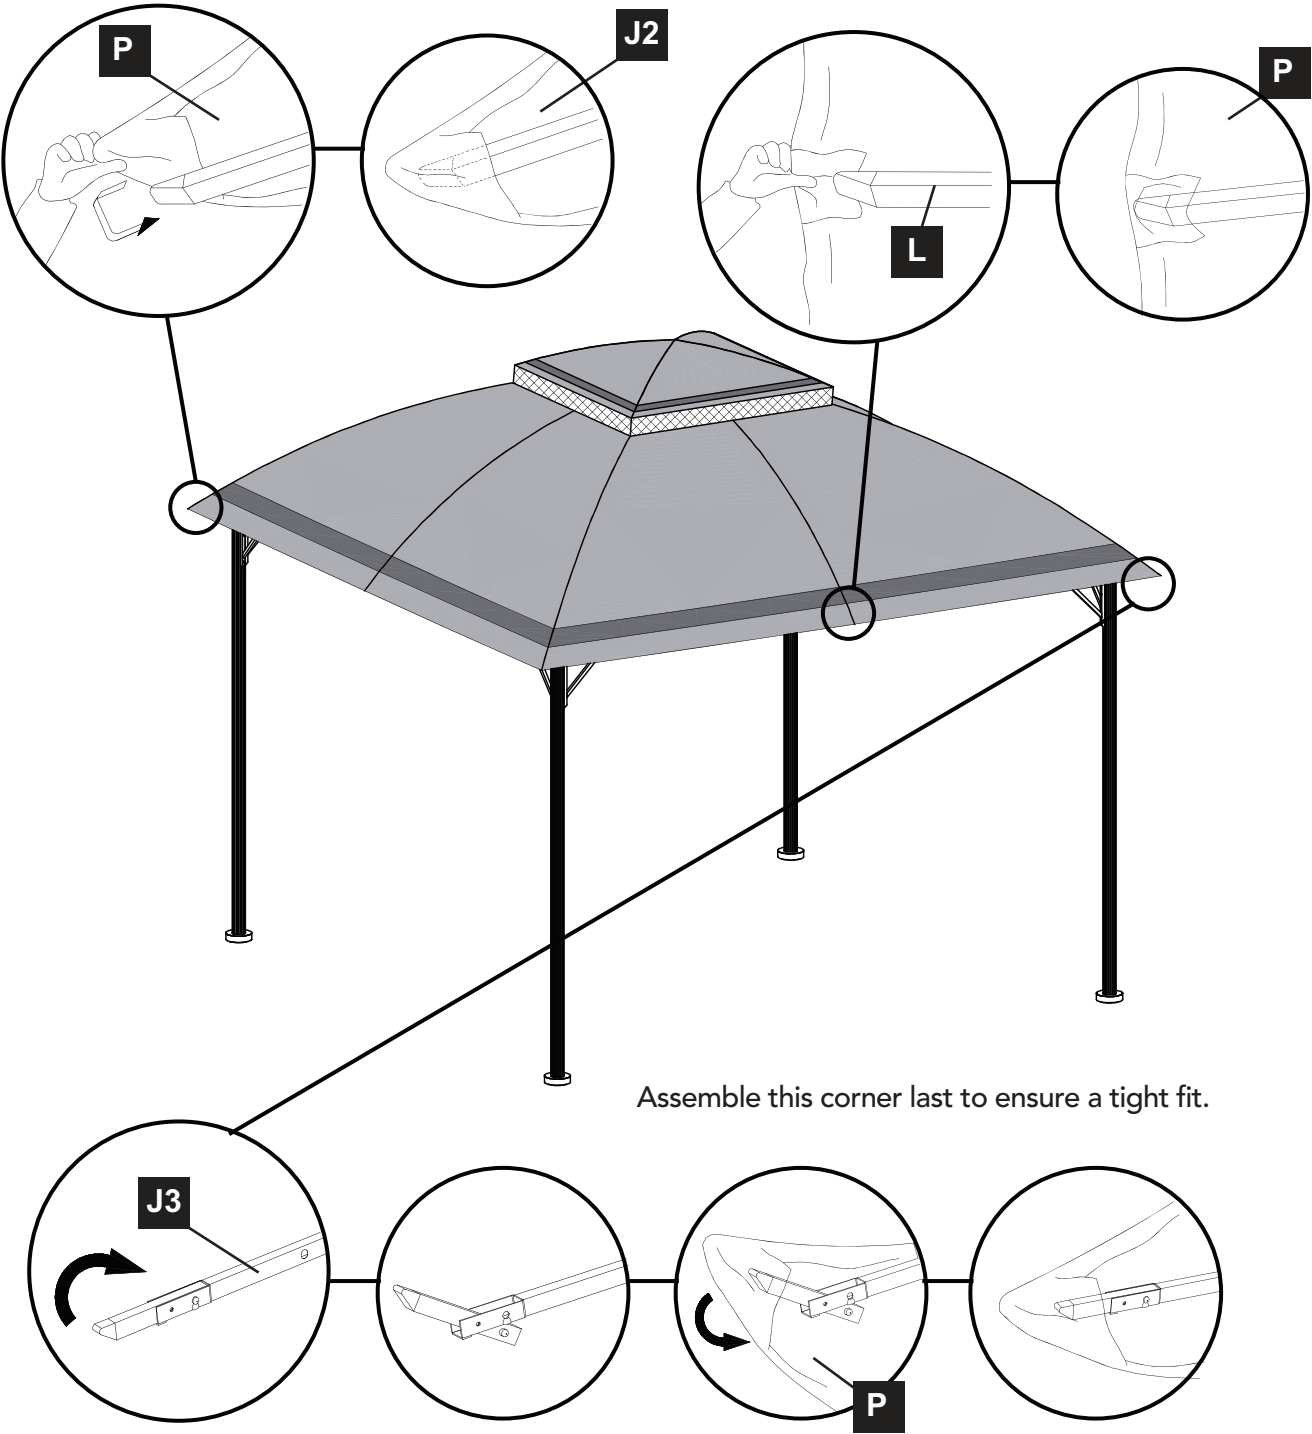

Step-by-step Guide


 
 
Step 18

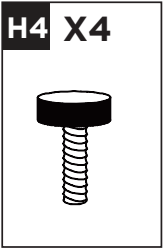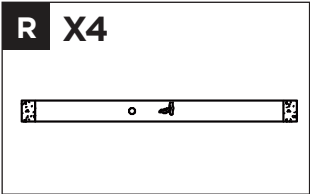

Step-by-step Guide



  
 
Step 19

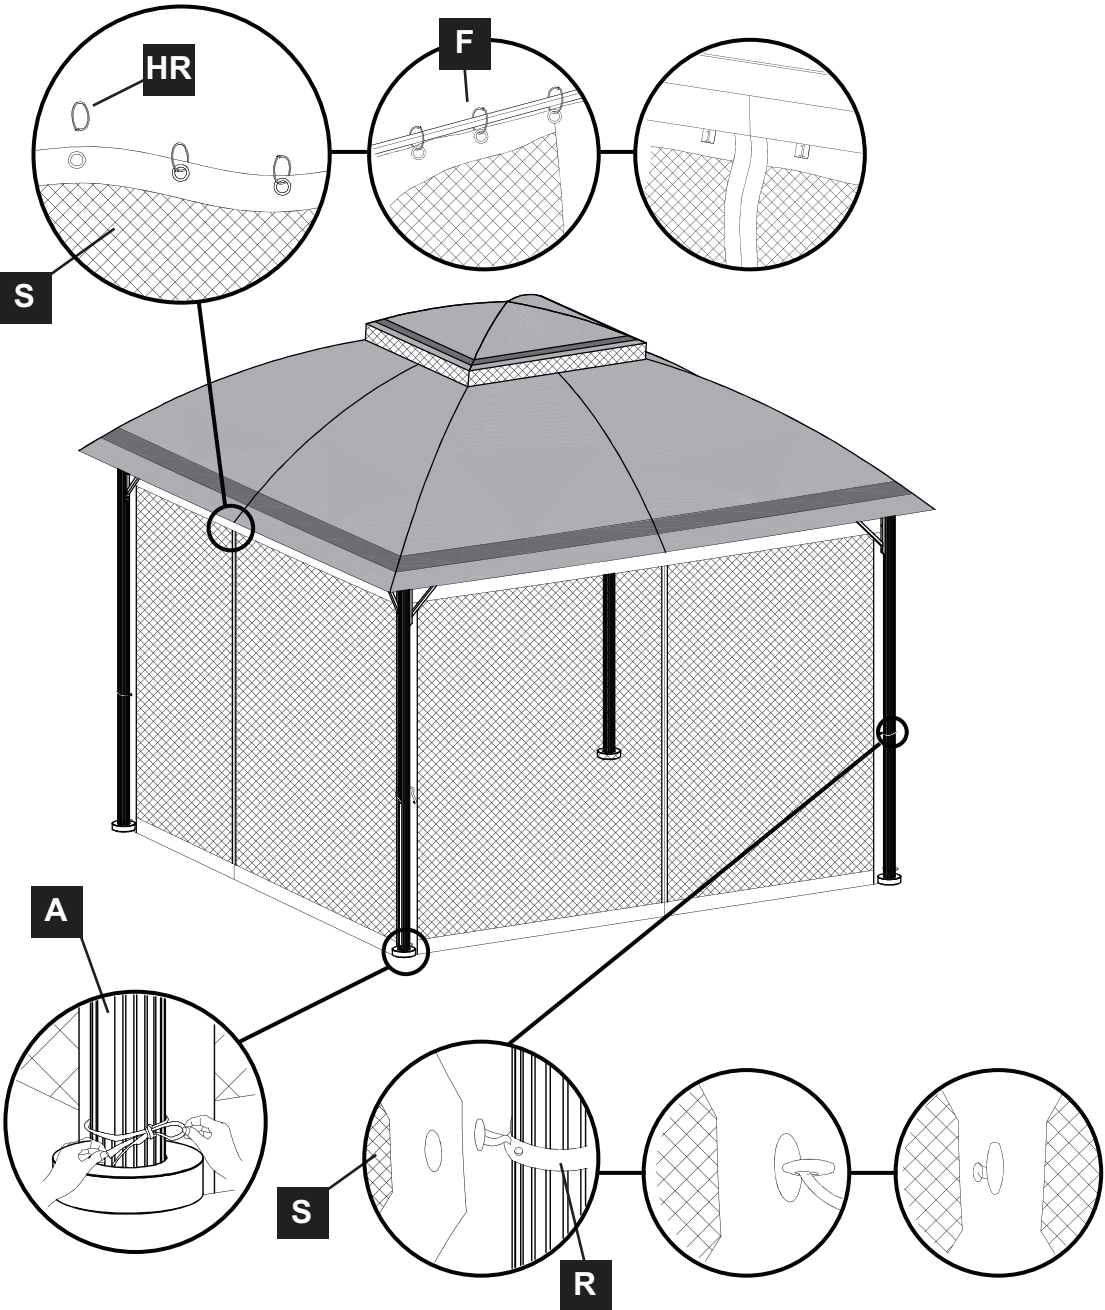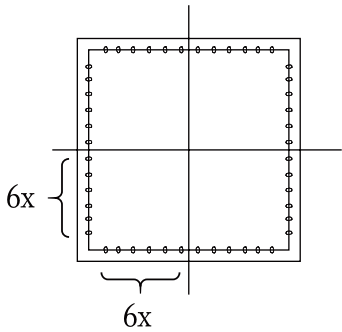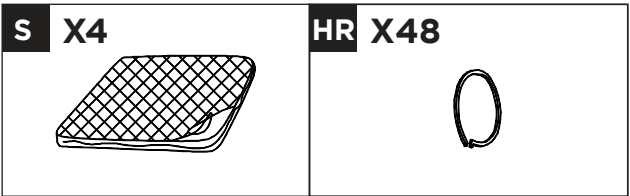


Step-by-step Guide

Step 20

   HS X8

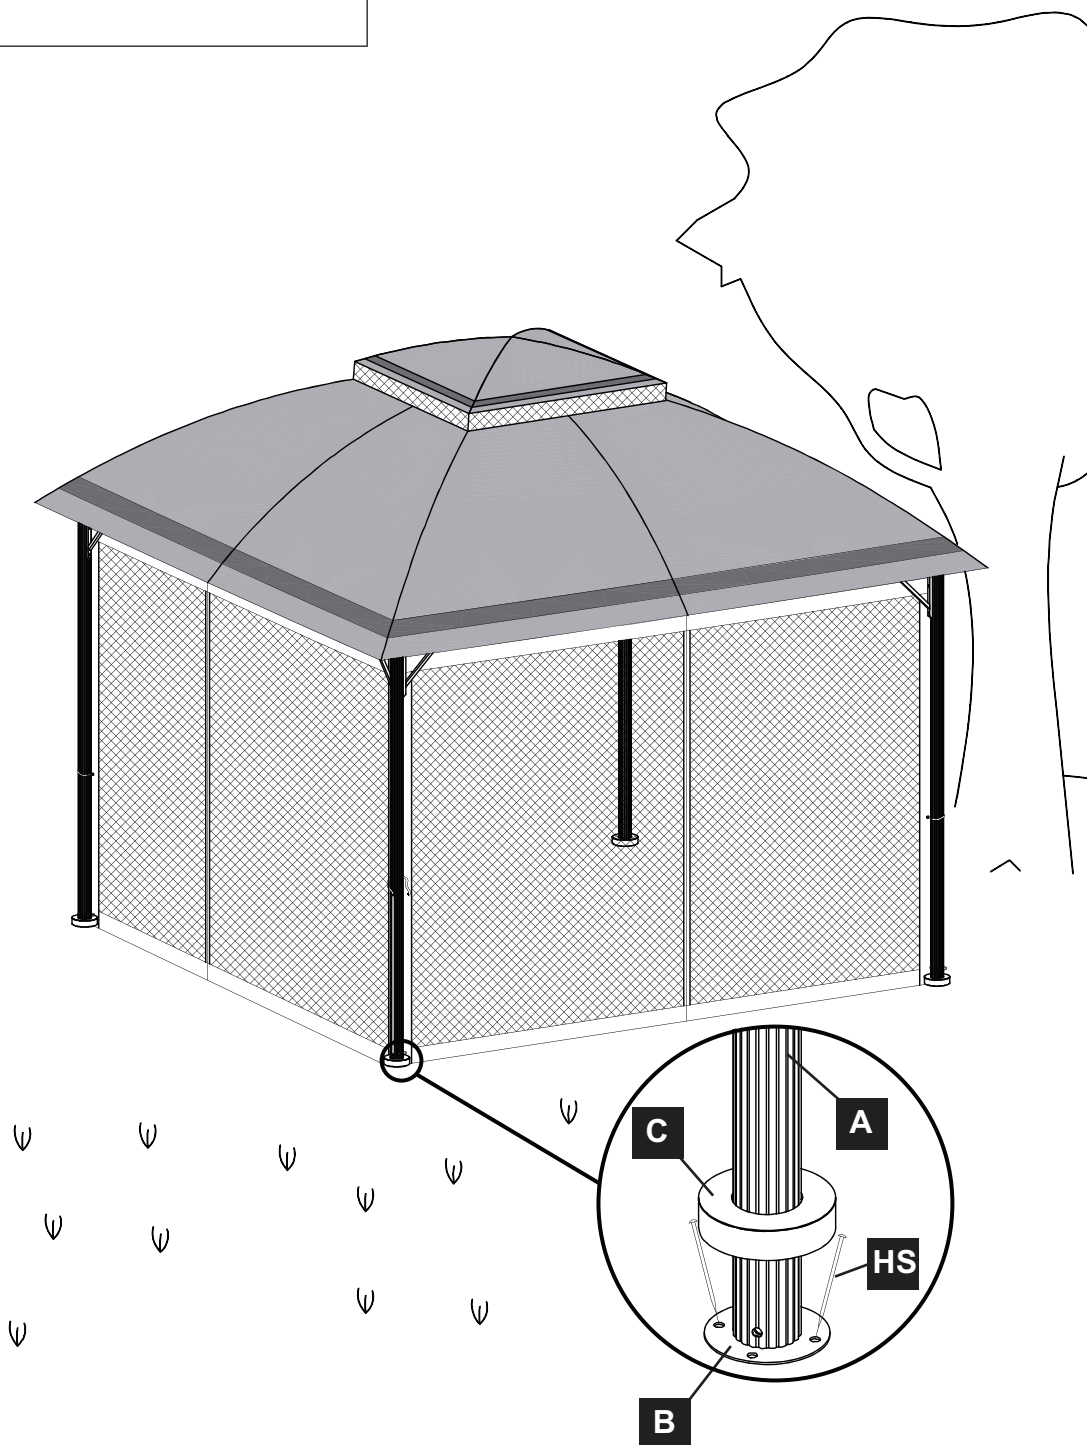

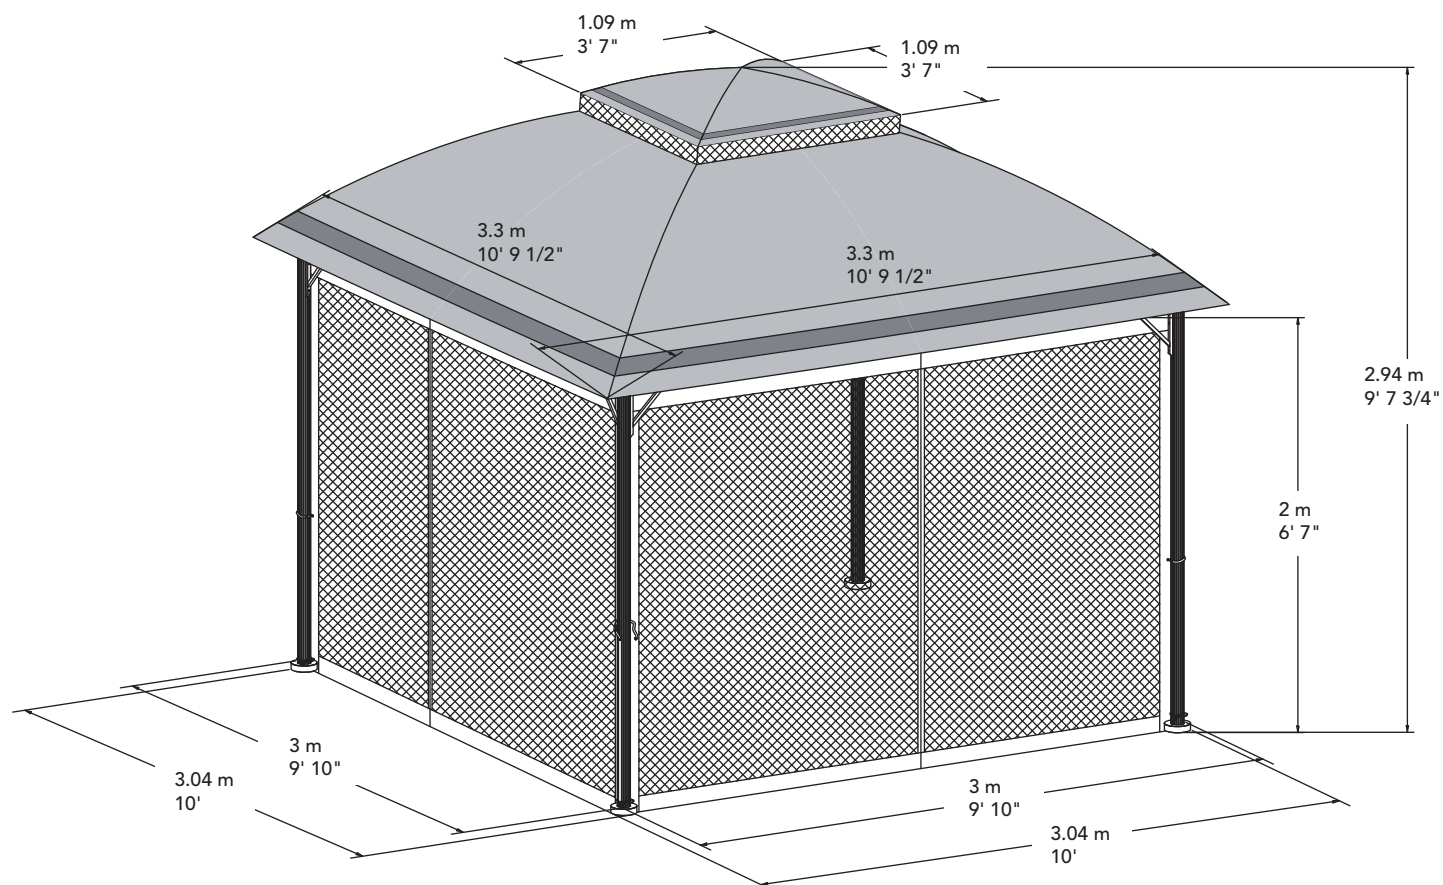

Dimensions (L x W x H)

3.3 x 3.3 x 2.94 m

10' 9 1/2" x 10' 9 1/2" x 9' 7 3/4"

Product weight

48 kg

105 lb 13 oz

Troubleshooting

Need help?

Give us a call! We're here for you.

Toll-free: 1-877-483-6759



Before returning your product to store



Call us first!

If you have questions regarding your product or require warranty assistance, please call our customer service helpline.

Caring for Your Item



Caution!

- Check all screws and nuts periodically for tightness, fastening them again as required.
- Disassemble the gazebo in the reverse order of the assembly steps. Always disassemble the gazebo completely. A partially-disassembled gazebo is not stable enough to resist wind and bad weather, and therefore can be damaged and/or cause damage.
- Keep all flame and heat sources away from the tent fabric. This tent is made with fabric that meets CPAI-84 specifications for flame resistance. It is not fire proof. The fabric will burn if left in continuous contact with any flame source. The application of any foreign substance to the tent fabric may render the flame-resistant properties ineffective.

- To wash the fabric parts:
 - Spread the fabric and use a soft-bristle brush to clean.
 - Always use a natural soap. Never use detergent.
 - Water should be cold to lukewarm, not more than 25°C (77°F).
 - Air dry only. Do not spin in washing machine or hand squeeze.
- Do not use bleach, acid, or other abrasive cleaners on the canopies or frame parts.
- Steel components of garden accessories and furniture are coated with rust-inhibiting paint. However, due to the nature of steel, surface oxidation (rusting) will occur if this protective coating is scratched. This is a natural process. To minimize this condition, it is recommended that care be taken when assembling and handling the product, in order to prevent the paint from being scratched. Surface rust can be removed easily by applying little common cooking oil. If surface oxidation (rusting) occurs and no measures are taken to correct it, the oxidation may start dripping onto the assembly surface, which may cause stains that could be difficult to remove.
- Keep instruction manual for future reference.
- Keep the original packaging to store the gazebo.

Warranty



1-Year Limited Warranty*

This For LIVING® product carries a one (1) year warranty against defects in workmanship and materials. Trileaf Distribution agrees to replace the defective product free of charge within the stated warranty period, when returned by the original purchaser with proof of purchase. This product is not guaranteed against wear or breakage due to misuse and/or abuse.

Model No. 188-1361-8

Made in China

Imported by Trileaf Distribution Trifeuil Toronto, Canada M4S 2B8