


## ELECTRIC HEIGHT ADJUSTABLE DESK (24 x 48 inches)

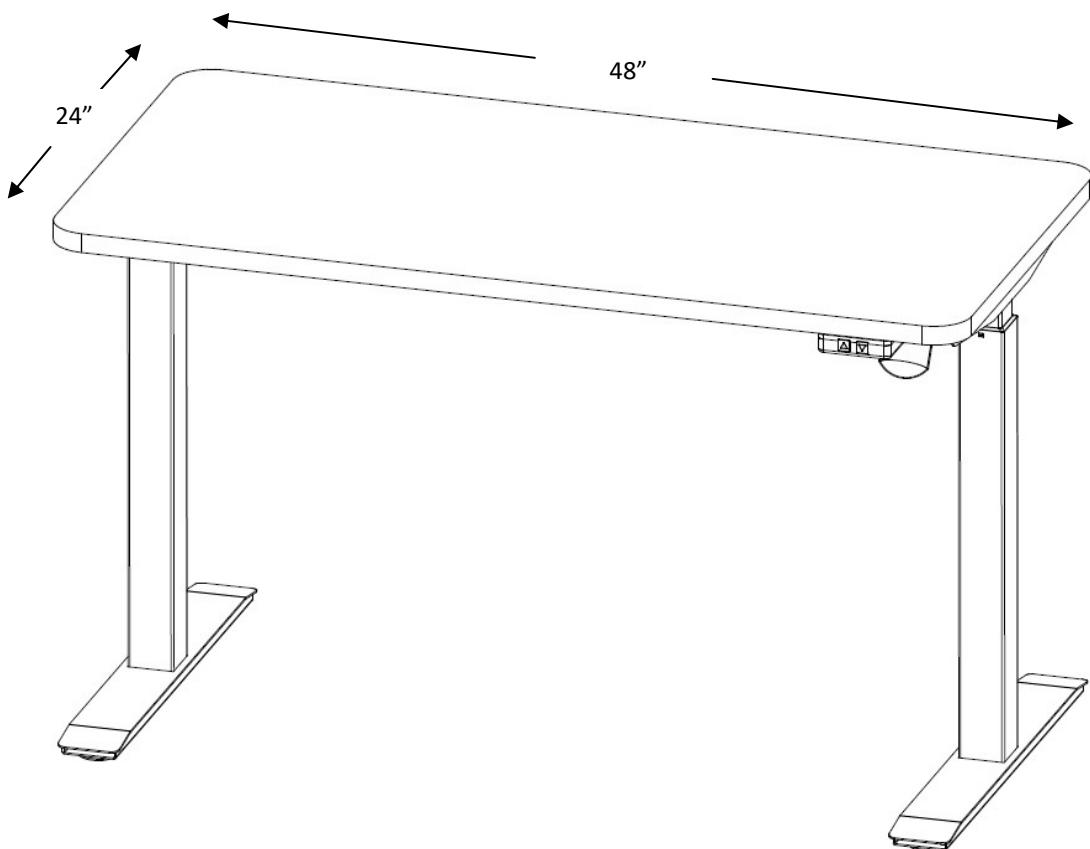

### *Assembly Instructions*

Assembly Instructions

Customer Service US:  
1-888-770-8078

## **TABLE OF CONTENTS**

Safety Instructions .....	03
Unpacking & Components.....	04
Desk Diagram .....	05
Installing Columns.....	06
Installing Feet.....	07
Connecting Controller.....	08
Connecting Cables.....	09
Initializing System.....	10
Troubleshooting .....	11
Warranty .....	12

# SAFETY INSTRUCTIONS

## WARNING!

FAILURE TO COMPLY WITH OR OBSERVE ALL ASSEMBLY, SAFETY AND OPERATING INSTRUCTIONS AND WARNINGS REGARDING THE USE OF THIS PRODUCT MAY RESULT IN SERIOUS BODILY INJURY.

### TO ASSURE SAFER OPERATION:



Read and understand this manual before attempting to install or operate.



Assure that everyone who uses this product is informed of the contents of this manual. This is the responsibility of the Purchaser.



This product is not intended for use by young children or for those persons who require supervision.

Safe use of this product is possible only when the operating instructions are read completely and the instructions contained are strictly observed. Persons who do not have the necessary experience or knowledge of this product must not use the product. Persons with reduced physical or mental abilities should not use this product, unless they are under supervision or they have been thoroughly instructed in the use of the apparatus by a person who is responsible for the safety of these persons. Children should be closely supervised to ensure that they do not play with this product.



This product must be INITIALIZED before use. Read the initialization part of the manual first prior to operating.

### BEFORE INSTALLATION, REINSTALLATION, OR TROUBLESHOOTING:

- Switch power off and disconnect power cord from the power outlet.
- Remove any loads or items from the work surface because movement may occur unexpectedly.

### BEFORE START-UP:

- Make sure desk has been initialized.
- Check all connections and cables. Make sure control box is connected to a power outlet.
- If the control box makes unusual noises or emits an odor, switch power off immediately.

# UNPACKING & COMPONENTS

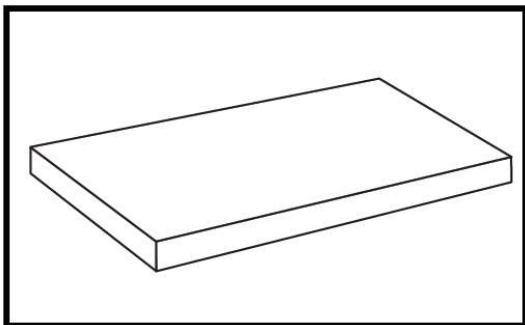


TABLE & COMPONENTS BOX



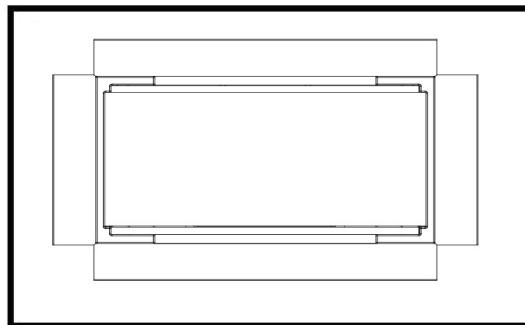


TABLE TOP VIEW

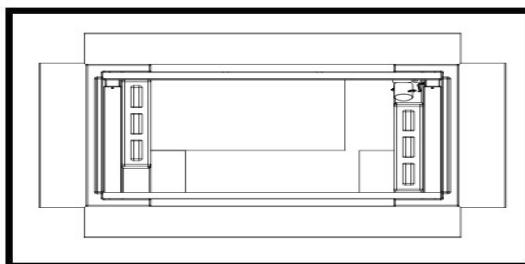


COMPONENTS

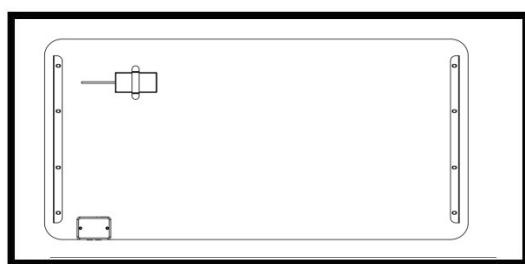

PRE-ASSEMBLED TABLE BOTTOM VIEW

The desk comes in one box. Carefully remove the contents from the package and inspect all components for damage. Don't install if there is visible physical damage on any component. The table top and support bracket with the height controller and power box are PRE-ASSEMBLED making it quick and easy to assemble.

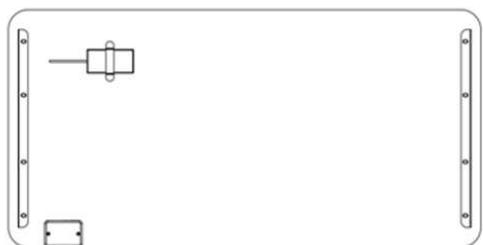

Pre-Assembled Table Top x1  
Power Box x1  
Support Bracket x1  
Height Controller with Control Box x1



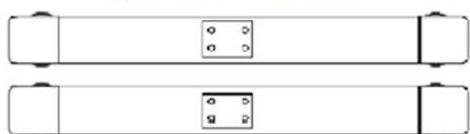



Table Foot x2

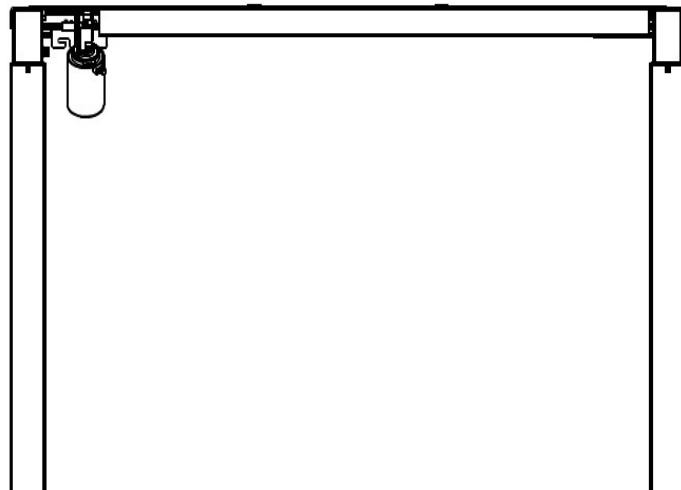


HARDWARE CONTENTS					
Ref.	Qty.	Description	Ref.	Qty.	Description
A	4	M6x12 Hexagon Screw	E	8	M8x16 Hexagon Screw
B	2	ST4.8x13 Pan Head Screw	F	3	Clips
C	1	4mm Allen Wrench			
D	1	5mm Allen Wrench			

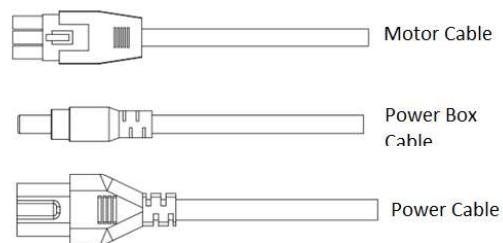

# DESK DIAGRAM


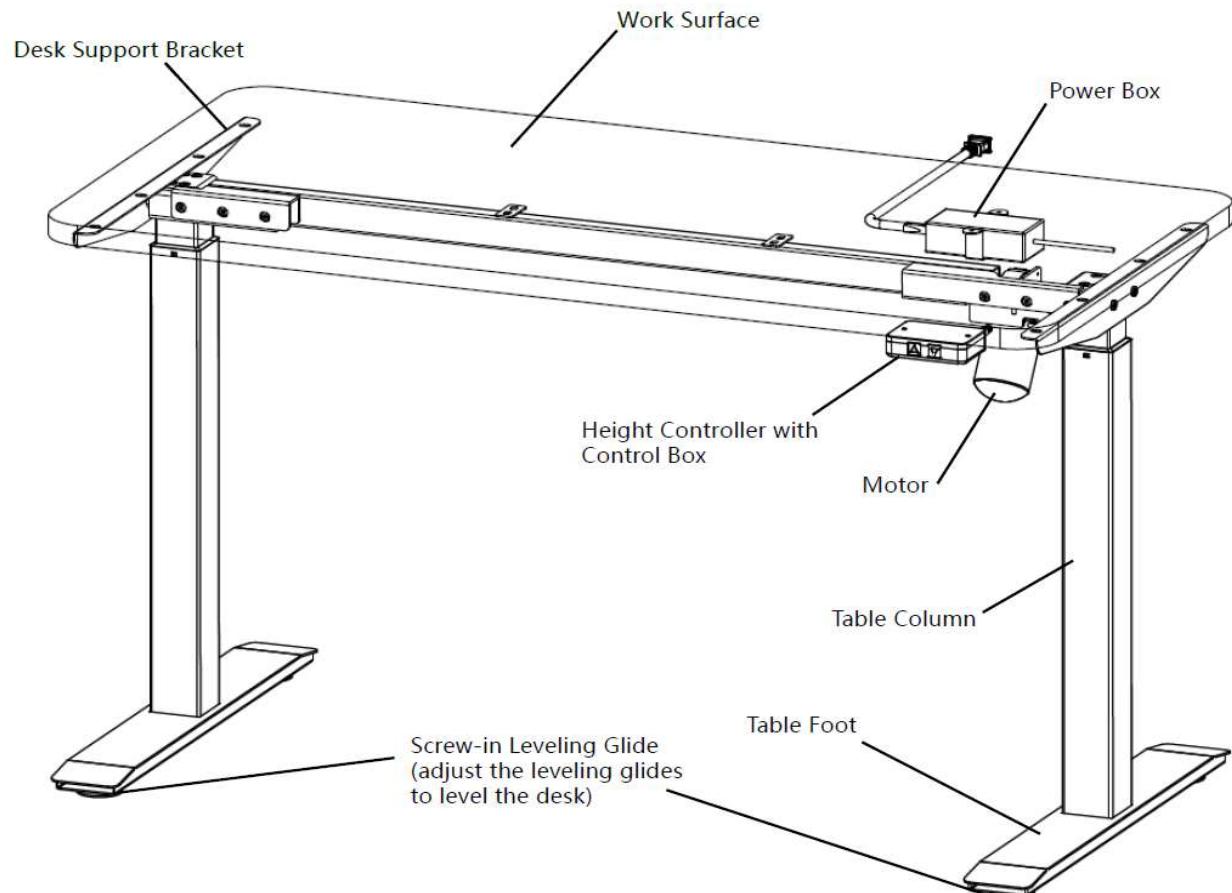


Height Controller with Control box

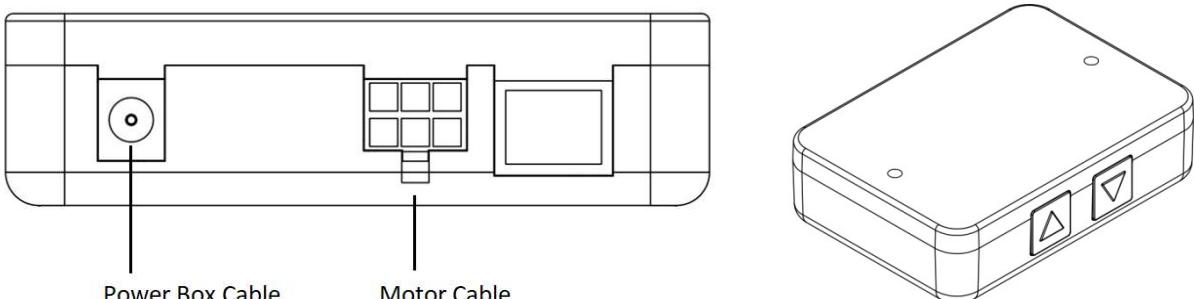

## Installing Column


Place desk top on a flat and non-abrasive surface. Carefully place Frame onto the desk top. The Frame is heavy, two people will be needed. Use 4mm Allen Wrench (C) to secure Frame and Support Bracket with two M6x12 screws (A).

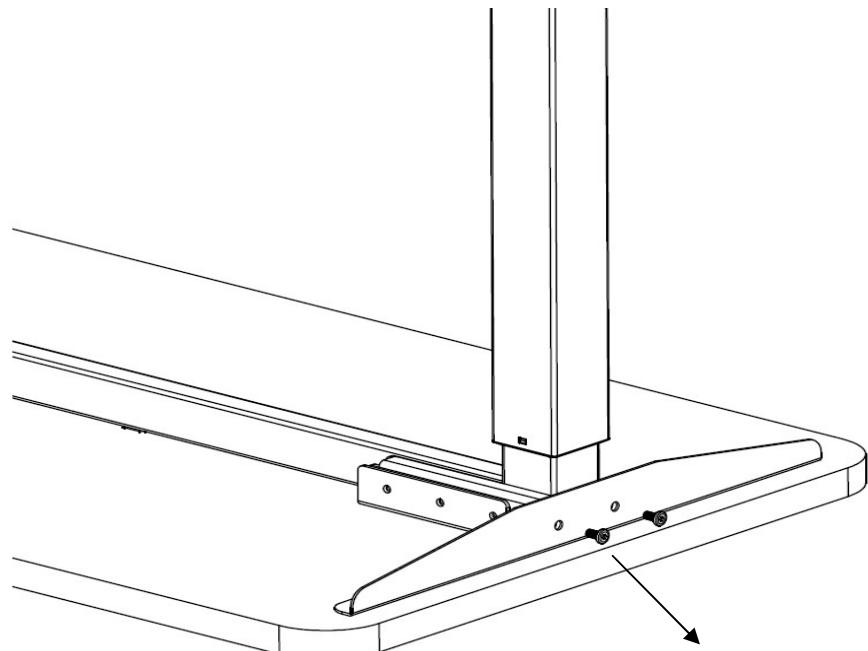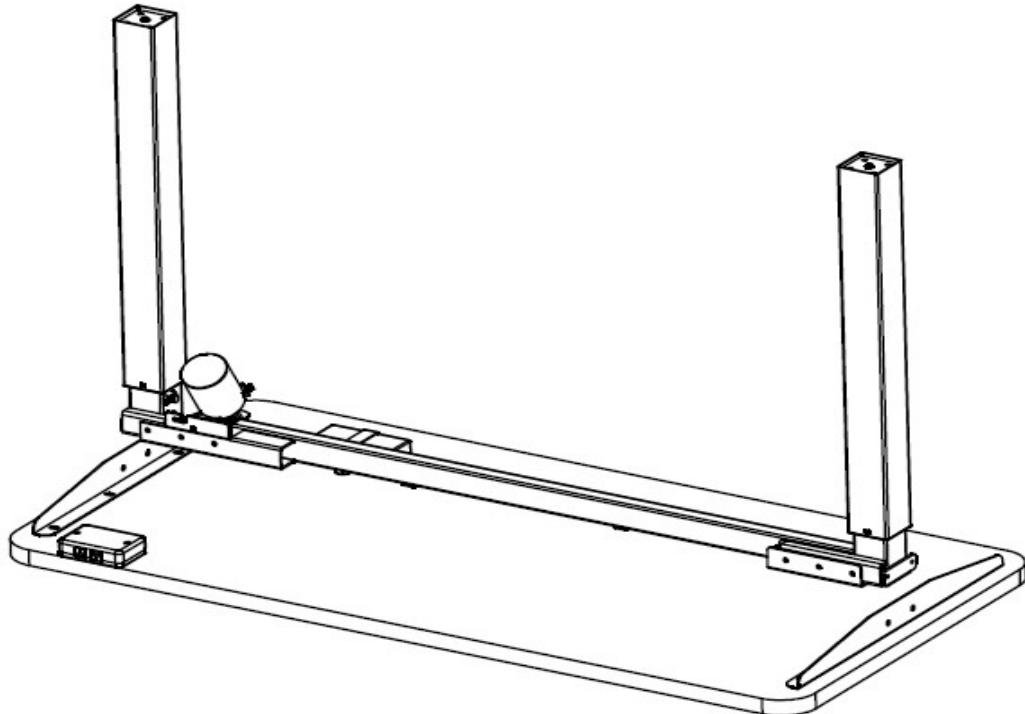

M6x12 screws (A)


## Installing Feet

Use 5mm Allen Wrench (D) to secure each foot with four M8x16 screws (E)

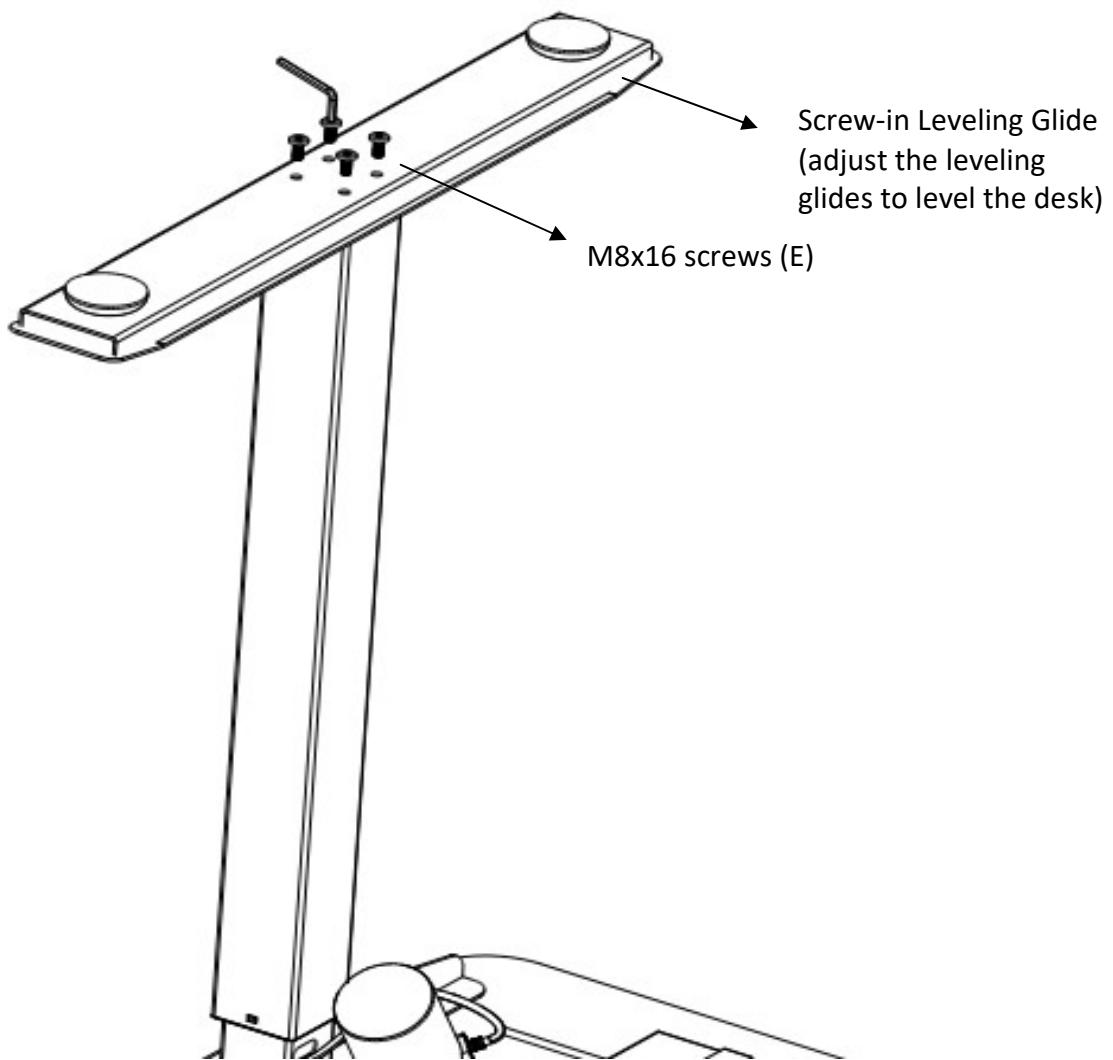

## Connecting Controller


Plug the Motor and Power Box cables into the Height Controller

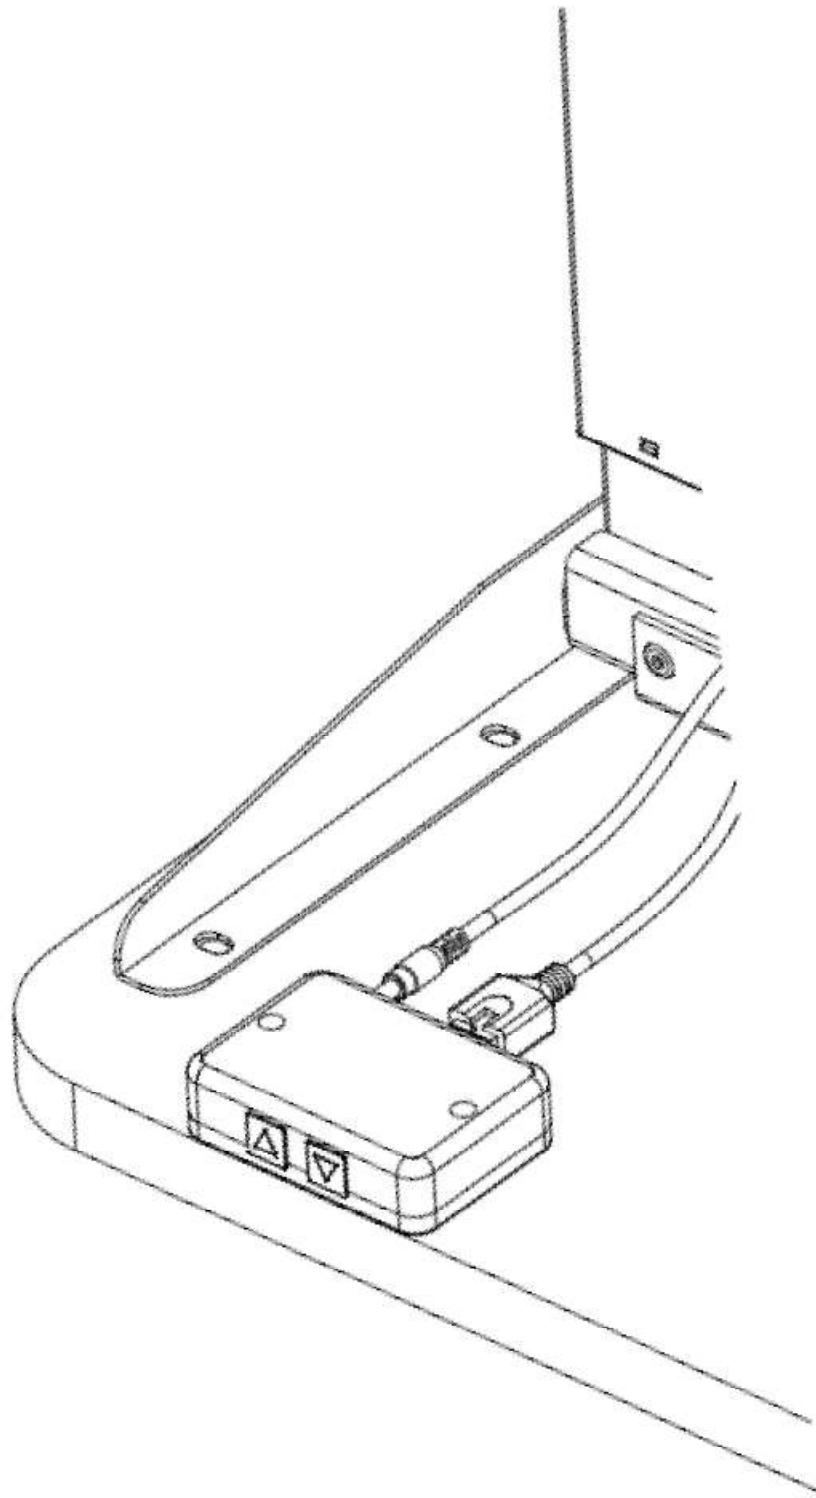


# CONNECTING CABLES

- 1) Connect Power Box Cable to the Controller
- 2) Connect Motor Cable to the Controller
- 3) Connect Power Cable to the Power Box
- 4) Plug Power Cord to power outlet



(Back View of Desk)

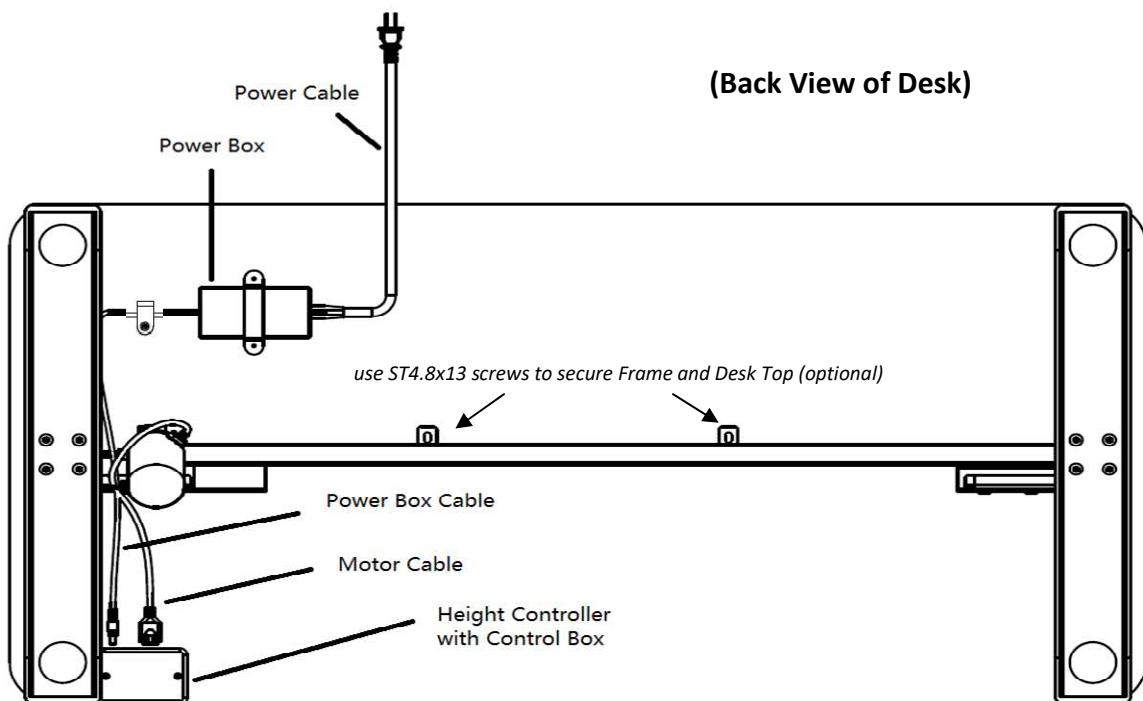

(Front View of Desk)

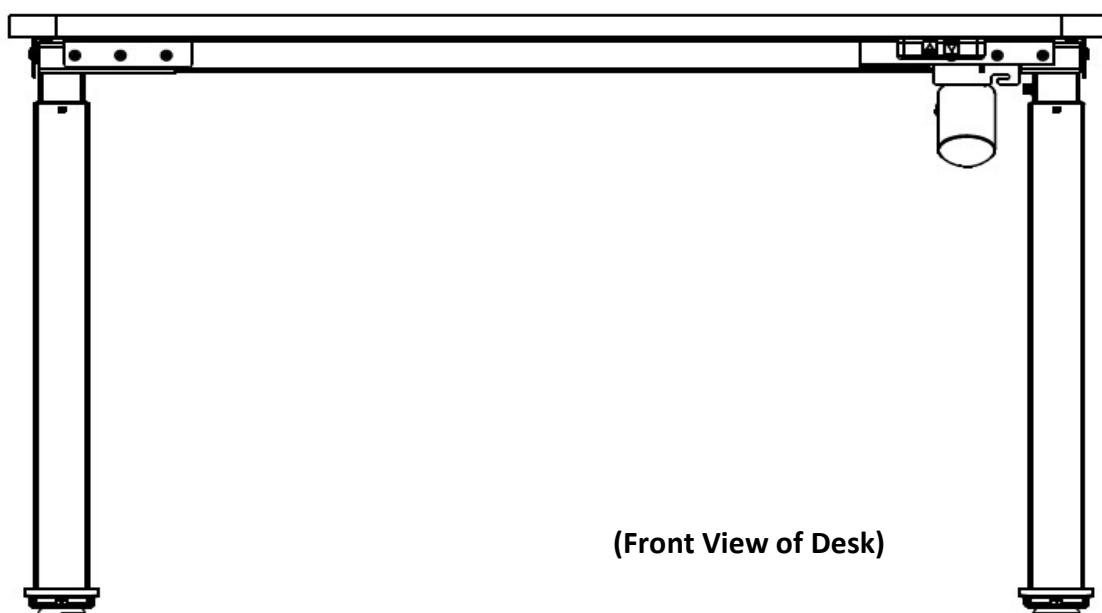

## INITIALIZING SYSTEM & SETTING HEIGHT POSITIONS

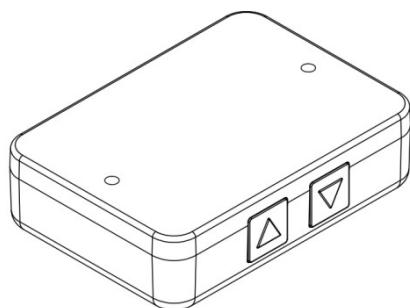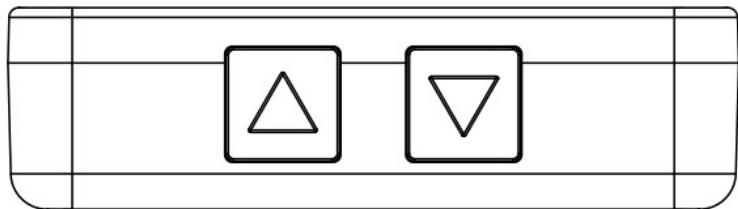

\*\*\*Highest position will be at 47" and lowest is 28" \*\*\*

**Before your first time to use the desk, please use the Height Controller to initialize the desk.**

Press and keep holding the DOWN arrow button, the desk will start moving to the lowest position; when you heard a “bleep” sound, you can release the button. Now the desk is ready to use.

# TROUBLESHOOTING

1. Issue: The desk does not go up or down

Solutions: Check all connections. Make sure there is power to the desk; then try to initialize the desk

2. Issue: Columns do not go up or down evenly

Solutions: Re-initialize the desk

3. Issue: Table will not go up just down

Solutions: Reduce the weight on the table

4. Issue: The desk wobbles excessively

Solutions: It is normal for the desk to wobble slightly at standing height. Adjust leveling feet and make sure all screws are tightened.

5. Issue: The system not working.

Solutions: This is because the control box or motor under overheat protection mod and it shuts off to protect itself. Once the temperature goes back, it will be ok to re-initialize.

# **WARRANTY**

## **WARRANTY**

Manufacturer covers table top and mechanical components for 5 years and covers electrical components for 2 years.

Manufacturer warranty is only valid in so far as the equipment has been used and maintained correctly and has not been tampered with. Furthermore, the system must not be exposed to violent treatment. In the event of this, the warranty will be ineffective/invalid.