
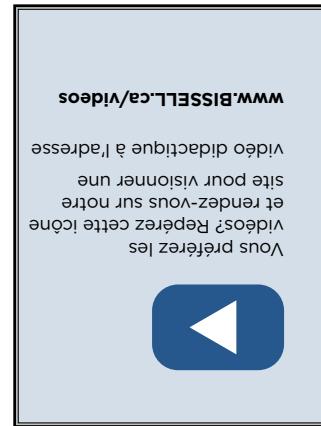


INSPIRED BY PETS

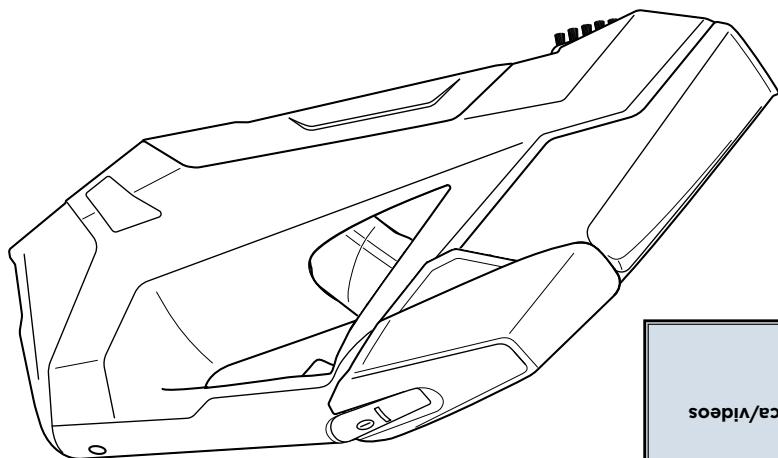

SÉRIE 2164
GUIDE DE L'UTILISATEUR

APPAREIL DE NETTOYAGE SANS FIL LITTLE GREEN PET

INSPIRED BY PETS

PET PRO
SERIES


LITTLE GREEN PET CORDLESS

USER GUIDE
2164 SERIES



More of a video
person? Look for this
icon and go online
for an instructional
how-to video at

[www.BISSELL.ca/
videos](http://www.BISSELL.ca/videos)

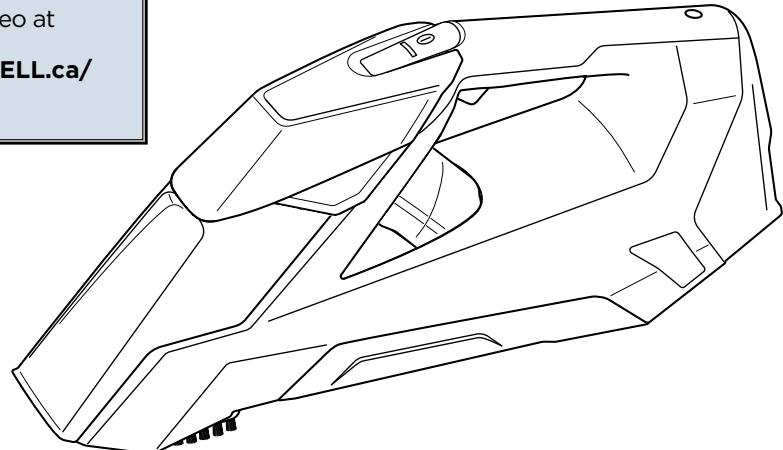

IMPORTANT SAFETY INSTRUCTIONS

READ ALL INSTRUCTIONS BEFORE USING YOUR BISSELL CORDLESS SPOT & STAIN REMOVER

STAIN CLEANER. Failure to follow the warnings and instructions may result in electric shock, fire and/or serious injury. When using an electrical appliance, basic precautions should be observed, including the following:

⚠️ **WARNING**

**TO REDUCE THE RISK OF FIRE, ELECTRIC SHOCK,
OR INJURY:**

- » Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts of the appliance and its accessories.
 - » Use only the type and amount of liquids specified under the Operations section of this guide.
 - » Unplug charger from outlet when not in use and before servicing.
 - » Always connect to a proper electrical socket.
 - » Do not modify plug.
 - » Do not expose to rain. Store indoors.
 - » Do not allow to be used as a toy. Close attention is necessary when used by or near children.
 - » Use only as described in the user guide.
 - » Use only manufacturer's recommended attachments.
 - » Do not use with damaged charger, cord or plug.
 - » Do not immerse in water or liquid.
 - » If appliance is not working as it should, has been dropped, damaged, left outdoors, or dropped into water; do not attempt to operate it and have it repaired at an authorized service center.
 - » Do not pull or carry charger by the cord, use cord as a handle, close a door on cord, or pull cord around sharp edges or corners. Do not run appliance over cord.
 - » Keep charger away from heated surfaces.
 - » Do not unplug charger by pulling on cord.
 - » To unplug, grasp the plug, not the cord.
 - » Do not handle charger, including charger plug and charger terminal with wet hands.
 - » Do not put any object into openings.
 - » Do not use with any opening blocked; keep free of dust, lint, hair, and anything that may reduce air flow.
 - » Use extra care when cleaning on stairs.
 - » Turn off all controls before plugging or unplugging appliance.
 - » Do not use to pick up flammable or combustible liquids, such as gasoline, or use in areas where they may be present.
 - » Do not pick up toxic material (chlorine bleach, ammonia, drain cleaner, etc.)


SAVE THESE INSTRUCTIONS FOR FUTURE USE

This model is for household use only.

CONSERVEZ LES PRÉSENTES INSTRUCtIONS POUR POUVOIR UTILISER ULTREREMENT

INSTRUC^TIONS DE S^ECURIT^E IMPORTANTES

EMERGENCE : Les accessoires standards varient d'un modèle à l'autre. Afin d'identifier ce que devrait comprendre le contenu de la boîte « liste du contenu de la boîte » qui se trouve sur le côté de la boîte.

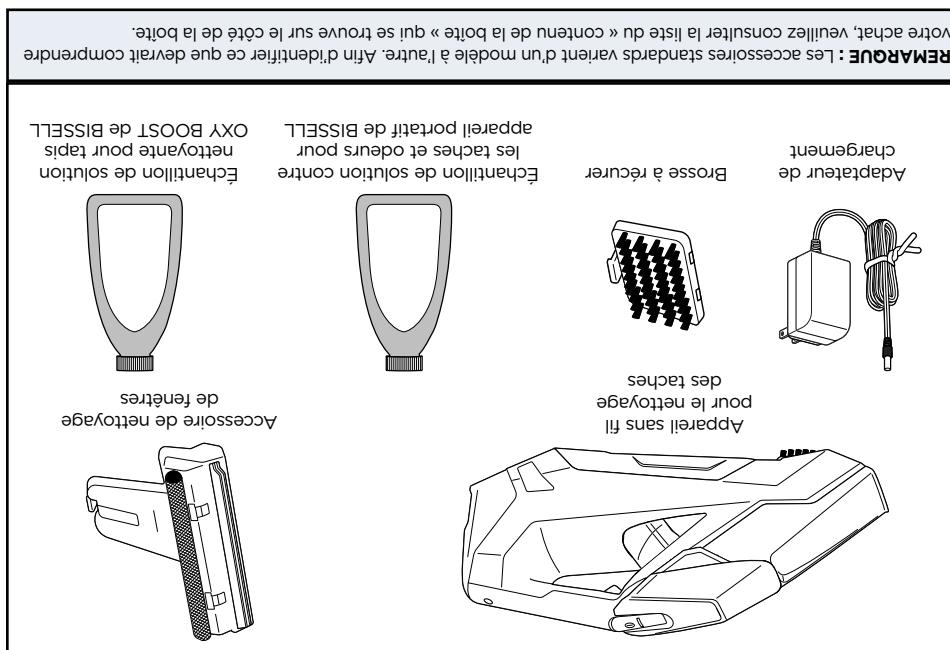

Qu'y a-t-il dans la boîte?

Le nettoyage, c'est notre passion. Voilà pourquoi nous sommes très heureux de vous aider part d'un de nos produits innovateurs. Comme nous voulons nous assurer que votre appareil sans fil pour le nettoyage des tâches offreira le même rendement dans deux ans aujourd'hui, ce guide contient des conseils sur l'utilisation (pages 5 à 9). En outre, en retournant (pages 10 à 13) et, advenant un problème, le diagnostic de panne (page 14).

En quelques étapes simples d'assemblage, vous seriez prêt à faire disparaître les tâches passées à la page 5 et commentez !


Merci d'avoir acheté un appareil sans fil pour le nettoyage des taches de BISSELL.

Thanks for buying a BISSELL cordless spot & stain cleaner!

We love to clean and we're excited to share one of our innovative products with you. We want to make sure your cordless spot & stain deep cleaner works as well in two years as it does today, so this guide has tips on using (pages 5-9), maintaining (pages 10-13), and if there is a problem, troubleshooting (page 14).

In just a few simple assembly steps, you'll be ready to clean spots and stains. Flip to page 5 and let's get started!

What's In The Box?

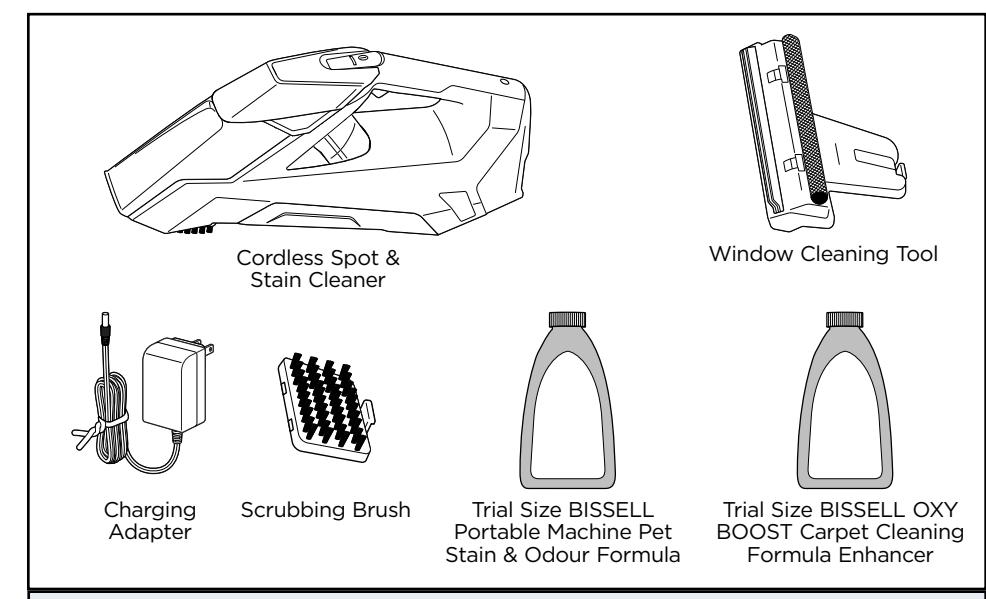


NOTE: Standard accessories may vary by model. To identify what should be included with your purchase, please refer to the 'carton contents' list located on the side of the carton.

Safety Instructions.....	2	Troubleshooting	14
Product View.....	4	Warranty	15
Cleaning Formula.....	4	Service.....	15
Operations	5-9	Product Registration.....	16
Maintenance & Care	10-13	Consumer Care.....	16

Product View

1. Clean Water/Formula Tank
2. Removable Nozzle
3. Scrubbing Brush
4. Tank Release Latch
5. Dirty Water Tank
6. Battery Charging Port
7. Spray Trigger
8. Power Switch
9. Battery Status Indicator Lights
10. Charging Adapter
11. Window Cleaning Tool (select models)

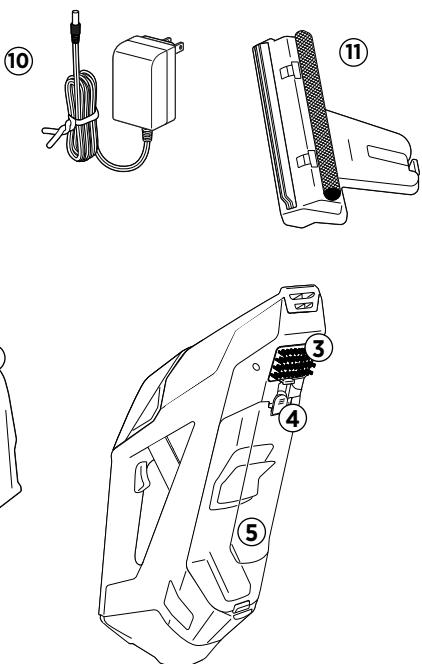

Cleaning Formula

Keep plenty of genuine BISSELL Cleaning Solution on hand so you can clean whenever it fits your schedule. Always use genuine BISSELL cleaning formulas. Non-BISSELL cleaning solutions may harm the machine and may void the warranty.



NOTICE: Use of cleaning formulas which contain lemon or pine oil may damage this appliance and void the warranty. Chemical spot cleaners or solvent-based soil removers also should not be used. These products may react with the plastic materials used in your cleaner, causing cracking or pitting.

REMARQUE : L'utilisation de solutions nettoyantes qui contiennent de l'citron ou de l'huile de pin peut endommager cet appareil et annuler la garantie. Les détachants chimiques ou les solutions nettoyantes à base de solvant ne détruisent pas les plastiques utilisés dans votre appareil, ce qui provoquerait des fuites ou des marques.



Solutions nettoyantes


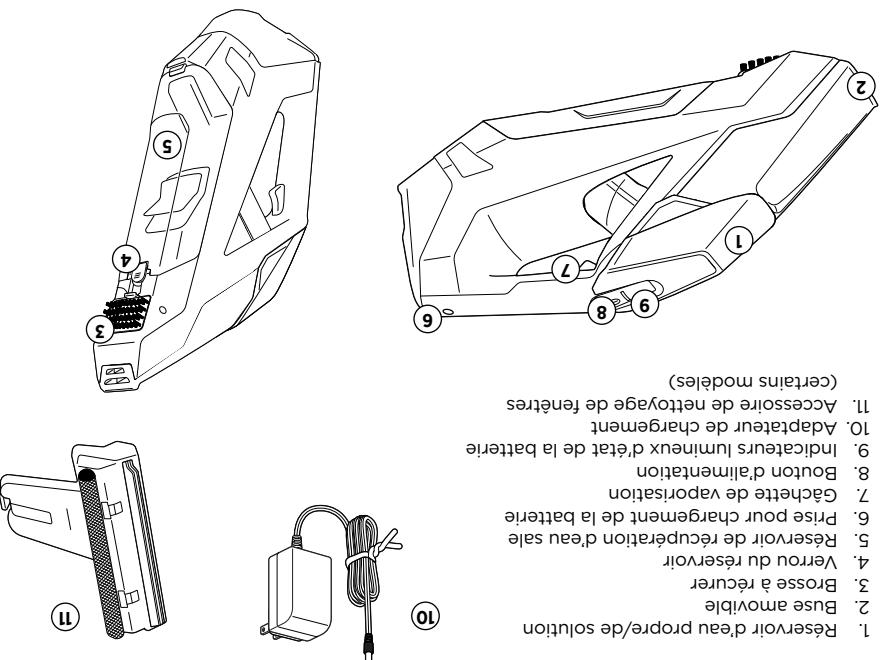


Schéma du produit

REMARQUE: Utilisez seulement avec le chargeur de SIL, modèle SSA-100060US.

REMARQUE: Assurez-vous que la température ambiante demeure entre 4,4 et 40 °C lors du rangement de la batterie, du rangement de l'appareil ou lors de son utilisation.

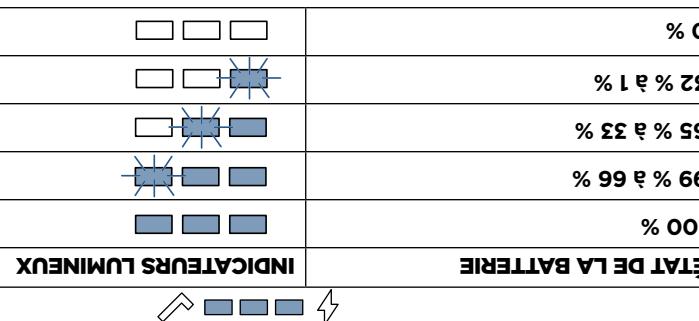

Signification des indicateurs lumineux

IMPORTANT: Avant de ranger l'appareil, assurez-vous que le réservoir d'eau souillée est vide. L'appareil ne devrait pas être placé sur le côté si il reste de l'eau dans le réservoir.

REMARQUE: Assurez-vous que votre appareil est chargé complètement avant de l'utiliser pour la première fois. Pour éviter l'état de charge partiel sur le bouton d'allumage, la batterie, mettez l'appareil en marche en sur la poignée. La batterie est complètement chargée lorsque les trois indicateurs lumineux sont allumés en bleu. Consultez le tableau ci-dessous.



REMARQUE: La pièce de protection qui couvre la prise de charge peut être retirée pour faciliter le dépose du chargeur. La prise de la base de l'appareil est insérée.

REMARQUE: La pièce de protection qui couvre la prise de charge peut être retirée pour faciliter le dépose du chargeur. La prise de la base de l'appareil est insérée.

Avant le chargement, assurez-vous que l'appareil pour comprendre l'état de chargement.



Chargez l'appareil pendant 8 heures avant de charger pour une durée maximale de fonctionnement, puis en service. Consultez le tableau ci-dessous pour comprendre l'état de chargement.

Branchez l'adaptateur dans une prise de courant appropriée. Les indicateurs lumineux déclenchent le déle de la batterie s'allument pendant le chargement.

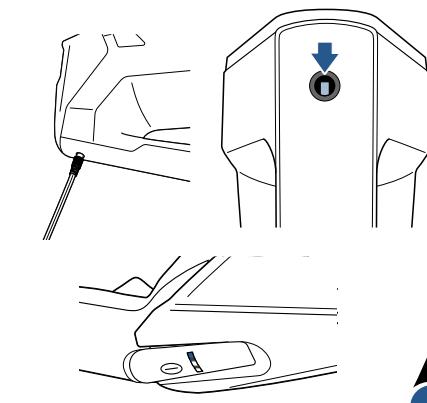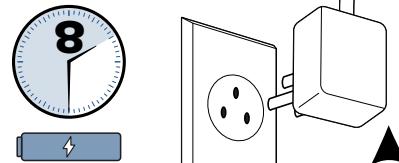

Chargement de la batterie

Charging the Battery

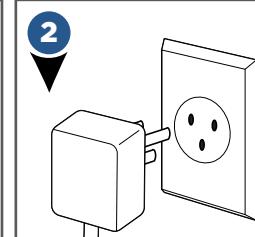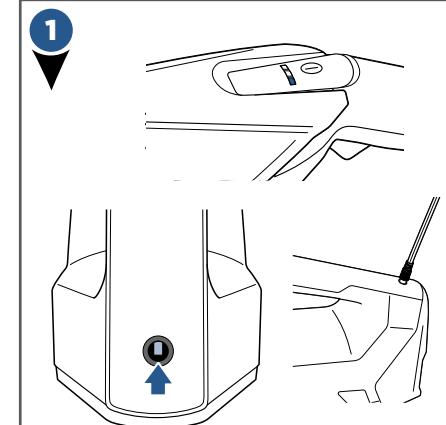

Plug the adapter into a suitable wall outlet. The battery status indicator lights will illuminate when charging.

For maximum run time, charge the unit 8 hours prior to use. Refer to the chart below for understanding the charging status.

Before charging, make sure unit is off by ensuring the battery status indicator lights are not illuminated. Insert the charging adapter plug into the charging port on the handle near the base of the unit.

NOTE: There is a door covering the charging port that will automatically slide out of the way when the charging adapter is inserted.

NOTE: On first use, make sure your unit is fully charged before using it. To check the battery status, turn the machine ON by pressing the power button on the handle. Battery is fully charged when all three of the blue status lights are illuminated. See chart below.

IMPORTANT: Before storing unit, ensure dirty water tank is empty. Unit should not be left on its side with water in the dirty water tank.


Light Display Status

BATTERY STATUS	LIGHT STATUS
100%	3 blue lights
99% to 66%	2 blue lights with a lightning bolt
65% to 33%	1 blue light with a lightning bolt
32% to 1%	1 blue light
0%	3 empty boxes


NOTE: Keep the temperature range of between 4.4 - 40°C when charging battery, storing unit or during use.

NOTE: Use only with charger SIL, Model SSA-100060US.


Filling the Clean Water/Formula Tank

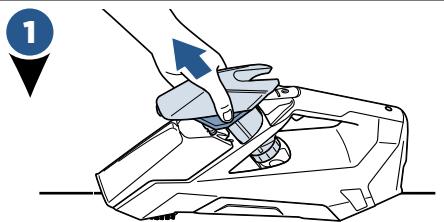


Pull the tank away at an angle to remove it from the unit.

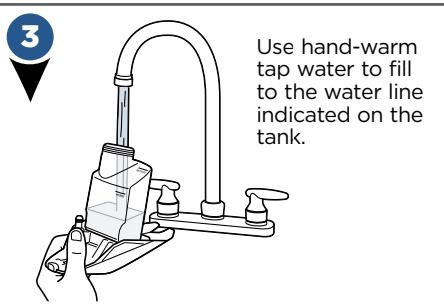


Use hand-warm tap water to fill to the water line indicated on the tank.

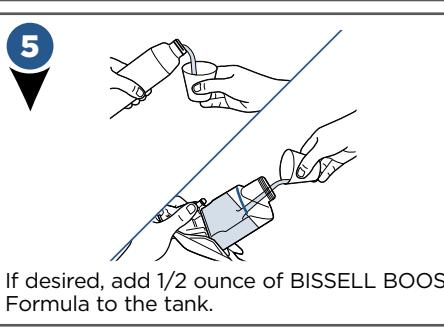


If desired, add 1/2 ounce of BISSELL BOOST Formula to the tank.

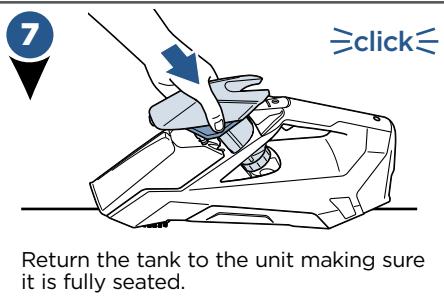


Return the tank to the unit making sure it is fully seated.

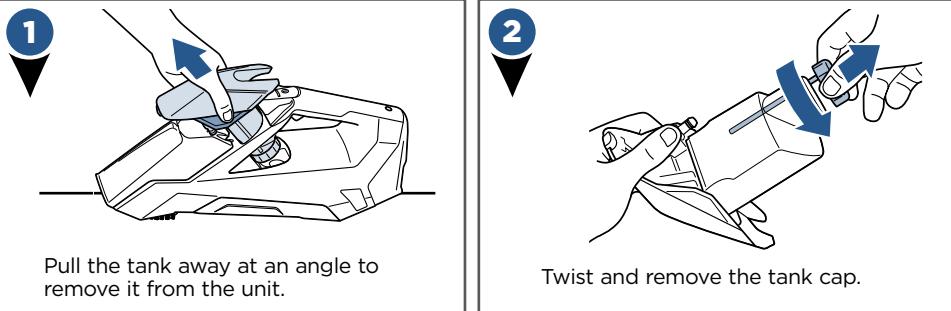


Twist and remove the tank cap.

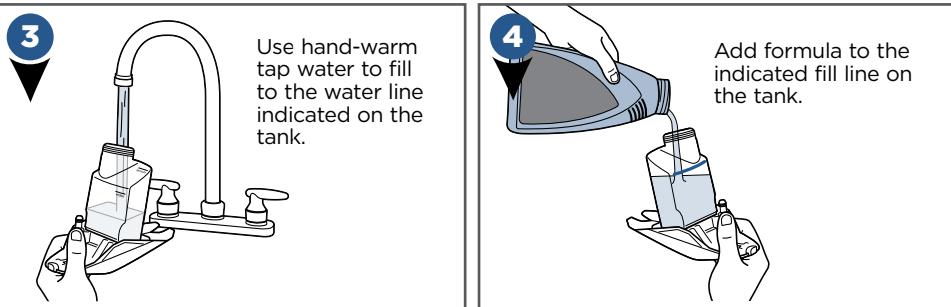

Add formula to the indicated fill line on the tank.

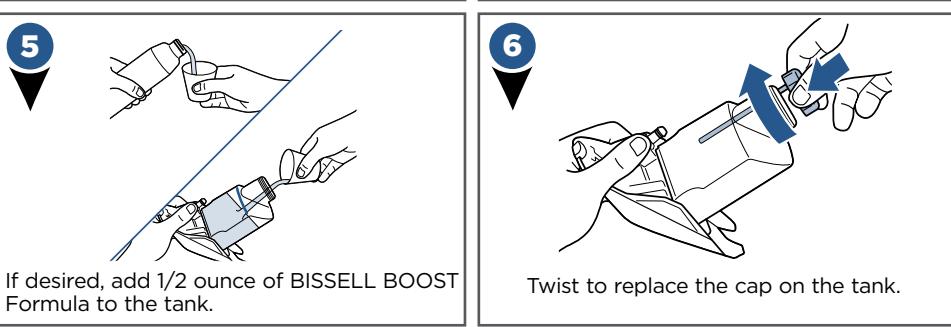

Twist to replace the cap on the tank.

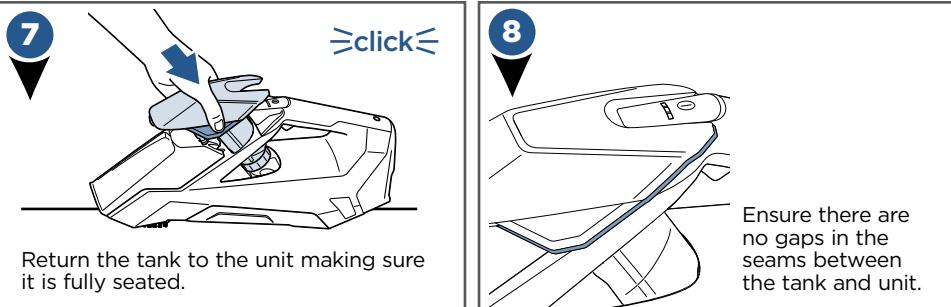


Ensure there are no gaps in the seams between the tank and unit.




Vérifiez qu'il y a aucun espace entre le réservoir et l'appareil.




Assurez le réservoir sur l'appareil en vous assurant qu'il y est bien fixé.

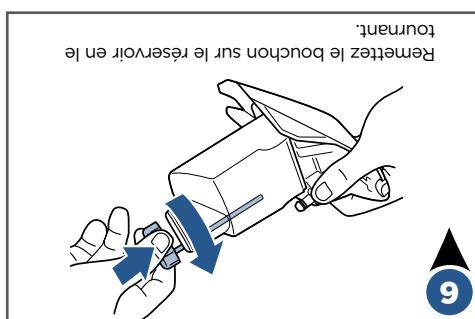


Remettez le bouchon sur le réservoir en le tournant.

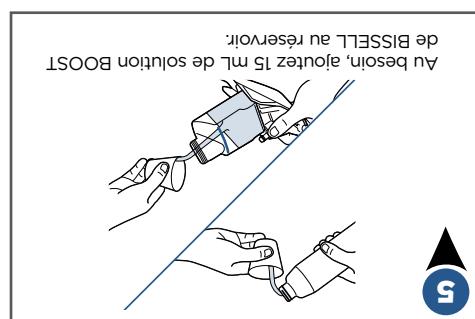


Au besoin, ajoutez 15 mL de solution BOOST de BISSELL au réservoir.

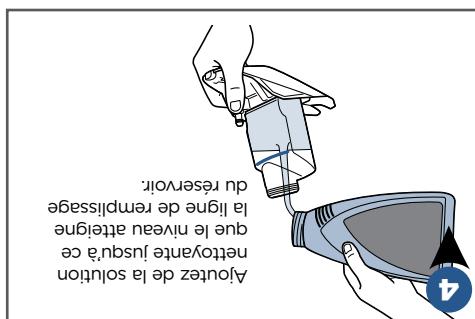


Apoussez le robinet du réservoir jusqu'à ce qu'il y ait suffisamment de liquide dans le réservoir.

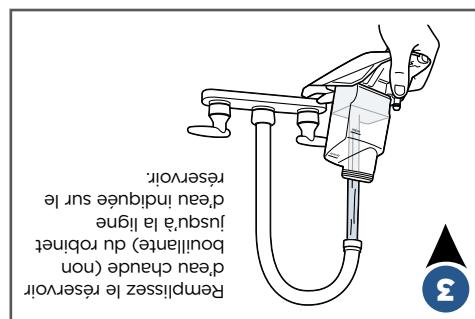

Remplissez le réservoir d'eau chaude (non bouillante) du robinet jusqu'à ce qu'il y ait suffisamment d'eau dans le réservoir.

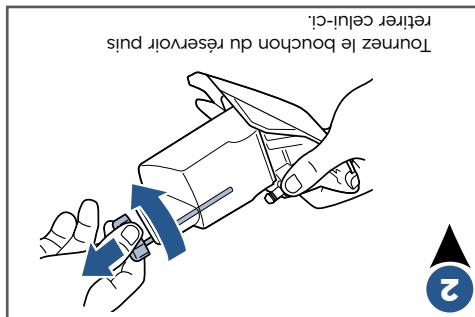

Tournez le bouchon du réservoir puis retirez-le.

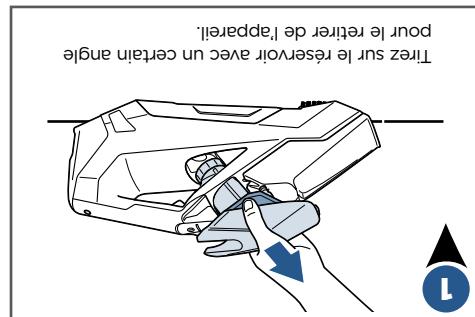


Tirez sur le réservoir avec un certain angle pour le retirer de l'appareil.

Remplissage du réservoir d'eau propre/de solution

Pre-Treating


IMPORTANT: Check the manufacturer's tag before cleaning upholstery. "W" or "WS" on the tag means you can use your cordless spot & stain cleaner. If tag is coded with an "S" (with diagonal strike-through), or says "Dry Clean Only," do not proceed. If manufacturer's tag is missing or not coded, check with your furniture dealer.

Pour prétraiter les endroits tachés ou souillés, humidifiez.

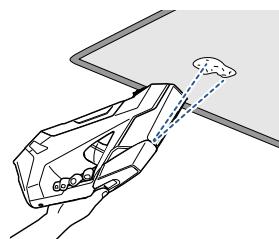


4

Appuyez sur le bouton d'alimentation pour mettre l'appareil en marche.

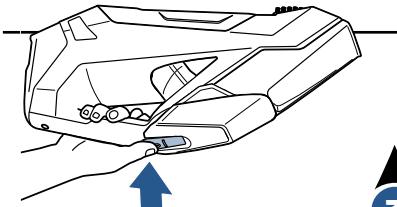


2

IMPORTANT: Vérifiez l'étiquette du fabricant avant de procéder au nettoyage d'un tissu d'aménagement. Le code d'étiquette "W" ou "WS" signifie que vous pouvez utiliser votre appareil sans fil pour le nettoyage des taches. Si l'étiquette affiche "S" (avec une barre diagonale sur le code) ou la mention "Nettoyage à sec seulement", ne procédez pas au nettoyage. Si l'étiquette du fabricant est absente ou si elle ne présente aucun code, consultez votre marchand de meubles.

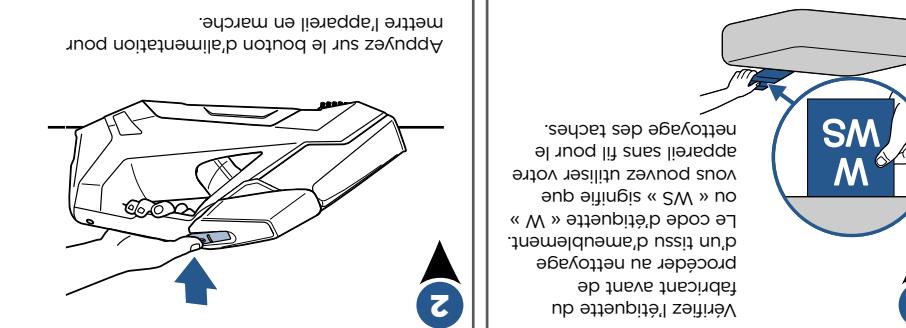


1


5 minutes avant de procéder au nettoyage. Laissez la solution nettoyante agir pendant 5 minutes avant de procéder au nettoyage.

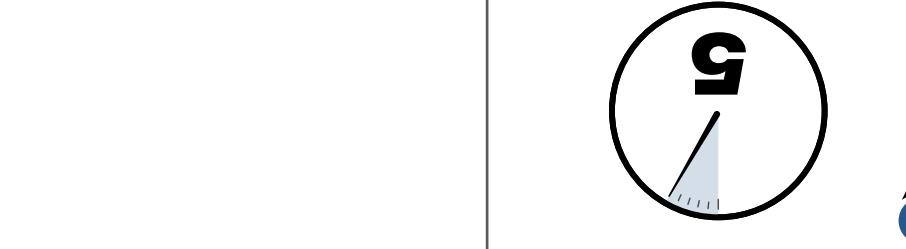


5

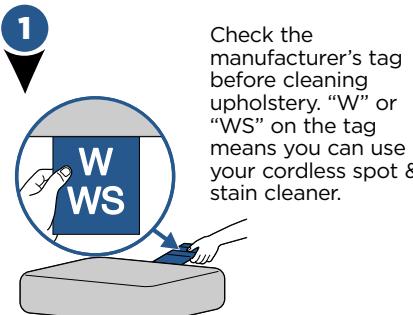


1
Check the manufacturer's tag before cleaning upholstery. "W" or "WS" on the tag means you can use your cordless spot & stain cleaner.

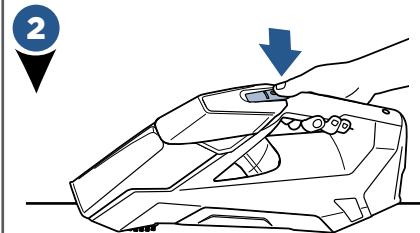


2
Push power button to turn the unit ON.

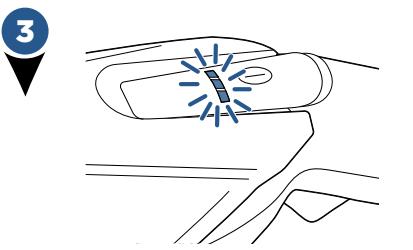

3
Battery status lights will illuminate to show how much battery remains.

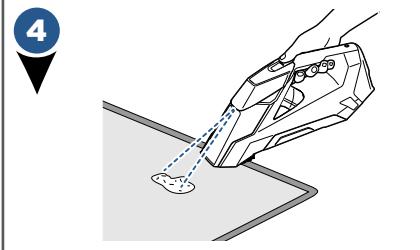

4
To pretreat stained or soiled areas, hold the unit above soiled surface and press spray trigger until the entire area is wet.

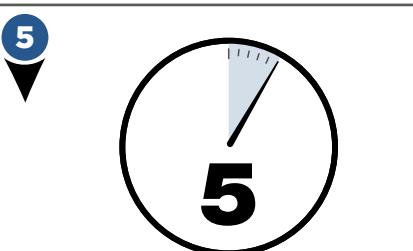

5
Let cleaning solution set for 5 minutes before cleaning.


Spot Cleaning Carpet & Upholstery

⚠️ WARNING


Keep spray away from face. Failure to do so may result in personal injury.

NOTE: If unit stops spraying, push power button to turn unit off and check cleaning solution level. Refill if needed. Never run dry.


NOTE: When cleaning on upholstery, be sure to use the unit vertically upward.

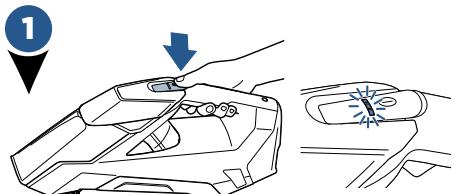


Push power button to turn the unit ON. Battery status lights will illuminate to show how much battery remains.

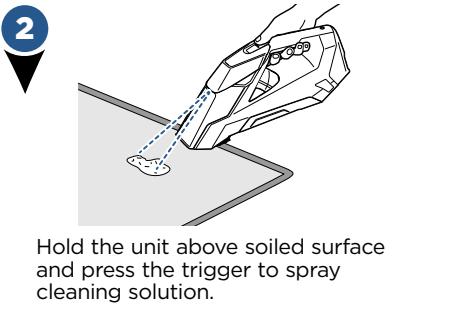

Hold the unit above soiled surface and press the trigger to spray cleaning solution.

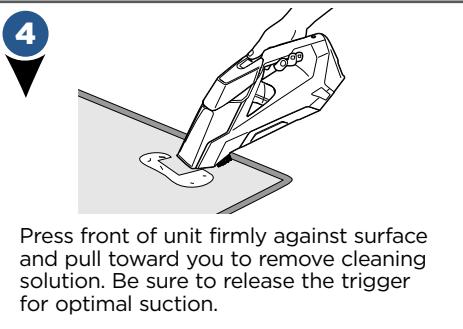

For stubborn spots, use brush to gently scrub soiled area while continuing to spray cleaning solution.


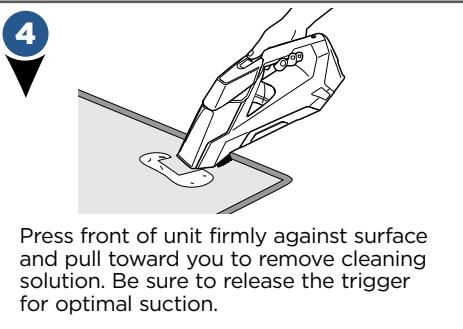


Press front of unit firmly against surface and pull toward you to remove cleaning solution. Be sure to release the trigger for optimal suction.




Repeat steps 2 and 4 until no more dirt or cleaning solution can be removed.

Do not overwet.

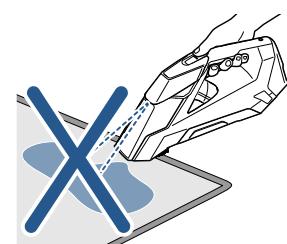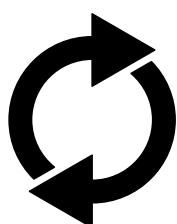


Répétez les étapes 2 et 4 jusqu'à ce qu'il ne soit plus possible de délever davantage de saleté ou de solution nettoyante.

5

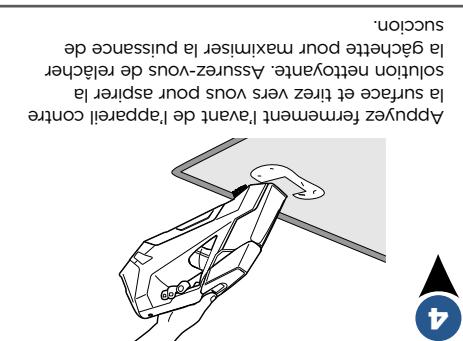

Appuyez fermement l'unité de l'appareil contre la surface et tirez vers vous pour maximiser la puissance de la solution nettoyante. Assurez-vous de relâcher la gâchette pour continuer à nettoyer la surface.

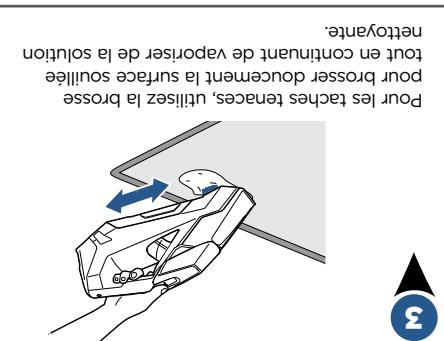

Pour les taches tenaces, utilisez la brosse pour brossette doucement la surface souillée tout en continuant de vaporiser de la solution nettoyante.



Maintenez l'appareil au-dessus de la surface souillée et enfonnez la gâchette pour vaporiser de la solution nettoyante.



Appuyez sur le bouton d'alimentation pour mettre l'appareil en marche. Les indicateurs lumineux déclinent lorsque la batterie s'alimente et indiquent le niveau de charge de la batterie.

REMARQUE : Lorsque vous procédez au nettoyage d'un tissu d'aménagement, assurez-vous que l'appareil est à la verticale (orienté vers le haut).

REMARQUE : Si l'appareil cesse de vaporiser, appuyez sur le bouton d'alimentation pour éteindre l'appareil, puis rééteignez le niveau de solution nettoyante. Remplissez le réservoir au besoin. Ne faites jamais fonctionner l'appareil si le réservoir de solution est vide.

REMARQUE : Tenez le vaporisateur à l'écart du visage des personnes. En enfilant cette consigne, vous risquez de provoquer des blessures corporelles.

AVERTISSEMENT


Nettoyage de taches sur les tapis et les tissus d'aménagement

Empty Dirty Water Tank

⚠ WARNING

To reduce the risk of fire, electric shock or injury, turn power OFF and disconnect from charger before performing maintenance or troubleshooting.

1

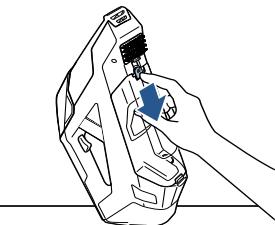


Ensure the unit is OFF and set upright on a flat surface. Simply push up on the release button located on the top of the tank to remove.

2




Carefully remove the dirty water tank from the unit and carry to a sink. To prevent spills, hold tank vertically after removing. To empty, pull tab at the end of the tank and empty to remove the dirty water.

3

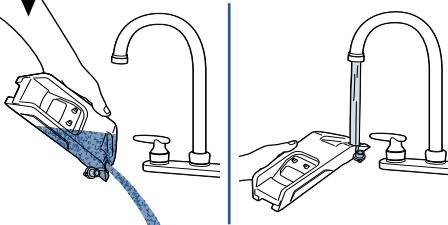

Rinse out the tank with clean water after emptying.


4

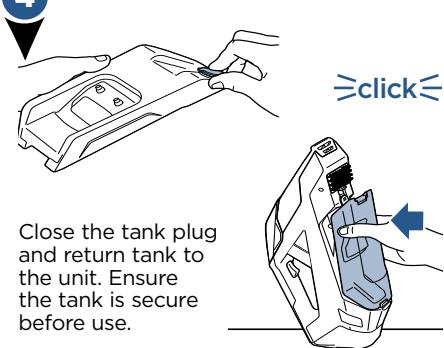



Close the tank plug and return tank to the unit. Ensure the tank is secure before use.

NOTICE: To reduce the risk of a leaking condition, do not store where freezing may occur. Damage to internal components may result.

REMARQUE: Afin de réduire les risques d'appareil dans un endroit où il y a risque de gel. Ceci pourrait entraîner des dommages aux composantes internes.

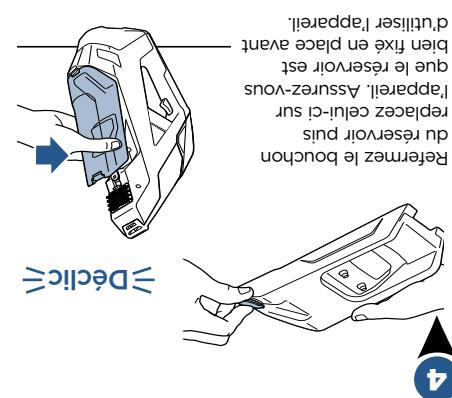

Afin de réduire les risques de débranchement de l'appareil avant de procéder aux vérifications d'entretien ou de diagnostic, débranchez l'appareil et assurez-vous que le bouton de dégagement de la partie supérieure de l'appareil est éloigné de la surface plane. Il suffit de pousser vers le haut le bouton de dégagement de la partie supérieure de l'appareil pour remettre ce dernier sur le dessus du réservoir.

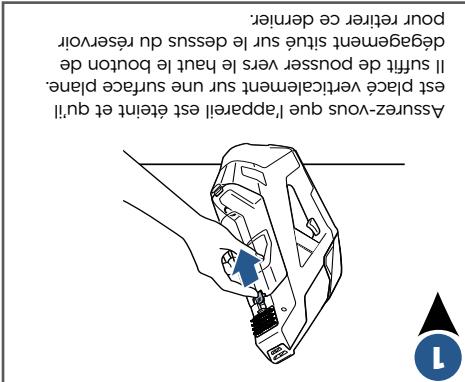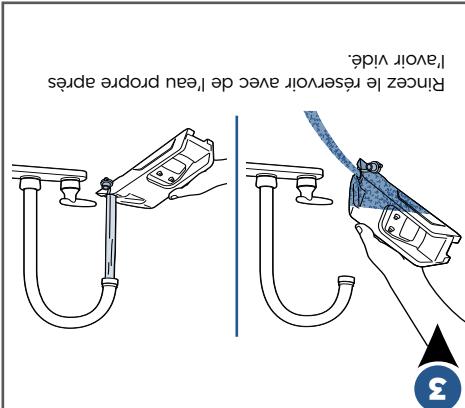

AVERTISSEMENT


d'eau sale

Vidange du réservoir de récupération

Afin de réduire les risques de décharge électrique, éteignez l'appareil puis débranchez celui-ci du chargeur avant de procéder aux vérifications d'entretien ou de diagnostic.

Nettoyage de la buse

Remplacez le réservoir de solution nettoyante sur l'appareil. Repoussez l'avant de l'appareil en arrière puis en place.

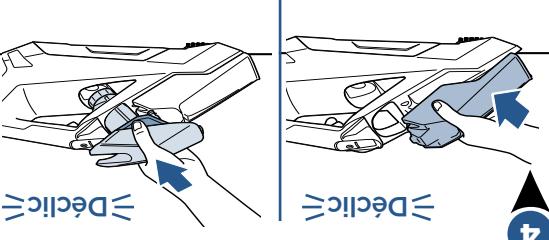


Rincez la buse avec de l'eau propre et débarrassez la buse de débris.



Avant de reduire les risques de décharge électrique, éteignez l'appareil puis débranchez celui-ci du chargeur avant de procéder aux vérifications d'entretien ou de diagnostic.


Si nécessaire, essuyez avec un chiffon propre ou une brosse à poils doux.

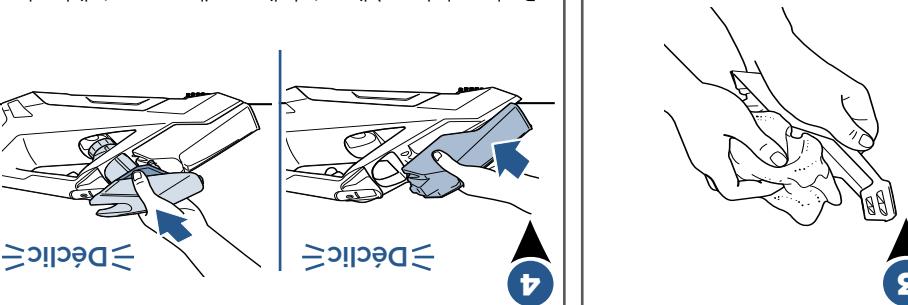

Clean the Nozzle

⚠️ WARNING


To reduce the risk of fire, electric shock or injury, turn power OFF and disconnect from charger before performing maintenance or troubleshooting.

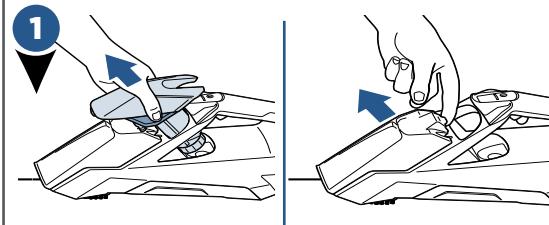


The front nozzle of the unit removes for easy cleaning of dirt and debris. Remove the clean water/formula tank and locate the latch at the top of the nozzle. Pull tab and rotate back to separate from unit.



Rinse nozzle with clean water and check spray nozzle for dirt or debris.

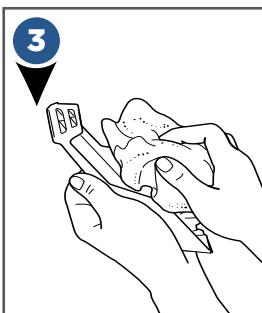

If necessary, wipe with a clean cloth or soft bristle brush.

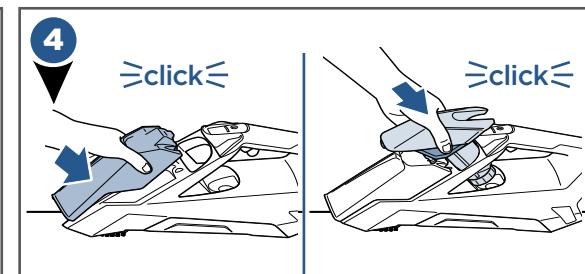


Replace the front nozzle by hooking lower edge onto unit and snapping into place. Then place the clean tank back on the unit.

Clean the Brush

⚠️ WARNING


To reduce the risk of fire, electric shock or injury, turn power OFF and disconnect from charger before performing maintenance or troubleshooting.

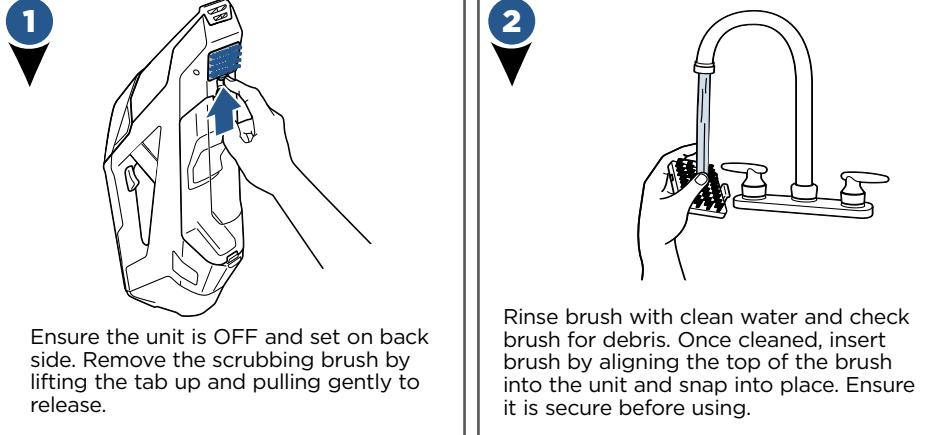

Clean the Window Tool


⚠️ WARNING

To reduce the risk of fire, electric shock or injury, turn power OFF and disconnect from charger before performing maintenance or troubleshooting.

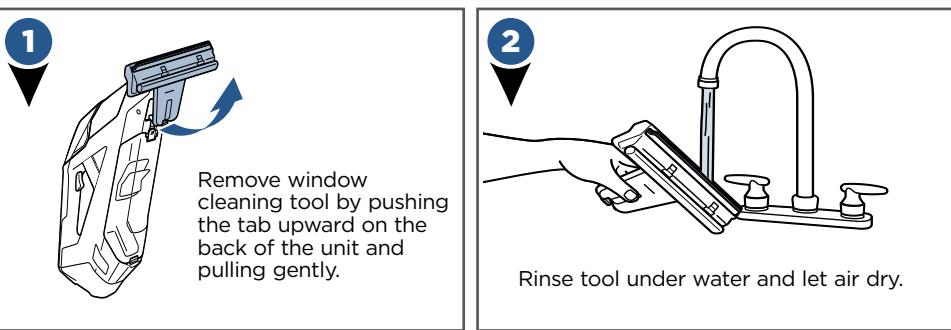

⚠️ AVERTISSEMENT

Nettoyage de l'accessoire pour fenêtres

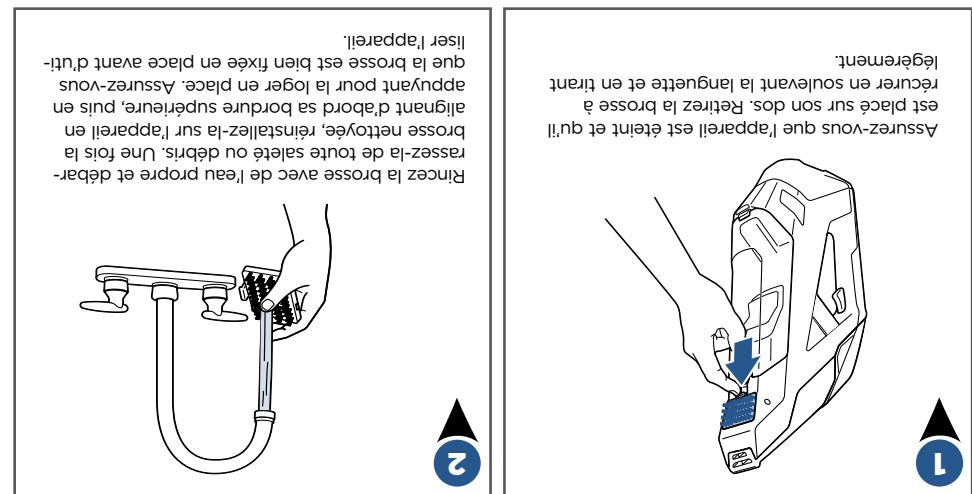

⚠️ AVERTISSEMENT


Nettoyage de la brosse

AVERTISSEMENT


Elimination des batteries

REMARQUE : Ne démontez pas le bloc-pile - NE séparez PAS les piles individuelles. Pour connaître les directives relatives à l'élimination des batteries, veuillez communiquer avec RBRC (Rechargeable Battery Recycling Corporation) au 1-800-263-2535 ou visitez le www.rbrc.ca.


Ouvrez le logement sur la base de l'appareil et retirez l'assemblage de la batterie. retirez dans les directions illustrées sur l'image. Débranchez l'appareil en tractant dans les directions opposées.

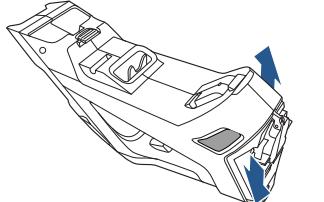


Ouvrez le logement sur la base de l'appareil et retirez l'assemblage de la batterie. retirez dans les directions illustrées sur l'image.

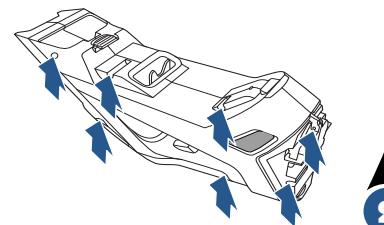

Retirez la vis située près de l'affichage à DEL à l'aide d'un tournevis cruciforme. Retirez ensuite l'assemblage de la partie de la pompe située à l'arrière de l'appareil à l'aide d'un tournevis cruciforme. Retirez ensuite la partie de la pompe située à l'arrière de l'appareil à l'aide d'un tournevis cruciforme. Retirez la lame plate.

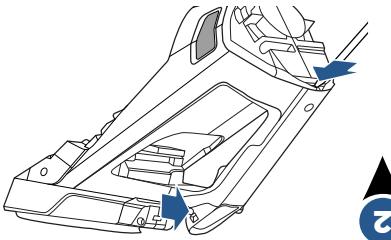

Retirez le couvercle sur la base de l'appareil à l'aide d'un tournevis à lame plate.

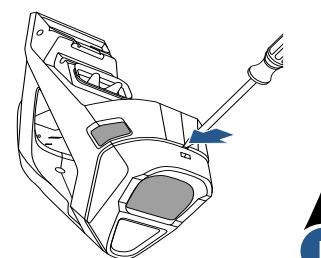

(necessaires pour le démontage)

- Vous disposez d'un tournevis à lame plate et d'un tournevis cruciforme
- le réservoir réservoir d'eau propre/de solution, le réservoir d'eau sale, la buse et la brosse ont été retirés de l'appareil (Voir instructions de retrait aux pages 10 à 12)
- l'appareil est débranché du chargeur
- Avant de poursuivre, assurez-vous que :

REMARQUE : Si vous débranchez la batterie, vous brisez l'appareil et annulez la garantie.

Ce produit contient des batteries rechargeables au lithium-ion. Les batteries au lithium-ion doivent être enlevées et jetées conformément aux lois fédérales. Afin de retirer les batteries de votre appareil sans fil pour le nettoyage des taches, consultez les instructions de votre appareil sans fil pour le nettoyage des taches.



Disposal of Batteries

WARNING


This product contains Lithium Ion rechargeable batteries. According to Federal and State regulations, removal and proper disposal of Lithium Ion batteries is required. For removal of the batteries in your cordless spot & stain cleaner, see instructions on this page.




NOTICE: Disconnecting the battery will destroy the appliance and invalidate the warranty.

Before proceeding, ensure that:


- the unit is disconnected from the charger
- the clean water/formula tank, dirty water tank, nozzle and brush have been removed from unit (see removal instructions on pages 10-12)
- you have a flat head and Phillips screwdriver, required for disassembly

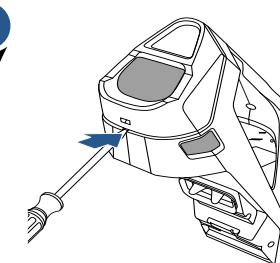


Remove the cover on the base of the unit by using a flat head screw driver.

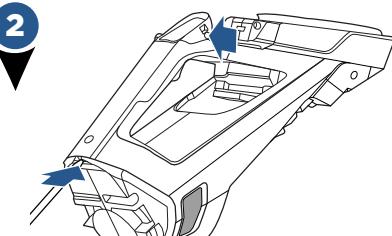

Remove the screw near the LED window using a Phillips screwdriver. Then, remove entire top handle portion from unit by using a flat head screwdriver.

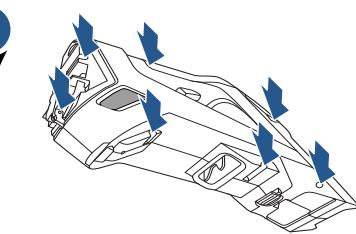

Using a Phillips screwdriver, remove seven screws in the locations referenced in the image.

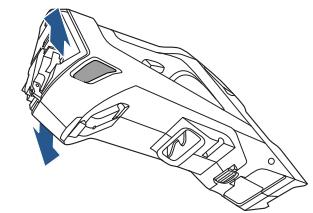

Pull open the housing on the base of the unit in opposite directions. Disconnect and remove the entire battery assembly.

NOTE: Keep Battery Pack together - DO NOT separate individual batteries. For specific disposal instructions of batteries, please contact the RBRC (Rechargeable Battery Recycling Corporation) at 1-800-263-2535 or visit www.rbrc.com.

Troubleshooting

⚠️ WARNING

To reduce the risk of electric shock, turn power switch off and disconnect from charger before performing maintenance or troubleshooting checks.

Problem	Possible causes	Remedies
Reduced suction or no suction	Dirty water tank is full	Empty dirty water tank
	Dirty water tank drain plug is loose	Check plug for snug fit
	Batteries weak/undercharged	Recharge according to instructions
	Dirty water tank not properly installed	Snap dirty water tank into place
Reduced or no suction on the window tool	Nozzle improperly installed	Remove and reinstall nozzle
	Squeegee is tilted away from the window	Ensure the squeegee is against the window for optimal suction
	Improperly attached window tool	Remove and reinstall window tool
Reduced spray or no spray	Clean water/formula tank is empty	Refill clean water/formula tank
	Pump not primed	While the unit is turned on, press spray trigger and gently rock cordless spot & stain cleaner back and forth
	Batteries weak/undercharged	Recharge according to instructions
	Spray tip clogged	Rinse tip with clean water
	Clean water/formula tank not fully inserted	Ensure clean water/formula tank is securely seated by removing and then replacing
Unit is not powered or underpowered	Charger plug/cord not connected	Make sure charger plug is completely plugged into wall outlet and charging cord is completely plugged into port on back of unit
Unit will not charge	Charger plug/cord not connected	Make sure charger plug is completely plugged into wall outlet and charging cord is completely plugged into port on back of unit
	Batteries not recharging	Completely drain the battery, fully recharge it, then drain the battery once again before recharging a second time (this procedure may be required more than once)
Unit is leaking	Clean water/formula tank is not properly seated	Ensure clean water/formula tank is fully seated, see page 6
	Dirty water tank plug is not sealed properly	Ensure dirty water tank plug is sealed properly, see page 10
	Dirty water tank is full	Empty dirty water tank. Unit should not be left on its side with water in the dirty water tank, see page 10
	Unit is not level	Ensure unit is upright, see page 9

**Please do
not return
this product
to the store.**

Other maintenance or service not included in the manual should be performed by an authorized service representative.

Thank you for selecting a BISSELL product.

For any questions or concerns, BISSELL is happy to be of service. Contact us directly at 1-800-263-2535.

quelle que soit votre question ou votre remarque, BISELL sera ravi de vous aider. Communiquer directement avec nous en composant le 800 322-5222.

Manuel doit être effectuée par un représentant de l'entreprise autre que celles qui sont indiquées dans le ouvrage opérationnel ou de préparation au démantèlement d'un produit BISSELL.

Prière de ne pas retourner ce produit au magasin.

Àfin de réduire le risque de décharge électrique, placez l'interrupteur en position droite (OFF) et débranchez du chargeur avant de procéder aux vérifications demandées ou de diagnostiquer le panneau.

AVERTISSEMENT

Diagnostic de panne

Register your product today!

Registering is quick, easy and offers you benefits over the lifetime of your product.

You'll receive:

Faster Service

Supplying your information now saves you time should you need to contact us with questions regarding your product.

Special Promotions

Optional: Register your email to receive notice of offers, contests, cleaning tips and more!

Product Support Reminders and Alerts

We'll contact you with any important product maintenance reminders and alerts.

Visit [www.BISSELL.ca/registration!](http://www.BISSELL.ca/registration)

Visit the BISSELL website: www.BISSELL.ca

When contacting BISSELL, have model number of cleaner available.

Please record your Model Number: _____

Please record your Purchase Date: _____

NOTE: Please keep your original sales receipt. It provides proof of purchase date in the event of a warranty claim. See Warranty on page 15 for details.

For cleaning tips and more visit www.BISSELL.ca or find us at:



BISSELL



BISSELLClean



BISSELLClean



BISSELL



BISSELL

We can't wait to hear from you!

Rate this product and let us (and millions of your closest friends) know what you think!

www.BISSELL.ca



©2017 BISSELL Homecare, Inc.
BISSELL Canada Corporation
Mississauga, Ontario L5N 0B3
All rights reserved. Printed in China
Part Number 161-1696 Rev 05/17
Visit our website at: www.BISSELL.ca

Veuillez noter Site Web : www.BISSELL.ca
Page n°161-1696 Rev 05/17
Tous droits réservés. Imprimé en Chine
Mississauga, Ontario L5N 0B3
BISSELL Canada Corporation
©2017 BISSELL Homecare, Inc.



www.BISSELL.ca

ce que vous pensez !
(ainsi qu'à des millions d'amis)
Évaluez ce produit et dites-nous

nos voulons avoir de vos nouvelles !



Pour obtenir des conseils de nettoyage ou tout autre renseignement,
Visitez le www.BISSELL.ca ou venez nous trouver sur :

REMARQUE : Veuillez conserver votre reçu original. Si vous devrez présenter une réclamation
garantie à la page 15 pour plus de détails.

garantie à la page 15 pour plus de détails.

Veuillez inscrire votre date d'achat : _____

Lois que vous communiquez avec BISSELL, ayez en main le numéro de modèle de l'appareil.
Visitez le site BISSELL : www.BISSELL.ca

Rendez-vous au www.BISSELL.ca/registration!

Rappels et alertes de soutien technique
Nos communiqués vous en cas de rappels ou d'alertes concernant
l'entretien de votre produit.

Services plus rapide
En entrant dans maintenant vos renseignements, vous économisez
du temps au cas où vous auriez besoin de communiquer avec nous pour des questions concernant votre produit.

Vous recevez :
L'enregistrement est rapide et facile et vous offre des avantages
pour la durée de vie de votre produit.

Enregistrez votre produit aujourd'hui !