

model no. 046-0506-0

Garage Door Keyless Entry System

Important:

Before using your garage door keypad, read and understand this owner's guide.

Instruction Manual

2

model no. 046-0506-0 | contact us 1-800-689-9928

Safety Information

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions:

- 1 This device may not cause harmful interference, and
- 2 This device must accept any interference received, including interference that may cause undesired operation.

CE - DECLARATION OF CONFORMITY:

This equipment complies with the requirements relating to electromagnetic compatibility, EN 301489-1, EN301489-3, EN300220-1, EN300220-2 and EN60950-1. This equipment conforms to the essential requirement of the 1999/5/EC R&TTE Directive.

WARNING:

Changes or modification to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

3

model no. 046-0506-0 | contact us 1-800-689-9928

Install Keypad and Battery

- 1 Undo the screw on the bottom side of the keypad.
- 2 Remove the back plate.
- 3 Insert a AAA battery (1.5 V Alkaline type).
- 4 Mount the back plate with the mounting accessories.
- 5 Attach the keypad on the back plate and tighten the screw on the bottom of the keypad.

- Remove and dispose of the battery according to local regulations.

4

model no. 046-0506-0 | contact us 1-800-689-9928

Initial Setup

FOR SINGLE DOOR

- 1 Enter 0000 and * on the keypad.
- 2 Enter the new pin code from 2 to 8 digits plus *, twice.
 - a. For example, 1234* and again 1234*.
 - b. The keypad will beep 3 times if the pin codes are the same.

If the new pin code is not typed exactly the same, then the keypad will emit a long error beep.

In this case you will have to restart from Step 1.

FOR MULTIPLE DOORS:

- 1 Enter the factory default pin code plus * [PIN *].
 - a. For example, 0000*.
- 2 Press [9] then [#] separately and you will hear 2 beeps to confirm you have enabled the multiple-door operating mode.
- 3 Enter 0000 and * on the keypad.
- 4 Enter the new pin code from 2 to 8 digits plus *, twice.
 - a. For example, 1234* and again 1234*.

5

model no. 046-0506-0 | contact us 1-800-689-9928

Programming

PROGRAM TO GARAGE DOOR OPENER - MODEL: 046-0265-2

- 1 Press the Learn/Set button for one second, when the opener emits one beep, release the Learn/Set button.
- 2 The LCD display will show the letter "P".
- 3 Within 30 seconds, activate the keypad by entering:
 - a. Pin code plus # [PIN #] for single door operation.
For example: [1234] [#].
 - b. Pin code plus [#] plus [door number] for multiple door operation.
For example: [1234] [#] [1].

6

model no. 046-0506-0 | contact us 1-800-689-9928

Programming

PROGRAM TO GARAGE DOOR OPENER - MODEL: 046-0266-0

- 1 Press and hold button (5 seconds).

- 2 Press the button twice and The remote icon will flash on the LCD display.

- 3 Within 30 seconds, activate the keypad by entering:
 - a. Pin code plus # [PIN #] for single door operation.
For example: [1234] [#].
 - b. Pin code plus [#] plus [door number] for multiple door operation.
For example: [1234] [#] [1].

- 4 Remote icon will stay on if a remote is programmed.

7

model no. 046-0506-0 | contact us 1-800-689-9928

Operation

SINGLE DOOR OPERATION:

Enter the pin code plus [#].
For example: 1 2 3 4 #.

MULTIPLE DOORS OPERATION:

Enter the pin code plus [#] plus [door number].
For example: Door 1: 1 2 3 4 # 1
Door 2: 1 2 3 4 # 2
Door 3: 1 2 3 4 # 3
Door 4: 1 2 3 4 # 4

PIN CODE

TO CHANGE THE KEYPAD PIN CODE AFTER INITIAL SETUP

- 1 Enter the old pin code plus * [PIN *].
For example: 1234*.
- 2 Enter the new pin code from 2 to 8 digits plus *, twice.
For example: 5678* and again 5678*.
- 3 Do not press the learn button on the opener. The keypad is already programed to the opener and this step is not required.
- 4 To open and close the door, press the new pin code plus # [PIN #].
For example: 5678 # for single door.
5678 # 1 for multiple door.

8

model no. 046-0506-0 | contact us 1-800-689-9928

PIN CODE

TO RESET THE PIN CODE TO FACTORY DEFAULT

If you forget your pin code:

- 1 Remove the battery (see page 3).
- 2 While the battery is out, press [*] and [#] buttons at the same time.
- 3 While holding both buttons, put the battery back in.
- 4 Keep holding both buttons for about 5 seconds until you hear a long beep. This resets the pin code back to 0000.
- 5 Follow initial setup instructions on page 4.
- 6 Because the keypad has been reset, follow the programming instructions on pages 5 and 6 to program the keypad to the opener.

TO DISABLE THE MULTIPLE-DOOR MODE

- 1 Enter the current pin code plus * [PIN *].
For example: 5678*.
- 2 Press [0] then [#], you will hear 2 beeps to confirm you have disabled the multiple-door operating mode.

9

model no. 046-0506-0 | contact us 1-800-689-9928

FAQ

- The door opener does not react after I press the button on the keypad transmitter.
 - Ensure you hear 3 beeps from the keypad transmitter after entering: [Password] [#] or [Password] [#] [door number].

Note: If you do not hear 3 beeps that means you have entered the incorrect password. Re-enter the password.

- Ensure the keypad transmitter has been programmed to the garage door opener. Refer to Sections 4-6 on how to program a keypad to the receiver.

- The operation range is reduced, or the backlight LED does not flash during operation.
 - It is time to replace the battery.

10

model no. 046-0506-0 | contact us 1-800-689-9928

Warranty

WARRANTY

This Mastercraft product carries a 1 (one) year LIMITED warranty against defects in workmanship and materials. This product is not guaranteed against wear or breakage due to misuse and/or abuse.

Made in China

Imported for Mastercraft Canada Toronto, Canada M4S 2B8