 


model no. 046-0507-8

Mastercraft®

GARAGE DOOR OPENER COMPACT REMOTE

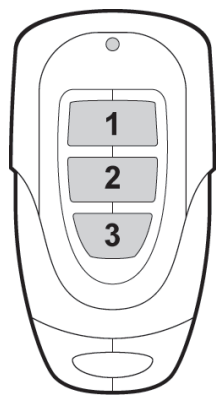

IMPORTANT:

Before using your Garage Door Opener Compact Remote, read and understand this owner's guide.

INSTRUCTION MANUAL



PROGRAMMING

2

model no. 046-0507-8 | contact us 1-800-689-9928

PROGRAM THE GARAGE DOOR OPENER - 046-0265-2

- 1 Press the Learn/Set button for one second. When the opener emits one beep, release the Learn/Set button. The Display will show the letter "P".
- 2 Within 30 seconds, press any one of the 3 buttons on the transmitter that you want to program.
- 3 Once the button on the remote is programmed, the LED segment will turn off and emits one beep, indicating the programming was successful.

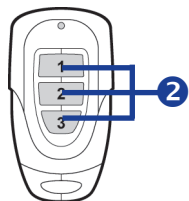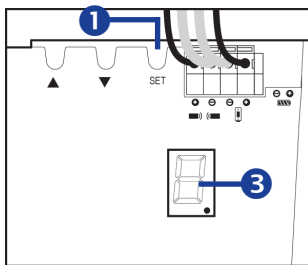

SAVE THESE INSTRUCTIONS

This manual contains important operating instructions. Read all instructions and follow them with use of this product.

3

Mastercraft®

PROGRAM THE GARAGE DOOR OPENER - 046-0266-0

- 1 Press and hold  button (5 seconds).
- 2 Press the  button twice and the remote icon will flash on the LCD display.
- 3 Press any of the 3 buttons on the remote.



- 4 The remote icon will stay on if a remote is programmed.

4


model no. 046-0507-8 | contact us 1-800-689-9928

OPEN/CLOSE GARAGE DOOR OPENER

- 1 Press the programmed button to open/close the garage door.

ENABLE/DISABLE PASSCODE FEATURE

 - STEP 1** Press **1** and **3** simultaneously and hold for more than 2 seconds until the LED flashes quickly but not until the LED flashes slowly.
- STEP 2** Input the passcode.
(The Default passcode is 2, 2, 2.)
- STEP 3** Press **1** and **3** simultaneously to confirm. If the passcode is correct, the passcode feature will be enabled/disabled.

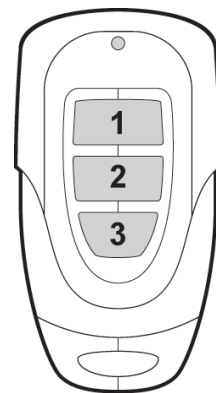

NOTE: If you enable the passcode feature, you can only operate the remote control after you input the correct passcode. The passcode feature is disabled by default.

ADVANCED FEATURE


OPERATION

5

Mastercraft®

CHANGE PASSWORD

- STEP 1** Press **1** and **3** simultaneously and hold for more than 6 seconds until the LED changes from flashing quickly to flashing slowly.
- STEP 2** Input the old passcode.
- STEP 3** Press **1** and **3** once simultaneously to confirm. If the password is wrong, the LED will flash 3 times and you must start over from step 1.
- STEP 4** Input new password.
- STEP 5** Press **1** and **3** once simultaneously to confirm.
- STEP 6** Input new password again.
- STEP 7** Press **1** and **3** once simultaneously to reconfirm. If the password is different from the one of step 4, the LED will flash 3 times and you must start over from step 1. Otherwise, the passcode has been changed and the password protection is enabled.

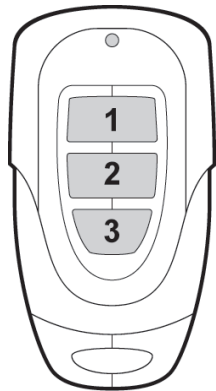


6

model no. 046-0507-8 | contact us 1-800-689-9928

RESET THE GARAGE DOOR REMOTE CONTROL

If you forget your password and want to reset the remote control, follow the steps below:

 - STEP 1** Press **1** and **2** simultaneously and hold for more than 10 seconds until the LED flashes.
- STEP 2** After you release **1** and **2**, the LED will be turned off and the remote control will be reset. The password will be reset to factory default.

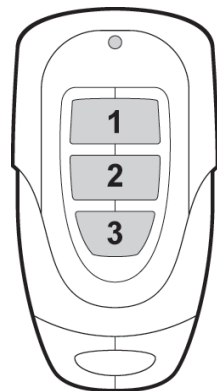

NOTE: After the reset, password protection is removed but the remote cannot control any receiver until you reprogram it to the receivers you want to control.


ADVANCE FEATURE

7

Mastercraft®

When the operation range is reduced or when the backlight LED does not flash during operation, it is time to replace the battery.

- STEP 1** Undo the screws **1** on the back of the remote.
- STEP 2** Pry out the back cover **2** from the remote.
- STEP 3** Take out the old battery **3**.
- STEP 4** Place the new battery **3** in position. Be sure that polarity is correct.
- STEP 5** Close the back cover **2** with the two screws **1**.

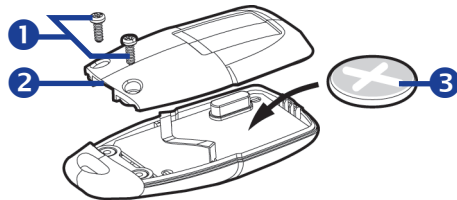

NOTE: The remote control is powered by a CR2032 Battery.



Battery Disposal – please dispose the used battery per municipal or provincial law.

REPLACE BATTERY

8

model no. 046-0507-8 | contact us 1-800-689-9928

TROUBLESHOOTING

- What can I do if the door opener does not react after I press the button on the transmitter?
- Ensure when the button on the transmitter is pressed, the red light on the transmitter comes on. Otherwise check if the battery is inserted properly. Make sure the correct button on the transmitter is pressed.
- Ensure the transmitter has been programmed to the receiver. Refer to section 2 for how to program a transmitter to the receiver.

WARRANTY

This Mastercraft product carries a 1 (one) year LIMITED warranty against defects in workmanship and materials. This product is not guaranteed against wear or breakage due to misuse and/or abuse.

Made in China

Imported for
Mastercraft Canada Toronto, Canada M4S 2B8

WARRANTY

TROUBLESHOOTING