


CANVAS™/MC

TOBIN 4-LIGHT PENDANT

MODEL NO. 052-2656-4

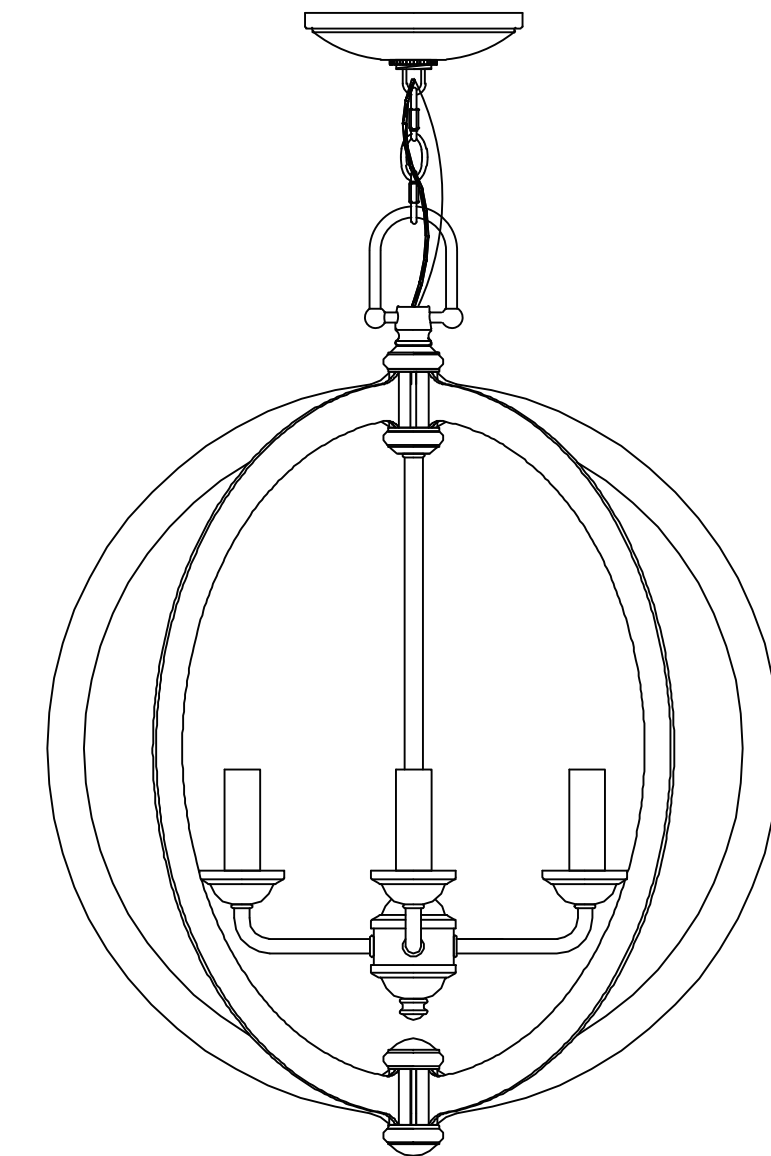


ASSEMBLY INSTRUCTIONS

IMPORTANT: Please read this manual carefully before attempting to assemble, operate or install the product, and save it for reference.

Package and Hardware Contents

Package and Hardware Contents	2
Important Safety Instructions	3
Assembly Preparation	3
Assembly Instructions	4
Care and Maintenance/Troubleshooting	6
Warranty	6

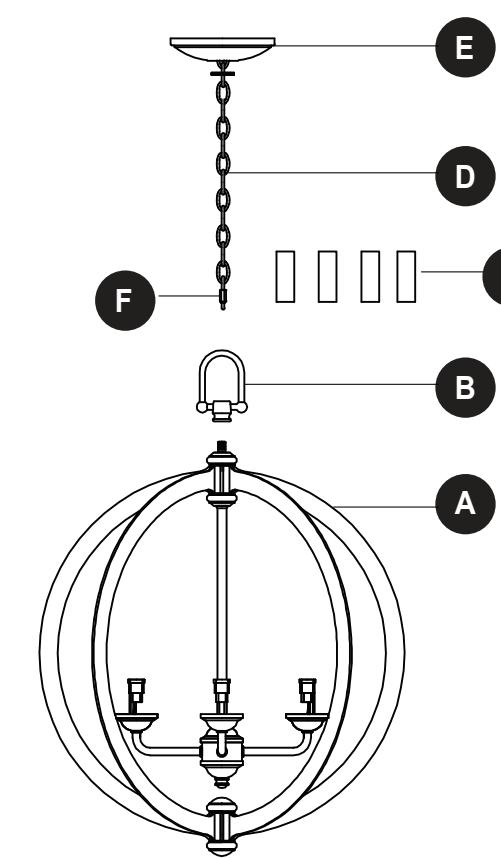

AA	BB	CC	DD	EE	FF
Mounting Strip Qty. 1	Threaded Tube Qty. 1	Outlet Box Screw Qty. 2	Wire Nut Qty. 2	Screw Collar Loop Qty. 1	Nut Qty. 1

PART	DESCRIPTION	QUANTITY
A	Fixture Body	1
B	Loop	1
C	Socket Sleeve	4
D	Chain	1
E	Canopy	1
F	K/D Ring	2

2

Table of Contents

CANVAS™/MC

3

Important Safety Instructions

CAUTION

The following rules must be adhered to when assembling the product. If you have any doubts about how to install the product or if it fails to work properly, contact a local, licensed electrician. Failure to comply with these requirements could lead to an electric shock or fire, which could cause serious injury or fatality.

Ensure:

- Power at the main fuse box is disconnected before installing the fixture.
- The fixture ground wire (bare or green insulated wire) is NOT connected to current-carrying wires.
- No bare wires are exposed outside the wire connectors when joining current-carrying wires.
- The insulation on wires has not been damaged during installation.
- No rough or sharp edges are in contact with any of the wires.
- Fixture wires are connected to the proper house supply wires. If you have any doubts about which house supply wire is white and which is black, contact a licensed electrician.
- Light bulbs with wattage no greater than those specified for the fixture are used.
- Power is off when installing light bulbs into the fixture.

 
Assembly Preparation

Before beginning assembly of this product, make sure all parts are present. Compare parts with package contents list and hardware contents list. If any part is missing or damaged, do not attempt to assemble, install or operate the product.

Place all parts from the box in a cleared area and position them on the floor in front of you. Remove all packing materials and place them back into the box. Do not dispose of the packing materials until assembly is complete. Read each step carefully before beginning any assembly and make sure you understand each step.

Tools required for assembly (not included):

Flat-head screwdriver, cross-head screwdriver, electrical tape, safety glasses, ladder, wire strippers, pliers.



4 MODEL NO. 052-2656-4

Assembly Instructions

1. Unscrew nut (FF) from screw collar loop (EE). Unscrew the threaded tube (BB) almost out of mounting strip (AA) to get enough length to attach the screw collar loop (EE) and nut (FF) on it to hold canopy (E) in place.






Note: Do not install canopy (E) in place.

2. Attach mounting strip (AA) to outlet box (not included) using outlet box screws (CC).

3. Screw loop (B) to the threaded tube on the top of fixture body (A).

4. Unscrew the K/D rings (F) from chain (D). Adjust chain (D) to desired length. Spread the chain link using a pair of pliers (not included) while holding the link with a soft cloth (not included) to protect the chain's finish.

5. Attach one K/D ring (F) to the loop (B). Place the other one through the nut (FF) and canopy (E), then attach it to the screw collar loop (EE). Screw the K/D rings (F) until the chain (D) is firmly secured.

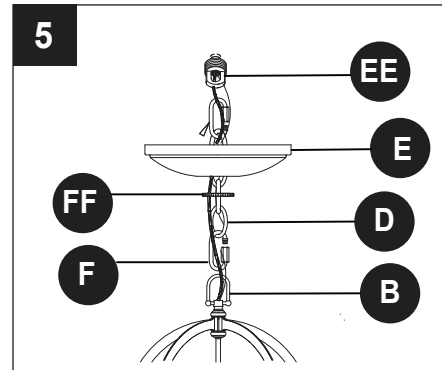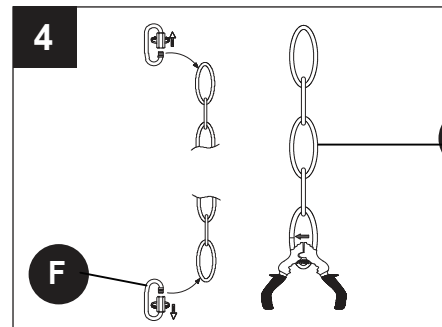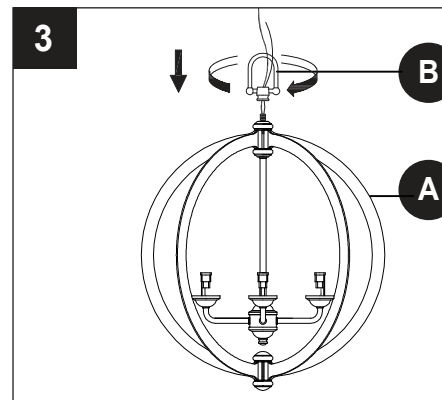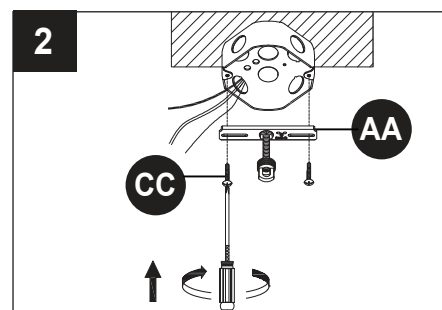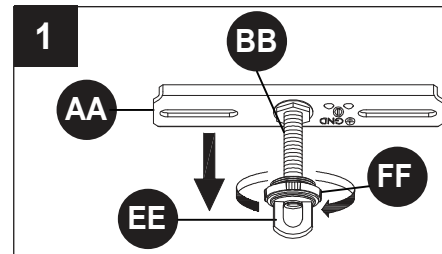





6. Weave electrical wires and ground wire up chain (D), through nut (FF), through screw collar loop (EE), through threaded tube (BB), through canopy (E) and into outlet box.

7. Strip 3/4" (19 mm) of insulation from fixture wire ends. Twist stripped ends together with pliers (not included). Connect the white, ribbed or tinned wire without writing from the fixture with the white wire from the outlet box. Connect the black, smooth, or un-tinned wire with writing from the fixture to the black wire from the outlet box in same manner. Snip ends. Wrap the ground wire from the outlet box around the green screw preassembled on the mounting strip (AA), and then connect the ground wire from the outlet box to the ground wire from the fixture.

Attach wire nuts (DD) to ends. Tape wire nuts (DD) and wires together with electrical tape (not included).

8. Attach screw collar loop (EE) and tighten nut (FF).

9. Place the socket sleeves (C) over the sockets. Install the bulbs. Use four 60 W (max.) E12 bulbs (not included).

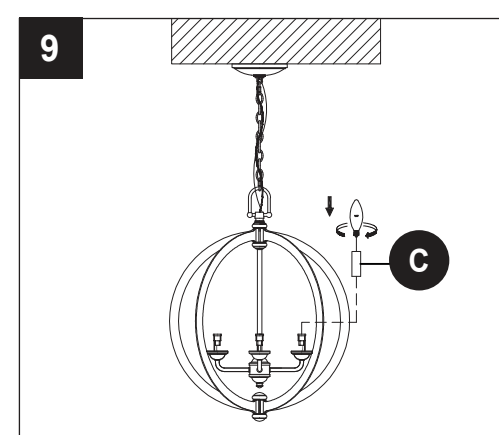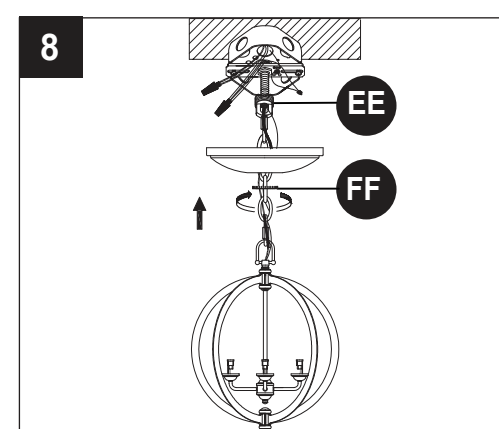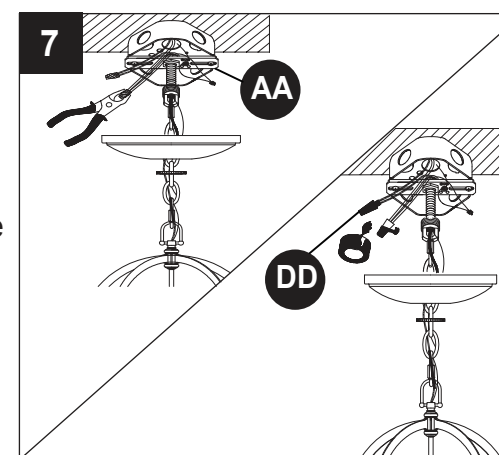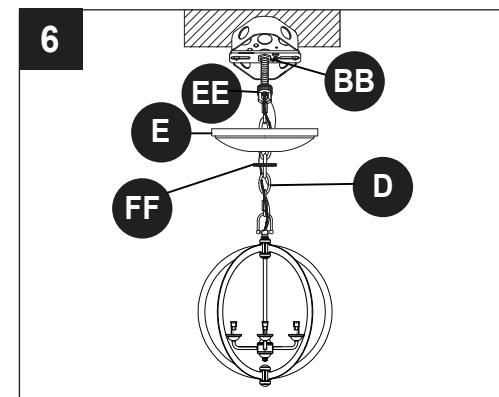

6 MODEL NO. 052-2656-4

Care and Maintenance/Troubleshooting

CARE AND MAINTENANCE

- Shut off main power before cleaning light with damp cloth or window cleaner. Do not use abrasive cleansers.
- Bulb replacement: Use four 60 W (max.) E12 bulbs or equivalent CFLs.

TROUBLESHOOTING

PROBLEM	POSSIBLE CAUSE	CORRECTIVE ACTION
Bulbs won't light.	1. Bulbs are burned out. 2. Power is off. 3. Faulty wire connection. 4. Faulty switch.	1. Replace the bulb. 2. Check if power supply is on. 3. Check wiring. 4. Test or replace the switch.
Fuse blows out or circuit breaker trips when light is turned on.	1. Crossed wires or power wire is grounding out.	1a. Check the wiring connection. 1b. Consult a qualified electrician.

This CANVAS™ product carries a one (1) year warranty against defects in workmanship and materials.

Trileaf Distribution agrees to replace a defective product free of charge within the stated warranty period, when returned by the original purchaser with proof of purchase. This product is not guaranteed against wear or breakage due to misuse and/or abuse.

Made in China

Imported by
Trileaf Distribution Trifeuil Toronto, Canada M4S 2B8

Warranty