

# MAXIMUM™

## 2-in-1

### Air-powered Flooring Nailer



Model no. 058-9342-6

**IMPORTANT:**

Please read this manual carefully before using this product, and save it for reference.

**INSTRUCTION  
MANUAL**

## TABLE OF CONTENTS

TECHNICAL SPECIFICATIONS	4
SAFETY GUIDELINES	5
KEY PARTS DIAGRAM	10
TECHNICAL INFORMATION	11
TYPES OF NAILS	14
OPERATING INSTRUCTIONS	15
MAINTENANCE	19
TROUBLESHOOTING	20
EXPLODED VIEW	22
PARTS LIST	23
WARRANTY	24

**NOTE:** If any parts are missing or damaged, or if you have any questions, please call our toll-free helpline at 1-888-670-6682.



### SAVE THESE INSTRUCTIONS

This manual contains important safety and operating instructions. Read all instructions and follow them with use of this product.

## TECHNICAL SPECIFICATIONS

MAGAZINE CAPACITY	60 staples; 100 L-cleats
FLOORING CLEATS	16-gauge L-cleat (1 1/2-2")
STAPLES	15 1/2-gauge flooring staple (1 1/2-2" with 0.495 widths)
STAPLE CROWN	1/2" (12.7 mm)
OPERATING PRESSURE	70 to 110 PSI (4.8 to 7.5 bar)
MAXIMUM PRESSURE	120 PSI (8.3 bar)
AIR CONSUMPTION	0.032 CF/CYCLE @ 90 PSI
AIR INLET	1/4" - 18 NPT
WEIGHT	10 lb 6 oz (4.7 kg)

CF: Cubic Feet (the volumetric flow rate of air corrected to standardized conditions of temperature and pressure).

NPT: National Pipe Thread.

## SAFETY GUIDELINES

This manual contains information that relates to PROTECTING PERSONAL SAFETY and PREVENTING EQUIPMENT PROBLEMS. It is very important to read this manual carefully and understand it thoroughly before using the product. The symbols listed below are used to indicate this information.

**DANGER!**

Potential hazard that will result in serious injury or death.

**WARNING!**

Potential hazard that could result in serious injury or death.

**CAUTION!**

Potential hazard that may result in injury or damage to equipment.

## PERSONAL SAFETY

These precautions are intended for the personal safety of the user and others working with the user.


Please take time to read and understand them.

Make sure you read and understand this manual before using this tool. Make sure other users read and understand this manual before they use the tool.


**NOTE:** The word "Note" is used to inform readers of something they need to know about the tool.



- Do not use oxygen or any other combustible or bottled gas to power air-powered tools. Failure to observe this warning can cause explosion and serious personal injury or death. Use only the compressed air to power the air-powered tools. Use a minimum of 25' (7.6 m) of hose to connect the tool to the compressor. Failure to comply will result in serious injury or death.

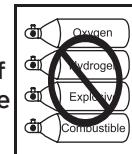

- Risk of bursting. Make sure the regulator is adjusted so that the compressor outlet pressure is set lower than the maximum operating pressure of the tool. Before starting the compressor, pull the ring on the safety valve to make sure the valve moves freely. Drain water from tank after each use. Do not weld nor repair the tank. Relieve all pressure in the hose before removing or attaching accessories.

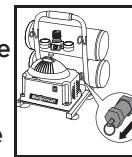

- Risk of electric shock. Do not expose a compressor to rain. Store it indoors. Disconnect the compressor from the power source before servicing. The compressor must be grounded. Do not use grounding adaptors.

**NOTE:** Carefully read and understand all the instructions in this manual before using the tool. Ensure that the operator has read and understood these instructions.



## DANGER!

Potential hazard that will result in serious injury or death.

- Keep children away from the work area. Do not allow children to handle power tools.
- Keep air hose away from heat, oil, and sharp edges. Check air hose for wear before each use and ensure that all connections are proper.
- Always ensure that the workpiece is firmly secured leaving both hands free to control the tool.
- Always ensure that the tool has stopped before putting it down after use, in the interest of safety and to prevent possible damage to the tool or personal injury or death.
- Keep proper footing at all times in order to ensure correct balance.



- Risk of personal injury. Do not direct compressed air from the air hose toward the user or other people or animals.



- Risk of inhalation. Never directly inhale the air produced by the compressor.



- Risk of bursting. Do not adjust the pressure switch or safety valve for any reason. They have been preset at the factory for this compressor's maximum pressure. Tampering with the pressure switch or the safety valve may cause personal injury or property damage.



- Risk of burns. The pump and the manifold generate high temperatures. In order to avoid burns or other injuries, do not touch the pump, the manifold or the transfer tube while the compressor is running. Allow the parts to cool down before handling or servicing. Keep children and pets away from the compressor at all times.



## WARNING!


Potential hazard that could result in serious injury or death.

- Do not allow unskilled or untrained individuals to operate the Air-powered 2-in-1 Flooring Nailer.
- Do not use the Air-powered 2-in-1 Flooring Nailer for any task other than that it is designed to perform.
- Do not use the Air-powered 2-in-1 Flooring Nailer unless you have been trained to do so. Only a qualified person should use the tool.
- Locate the compressor in a well-ventilated area for cooling, and must be a minimum of 12" (30 cm) away from the nearest wall.
- Protect the air hose and the power cord from damage and puncture. Inspect them for weak or worn spots before every usage, and replace them if necessary.
- Always wear eye and hearing protection when using the air compressor. Failure to do so may result in hearing loss.
- Do not carry the compressor while it is running.
- Do not operate the compressor if it is not in a stable position.
- Do not operate the compressor on a rooftop or in an elevated position that could allow the unit to fall or be tipped over.
- Always replace a damaged gauge before operating the unit.

- Always ensure that the tool has stopped before connecting to the air supply.
- Do not wear watches, rings, bracelets, or loose hair or clothing when using any air tool.
- Do not overload the tool. Allow the tool to operate at its optimum speed for maximum efficiency.
- Do not use a tool that is leaking air, with missing or damaged parts, or that requires repairs. Verify that all screws are securely tightened.
- For optimal safety and tool performance, inspect the tool before every usage in order to ensure free movement of the trigger, safety mechanisms, and springs.
- Always keep your air tool clean and lubricated. Daily lubrication is essential to avoid internal corrosion and possible failures.
- Ensure the floor is not slippery and wear non-slip shoes. Floors should be kept clean and clear.
- Always follow all workshop safety rules, regulations, and conditions when using the Air-powered 2-in-1 Flooring Nailer.
- Carry the tool by the handle only. Do not carry the tool with a finger on the trigger. Do not carry the tool by the hose, magazine or any other parts.
- Do not store the tool in a freezing environment to prevent ice formation on the operating valves of the tool, as doing so may cause tool failure.
- Handling and storage of oil: Use with adequate ventilation. Avoid contact of oil with eyes, skin, and clothing. Avoid breathing spray or mist. Store in a tightly closed container in a cool, dry, well-ventilated area free from incompatible substances.

**NOTE:** Recycle unwanted materials rather than disposing of them as waste. Sort the tools, hoses, and package into specific categories and take them to the local recycling centre or dispose of them in an environmentally safe way.

- Disconnect the tool from the air supply and turn off the compressor before performing any maintenance, or changing accessories, when the tool is not in use, when it is being handed to another person, and when it is left unattended. Failure to comply may result in injury or damage to equipment.
- Use safety goggles and ear protection: Wear safety glasses with side shields when operating the tool/compressor and verify that others in the work area are also wearing safety glasses. Safety glasses must provide protection from flying particles from the front and the sides. Air-powered tools are loud and the sound can cause hearing damage. Always wear ear protection to prevent hearing damage and loss. Failure to comply may result in injury. Do not use while under the influence of alcohol, drugs or medication.

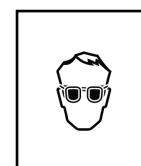

#### CAUTION!


Potential hazard that may result in moderate injury or damage to equipment.



#### CAUTION!

Potential hazard that may result in moderate injury or damage to equipment.

No.	Description	No.	Description
1	Magazine	4	Air inlet plug
2	Spacer wheel for depth control	5	Magazine pusher latch
3	Hammer striking area - whack cap		

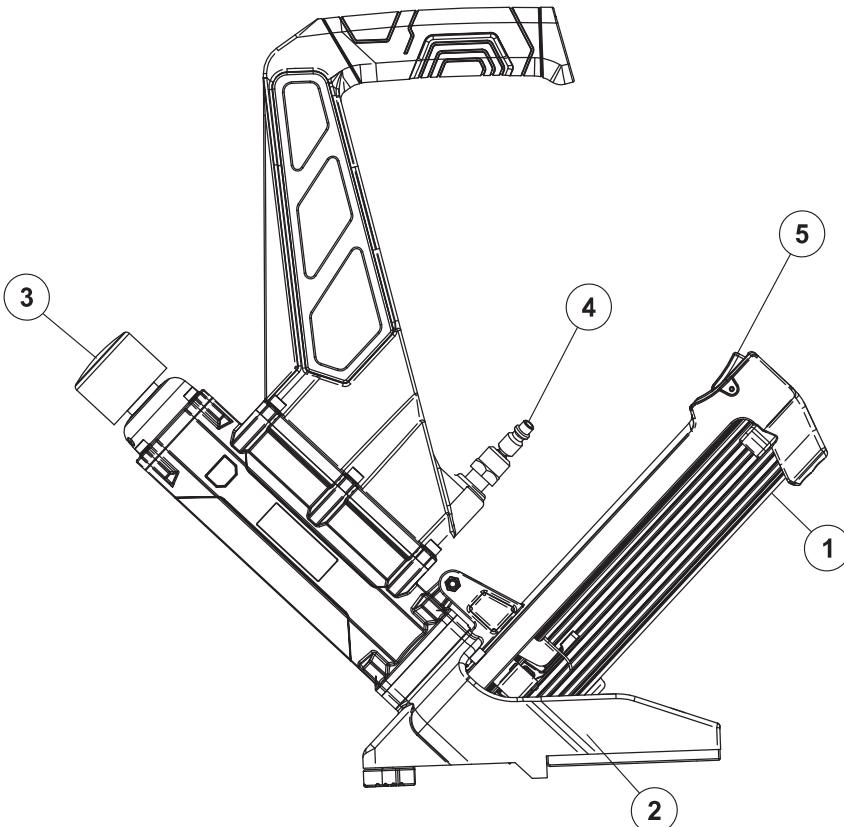

## General use

This MAXIMUM® Air-powered 2-in-1 Flooring Nailer drives 15-gauge staples 1 1/2 to 2" (38 to 50 mm) long with a 1/2" (12.7 mm) crown, and "L" shaped cleats and nails that are between 1 1/2 and 2" (38 and 50 mm) in length. It features a die-cast aluminum housing and a comfortable handle for optimal control and comfort, even during extended use. It is well balanced for stability, and ergonomically designed with a longer handle for ease of operation. It also features a hardened driver blade for longer life, a composite base to eliminate stretches and damage to surfaces, and economical air consumption with low noise. This Air-powered 2-in-1 Flooring Nailer is specifically designed for installing hardwood flooring.

## Compatible compressors

### GUIDELINES FOR PROPER USE AND OPERATION


Be sure to use a proper air compressor with MAXIMUM® Air-powered tools. The compressor should be able to supply a minimal air delivery of 6.36 CFM @ 90 PSI to ensure the compressor can run continuously with the MAXIMUM® Air-powered 2-in-1 Flooring Nailer.

Air Compressor Size and Power	1 1/2-2 HP	2 1/2 HP	3+ HP
4-5 Gallons	Light-duty and intermittent use	Light-duty and intermittent use	Light-duty and intermittent use
6-11 Gallons	Light-duty and intermittent use	Medium-duty and intermittent use	Medium-duty and intermittent use
15+ Gallons	Medium-duty and intermittent use	Heavy-duty and continuous use	Heavy-duty and continuous use

Wood Density	Nail Size	Compressor Air Pressure
>0.6 g/cm <sup>3</sup>	<1 1/4" (32 mm) staples	90 PSI (6.2 bar)
	≥1 1/4" (32 mm) staples	120 PSI (8.3 bar)
	<3/2" (38 mm) L nails	90 PSI (6.2 bar)
	≥3/2" (38 mm) L nails	110 PSI (7.6 bar)
≤0.6 g/cm <sup>3</sup>	<1 1/4" (32 mm) staples	75 PSI (5.2 bar)
	≥1 1/4" (32 mm) staples	110 PSI (7.6 bar)
	<3/2" (38 mm) L nails	75 PSI (5.2 bar)
	≥3/2" (38 mm) L nails	100 PSI (6.9 bar)

**Air system**

- Always use clean, dry, regulated, compressed air at 5.5 to 7.5 bar (80 to 110 PSI).
- Do not exceed the maximum or minimum pressures. Operating the tool at the wrong pressure (too low or too high) will cause excessive noise or rapid wear of tool.

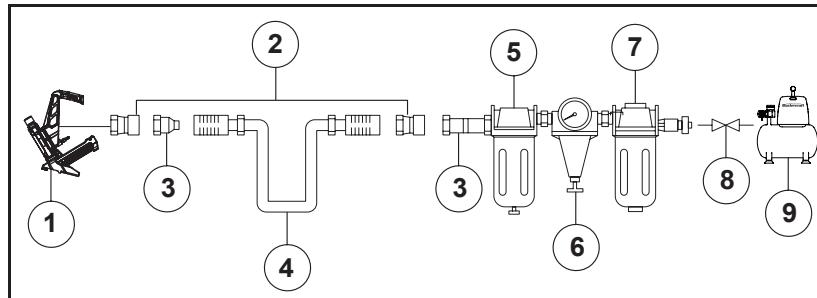

No.	Description	No.	Description
1	MAXIMUM® Air-powered 2-in-1 Flooring Nailer	6	Regulator 0-123 PSI (0-8.5 bar)
2	Quick connector	7	Filter
3	Quick coupler	8	Cut-off valve
4	Air hose	9	Air compressor
5	Lubricator		

**WARNING!**

Potential hazard that could result in serious injury or death.

- Keep hands and other parts of the body away from the tool's discharge and working areas when connecting the air supply. Failure to comply could lead to serious injury or death.

- It is recommended that a filter-regulator-lubricator is used and located as close to the tool as possible.
- If a filter-regulator-lubricator is not installed, place up to 6 drops of compressor oil into the NPT inlet plug before each use.
- If a filter-regulator-lubricator is installed, keep the air filter clean. A dirty filter will reduce the air pressure to the tool, which will cause reduction in power, efficiency, and general performance.
- For optimal performance, install a quick connector to the tool and a quick coupler on the hose, if applicable.
- Verify that all of the connections in the air supply system are sealed in order to prevent air from leaking.

**AIR TOOLS****Read this Instruction Manual carefully before using the tool.**

- Read and follow all the safety instructions at the beginning of this manual. Inspect the Air-powered tool prior to each use in order to:
  - Ensure that the proper power source is being used.
  - Verify that the tool is in proper working order.
  - Verify that the air pressure level(s) are properly set on the air compressor.
  - Do not use the tool if it is not in proper working order.
  - Do not use oxygen, CO<sub>2</sub> (carbon dioxide) or any other combustible, or bottled gas to power this tool.
  - Do not use this tool in the presence of any flammable liquids or gases.
  - Keep hands and other parts of the body away from the firing head during use.
  - Do not point the tool towards the operator or other people.
  - Never attempt to clear a jammed fastener while the air hose is connected.
  - Do not drive a fastener on top of an existing fastener. Failure to comply could lead to serious injury or death.

**WARNING!**

Potential hazard that could result in serious injury or loss of life.


This MAXIMUM® Air-powered 2-in-1 Flooring Nailer accepts the following size and type of fasteners.

### ACCEPTABLE FASTENERS

#### Flooring staples (15 gauge)


Crown: 1/2" (12.7 mm)

Length: 1 1/2-2" (38-50 mm)

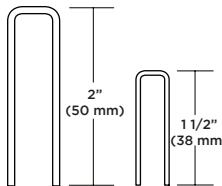

#### L-Shaped cleats/nails (16 gauge)

Length: 1 1/2-2" (38-50 mm)

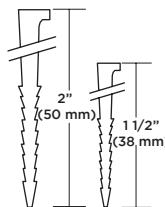

### NAIL TYPE ICONS

These Icons are used to select the proper nails for this specific nailer.

#### COMPATIBLE NAILS/STAPLES: CLOUS/AGRAFES COMPATIBLES :



NAIL SIZE:  
TAILLE:  
1 1/2-2"



NAIL SIZE:  
TAILLE:  
1 1/2-2"

**NOTE:** Icons are colour-coded. Please refer to the actual tool for the specific colour.




### WARNING!

Potential hazard that could result in serious injury or loss of life.


- The use of any other types of fasteners will cause the tool to jam. Failure to comply could lead to serious injury or loss of life.

### Loading fasteners


- Disconnect the tool (1) from the air supply (2) (Fig. A).

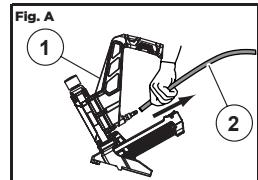


- Take hold of the Air-powered 2-in-1 Flooring Nailer firmly with one hand. Use the other hand to press the pusher latch (1) on the magazine and slide it back. Make sure you have the right nails for your tool (See page 14). Insert a strip of fasteners (2) into the magazine. Ensure that the points of the fasteners are facing down (Fig. B).

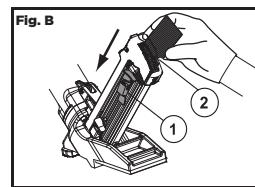

- Release the pusher (1), so that it rests on against the fasteners (2) to close the magazine, until it comes into contact with the fasteners and locks into position (Fig. C).

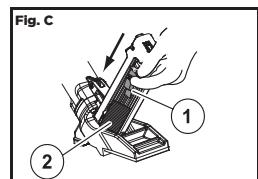

- Plug in compressor, turn it on, set the pressure regulator to 90 PSI, and attach one end of the air hose to the compressor and the other end of the air hose (1) to the tool (2). Use plumber's tape to avoid air leaks (Fig. D).


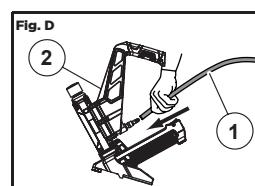


### DANGER!

Potential hazard that will result in serious injury or loss of life.

- Disconnect the tool from the compressed air source before loading fasteners.
- Do not point the tool towards the operator or other people while changing fasteners.
- Do not hold the tool with the trigger depressed while changing the fasteners. Failure to comply will lead to serious injury or loss of life.

5. Hold the handle, and lift the Air-powered 2-in-1 Flooring Nailer into place. Swing the mallet and strike the top end of the "whack cap" with the rubber face of the mallet (Fig. E).

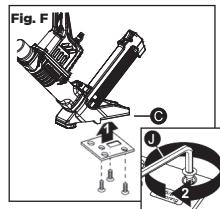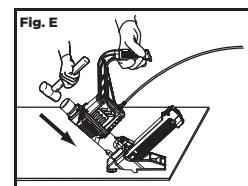

6. Using the hex key (J), hold the nailer upside down and remove the three screws from the base plate by turning counter clockwise. Attach the desired plate (See Fig. F). Ensure the screw holes on the base plate line up with the holes at the nailer base (C). Tighten the screws by turning clockwise (See Fig. F). Make sure screws do not protrude out of the base plate.



### DANGER!



Potential hazard that will result in serious injury or loss of life.

- Do not operate the tool if the fasteners are not loaded, doing so may damage the tool.
- Do not fire fasteners into the air, doing so may cause injury to the operators or others, apart from damaging the tool.
- Load the correct type of fasteners only, do not load different sized fasteners into the magazine, doing so may cause fasteners to jam. Failure to comply will lead to serious injury or loss of life.
- The nailer releases one fastener with each hit, so hitting the whack cap twice will project a second fastener onto the first one which could cause a potential ricochet hazard.
- Ensure that the hammer exerts sufficient amount of force on the nailer. If the force is too low, the fastener will not be inserted completely onto the flooring. For nails that are not completely inserted, use a hammer to pull out the nails or knock the nails in with a nail setter. Do not attempt to drive a fastener into the same location twice.

### INSERTION METHODS

The MAXIMUM® Air-powered 2-in-1 Flooring Nailer drives nails and staples, which are to be inserted using different insertion methods.

1. Nails: Insert the nails (1) from the top area of magazine into the centre slot at the top of the magazine (Fig. G).

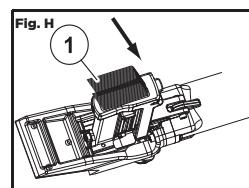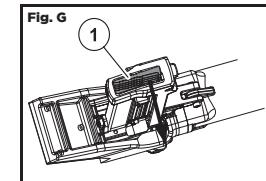


2. Staples: Insert the staples (1) from the top area of the magazine with one arm of the staple in the center slot of the magazine and the other arm along the left side of the magazine (Fig. H).

### Clearing a jammed fastener

#### To clear a jammed fastener:




- Disconnect the tool from the air supply line.
- Remove the fasteners that are stored in the tool's magazine.
- Use pliers or any appropriate tool to remove the jammed fastener.
- Reload the fasteners into the tool magazine.
- Reconnect the air line to the tool's air inlet.
- Test fire 3 to 5 fasteners into a piece of scrap wood in order to ensure proper operation.

1. Pull the pusher latch to the end of the magazine to lock it (Fig. I).

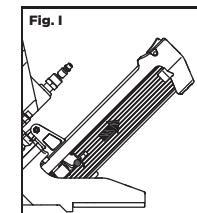

**NOTE:** Test the driving depth using a scrap piece of wood before working on the workpiece. If the fasteners are being driven too deep or not deeply enough, adjust the spacer wheel in order to provide more or less air pressure, as required.

2. Using the hex key, hold the gun upside down and loosen the four screws from the cover plate by turning counter clockwise (Fig. J).

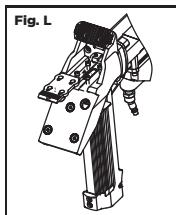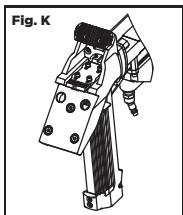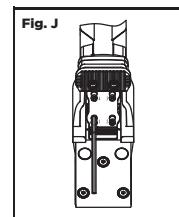

3. Pull out and lift up the cover plate. Remove it to clean the jam (Fig. K&L).

**NOTE:** If the fasteners continue to jam, please call 1-888-670-6682.



### CAUTION!

Potential hazard that may result in injury or damage to equipment.

- Operate the tool with the utmost care when connected with the air compressor. Failure to comply may result in moderate injury or damage to equipment.



### WARNING!

Potential hazard that could result in serious injury or loss of life.

- Disconnect the magazine from the tool and remove the non-jammed fasteners from the tool before clearing a jammed fastener. The fasteners are under pressure and failure to comply will cause them to be fired out of the tool causing serious injury.
- Do not point the tool towards the operator or other people. Serious personal injury could result if these instructions are not followed.


### Storage

If it is necessary to store the tool for an extended period of time, apply a generous amount of lubrication before storing. The tool should be allowed to run for approximately 30 seconds after lubricating, in order to ensure that the lubrication is uniformly distributed throughout the tool.

### Maintenance

MAINTENANCE REQUIRED	DESCRIPTION	TOOLS OR MATERIALS REQUIRED	MAXIMUM SERVICE INTERVAL		
			Each use or every 2 hrs	Monthly	As needed
In-depth inspection	Worn or broken parts			X	X
Replace worn or broken parts					X
Lubrication	See below	Pneumatic tool oil		X	

- **Lubrication:** If the Air-powered 2-in-1 Flooring Nailer and the compressor are not equipped with an in-line lubrication system, place up to 6 drops of pneumatic tool oil into the air inlet before each work day or after every 2 hours of continuous use, depending on the characteristics of the workpiece and type of fasteners used.

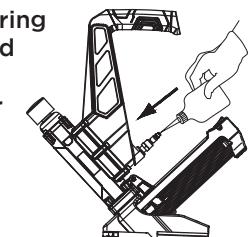

- Air-operated tools must be inspected periodically and worn or broken parts must be replaced to ensure that the tools are operating safely and efficiently.
- Inspect and replace worn or damaged O-rings, seals, etc. Tighten all screws and caps frequently in order to help prevent personal injury.
- Keep the magazine of the tool clean and free of any dirt or abrasive particles.

**NOTE:** When temperatures are below freezing, maintain the tools in a warm condition using any safe, convenient method.



### DANGER!

Potential hazard that will result in serious injury or loss of life.

- Disconnect the tool from the air compressor before maintenance/service, adjusting, clearing jams, reloading, and when it is not in use. Repairs must be performed by a qualified service technician only. Failure to comply will lead to serious injury or loss of life.

**Troubleshooting**

The following chart lists common operating system issues and solutions. Please read it carefully and follow all instructions carefully.

- Disconnect the tool from the air supply before making any adjustments.

- Repairs and replacement must be performed only by a qualified service technician or in an authorized service centre.

PROBLEM	POSSIBLE CAUSES	SOLUTIONS
Air leakage near the bottom of the tool	1. Screws are loose. 2.The O-rings or the bumper is/are damaged.	<b>Contact a qualified service technician</b> 1. To tighten the screws. 2. To inspect and replace the O-rings or seals.
Air leakage between the body and the cylinder cap	1. The screws are loose. 2.The O-rings or the seals are worn or damaged.	1. Tighten the screws. 2. Inspect and replace the O-rings or the seals. <b>Have the tool serviced by a qualified service technician.</b>
The fasteners are being driven too deep.	1. The bumper is worn. 2.The air pressure is too high. 3.The depth adjustment dial is not adjusted properly.	1. Replace the bumper. 2. Adjust the air pressure. 3. Adjust the depth setting by turning the depth adjustment dial counter-clockwise (see section "Adjusting the Fastener Depth").

**DANGER!**


Potential hazard that will result in serious injury or loss of life.

If any of the following symptoms appear while the tool is in use, turn it off and disconnect it from the air supply immediately. Failure to comply will lead to serious injury or loss of life.

- Disconnect the tool from the air supply before making any adjustments.
- Repairs must be performed by a qualified service technician only.

PROBLEM	POSSIBLE CAUSES	SOLUTIONS
The tool does not operate properly - it does not drive the fasteners or operates sluggishly.	1. The air supply is inadequate. 2. Lubrication is inadequate. 3. The O-rings or seals are worn or damaged. 4. The exhaust port in the cylinder head is blocked.	1. Verify that the air supply is adequate. 2. Pour up to 6 drops of oil into the air inlet. 3. Inspect and replace O-rings or seals. Have the tool serviced by a qualified service technician. 4. Replace the damaged internal parts. <b>Have the tool serviced by a qualified service technician.</b>
The tool skips fasteners.	1. The bumper is worn or the spring is damaged. 2. There is dirt in the front plate. 3. Fasteners cannot move freely in the magazine because of dirt or damage. 4. The O-ring on the piston is worn or dry or there is not enough lubrication. 5. The cylinder cover seal is leaking.	1. Replace the bumper or pusher spring. <b>Have the tool serviced by a qualified service technician.</b> 2. Clean the drive channel on the front plate. 3. Clean the magazine. 4. Replace the O-ring. <b>Have the tool serviced by a qualified service technician.</b> 5. Replace the sealing washer. <b>Have the tool serviced by a qualified service technician.</b>
The tool jams.	1. Fasteners are incorrect or damaged. 2. The driver guide is damaged or worn. 3. The magazine screw is loose. 4. There is dirt in the magazine.	(See section "Clearing a Jammed fastener"). 1. Use the proper fasteners. 2. Inspect and replace the driver. 3. Tighten the magazine. 4. Clean the magazine.

**NOTE:** For further repair information, please call 1-888-670-6682.

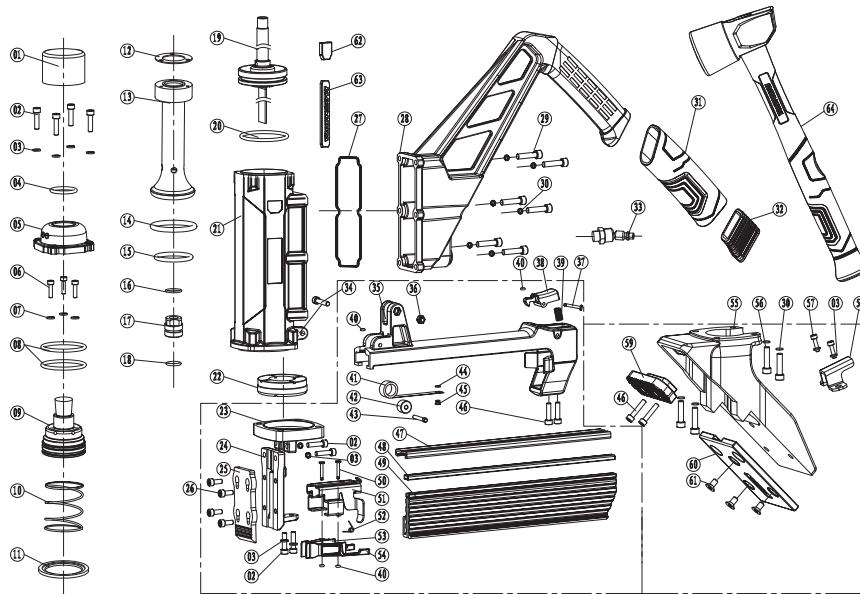

No.	Description	Qty.
1	Whack cap	1
2	Screw M5 x 20	8
3	Spring washer	10
4	O-ring 25 x 3.55	1
5	Cylinder cover	1
6	Bolt M4 x 16	3
7	Spring washer	3
8	O-ring 48.7 x 2.65	2

No.	Description	Qty.
9	Piston seat	1
10	Spring	1
11	Spring washer	1
12	Sleeve washer	1
13	Piston sleeve	1
14	O-ring 32 x 4.5	1
15	O-ring 12.4 x 2.5	1
16	O-ring 15.6 x 1.8	1

No.	Description	Qty.
17	Sealing nut	1
18	O-ring 12.8 x 1.8	1
19	Main piston	1
20	O-ring 50 x 3.55	1
21	Nailer body	1
22	Bumper	1
23	Driver guide seat	1
24	Driver guide	1
25	Cover plate	1
26	Bolt M6 x 12	4
27	Sealing washer	1
28	Handle	1
29	Bolt M6 x 25	6
30	Washer	10
31	Hand grip	1
32	Crank plug	1
33	360°air inlet plug	1
34	Screw M5 x 25	1
35	Magazine cover	1
36	Self-lock nut	1
37	Roll pin	1
38	Latch	1
39	Compressed spring	1
40	O-ring 1.7 x 2	3
41	Spring II	1
42	Spring core	1
43	Pin	1
44	Retainer d=3	1
45	Spring core pin	1
46	Bolt M5x16	6
47	Pusher seat shelf	1
48	Nail guide slice	1
49	Magazine	1
50	Pin	1
51	Pusher seat	1
52	Pusher spring	2
53	Right pusher	1
54	Left pusher	1
55	Base	1
56	Bolt M6 x 40	4
57	Bolt M5 x 10	2
58	Bracket	1
59	Stop block	1
60	Base plate A	1
61	Bolt M6 x 18	3
62	Rubber gasket	2
63	Logo	2
64	Hammer	1

If any parts are missing or damaged, or if you have any questions, please call 1-888-670-6682.

This MAXIMUM product is guaranteed for a period of 5 years from the date of original retail purchase against defects in workmanship and materials only and is subject to the following components:

a) Component A: The carrying case is guaranteed for a period of 1-year from the date of original retail purchase against defects in workmanship and materials.



Subject to the conditions and limitations described below, this product, if returned to us with proof of purchase within the stated warranty period and if covered under this warranty, will be repaired or replaced (with the same model, or one of equal value or specification), at the sole discretion of the Maximum Canada authorised repair centre ("Service Provider"). We will bear the cost of any repair or replacement and any costs of labour relating thereto.

**These warranties are subject to the following conditions and limitations:**

- a) A bill of sale verifying the purchase and purchase date must be provided;
- b) Defects in workmanship and material to be assessed and determined by the Service Provider;
- c) This warranty will not apply to any product or part thereof which is worn or broken or which has become inoperative due to abuse, misuse, accidental damage, neglect or lack of proper installation, operation or maintenance (as outlined in the applicable owner's manual or operating instructions);
- d) This warranty does not apply to normal wear and tear or to expendable parts or accessories (including drill bits and saw blades) that may be supplied with the product that by their nature have a limited life span and are expected to become inoperative or unusable after a reasonable period of use;
- e) This warranty will not apply to routine maintenance and consumable items such as, but not limited to, driver blades, bumpers, pistons, piston rings, rubber o-rings, tune-ups or adjustments;
- f) This warranty excludes the following components that may accompany your product:
  - (1) The carrying case, which is only for a period of 1-year from the date of original retail purchase against defects in workmanship and materials.
  - (2) Accessories, including drill bits and saw blades, which do not carry a warranty of any kind.
- g) This warranty will not apply where damage is caused by repairs made or attempted by others (i.e. persons not authorized by the manufacturer), and any such unauthorized repairs or attempted repairs shall void this warranty in its entirety;

- h) This warranty will not apply to any parts other than original parts, except to the extent that the retailer or manufacturer or persons authorized by either of them have repaired or replaced them;
- i) This warranty will not apply to any product that was sold to the original purchaser as a reconditioned or refurbished product (unless otherwise specified in writing);
- j) This warranty will not apply to any product or part thereof if any part from another manufacturer is installed therein or any repairs or alterations have been made or attempted by unauthorized persons;
- k) This warranty will not apply to normal deterioration of the exterior finish, such as, but not limited to, scratches, dents, paint chips, or to any corrosion or discolouring by heat, abrasive and chemical cleaners; and
- l) This warranty will not apply to component parts sold by and identified as the product of another company, which shall be covered under that product manufacturer's warranty, if any;
- m) Any products replaced by the retailer in attempt to fulfill warranty obligations is subject to the original product warranty conditions and related time period as initiated by the original date of purchase; if product is purchased in Quebec, the warranty term will be extended for a period equal to the time during which the Quebec retailer possesses the product in attempt to fulfill warranty obligations; replaced product will not default to new product warranty conditions; and
- n) The retailer and manufacturer's sole obligation and the purchaser's sole remedy under this warranty shall be as set out herein. The warranties contained herein are not transferable and are given only to the purchaser.

FURTHER, THE WARRANTIES SET OUT HEREIN ARE IN LIEU OF ALL OTHER WARRANTIES OR CONDITIONS, WHETHER EXPRESS, IMPLIED OR STATUTORY (INCLUDING SUCH AS ARISE UNDER THE SALE OF GOODS ACT OR THE INTERNATIONAL SALE OF GOODS ACT), ARISING OUT OF A COURSE OF DEALING OR USAGE OF TRADE OR OTHERWISE, INCLUDING, SUBJECT TO APPLICABLE LAW, ANY IMPLIED WARRANTIES OR CONDITIONS OF MERCHANTABILITY, MERCHANTABILITY QUALITY, FITNESS OR ADEQUACY FOR A PARTICULAR PURPOSE OR USE, AND ALL OTHER SUCH WARRANTIES ARE EXPRESSLY DISCLAIMED BY THE RETAILER AND MANUFACTURER.

### Additional Limitations

This warranty applies only to the original purchaser and may not be transferred.

This warranty applies for a period of 5 years from the date of original retail purchase, as indicated on the bill of sale.

Neither the retailer, Maximum Canada, nor the manufacturer shall be liable for any other expense, loss or damage, including, without limitation, any indirect, incidental, consequential or exemplary damages arising in connection with the sale, use or inability to use this product.

Under no circumstances shall the retailer, Maximum Canada, or manufacturer be liable to the purchaser for any claim for (a) indirect, special, punitive, incidental, exemplary, or consequential damages, (b) compensation for loss of profits, anticipated revenue, savings or goodwill, or other economic loss of the purchaser, (c) exemplary, aggravated or punitive damages howsoever incurred, (d) contribution or set-off in respect of any claims against the purchaser, (e) any damages whatsoever relating to third party products or services or the purchaser's materials, or (f) any damages whatsoever relating to interruption, delays, errors or omissions; in each case under any theory of law or equity, arising out of or in any way related to this warranty, even if advised of the possibility thereof. Notwithstanding any provision herein or entitlement of the purchaser at law, in equity or otherwise, in no event shall the liability of the retailer or manufacturer under this warranty, whether in contract, tort, product liability or otherwise, exceed, in the aggregate, the amount paid by the purchaser to the retailer for the product to which this warranty applies.

### \*Notice to Consumer

This warranty gives you specific legal rights, and you may have other rights, which may vary from province to province. The provisions contained in this warranty are not intended to limit, modify, take away from, disclaim or exclude any statutory warranties set forth in any applicable provincial or federal legislation.

In addition to the 5-Year Limited Warranty, this MAXIMUM product is covered by our:

### 1-Year Repair Warranty

Maximum Canada will maintain this product and replace critical parts which have worn beyond reasonable use through normal use of such product, any time during the first year after purchase.

The following are excluded from this 1-Year Repair Warranty:

- a) Missing or damaged parts or components that are a result of abuse or misuse;
- b) Any wear and tear to non-critical parts or accessories that do not affect the core function of the product.

### 90-Day Satisfaction Guarantee

If you are not completely satisfied with the performance of your MAXIMUM product for any reason, you can return it within 90 days from the date of purchase with proof of purchase for exchange or a full refund.

Made in China,

Imported by  
MAXIMUM Canada Toronto, Canada M4S 2B8