EVANS CREEK DINING TABLE

MODEL NO. 068-9596-8



ASSEMBLY INSTRUCTIONS

Toll-free: 1-888-670-6684

IMPORTANT: Please read this manual carefully before beginning assembly of this product. Keep this manual for future reference.

TABLE OF CONTENTS	3
Important Safety Instructions	3
Parts List	4
Assembly	5
Cleaning and Maintenance	9
Technical Specifications	9
Warranty	10




WARNING! To reduce the risk of serious injury, read the following safety instructions before assembling and using the table.

Caution! Always keep children under close supervision while they are using or around this product.

Never leave children unattended.


- This product is intended for indoor domestic use only.
- Do not allow your children to climb or jump on furniture due to possible accident, injury or death. A child climbing on a piece of furniture can make it top-heavy and cause the furniture to tip over.
- Any assembly or maintenance of the product must be carried out by adults only.
- Arrange necessary manpower when assembling or moving the product.
- Some parts may contain sharp edges. Wear protective gloves if necessary.
- Keep children and pets away.
- Check all nuts and bolts periodically for tightness. When required, tighten them again.
- Repairing and replacing parts should be done by a qualified technician.
- Failure to follow these warnings could result in serious injury.
- Maximum load weight is 181.4 kg (400 pounds).
- This unit is intended for use only within the maximum weight indicated. Use with loads heavier than the maximum weight indicated may result in instability, causing possible injury.

IMPORTANT: Retain for future reference, and read carefully.

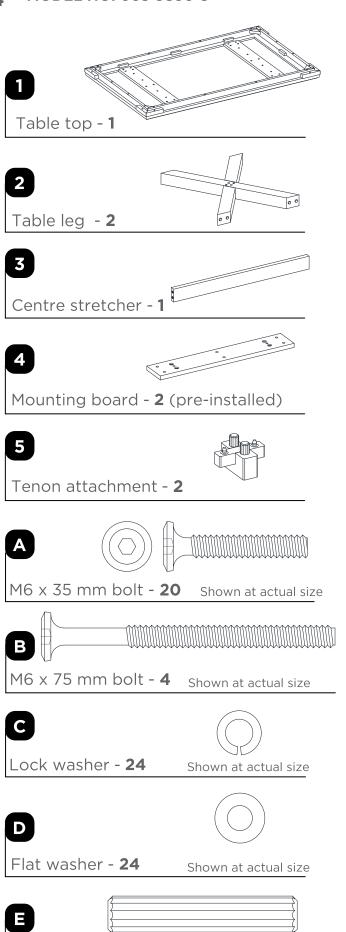

M10 x 50 mm wood dowel - 4

Shown at actual size

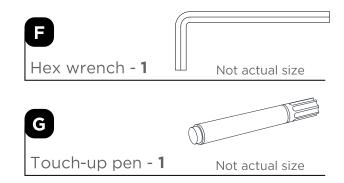



CAUTION!

- Keep children away during assembly.
 This product contains small parts which can be swallowed by children.
- Keep fingers away from the places where they can be pinched or trapped.
- Do not attempt to assemble the table if any parts are missing.




Let us help you! DO NOT RETURN YOUR PRODUCT TO THE STORE. CALL US FIRST! 1-888-670-6684

If you have questions regarding your product, require warranty assistance, or have damaged or missing parts, please call our customer service toll-free helpline. Contact us for assistance; we're here to help.

IMPORTANT: Please read and understand this manual before any assembly. Before beginning assembly of product, make sure all parts are present. Compare parts with packaging contents list. If any part is missing, or if you have any questions, contact the service centre at 1-888-670-6684 (toll-free).

Place all parts from the box in a cleared area and position them on the floor in front of you. Remove all packing materials and place them back into the box. Do not dispose of the packing materials until assembly is complete. Read each step carefully before beginning any assembly and make sure you understand each step. If you are missing a part, please call our toll-free number for assistance: 1-888-670-6684.


Needed for assembly:

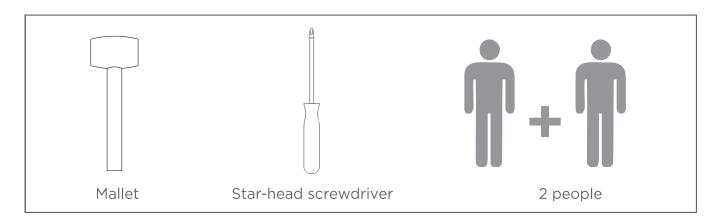

Step 1

Requires 1

Remove the additional wood blocks attached at the corners using a star-head screwdriver (not provided).

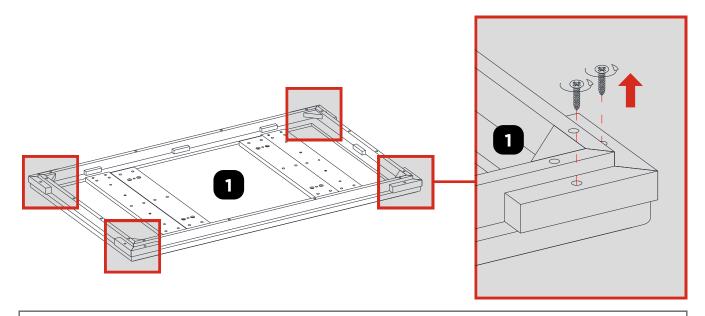


NOTE: These are used for shipping purposes only. After removing them, please discard. Assemble the unit on the carton or carpet to prevent scratching.

Step 2

Requires 1, 4


Remove 2 mounting boards ${\bf 4}$ from the table top ${\bf 1}$.

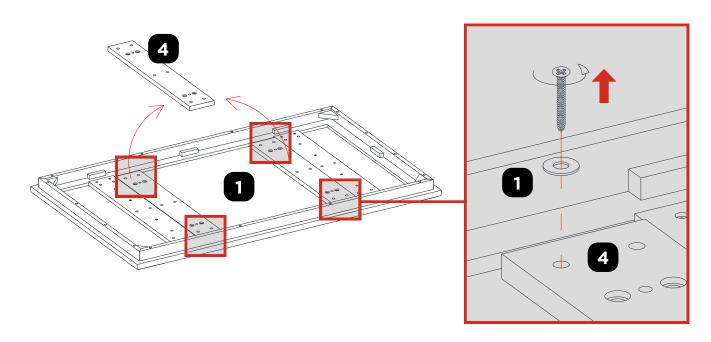

Step 3

Requires 2, 3, B, C, D


Attach table legs **2** to centre stretcher **3**, using four bolts **B**, four lock washers **C** and four flat washers **D**.

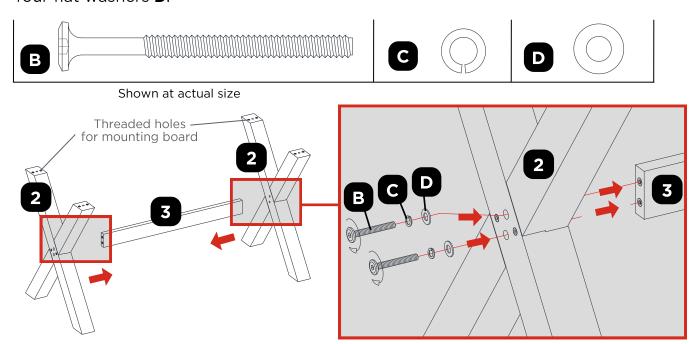

Step 4

Requires 2, 4, A, C, D, E


Attach the removed mounting boards $\bf 4$ to table legs $\bf 2$, using eight bolts $\bf A$, eight lock washers $\bf C$, eight flat washers $\bf D$ and four wood dowels $\bf E$.

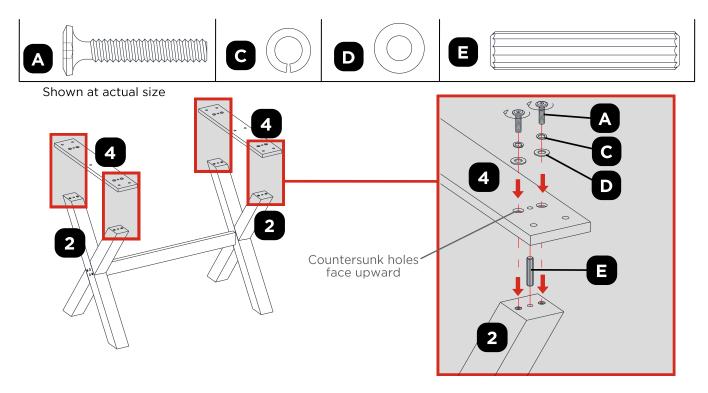

Step 5

Requires 1, 4, A, C, D


Attach the assembled base to table top $\mathbf{1}$, using twelve bolts \mathbf{A} and twelve washers \mathbf{C} and \mathbf{D} .

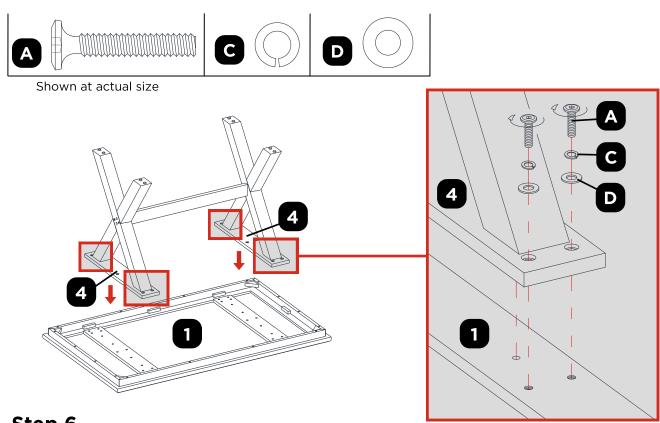

Step 6

Requires 2, 5

Ask for assistance to lift the unit upright and position it in the desired location. Attach 2 tenon attachments **5** onto the countersunk holes in legs **2**.

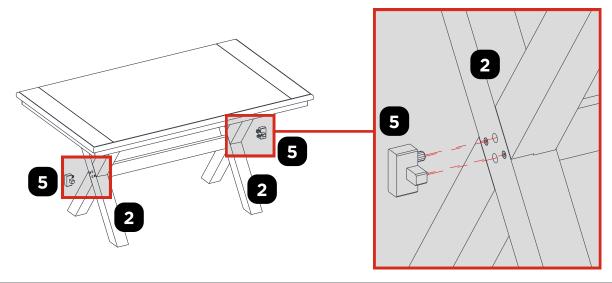

NOTE: Gently tap the attachments with a rubber mallet to ensure they are fully seated.



CAUTION!

- Check all screws and nuts periodically for tightness, tightening them again as required.
- Never move or push heavy furniture by yourself because it can cause the furniture to tip over. Ask a friend to help you lift the furniture and set it in appropriate place.
- Dust frequently with a soft dry cloth in the direction of the grain.
- Use products specifically made for cleaning wood.
- Use a wood-conditioning cleaner that does not contain waxes or silicones (test the product in an unseen location first).
- Clean spills immediately with a soft, damp cloth.
- Standing water can cause white spots on the wood finish.
- Chemicals such as alcohol, perfume, and medicines can cause severe damage to the wood finish.
- Protect the wood by using coasters.
- Use a protective pad when using your furniture as a desk or writing surface (especially when using a ballpoint pen).
- Do not expose wood furniture to direct sunlight, drying heat sources or dampness.

Dimensions (L x W x H)	149.2 x 90.2 x 76.2 cm
	58 3/4 x 35 1/2 x 30"
Product weight	42.5 kg
	93 lb 11 oz

This CANVAS™ product carries a one (1) year warranty against defects in workmanship and materials.

Trileaf Distribution agrees to replace the defective product free of charge within the stated warranty period, when returned by the original purchaser with proof of purchase. This product is not guaranteed against wear or breakage due to misuse and/or abuse.