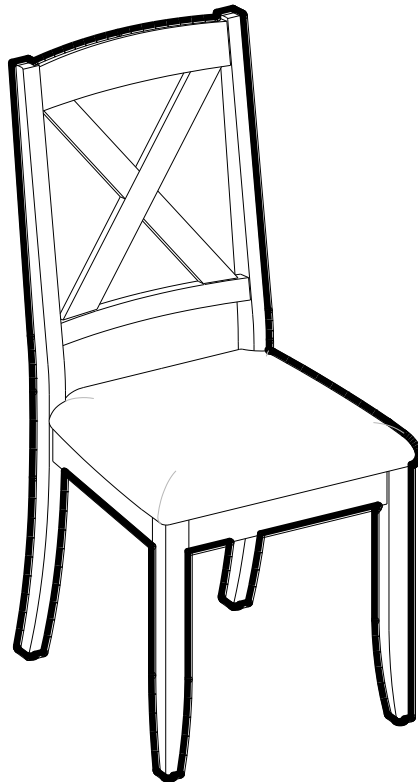


# CANVAS<sup>TM/MC</sup>

## EVANS CREEK DINING CHAIRS

MODEL NO. 068-9597-6



### ASSEMBLY INSTRUCTIONS

Toll-free: 1-888-670-6684

IMPORTANT: Please read this manual carefully before beginning assembly of this product.  
Keep this manual for future reference.

Made in Vietnam  
Imported by  
Trileaf Distribution Trifeuil Toronto, Canada M4S 2B8

TABLE OF CONTENTS	3
Important Safety Instructions	3
Parts List	4
Assembly	5
Cleaning and Maintenance	7
Technical Specifications	7
Warranty	8

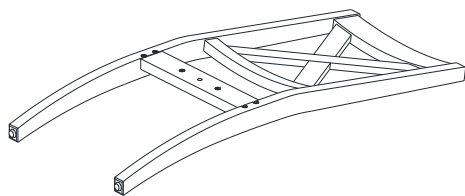
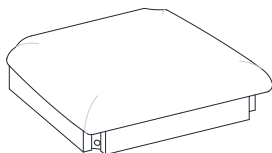
 
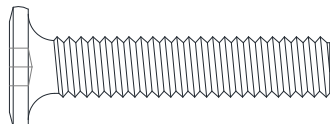
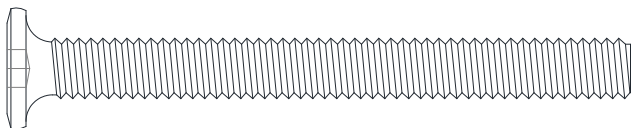
 
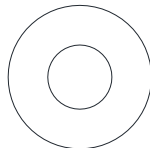
 
 


**WARNING!** To reduce the risk of serious injury, read the following safety instructions before assembling and using the chairs.

**Caution! Always keep children under close supervision while they are using or around this product.  
Never leave children unattended.**

- This product is intended for indoor domestic use only.
- Do not allow your children to climb or jump on furniture due to possible accident, injury or death. A child climbing on a piece of furniture can make it top-heavy and cause the furniture to tip over.
- Any assembly or maintenance of the product must be carried out by adults only.
- Arrange necessary manpower when assembling or moving the product.
- Some parts may contain sharp edges. Wear protective gloves if necessary.
- Keep children and pets away.
- Check all nuts and bolts periodically for tightness. When required, tighten them again.
- Repairing and replacing parts should be done by a qualified technician.
- Failure to follow these warnings could result in serious injury.
- Maximum load weight is 136 kg (300 pounds).
- This unit is intended for use only within the maximum weight indicated. Use with loads heavier than the maximum weight indicated may result in instability, causing possible injury.

**IMPORTANT:** Retain for future reference, and read carefully.

**4 MODEL NO. 068-9597-6****1**Chair backrest - **2****2**Seat - **2****3**Front leg - **4****A**M8 x 40 mm bolt - **4** Shown at actual size**B**M8 x 80 mm bolt - **8** Shown at actual size**C**Lock washer - **20** Shown at actual size**D**Flat washer - **20** Shown at actual size**E**M8 hex nut - **8** Not actual size**F**Hex wrench - **1** Not actual size**G**Open wrench - **1** Not actual size**H**Touch-up pen - **1** Not actual size

**CAUTION!**

- Keep children away during assembly.  
This product contains small parts which can be swallowed by children.
- Keep fingers away from the places where they can be pinched or trapped.
- Do not attempt to assemble the chairs if any parts are missing.

**Let us help you!**

**DO NOT RETURN YOUR PRODUCT TO THE STORE. CALL US FIRST!**  
**1-888-670-6684**

If you have questions regarding your product, require warranty assistance, or have damaged or missing parts, please call our customer service toll-free helpline. Contact us for assistance; we're here to help.

**IMPORTANT:** Please read and understand this manual before any assembly. Before beginning assembly of product, make sure all parts are present. Compare parts with packaging contents list. If any part is missing, or if you have any questions, contact the service centre at 1-888-670-6684 (toll-free).

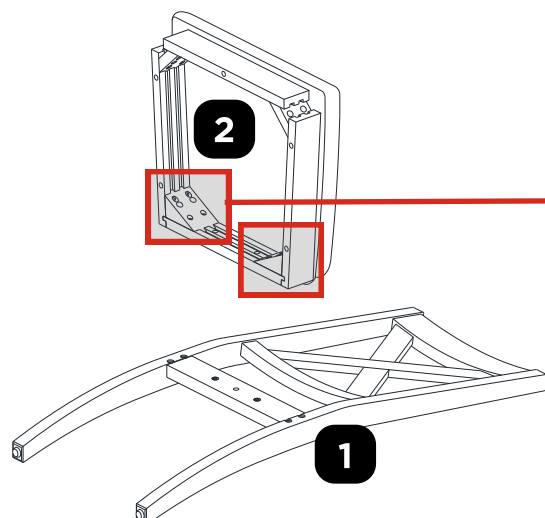
Place all parts from the box in a cleared area and position them on the floor in front of you. Remove all packing materials and place them back into the box. Do not dispose of the packing materials until assembly is complete. Read each step carefully before beginning any assembly and make sure you understand each step. If you are missing a part, please call our toll-free number for assistance: 1-888-670-6684.

# 6 MODEL NO. 068-9597-6


## Step 1

Requires **1, 2, A, B, C, D**

Attach one seat **2** to one chair backrest **1** using two bolts **A**, four bolts **B**, six lock washers **C** and six flat washers **D**.



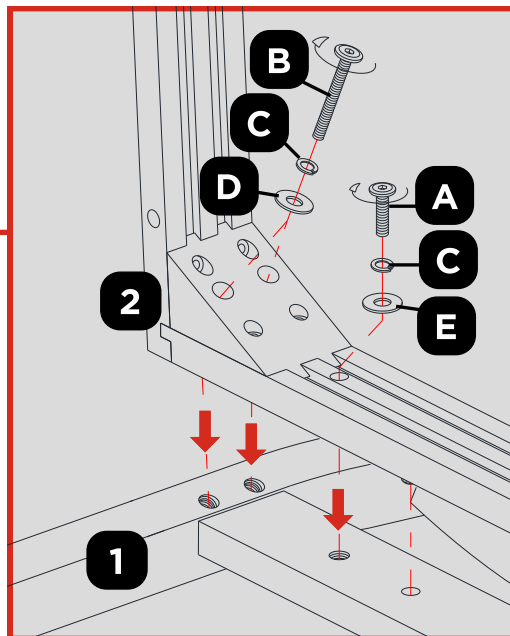**NOTE:** Place the backrest on a protective floor.



## Step 2

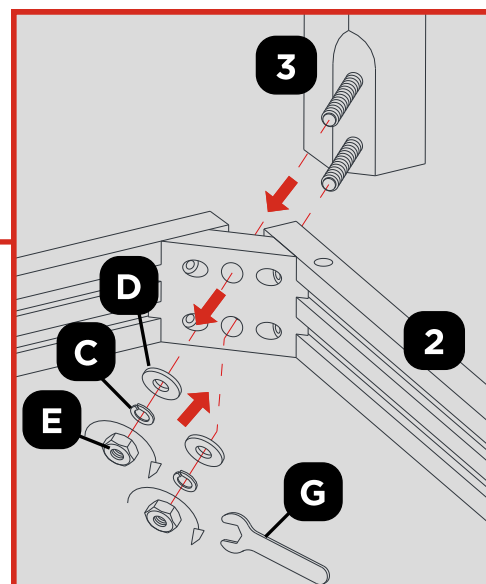
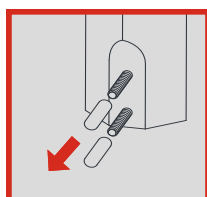
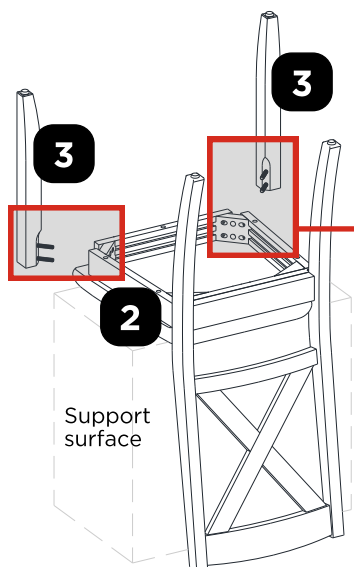
Requires **2, 3, C, D, E, G**

Remove the plastic caps from the hanger bolts of front legs **3**.

Attach two legs **3** to the seat **2** using four hex nuts **E**, four washers **C** and **D**.

Stand the unit upright. **The chair is now fully assembled. Enjoy!**

Repeat the same procedure to assemble the other chair.



**NOTE:** DO NOT fully tighten all the nuts until the chair has been adjusted, and level all the legs so that they do not wobble. Once adjusted, go back and tighten the connections while making sure that the unit remains level.



## CAUTION!

- Check all screws and nuts periodically for tightness, tightening them again as required.
- Never move or push heavy furniture by yourself because it can cause the furniture to tip over. Ask a friend to help you lift the furniture and set it in appropriate place.

- Dust frequently with a soft dry cloth in the direction of the grain.
- Use products specifically made for cleaning wood.
- Use a wood-conditioning cleaner that does not contain waxes or silicones (test the product in an unseen location first).
- Clean spills immediately with a soft, damp cloth.
- Standing water can cause white spots on the wood finish.
- Chemicals such as alcohol, perfume, and medicines can cause severe damage to the wood finish.
- Do not expose wood furniture to direct sunlight, drying heat sources or dampness.

Dimensions (L x W x H) 45.7 x 55.5 x 97.2 cm

18 x 21 7/8 x 38 1/4"

Product weight 14.4 kg

31 lb 12 oz

**8 MODEL NO. 068-9597-6**

This CANVAS™ product carries a one (1) year warranty against defects in workmanship and materials.

Trileaf Distribution agrees to replace the defective product free of charge within the stated warranty period, when returned by the original purchaser with proof of purchase. This product is not guaranteed against wear or breakage due to misuse and/or abuse.