

NOMA®


OMBRE LIGHTED TREE

model no. 151-6345-4 | Toll-free number: 1-866-827-4985

Instruction Manual
For indoor use
Retain carton for storage purposes

IMPORTANT: Please read this manual carefully before assembly and save it for reference

ASSEMBLY:

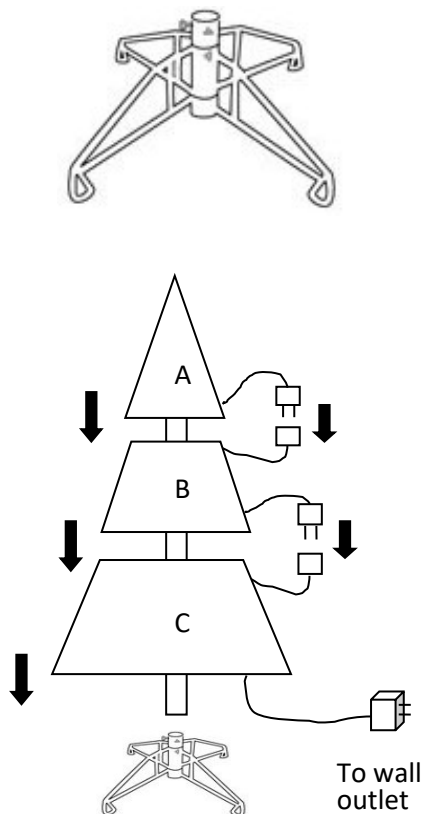



- 1) Before you start to assemble your tree, choose a location near a wall outlet. Assemble the tree stand and place on a level surface.
 - 2) Set up the tree stand by spreading the legs into an "X" shape. Lock the tree stand in position by threading screws into the 3 holes. Only screw the bolts in until they go slightly past the inner metal ring. Do not screw the bolts in all the way.
 - 3) Carefully insert the bottom tree section (C) of the tree into the stand. Make sure the pole is firmly inserted into the stand. Tighten the three screws on the tree stand so that the tree stands straight.
 - 4) Insert the middle section (B) of the tree into the bottom section (C). Connect the male light-string end connector in section (B) to the female light-string end connector in section (C).
 - 5) Insert the tree top section (A) into section (B). Connect the male light-string end connector in section (A) to the female light-string end connector in section (B).
 - 6) Please note that the two prongs on each male connector have different polarities and they can only be inserted into the female connector in one orientation. Make sure the connectors are inserted in the correct orientation, otherwise the lights will not light up.
 - 7) Plug the transformer in the bottom tree section into the wall outlet. Your tree should now be lit.
 - 8) Shape the branches by working from the bottom of the tree upwards. Fan out the tips in a pattern of one to the right, one to the left, and one to the centre of the main stem. Tips at the centre position should be alternately placed so that they do not line up one after the other. Repeat pattern for each branch.
- After shaping the whole tree, step back and take an overall look and shift branches to fill any gap. Your tree is now ready for decorating.

STORAGE:

- 1) Unplug the tree from the wall outlet. Disconnect the light strings between each tree section.
- 2) Remove all decoration from the tree.
- 3) Carefully lift off the top tree section (A) from the middle tree section (B). Carefully lift off the middle tree section (B) from the bottom tree section (C).
- 4) Remove the bottom tree section (C) from the tree stand.
- 5) Store in original carton.
- 6) Do not store in direct sunlight, in a damp area, or in an area where the temperature exceeds 40°C.

If the lights do not work:

- 1) Ensure the power outlet is working correctly. Check whether the cord is properly plugged into the outlet.
- 2) Ensure the light strings on the tree are securely connected. Ensure the light string connectors are connected in the correct orientation.
- 3) Check that all bulbs are tightly fitted inside their respective holders.
- 4) If a bulb is not working, replace the faulty bulb as shown in the figures below. Use the replacement bulbs provided.

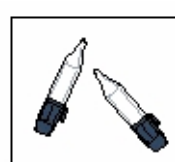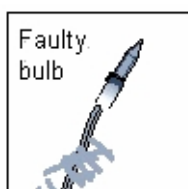

⚠ CAUTION:

- 1) Read all instructions and warning tags carefully.
- 2) For indoor use only.
- 3) Do not place near gas or electric heaters, radiators, fireplaces, candles or other similar sources of heat.
- 4) Place on a hard, flat, level surface. Do not place where the tree is likely to tip or wobble due to uneven flooring or thick carpeting.
- 5) Do not install near fountains, bathtubs, sinks or other wet areas.
- 6) Do not use candles on the tree.
- 7) After assembling and decorating the tree, ensure that it is stable. If the tree is unstable, attach support wires to walls and/or window frames (ensure that support wires are also secure).
- 8) Do not overload extension cords or power bars; see ratings on these devices and check the rating labels on the tree for compatibility.
- 9) This is a Christmas decoration. This is not a toy. Keep out of the hands of small children.
- 10) For festive use only. Not intended for consecutive use over 90 days each season.

This Noma® product carries a one (1) year warranty against defects in workmanship and materials. Noma Canada agrees to replace a defective product, within the stated warranty period, when returned to the place of purchase with proof of purchase. This product is not guaranteed against wear or breakage due to misuse and/or abuse.

MADE IN CHINA
Imported by Noma Canada
Toronto, Canada M4S 2B8

