

MASTER  
**Chef**<sup>TM</sup>

# SANDWICH MAKER

Model no. 043-2758-4



## INSTRUCTION MANUAL

Read this manual thoroughly before using this product and save it for future reference.

Important Safeguards	2
Know the Parts of Your Sandwich Maker	4
Before First Use	5
Using Your Sandwich Maker	5
Helpful Hints	7
Cleaning Your Sandwich Maker	7
Limited Warranty	8

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock and/or injury to persons, including the following:

1. **READ ALL INSTRUCTIONS CAREFULLY.**
2. Do not touch hot surfaces. Use handles or knobs.
3. To protect against fire, electric shock, and injury to persons, do not immerse cord, plug, or unit in water or any other liquid.
4. Close supervision is necessary when any appliance is used by or near children.
5. Unplug the sandwich maker from the outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning.
6. Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner. Return appliance to the nearest authorized service centre for examination, repair or electrical or mechanical adjustment.
7. The use of accessory attachments not recommended or sold by the appliance manufacturer may cause fire, electrical shock, or injury, and is therefore prohibited.
8. Do not use outdoors.
9. Do not allow the cord to hang over the edge of table or counter, or touch hot surfaces.
10. Do not place on or near a hot gas or electric burner, or in a heated oven.
11. To disconnect, remove the plug from the wall outlet.

12. Do not use appliance for other than its intended use.
13. Do not twist, kink or wrap the power cord around the appliance as this may cause the insulation to weaken and split, particularly in the location where it enters the unit.
14. **Never leave appliance unattended while it is plugged into an outlet.**

## SAVE THESE INSTRUCTIONS HOUSEHOLD USE ONLY

Important Safeguards



### POWER CORD INSTRUCTIONS

1. A short power-supply cord is provided to reduce the hazard resulting from entanglement or tripping over a long cord.
2. Extension cords may be used if care is exercised. If it is necessary to use an extension cord, it should be positioned so that it does not drape over the counter or tabletop where it can be pulled on by children or tripped over unintentionally.
3. The electrical rating of the extension cord must be the same or higher than the wattage of the appliance (the wattage is shown on the rating label located on the underside or back of the appliance).
4. Avoid pulling or straining the power cord at the outlet or appliance connections.




### POLARIZED PLUG

1. Your appliance is equipped with a polarized plug (one blade is wider than the other).
2. To reduce the risk of electrical shock, this plug is intended to fit into a polarized outlet only one way.
3. If the plug does not fit fully into the outlet, reverse the plug. If it does not fit, please consult a qualified electrician. Do not attempt to defeat this safety feature by modifying the plug in any way.

**WARNING: Improper use of the power cord may result in electric shock. Consult a qualified electrician if necessary.**

Model no. 043-2758-4 | Contact us: 1-855-803-9313

Know the Parts of Your Sandwich Maker

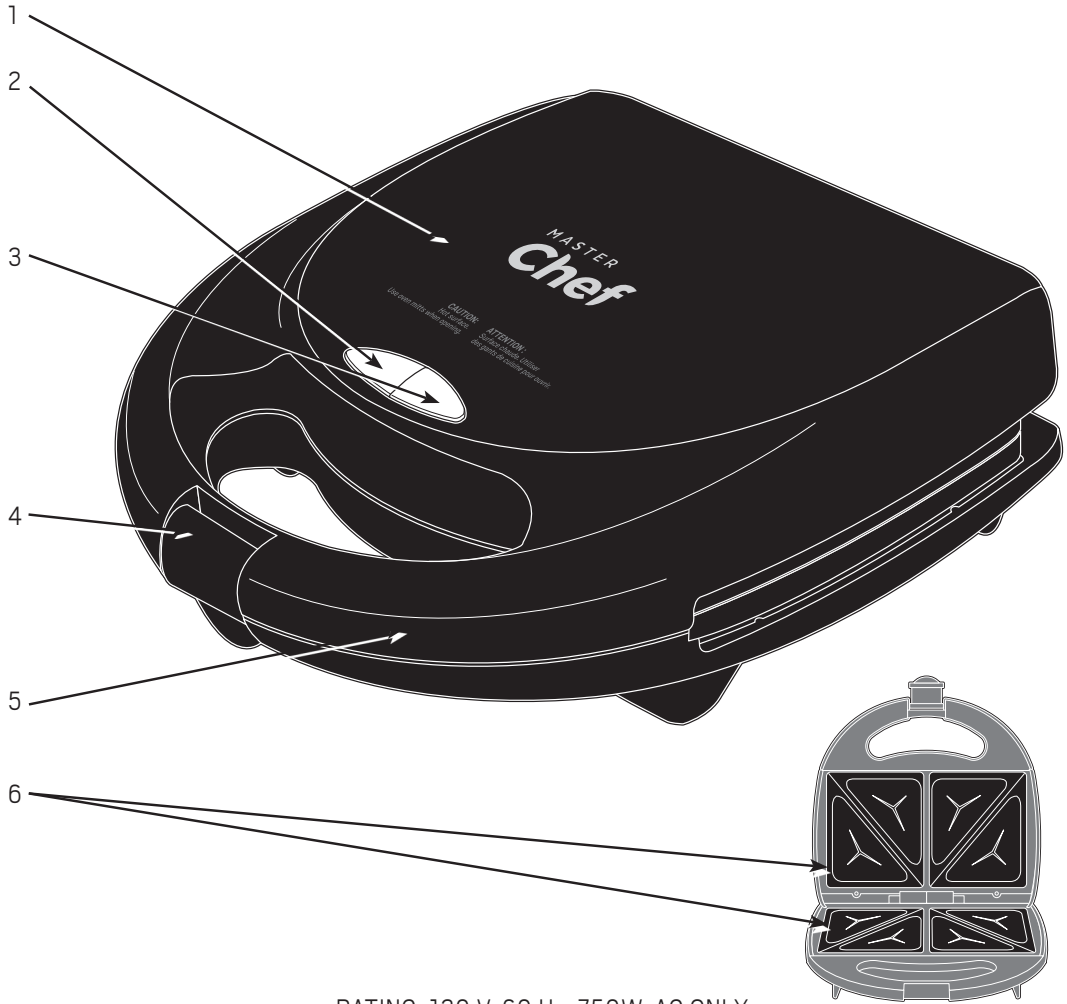

RATING: 120 V, 60 Hz, 750W, AC ONLY

1	Weighted Lid
2	Orange Power-On Indicator Light
3	Green Ready Indicator Light

4	Latch
5	Handle
6	(Inside) Upper and Lower Heating Plates

Carefully unpack the sandwich maker and remove any packaging materials. Wipe the surface of the cooking plates with a clean, damp cloth or sponge, then dry with a clean, dry cloth. This will remove any dust which may have settled during packaging. Wipe the cooking plates with a small amount of cooking oil. The outside of the sandwich maker may be wiped with a clean, damp cloth or sponge. **Do not immerse the sandwich maker in water or any other liquid. Do not use harsh or abrasive cleaners.**

1. Place the unit on a clean, dry, heat-resistant level surface. Plug the unit into a 120 volt 60 Hz AC only outlet. Close the lid and allow the unit to preheat.




**CAUTION:** The unit is on when it is plugged in. When the unit is plugged in, the orange “Power-On” light will be illuminated.

2. We find it best to plug the unit in first and then prepare the sandwiches while waiting for the appliance to heat up. Follow the directions of your chosen recipe.
3. After a few minutes, the green “Ready” light will turn on, indicating that the unit is now ready to cook. Lift the lid to its fully upright position.



**WARNING:** The sandwich maker cooking plates get very hot. Avoid touching them and the outer housing to avoid possible injury.

**\*Always use oven mitts when using your appliance.**

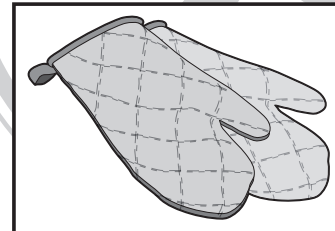

- Carefully place the sandwiches onto the cooking plates and lower the lid. Do not apply excessive force to close the lid. If the lid will not fully close, rearrange the sandwiches until the lid will close. Steam may come from the sides of the unit while closing the lid, so care must be taken not to burn yourself. Lock the lid into place using the latch at the front of the sandwich maker.



**NOTE:** Sandwich maker has been designed for use with standard size breads.



**NOTE:** Cook only with the lid in the closed position.

During the toasting process, the green indicator light may flash on and off. This is simply the sandwich maker adjusting the temperature as the sandwiches are being cooked.

Most sandwiches should be ready in 2-4 minutes. Depending on personal preference and taste, this time may vary slightly.


- Unlock the lid and lift it to its fully upright position. Remove the sandwiches from the cooking plates with a plastic or wooden spatula.  
Do not use metal utensils, as this may damage the nonstick surface of the cooking plates.
- If additional sandwiches are desired, lower the lid to preserve the heat while you prepare the additional sandwiches. Simply repeat the above steps to make as many tasty sandwiches as desired.
- When you are finished using the sandwich maker, be sure to unplug and allow to cool before cleaning and storing.
- Always follow cleaning instructions (pg. 7) before storing.
- The sandwich maker can be latched closed and stored upright.



**CAUTION:** Do not overfill your sandwiches. Excessive ingredients may not allow you to close and lock your sandwich maker. Forcing the lock will possibly damage the product.

- Wipe the cooking plates with a small amount of cooking oil.
- Always preheat the unit before cooking.
- Try using flavoured butters to make interesting and exciting sandwiches.
- Try different flavours of breads and fillings to create your own specialties.
- Use pizza sauce, spaghetti sauce or tomato sauce interchangeably. About 1 tablespoon (15 mL) per bread slice works well.
- Standard size breads are ideal and cook more evenly than thicker sliced bread.
- Use 1/4 to 1/3 cup (50 to 75 mL) cup chopped meat or vegetable mixture per sandwich.
- Bread slices should fit within the square designs of the bottom cooking surface. If bread is large, trim to fit or cut in half, making a smaller sandwich. However, for best results, do not remove crusts from bread.
- Use very thinly sliced or shaved meats.
- Let sandwiches cool slightly before eating. Cheese, especially, becomes very hot. Soft or melted fillings will firm slightly.

Be sure to unplug and allow to cool before cleaning. Do not immerse in water. Wipe the inside and the edges of the cooking plates with a clean, damp cloth. For removing stubborn stains or food, use a nylon brush or another utensil that is safe for nonstick surfaces. Do not use steel wool or scouring pads. Do not use harsh or abrasive cleaners. The exterior may be wiped with a clean, damp cloth.

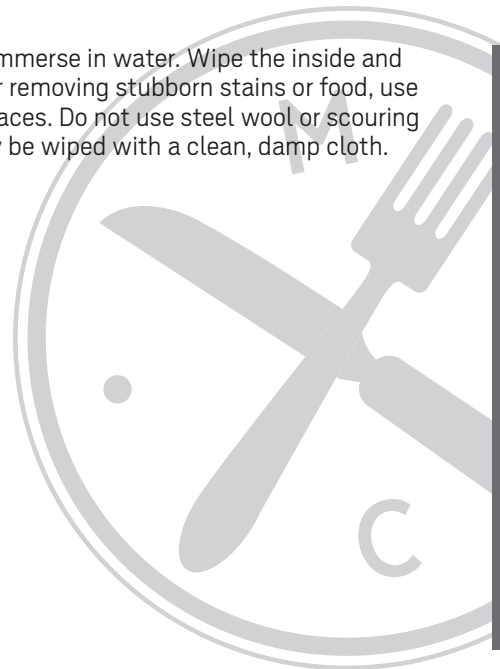

Model no. 043-2758-4 | Contact us: 1-855-803-9313

### 1-YEAR LIMITED WARRANTY

This product carries a one (1) year warranty against defects in workmanship and materials. Trileaf Distribution agrees to replace a defective product free of charge within the stated warranty period, when returned by the original purchaser with proof of purchase. This product is not guaranteed against wear or breakage due to misuse and/or abuse.

Made in China

Imported by

Trileaf Distribution Trifeuil Toronto, Canada M4S 2B8

For assistance regarding this appliance, please call 1-855-803-9313.