


MASTER
Chef™
HAND BLENDER
WITH 2 ATTACHMENTS

Model no. 043-5774-6

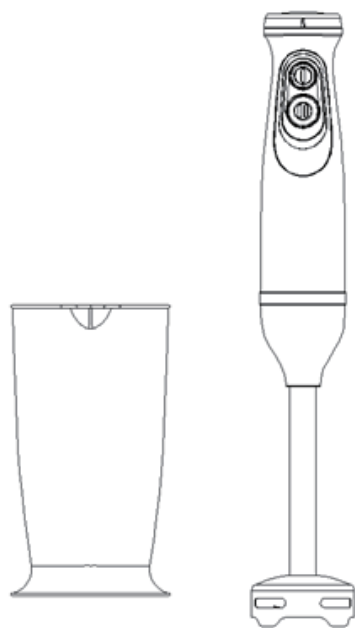

INSTRUCTION MANUAL

Read this booklet thoroughly before using the product, and save it for future reference.

Model no. 043-5774-6 | Contact us: 1-855-803-9313

MASTER
Chef™


Important Safeguards	2-3
Know Your Hand Blender	4
Know your Chopper Accessory	4
Using Your Hand Blender	5-6
Cleaning and Maintenance	7
Warranty	7

IMPORTANT SAFEGUARDS

Before using the electrical appliance, the following basic precautions should always be followed including the following:

1. Read all instructions. Save these instructions for future reference
2. Before using check that the voltage of wall outlet corresponds to the one shown on the rating plate.
3. Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or is dropped or damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair or electrical or mechanical adjustment.
4. If the power cord is damaged it must be replaced by the manufacturer or a authorized service agent or a qualified technician in order to avoid a hazard.
5. Unplug from power outlet when not in use, before attaching or removing parts, and before cleaning. To unplug, grasp the plug and pull from the power outlet. Never pull from the power cord.
6. Do not let cord hang over the edge of a table or counter.
7. To protect against the risk of electric shock, do not immerse upper part of the blender in water or other liquids.

8. Close supervision is necessary when your appliance is being used near children.
9. Avoid contact with moving parts.
10. Keep hands and utensils out of container while blending or chopping food to reduce the risk of severe injury to persons or damage to the blender. A scraper may be used but must be used only when the blender is not running.
11. The appliance cannot be used for chopping ice or blending hard and dry foods, otherwise the blade could be damaged or become dull.
12. To reduce the risk of injury, never place cutting blade on base without first putting bowl properly in place.
13. Be sure chopper lid is securely locked in place before operating appliance. Do not open chopper lid until the blade stops.
14. The use of accessory attachments not recommended by the manufacturer may cause personal injury or damage the appliance.
15. Do not operate the appliance for other than its intended use.
16. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliances by a person responsible for their safety. This appliance should not be used by children and care should be taken when used near children.
17. Children should be supervised to ensure that they do not play with the appliance.
18. Do not use outdoors.
19. Blades are sharp, handle with care and never touch the blade itself.
20. To protect against risk of electrical shock do not put (state specific part or parts in question) in water or other liquid.
21. Turn the appliance OFF, then unplug from the outlet when not in use, before assembling or disassembling parts and before cleaning. To unplug, grasp the plug and pull from the outlet. Never pull from the power cord.
22. Do not let cord contact hot surface, including the stove.
23. Keep hands and utensils away from the cutting blade while chopping food to reduce the risk of severe injury to persons or damage to the food chopper. A scraper may be used but only when the food chopper is not running.
24. To reduce the risk of injury, never place cutting blade on base without first putting bowl properly in place.
25. Be certain cover is securely locked in place before operating appliance.
26. Do not attempt to defeat the cover interlock mechanism.
27. When mixing liquids, especially hot liquids, use a tall container or make small quantities at a time to reduce spillage.



4


5

Model no. 043-5774-6 | Contact us: 1-855-803-9313


MASTER
Chef™

Know Your Hand Blender

Blending vegetables and fruits

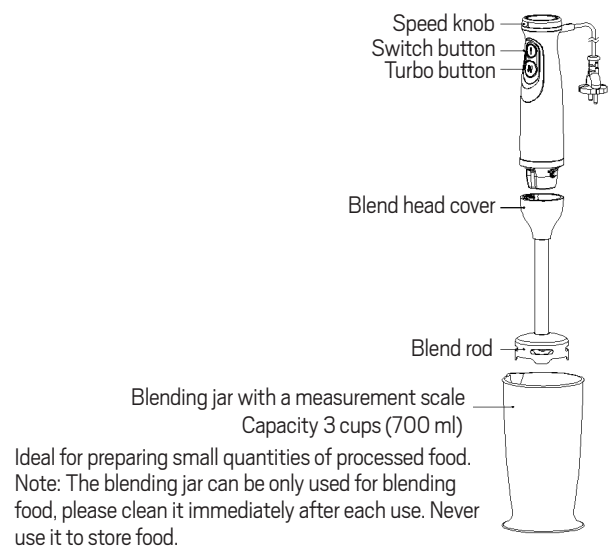

Chopping meat and making garlic paste

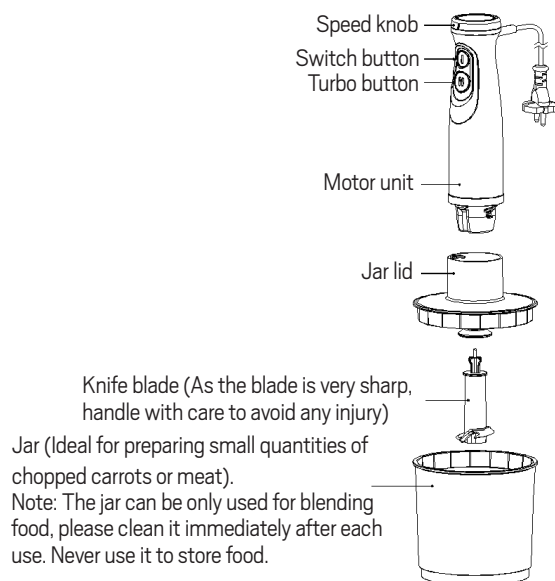

Know Your Chopper Accessory

SAVE THESE INSTRUCTIONS HOUSEHOLD USE ONLY

This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not modify the plug in any way.

Using your blender

Before the first use, clean the blender according to the section of "quick cleaning". The running time of the unit without food or liquids should not exceed 15 seconds. Important: Blades are very sharp, handle with care. Ensure that the hand blender is unplugged from the power outlet before attaching or removing parts.

Instructions for blender

Max operation time should not exceed 1 minute. Allow for 1 minute of rest between consecutive cycles.

1. To assemble the detachable shaft with the motor unit, turn the shaft in a counter-clockwise direction until tightened. To disassemble, turn in a clockwise direction.
2. Plug the hand blender into a power outlet.
3. Lower the hand blender into food and depress the switch at the top of the motor unit.
4. To stop the hand blender release the switch at the top of the motor unit.

Using Your Hand Blender

Model no. 043-5774-6 | Contact us: 1-855-803-9313

Instructions for chopper

Max operation time should not exceed 15 seconds. Allow for 1 minute of rest time between blending cycles.

1. Place the chopper bowl on a clean, level surface.
2. Assemble the stainless chopping blade onto the chopper bowl. (See Fig.1).
3. Cover the connector on the chopping blade.
4. Place food into the chopper bowl.

Note: 15g flour and 150g honey (without freezing, before adding, you need to mixing the honey well.)

FOOD TYPE	SPEC	WEIGHT	SPEED	Processing time
Flour honey	flour	15 g (1/2 oz)	High speed	15 seconds



NOTE: When chopping meat, remove all bones and cut meat into small pieces. Place meat into chopper bowl. Max quantity of meat is 200 g (7 1/2 oz).

5. Attach the lid onto the chopper bowl and turn it in clockwise direction until it locks into position. (See Fig.2). To detach the lid, turn in a counter-clockwise direction.
6. Insert the top part of the chopper into the hole of the chopper lid, and turn in clockwise direction to lock. (See Fig.3).
7. Plug the appliance into a power outlet and press the switch to begin operation.
8. To stop the hand blender, release the switch at the top of the motor unit.



CAUTION:

- To reduce the risk of injury, never place cutting blade on base without first placing bowl properly in place.
- Ensure the chopper lid is securely locked in place before operating appliance.

MASTER
Chef™

1. Unplug the appliance and remove the detachable stem.



NOTE: Do not immerse the detachable stem of the blender in water because overtime the lubrication on the bearings may wash away.

2. Wash the detachable stem under running water, without the use of abrasive cleaner or detergents. Place upright so that any water that may have entered the unit, can drain out. The stem is dishwasher safe.
3. Wash the cup, bowl, beater and blade in warm soapy water with soap. The bowl and the beater should not be cleaned in a dishwasher.
4. Wipe the motor unit with a damp cloth. Never immerse it in water for cleaning as a electric shock may occur.
5. Dry thoroughly.



CAUTION: Blades are very sharp, handle with care.

Quick cleaning

Between processing tasks, hold the hand blender in a cup half filled with water and turn on for a few seconds.

Any other servicing should be performed by an authorized service representative.

1-Year Limited Warranty


This product carries a one (1) year warranty against defects in workmanship and materials.

Trileaf Distribution agrees to replace the defective product free of charge within the stated warranty period, when returned by the original purchaser with proof of purchase.

This product is not guaranteed against wear, misuse and/or abuse.

Made in China

Imported by Trileaf Distribution Trifeuil Toronto, Canada M4S 2B8

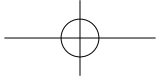

Customer service hotline:
Masterchef Tel: 1-855-803-9313