

This Noma® product carries a limited ten (10) year warranty against defects in the motor, and a one (1) year warranty against defects in workmanship and materials. Trileaf Distribution agrees to replace the defective product free of charge within the stated warranty period, when returned by the original purchaser with proof of purchase. This product is not guaranteed against wear or breakage due to misuse and/or abuse.

Imported by: Trileaf Distribution Trifeuil Toronto, Canada M4S 2B8

052-4743-4


10/14

NOMA[®] MD

Austin 42" Ceiling Fan

INSTALLATION INSTRUCTIONS

Mounting options : Hugger & Drop mount

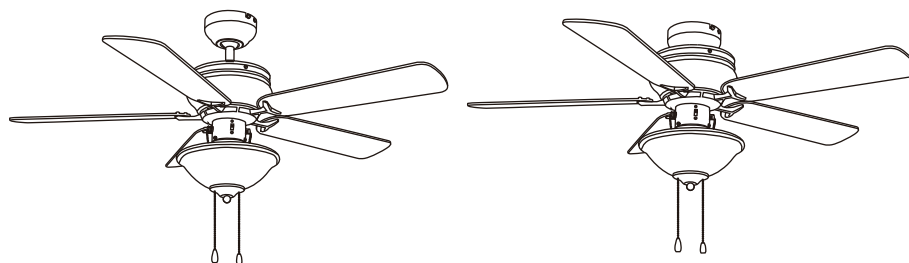

INSTRUCTIONS PERTAINING TO RISK OF FIRE OR INJURY TO PERSONS
READ ALL INSTRUCTIONS

IMPORTANT SAFETY INSTRUCTIONS SAVE THESE INSTRUCTIONS

TOOLS AND MATERIALS REQUIRED

- Phillips screwdriver
- Blade screwdriver
- Wiring supplies as required by electrical code
- Step ladder
- Wire cutters

IMPORTANT: FOR YOUR FUTURE RECORDS RECORD AND KEEP THE FOLLOWING INFORMATION

- Date of purchase: _____
- Place of purchase: _____
- Model on carton: _____

NOTE: FOR OPTIMUM QUIETNESS, FULLY ASSEMBLE FAN AND RUN 24 HOURS

SAFETY PRECAUTIONS

1. Turn off power at main electrical service box before starting installation.
2. Electrical connections must comply with local code ordinances, national electrical codes, CEC, NEC and ANSI/NFPA 70.
3. Make sure the installation site you choose allows the fan blades to rotate freely without any obstructions.
4. When mounting the fan on a ceiling outlet box, use an approved (CSA for Canada and UL for U.S.) ceiling fan box marked "**FOR FAN SUPPORT**". Ensure the outlet box is securely installed in place such that it is able to support at least the fan weight.
5. **WARNING:** To reduce the risk of fire, electric shock, or personal injury, mount fan only to an outlet box marked acceptable for fan support and use mounting screws provided with the outlet box. Most outlet boxes commonly used for the support of lighting fixtures are not acceptable for fan support and may need to be replaced. Consult a qualified electrician if in doubt.
6. Total Fan Weight For Reference: 42" approximate 11 lb 4 oz (5.1 kg).

WARNING

- To reduce the risk of fire or electrical shock **DO NOT** use this fan with any solid state speed control device.
- To reduce the risk of personal injury **DO NOT** bend the blade brackets when installing the brackets, balancing the blades or cleaning the fan. Also, **DO NOT** insert foreign objects in between rotating fan blades.
- Mount with the lowest moving parts at least 7' (2.1 meters) above floor or grade level.
- **DO NOT** operate reversing switch while fan blades are in motion. Fan must be turned off and rotating blades stopped, reverse chain pulled, the speed chain pulled again to start in the opposite direction.

INSTRUCTIONS

A ceiling fan has a completely internal switching system for total operation by way of pull chains. On a fan/light combination, **three** pull chains will exist: one for light, on and off. The second is for fan speeds. This will be marked () on the fan switch housing.

- 1st pull will give fan high speed
- 2nd pull will give fan medium speed
- 3rd pull will give fan low speed
- 4th pull will shut fan off

The third pull chain is for forward/reverse. (**Note: Some models come with a slide switch instead of a pull chain**). This setting would usually be changed twice per year. Downdraft in summer to create a wind chill to give a cooling effect. Updraft in winter to circulate the hot stratified air off the ceiling and back down to the floor without creating a wind chill.

TROUBLESHOOTING

TROUBLE

SUGGESTIONS

1. Fan will not start
 - Check wiring connections to fan.
 - Check fuses and circuit breakers.
 - Check wiring connections in switch housing.
2. Fan sounds noisy
 - Check to make sure that all screws in motor housing are snug.
 - Check to make sure that blade bracket screws are tight.
 - Check to make sure that marrettes in switch housing are not rattling against wall of switch housing.
 - If fan has a light kit make sure switch housing screws and set screws are tight.
 - Some fan motors are sensitive to signals from solid state variable controls. If solid state controller is used, change to an alternative control.
 - Allow a 24-hour break-in period to eliminate most noises.
3. Fan wobbles or shakes excessively.
 - Check that all blades are screwed firmly into blade brackets.
 - Check that blade brackets are secured firmly to motor.
 - Check distance from tip of blades to ceiling. Gently bend up or down the blade brackets until all distances are the same.
 - Check distance from blade tip to blade tip. All measurements should be equal. Loosen blade screws and position blade until even, then re-tighten.
 - Check that the downrod hemisphere notch is engaged in canopy.
 - Check to make sure that jam screws in downrod are tightened.
 - Make sure canopy and mounting bracket are tightened securely to wooden joist.
 - Make sure warpage has not occurred in wooden blades. If so, contact the customer service department for replacement parts.

CAUTION: Turn power off for last two items.

ASSEMBLY DRAWING

1. Wooden joist
2. Approved (CSA for Canada and UL for U.S.) ceiling fan box (not provided)
3. Ceiling
4. J-hook
5. Rubber gasket
6. Screws & lock washers (set of 4)
7. Mounting bracket c/w ground wire
8. Outlet box screws (not provided)
9. Rubber ring (optional)
10. Lock pin
11. Hemisphere jam screw
12. Hemisphere
13. Upper motor housing screws & lock washers (set of 3 or 4)
14. Downrod c/w ground wire
15. Ceiling canopy
16. Rubber bushing (optional)
17. Bolt
18. Motor assembly
19. Jam screws
20. Cotter pin
21. Flat washer (optional)
22. Flat washer
23. Fibre washer
24. Fibre bracket gasket
25. Blade
26. Blade bracket
27. Lock washer
28. Motor screw
29. Blade bracket screws

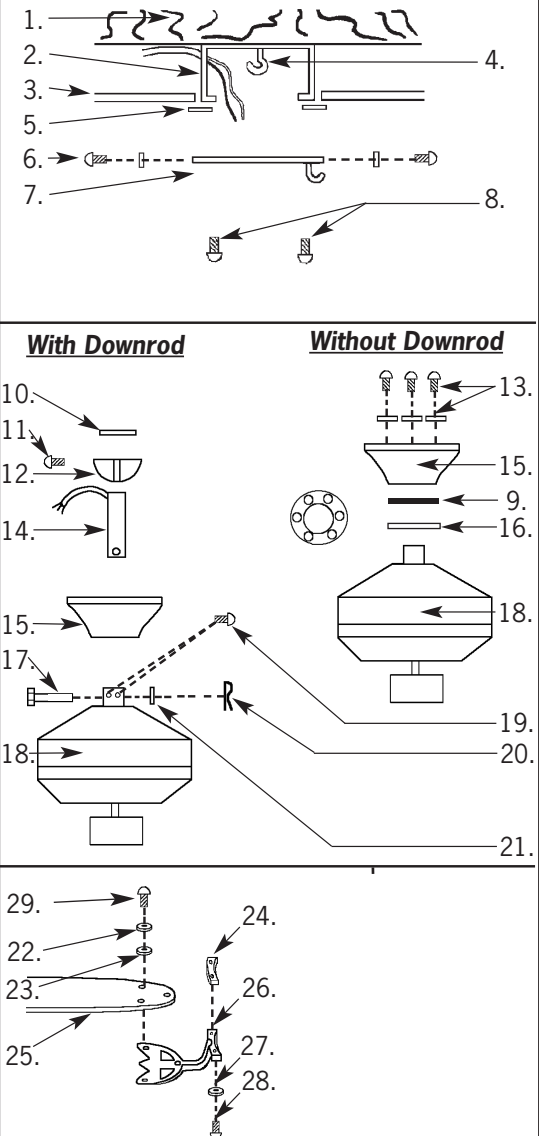


Fig. 1


INSTALLATION

NOTE: All set screws must be checked and retightened where necessary, before and after installation.

1. MOUNTING OPTIONS


A DOWNROD MOUNT

- Use a square-head screwdriver to loosen the two upper jam screws on the yoke.
- Position downrod inside canopy.
- Route wires exiting yoke on motor through ceiling canopy and downrod.
- Position downrod/canopy into yoke and align holes in yoke and downrod.
- Insert bolt through hole in yoke and downrod. **Be careful not to damage or cut the fan wires.**
- Install the flat washer to the bolt. Secure with cotter pin through hole in the end of the bolt.
- Secure downrod in position by tightening upper jam screws.

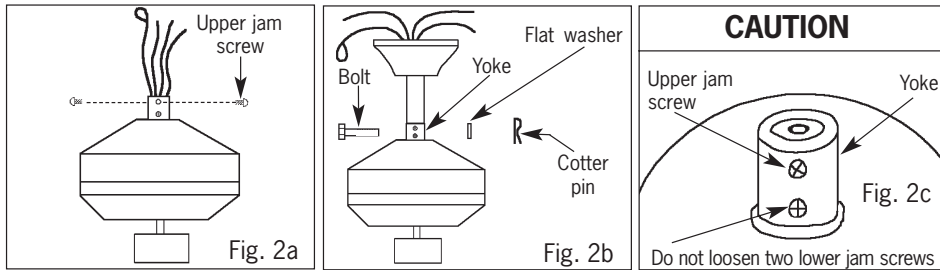

B FLUSH MOUNT

- Optional for some models.
- Remove rubber ring from canopy (see Fig. 2d).
- Remove the upper motor housing screws.
- Position canopy over corresponding holes on motor and secure with the upper motor housing screws, ensuring the rubber bushing is placed between the canopy and the motor.

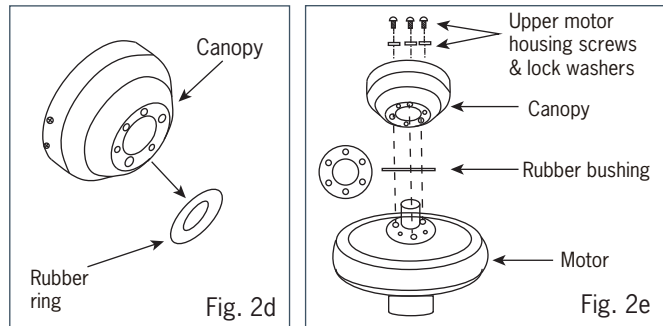


8. LIGHT KITS

- Remove light kit screws and washers.
- Connect polarized connectors of light kit to corresponding connectors found in switch housing.

WARNING: BE SURE TO TURN OFF POWER BEFORE INSTALLING.

- Carefully tuck electrical wires back into switch housing, align light kit with switch housing and secure with three light kit screws and washers.
- Install proper wattage and type of bulb identified on light housing or shade.
- Place glass on light housing and secure (See Fig. 10a, Fig. 10b).

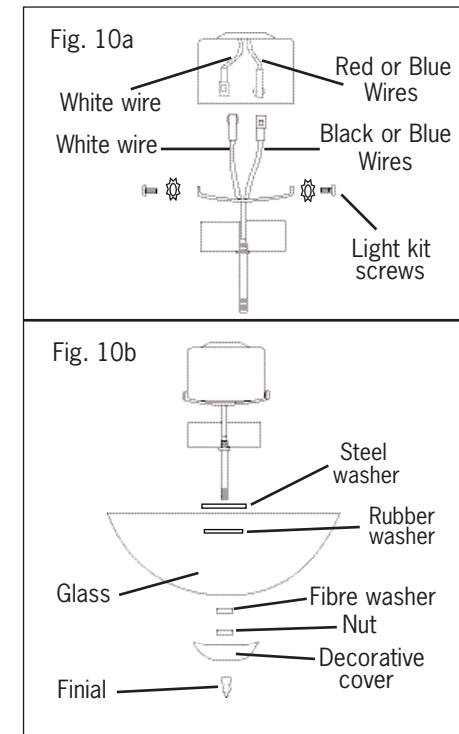


NOTE: Electrical diagrams are for reference only. Light kits that are not packed with the fan must be CSA/UL listed and marked suitable for use with the model fan you are installing. Switches must be CSA/UL general use switches. Refer to the instructions packaged with the light kits and switches for proper assembly.

WARNING: Ensure that all connections, set screws and screws are securely tightened before the next step.



6. MOUNT BLADE BRACKETS TO BLADES

- Take out hardware package.
- Place blade bracket screw through flat washer, fibre washer and blade.
- Align with corresponding hole in blade bracket.
- Repeat with (2) remaining screws and tighten.

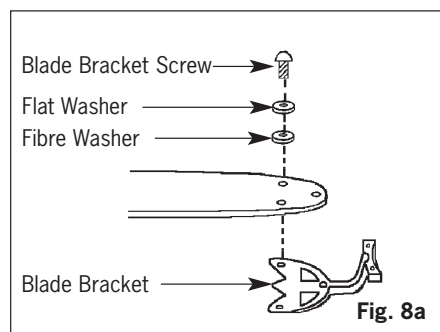

7. MOUNTING BLADES TO MOTOR

- Take out hardware containing motor screws, lock washers and gaskets.
- Place lock washers over motor screws, position motor screws in blade brackets, place fibre bracket gaskets over screws and secure to motor. Make sure all screws are tightened securely.

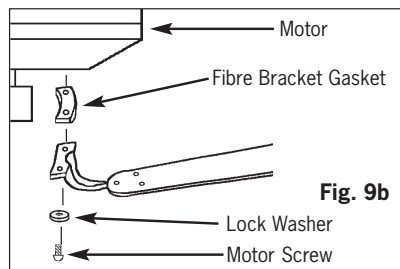
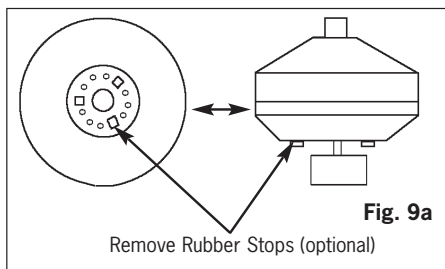


NOTE: Fan comes with three rubber stops (optional on some models) on motor for shipping purposes only. Remove stops before running motor or installing blades to motor.

2. INSTALL MOUNTING BRACKET

WARNING: TO REDUCE THE RISK OF FIRE, ELECTRIC SHOCK, OR PERSONAL INJURY, MOUNT TO UL/CSA LISTED OUTLET BOX MARKED ACCEPTABLE FOR FAN SUPPORT AND USE MOUNTING SCREWS PROVIDED WITH THE OUTLET BOX.

- Install J-hook through centre of outlet box and into the wooden joist.
- Secure mounting bracket and rubber gaskets to outlet box.
- Hang the safety cable onto the J-hook.
- Hang fan on temporary hook and install safety cable.

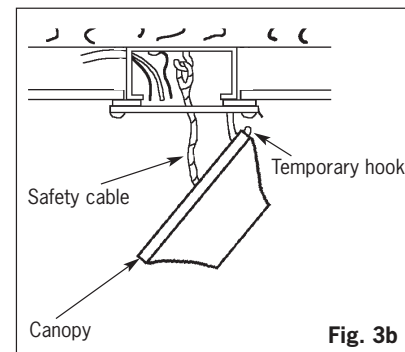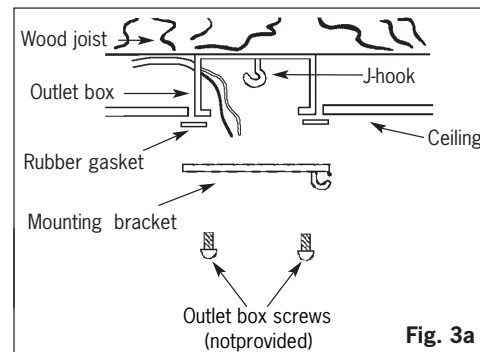

3. ELECTRICAL HOOK-UP



- There are several different wiring combinations that can be used in controlling your ceiling fan to meet your specific requirements.

CAUTION
Green wire - GROUND Black wire (fan) - POWER White wire (fan) - COMMON Red or blue wire (light kit) - POWER
SEE SAFETY PRECAUTIONS ON PG. #2 BEFORE WIRING

- After making the wire connections, ensure the wires should be spread apart with the grounded conductor and the equipment-grounding conductor on one side of the outlet box and the ungrounded conductor on the other side of the outlet box.
- Ensure the splices after being made should be turned upward and pushed carefully up into the outlet box.

3. ELECTRICAL HOOK-UP


A CONNECTING THE (GREEN) GROUND WIRE

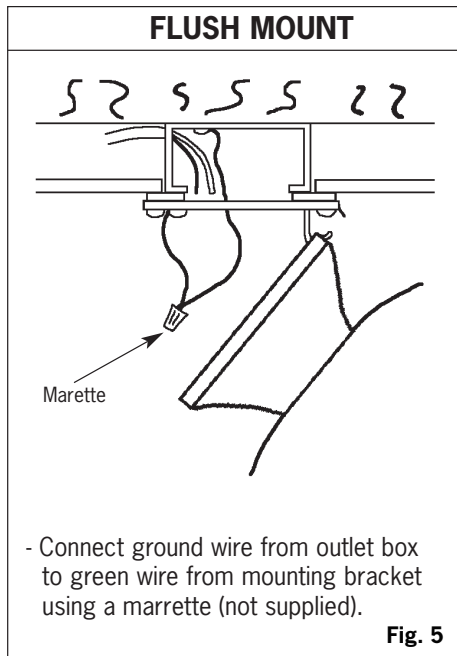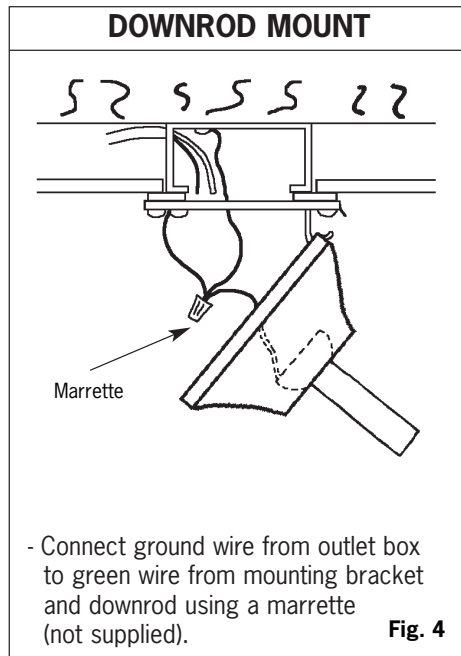

NOTE: Once ground wires are connected, carefully tuck wires and marrette into the outlet box making sure that the wires are clear of the hemisphere and downrod when positioned in mounting bracket (downrod mount only).

3. ELECTRICAL HOOK-UP (Continued)

B CONNECTING BLACK, WHITE, AND (RED OR BLUE) WIRES

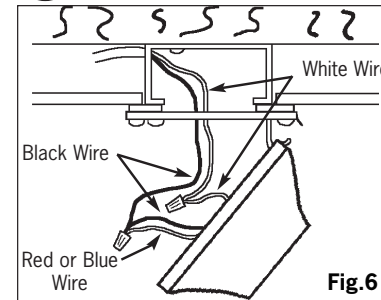

- Connect white wire from outlet box to white wire from fan using marrette (not supplied).

- Connect black wire from outlet box to black wire from fan plus (red or blue wire) using a marrette.

NOTE: A red or blue wire would be power for a light kit if applicable.

NOTE: Once wires are connected, carefully tuck wires and marrettes into the outlet box making sure that the wires are clear of the hemisphere and downrod when positioned in mounting bracket (downrod mount only).



4. MOUNTING FAN ASSEMBLY

- Place two screws and washers on mounting plate which correspond with slots in canopy. Screw in two turns.
- Position canopy to mounting plate aligning slots to (B) screws then turn to lock.
- Position and tighten the two screws and washers (A) then tighten the two screws (B).

5. ENGAGE HEMISPHERE (Downrod Mount Only)

- Carefully rotate fan assembly until groove in hemisphere locks over tab of canopy assembly.

WARNING: Failure to seat tab in groove could cause damage to electrical wires and possible shock or fire hazard.

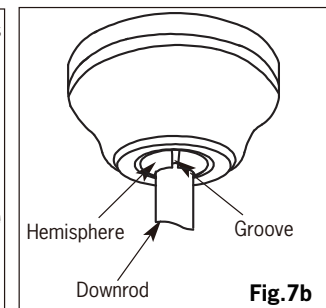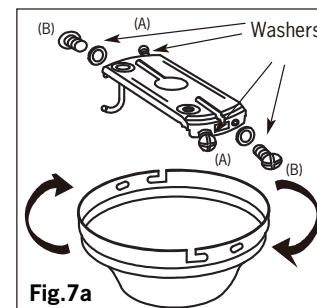

NOTE: When installing fan on sloped ceiling, make sure tab on hanger bracket faces towards the top of the slope. Depending on the slope, a longer downrod may be required to prevent fan blades from hitting the ceiling.