

NINJA®

BL480C

Series

OWNER'S GUIDE GUIDE DU PROPRIÉTAIRE

**NUTRI NINJA®
WITH AUTO-IQ®**

**NUTRI NINJA®
AVEC AUTO-IQ®**



ninjakitchen.com

IMPORTANT SAFEGUARDS

HOUSEHOLD USE ONLY • READ ALL INSTRUCTIONS BEFORE USE

Read all instructions before using your NUTRI NINJA® with AUTO-iQ®

When using electrical appliances, basic safety precautions should always be followed, including the following:

POLARIZED PLUG

⚠ WARNING

To reduce the risk of electric shock, this appliance has a polarized plug (one blade is wider than the other). This plug will fit into a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician to install the proper outlet.

DO NOT modify the plug in any way.

⚠ WARNING

Extension cords are not recommended for use with this product.

⚠ WARNING

To reduce the risk of fire, electric shock or injury:

- 1 **⚠ WARNING:** Remove utensils prior to processing. Failure to remove may cause the jar to be damaged or to shatter which may cause personal injury.
- 2 **⚠ CAUTION: DO NOT** blend hot liquids, doing so may cause excessive pressure build-up, resulting in risk of the user being burned.
- 3 **⚠ CAUTION:** We do not recommend grinding in any of our Nutri Ninja® Cups.
- 4 **⚠ CAUTION:** Remove the Pro Extractor Blades® Assembly from the Nutri Ninja cup upon completion of blending. Do not store ingredients before or after blending them in the cup with the blade assembly attached. Some foods may contain active ingredients or release gases which will expand if left in a sealed container, resulting in excessive pressure buildup that can pose a risk of injury. For ingredient storage in the cup, use only Sip & Seal Lid to cover.

- 5 To protect against electrical shock, do not submerge the appliance or allow the power cord to come into contact with water or any other liquid.
- 6 **DO NOT** allow the appliance to be used by children. Close supervision is necessary when used near children. This is not a toy.
- 7 Never leave an appliance unattended when in use.
- 8 Appliance accessories are not intended to be used in the microwave as it may result in damage to the accessories.
- 9 Remove the power cord from the electrical outlet when not in use, before assembling or disassembling parts and before cleaning. To unplug, grasp the plug and pull from the electrical outlet. Never pull from the power cord.
- 10 **DO NOT** abuse the power cord. Never carry the appliance by the power cord or yank it to disconnect from electrical outlet; instead grasp the plug and pull to disconnect.
- 11 **DO NOT** operate any appliance with a damaged cord or plug, or after the appliance malfunctions, has been dropped or damaged in any manner. This appliance has no serviceable parts. Return the appliance to SharkNinja Operating LLC for examination, repair or adjustment.
- 12 **DO NOT** let the power cord hang over the edge of table or counter or touch hot surfaces such as the stove.
- 13 Always use appliance on a dry, level surface.
- 14 Keep hands, hair, clothing, as well as utensils out of container while processing to reduce the risk of severe injury to persons or damage to the appliance. A scraper may be used but only when the appliance is not running.

- 15 Avoid contact with moving parts.
- 16 **DO NOT** attempt to sharpen blades.
- 17 **DO NOT** use the appliance if blade assembly is bent or damaged.
- 18 To reduce risk of injury, never place the blade assembly on the base without the Nutri Ninja Cup properly attached.
- 19 **DO NOT** operate this appliance on or near any hot surfaces (such as gas or electric burner or in a heated oven).
- 20 The use of attachments or accessories including canning jars, not recommended by the manufacturer may result in fire, electric shock or personal injury.
- 21 **DO NOT** remove the cup from the motor base while the appliance is running.
- 22 To reduce the risk of injury, **NEVER** operate the appliance without the lid in place; **DO NOT** try to defeat the interlock mechanism; make sure that the attachment is properly installed before operating the appliance.

- 23 **DO NOT** expose cups to extreme temperature changes.
- 24 **DO NOT** overfill.
- 25 **DO NOT** operate the appliance empty.
- 26 If the appliance overheats, a thermal switch will become activated and shut off the motor. To reset, unplug the appliance and let it cool down for approximately 30 minutes before using again.
- 27 The maximum wattage rating for this appliance is achieved by chopping 380g of dried soy beans in a 24oz cup for 15 seconds.
- 28 If the appliance overheats, a thermal switch will become activated and shut off the motor. To reset, unplug the appliance and let it cool down for approximately 30 minutes before using again.
- 29 **THIS PRODUCT IS INTENDED FOR HOUSEHOLD USE ONLY. DO NOT** use this appliance for anything other than its intended use. Do not use outdoors.

SAVE THESE INSTRUCTIONS

THANK YOU
For purchasing the Nutri Ninja® with AUTO-iQ®



REGISTER YOUR PURCHASE

- registeryourninja.com
- 1-877-646-5288
- Scan QR code using mobile device

RECORD THIS INFORMATION

Model Number: _____

Serial Number: _____

Date of Purchase: _____
(Keep receipt)

Store of Purchase: _____

TECHNICAL SPECIFICATIONS

Voltage: 120V~, 60Hz.
Power: 1000 Watts

Cup Capacity:
32 oz. (4 cups, 950 ml)
24 oz. (3 cups, 710 ml)
18 oz. (2.25 cups, 532 ml)

TIP: You can find the model and serial numbers on the QR code label located on the back of the unit by the power cord.

CONTENTS

Getting to Know Your Nutri Ninja with Auto-iQ 9

Before First Use11

Use 12

Suggested Uses 13

Care & Maintenance..... 14

Troubleshooting Guide..... 15







Replacement Parts 15

Warranty & Registration..... 16

GETTING TO KNOW YOUR NUTRI NINJA® WITH AUTO-IQ®

PARTS


- A** Pro Extractor Blades® Assembly
- B** Spout Lid
- C** Small 18 oz. Nutri Ninja Cup
- D** Regular 24 oz. Nutri Ninja Cup
- E** Jumbo Multi Serve 32 oz. Nutri Ninja Cup
- F** Motor Base
- G** Power Cord

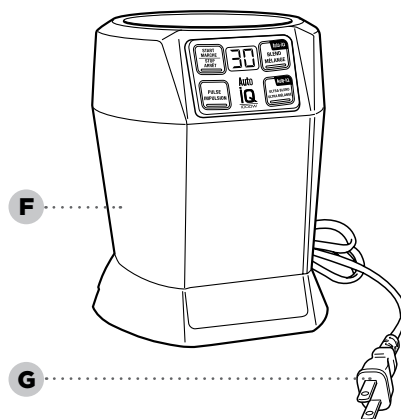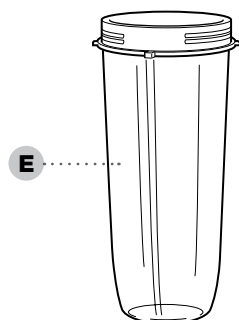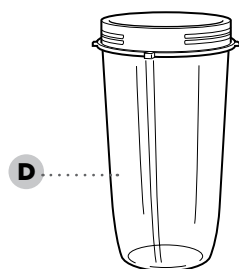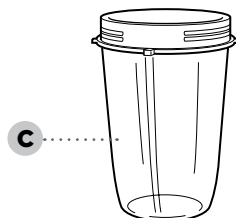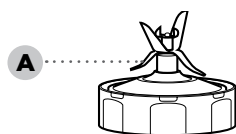

NOTE: The quantity, sizes, and presence of some accessories depend on the specific model configuration. All configurations include a motor base, Pro Extractor Blades Assembly, certain Nutri Ninja cups, spout lids, and instructions.

USING THE CONTROL PANEL

WELCOME TO THE NINJA® AUTO-IQ® EXPERIENCE. The Nutri Ninja® with Auto-iQ features pre-programmed settings that take the guesswork out of making delicious drinks and great-tasting meals. These programs are timed to deliver consistent, delicious results that finish on their own so all you have to do is press a button and enjoy.

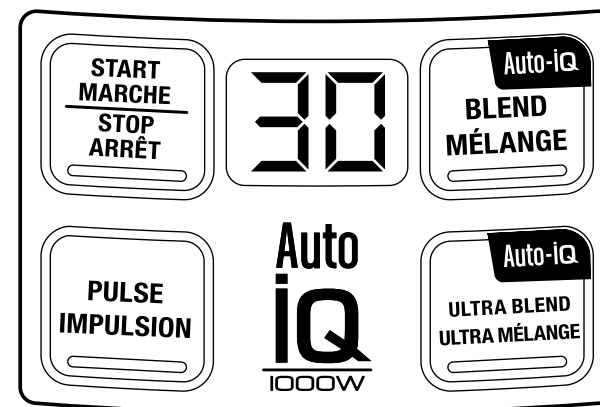

FEATURES:

- Nutrient & Vitamin Extraction*
- 1000-Watt Motor
- Personalized, healthy drinks and juices
- Spout lids for drinks on the go
- Nutri Ninja Cups, BPA free
- Cord storage

*Extract a drink containing vitamins and nutrients from fruits and vegetables.

MANUAL SETTINGS:

START | STOP

Press once to start continuous running; press again to stop. Timer counts up by seconds, up to 60 seconds.

PULSE

Runs only while pressed down. Short presses create short pulses. Timer counts up by seconds as long as button is pressed down.

AUTO-IQ PROGRAMS:

AUTO-IQ BLEND

Pulses and blends fresh or softer ingredients to create smooth, consistent results. Timer counts down.

AUTO-IQ ULTRA BLEND

Pulses and blends frozen, fibrous, or hard ingredients to create consistently smooth results. Timer counts down.

BEFORE FIRST USE

PLEASE KEEP THESE IMPORTANT SAFEGUARDS IN MIND WHEN USING THE APPLIANCE:

IMPORTANT: Make sure the motor base is plugged in for use.

IMPORTANT: DO NOT attempt to operate the appliance without the lid on.

IMPORTANT: Never run the appliance empty.

IMPORTANT: Appliance accessories are not intended to be used in the microwave, as it may result in damage to the accessories.

⚠ CAUTION: DO NOT immerse the motor base in water or any other liquid.

- 1 Remove all packaging material and labels from the appliance. Separate/remove all parts.
- 2 Wash the lids, Nutri Ninja® Cups, and Pro Extractor Blades® Assembly in warm, soapy water. When washing the Pro Extractor Blades Assembly, use a dishwashing utensil with a handle to avoid direct hand contact with blades.

⚠ WARNING: Handle the Pro Extractor Blades Assembly with care when washing, as the blades are sharp.

- 3 Handle the Pro Extractor Blades Assembly with care to avoid contact with sharp edges. Rinse and air-dry thoroughly.
- 4 The Nutri Ninja Cups, lids, and Pro Extractor Blades Assembly are all dishwasher safe. The lids and Pro Extractor Blades Assembly are top-rack dishwasher safe. Ensure the Pro Extractor Blades Assembly is removed from the cup before placing in the dishwasher.
- 5 Wipe the motor base clean with a damp cloth.


USING YOUR NUTRI NINJA® WITH AUTO-iQ®

- 1 Place the motor base on a clean, dry, level surface such as a counter or tabletop.
- 2 Make sure the motor base is plugged in for use. Display will read "--".
- 3 Add ingredients to the Nutri Ninja Cup.

NOTE: DO NOT overfill. To avoid spilling, **DO NOT** add ingredients past the "MAX" fill line.



- 4 Place the Pro Extractor Blades Assembly onto the cup and twist on tightly until completely sealed.




- 5 Turn the cup upside down and place it on the motor base, aligning the tabs on the cup with the motor base. Once cup is correctly placed onto base, display will read "0".



- 6 Press one of the buttons to activate.

NOTE: When using the Auto-iQ presets, the unit will operate using pulses, pauses, and continuous runs. The pauses allow the contents of the cup to settle. When the timer reaches "0", the unit will stop.



- 7 To remove the cup from the base, ensure the motor has stopped running, then pull the cup straight up.




- 8 Turn the cup upright and remove the Pro Extractor Blades Assembly by twisting it counterclockwise.
- 9 **DO NOT** store blended contents with the Pro Extractor Blades Assembly attached.
- 10 Place the Spout lid onto the Nutri Ninja Cup, twist to seal and enjoy.
- 11 For ingredient storage in the cup, only use Spout lid to cover.
- 12 Be sure to store the Pro Extractor Blades Assembly attached to an empty cup when not in use.

SUGGESTED USES

⚠ CAUTION: DO NOT process dry ingredients without adding liquid to the cup. This product is not intended for dry blending.

PURPOSE / FUNCTION	SUGGESTED CUP	TYPE OF FOOD
Chopping/Pulsing	18 oz. 24 oz. 32 oz.	Salsa Leafy Herbs
Mixing	24 oz. 32 oz.	Batters Dips
Sauces	24 oz. 32 oz.	Vinaigrettes Salad Dressings Sauces*
Frozen Blending	18 oz. 24 oz. 32 oz.	Ice Frozen Fruit Ice Cream
Nutrient Juices/Smoothies	18 oz. 24 oz. 32 oz.	Fruits Vegetables Leafy Greens

*When blending sauces, make sure they're cooled to room temperature first. Ninja® containers are not intended for hot blending.

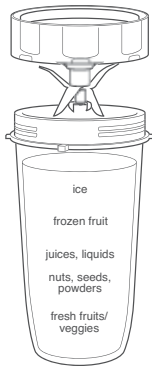

FILLING YOUR NUTRI NINJA®

For best results, always follow recipe directions when filling your Nutri Ninja® Cups. When you're not using a recipe, use the following guidelines:

- 1 Start with your fresh fruit or veggies.
- 2 Add nuts, seeds, or powder.
- 3 Add liquids like juice or milk. More liquid can help to integrate powder.
- 4 Add your frozen fruit and ice.

Remember to securely tighten the Pro Extractor Blades® Assembly and don't overfill the cups.

CARE & MAINTENANCE

⚠ CAUTION: Make sure that the motor base is unplugged from the power source before inserting or removing any attachment and before cleaning.

⚠ CAUTION: DO NOT immerse the motor base in water or any other liquid.

⚠ WARNING: Handle the Pro Extractor Blades Assembly with care when washing, as the blades are sharp. Contact with the blades' edges can result in laceration.

HOW TO CLEAN

Separate/remove all parts.

Hand-Washing: Wash the lids, Nutri Ninja® Cups, and Pro Extractor Blades® Assembly in warm, soapy water. When washing the Pro Extractor Blades Assembly, use a dishwashing utensil with a handle to avoid direct hand contact with blades. Handle Pro Extractor Blades Assembly with care to avoid contact with sharp edges. Rinse and air-dry thoroughly.

Dishwasher: The Nutri Ninja Cups, lids, and Pro Extractor Blades Assembly are all dishwasher safe. The lids and Pro Extractor Blades Assembly are top-rack dishwasher safe. Ensure the Pro Extractor Blades Assembly is removed from the cup before placing in the dishwasher.

Wipe the motor base clean with a damp cloth.

If the appliance needs servicing, please call Customer Service at 1-877-646-5288.

HOW TO STORE

Store the Nutri Ninja® with Auto-iQ® upright with the blade assembly inside the corresponding container with the lid secured on top. **DO NOT** place anything on top. Store the rest of the attachments in a safe place where they will not be damaged and won't cause harm. Loosely wrap the power cord around the motor base.

NOTE: DO NOT store blended or unblended ingredients in the Nutri Ninja Cup with the blade assembly attached.

RESETTING THE MOTOR THERMOSTAT

The Nutri Ninja with Auto-iQ features a unique safety system that prevents damage to the unit's motor and drive system should you inadvertently overload your appliance. If the appliance is overloaded, the motor will stop. To reset the appliance, follow the resetting procedure below:

- 1 Unplug the appliance from the electrical outlet.
- 2 Remove and empty the cup and ensure no food is jamming the Pro Extractor Blades Assembly.
- 3 Allow the appliance to cool for approximately 30 minutes.
- 4 Reinstall the cup onto the base and plug the appliance into the electrical outlet.
- 5 Proceed to use the appliance as before, while making sure not to exceed the recommended maximum capacities.

TROUBLESHOOTING GUIDE

WARNING: To reduce the risk of shock and unintended operation, turn power off and unplug unit before troubleshooting.

Unit does not turn on.

- Make sure the unit is plugged in.
- Place the Nutri Ninja® Cup onto the motor base, aligning the tabs on the cup with the motor base. Display should turn on.

Unit doesn't turn off.

- Remove cup from base by lifting the cup out. Display should turn off. Unplug the power cord from the outlet.

Lid/Pro Extractor Blades Assembly is difficult to assemble.

- Set the cup on a level surface. Place the lid or Pro Extractor Blades® Assembly on the top of the cup and align the threads so the lid/blades sit flat on the cup. Twist clockwise so the lid/blades evenly align to the cup until sealed completely.

Ingredients are not evenly chopped.

- For best results when chopping, make sure all ingredients are as dry as possible. Cut pieces down to even sizes, and reduce the amount of ingredients in the cup. Use very short pulses by quickly pressing the PULSE button.

Doesn't mix well, ingredients get stuck.

- Using the Auto-iQ® programs is the easiest way to achieve great results. The pulses and pauses allow ingredients to settle toward the blade. If ingredients are routinely getting stuck, adding some liquid will usually help.
- When filling the cups, start with fresh items, then powders/nuts. Add liquids, and finally frozen items or ice.

Unit moves on counter while blending.

- Make sure the counter and the feet of the unit are clean and dry.

Unit is difficult to remove from counter for storage.

- Tip unit forward from the back to disengage the suction feet.

REPLACEMENT PARTS

To order additional parts and accessories, visit ninjaaccessories.com or contact Customer Service at 1-877-646-5288.

PRODUCT REGISTRATION

Please visit registeryourninja.com or call 1-877-646-5288 to register your new Ninja® product within ten (10) days of purchase. You will be asked to provide the store name, date of purchase, and model number along with your name and address.

The registration will enable us to contact you in the unlikely event of a product safety notification. By registering, you acknowledge you have read and understood the instructions for use and warnings set forth in the accompanying instructions.

Shark | NINJA

ONE (1) YEAR LIMITED WARRANTY

The One (1) Year Limited Warranty applies to purchases made from authorized retailers of **SharkNinja Operating LLC**. Warranty coverage applies to the original owner and to the original product only and is not transferable.

SharkNinja warrants that the unit shall be free from defects in material and workmanship for a period of one (1) year from the date of purchase when it is used under normal household conditions and maintained according to the requirements outlined in the Owner's Guide, subject to the following conditions and exclusions:

What is covered by this warranty?

1. The original unit and/or non-wearable components deemed defective, in SharkNinja's sole discretion, will be repaired or replaced up to one (1) year from the original purchase date.
2. In the event a replacement unit is issued, the warranty coverage ends six (6) months following the receipt date of the replacement unit or the remainder of the existing warranty, whichever is later. SharkNinja reserves the right to replace the unit with one of equal or greater value.

What is not covered by this warranty?

1. Normal wear and tear of wearable parts (such as blending vessels, lids, cups, blades, removable pots, racks, pans, and blender bases, etc.), which require regular maintenance and/or replacement to ensure the proper functioning of your unit, are not covered by this warranty. Replacement parts are available for purchase at ninjaaccessories.com.
2. Any unit that has been tampered with or used for commercial purposes
3. Damage caused by misuse, abuse, negligent handling, failure to perform required maintenance (e.g., failure to keep the well of the motor base clear of food spills and other debris), or damage due to mishandling in transit.
4. Consequential and incidental damages.
5. Defects caused by repair persons not authorized by SharkNinja. These defects include damages caused in the process of shipping, altering, or repairing the SharkNinja product (or any of its parts) when the repair is performed by a repair person not authorized by SharkNinja.
6. Products purchased, used, or operated outside North America.

How to get service

If your appliance fails to operate properly while in use under normal household conditions within the warranty period, visit ninjakitchen.com for product care and maintenance self-help. Our Customer Service Specialists are also available at 1-877-646-5288 to assist with product support and warranty service options, including the possibility of upgrading to our VIP warranty service options for select product categories.

SharkNinja will cover the cost for the customer to send in the unit to us for repair or replacement. A fee of \$19.95 (subject to change) will be charged when SharkNinja ships the repaired or replacement unit.

How to initiate a warranty claim

You must call 1-877-646-5288 to initiate a warranty claim. You will need the receipt as proof of purchase. A Customer Service Specialist will provide you with return and packing instruction information.

How state law applies

This warranty gives you specific legal rights, and you also may have other rights that vary from state to state. Some states do not permit the exclusion or limitation of incidental or consequential damages, so the above may not apply to you.

CONSIGNES DE SÉCURITÉ IMPORTANTES

POUR USAGE DOMESTIQUE SEULEMENT

Lors de l'utilisation d'appareils électriques, des mesures de sécurité de base doivent toujours être suivies, y compris les suivantes :

Veillez lire toutes les instructions avant d'utiliser votre nutri ninjamd avec auto-iqmd.

AVERTISSEMENT CONCERNANT LA

⚠ FICHE POLARISÉE :

Afin de réduire le risque de décharges électriques, cet appareil est muni d'une fiche polarisée (une lame est plus large que l'autre). Cette fiche s'insère dans une prise polarisée dans un seul sens. Si la fiche ne s'insère pas entièrement dans la prise, inversez la fiche. Si la fiche ne s'insère toujours pas, communiquez avec un électricien accrédité afin qu'il installe la prise appropriée. **NE MODIFIEZ PAS la prise d'aucune façon.**

⚠ AVERTISSEMENT :

L'utilisation d'une rallonge électrique n'est pas recommandée pour ce produit.

⚠ AVERTISSEMENT :

Afin de réduire les risques d'incendie, d'électrocution ou de blessure :

- 1 **⚠ AVERTISSEMENT :** Retirez tout ustensile avant de transformer des aliments. Sinon, cela pourrait endommager le contenant ou le faire éclater et ainsi causer des blessures.
- 2 **⚠ AVERTISSEMENT :** Le jeu de lames est tranchant, manipuler avec soin. Lors de la manipulation du jeu de lame, tenez-le toujours par la base.
- 3 **⚠ AVERTISSEMENT : NE MÉLANGEZ PAS** de liquides chauds; cela pourrait entraîner une accumulation de pression excessive, ce qui présente un risque de brûlure pour l'utilisateur.

- 4 **⚠ AVERTISSEMENT :** Nous ne recommandons pas de moudre des aliments dans les gobelets Nutri Ninja^{MD}.
- 5 **⚠ AVERTISSEMENT :** Retirez le jeu de lames Pro Extractor Blades^{MD} du gobelet Nutri Ninja après avoir mélangé les ingrédients. **N'ENTREPOSEZ PAS** les ingrédients avant ou après les avoir mélangés dans le gobelet fixé au jeu de lames. Certains aliments peuvent contenir des ingrédients actifs ou libérer des gaz qui prendront de l'expansion s'ils sont laissés dans un récipient fermé, entraînant une accumulation excessive de pression qui peut poser un risque de blessure. Utilisez seulement le couvercle à bec verseur pour couvrir les ingrédients à entreposer dans le gobelet.
- 6 Pour vous protéger contre les décharges électriques, n'immergez pas l'appareil et **NE LAISSEZ PAS** le cordon d'alimentation entrer en contact avec de l'eau ou tout autre liquide.
- 7 **NE PERMETTEZ PAS** aux jeunes enfants d'utiliser l'appareil ou de s'en servir comme jouet. Une surveillance étroite est nécessaire lorsqu'un appareil est utilisé en présence d'enfants.
- 8 Ne laissez jamais un appareil en marche sans surveillance.
- 9 Les accessoires de l'appareil ne sont pas conçus pour toute utilisation dans le micro-ondes, car cela peut les endommager.
- 10 Débranchez le cordon d'alimentation de la prise électrique lorsqu'il n'est pas utilisé, avant de monter ou de démonter des pièces et avant le nettoyage. Pour le débrancher, saisissez la fiche et tirez-la de la prise électrique. Ne tirez jamais sur le cordon d'alimentation.

- 11 **PRENEZ SOIN** du cordon d'alimentation. Ne portez jamais l'appareil par le cordon d'alimentation et ne tirez pas sur celui-ci pour débrancher l'appareil; tirez plutôt sur la fiche.
- 12 **N'UTILISEZ PAS** un appareil dont le cordon ou la fiche est endommagé, qui ne fonctionne pas bien ou qui a été échappé ou endommagé de quelque façon que ce soit. Cet appareil ne comporte aucune pièce qui puisse être réparée. Retournez l'appareil à SharkNinja Operating LLC aux fins de vérification, de réparation ou de réglage.
- 13 **NE LAISSEZ PAS** le cordon pendre d'une table ou du comptoir ni toucher des surfaces chaudes, comme la cuisinière.
- 14 Utilisez toujours l'appareil sur une surface sèche et plane.
- 15 Gardez les mains, les cheveux, les vêtements et les ustensiles hors du contenant pendant l'utilisation pour réduire le risque de blessures graves ou de dommages à l'appareil. Un grattoir peut être utilisé, mais uniquement lorsque l'appareil n'est pas en marche.
- 16 Évitez d'entrer en contact avec des pièces mobiles.
- 17 **NE TENTEZ PAS** d'aiguiser les lames.
- 18 **N'UTILISEZ PAS** l'appareil si le jeu de lames est plié ou endommagé.
- 19 Pour réduire les risques de blessures, ne déposez jamais les jeux de lames sur la base sans fixer le gobelet Nutri Ninja^{MD} correctement.
- 20 **N'UTILISEZ PAS** l'appareil sur ou près d'une surface chaude (comme un brûleur électrique ou à gaz, ou le dessus d'un four chaud).

- 21 L'utilisation de pièces et d'accessoires qui ne sont pas recommandés par le fabricant (incluant les bocaux) peut provoquer un incendie, une décharge électrique ou des blessures.
- 22 **NE RETIREZ PAS** le gobelet du socle moteur pendant que l'appareil est en marche.
- 23 Pour réduire le risque de blessure, n'utilisez **JAMAIS** l'appareil sans le couvercle en place; **NE TENTEZ PAS** de forcer le mécanisme de verrouillage; assurez-vous que l'accessoire est correctement installé avant de faire fonctionner l'appareil.
- 24 **N'EXPOSEZ PAS** les gobelets à des changements extrêmes de température.
- 25 **NE PAS** trop remplir le récipient.
- 26 **N'UTILISEZ PAS** l'appareil si le contenant est vide.
- 27 La puissance nominale maximale en watts de cet appareil est atteinte en hachant 320 g de fèves de soja séchées dans un contenant de 16 oz pendant 15 secondes.
- 28 En cas de surchauffe de l'appareil, un thermocontacteur sera activé et arrêtera le moteur. Pour le réinitialiser, débranchez l'appareil et laissez-le refroidir pendant environ 30 minutes avant de l'utiliser de nouveau.
- 29 **CET APPAREIL EST CONÇU POUR UN USAGE DOMESTIQUE SEULEMENT. N'UTILISEZ L'APPAREIL** qu'aux fins pour lesquelles il est prévu. **N'UTILISEZ PAS** cet appareil à l'extérieur.

CONSERVER CES INSTRUCTIONS

MERCI

remercions d'avoir acheté le Nutri Ninja® avec Auto-iQ®



ENREGISTREZ VOTRE ACHAT



registeryourninja.com



Numérisez le code QR avec votre appareil mobile

CONSIGNEZ CES RENSEIGNEMENTS

Numéro de modèle : _____

Numéro de série : _____

Date d'achat : _____
(Conservez la facture)

Magasin où l'appareil
a été acheté : _____

CARACTÉRISTIQUES TECHNIQUES

Tension : 120V~, 60Hz.

Puissance : 1000 Watts

Capacité du gobelet :

32 oz. (4 tasses, 950 ml)

24 oz. (3 tasses, 710 ml)

18 oz. (2,25 tasses, 532 ml)

CONSEIL : Le numéro de modèle et le numéro de série apparaissent sur l'étiquette de code QR qui est située à l'arrière de l'appareil, à côté du cordon d'alimentation.







TABLE DES MATIÈRES

Apprenez à connaître votre Nutri Ninja avec Auto-iQ	17
Avant la première utilisation	19
Utilisation	20
Utilisations suggérées	21
Soins et entretien	22
Guide de dépannage	23
Pièces de rechange	23
Garantie et enregistrement	24

APPRENEZ À CONNAÎTRE VOTRE NUTRI NINJA® AVEC AUTO-IQ®

PIÈCES


- A** Jeu de lames Pro Extractor BladesMD
- B** Couvercle à bec verseur
- C** Gobelet Nutri Ninja de 18 oz.
- D** Gobelet Nutri Ninja de 24 oz.
- E** Gobelet Nutri Ninja de 32 oz
- F** Base moteur
- G** Cordon d'alimentation

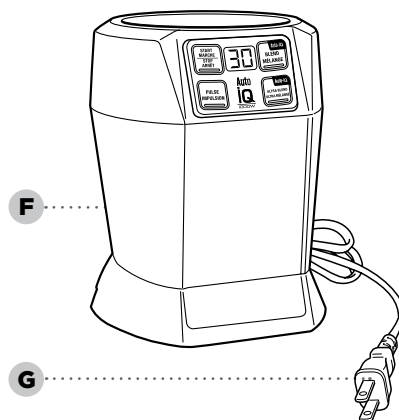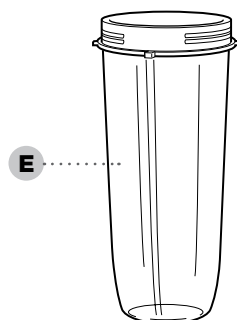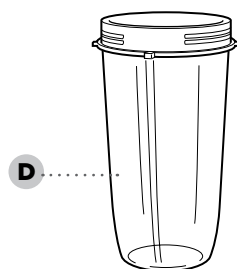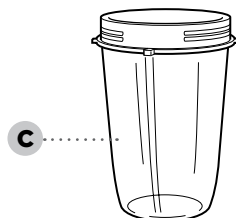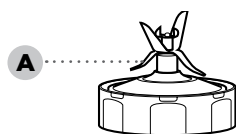

REMARQUE : Le nombre et la dimension des accessoires compris avec l'appareil dépendent de la configuration du modèle. Tous les modèles comprennent un bloc-moteur, un jeu de lames Pro Extractor BladesMD, certains gobelets Nutri NinjaMD, des couvercles à bec verseur, et des instructions.

USING THE CONTROL PANEL

BIENVENUE À L'EXPÉRIENCE NINJA® AUTO-IQ®. Le Nutri NinjaMD avec Auto-iQ comporte des réglages préprogrammés qui permettent d'obtenir des boissons et des repas parfaits. Ces programmes sont chronométrés de manière à obtenir de délicieux résultats uniformes et autonomes; tout ce que vous avez à faire, c'est d'appuyer sur un bouton et de savourer.

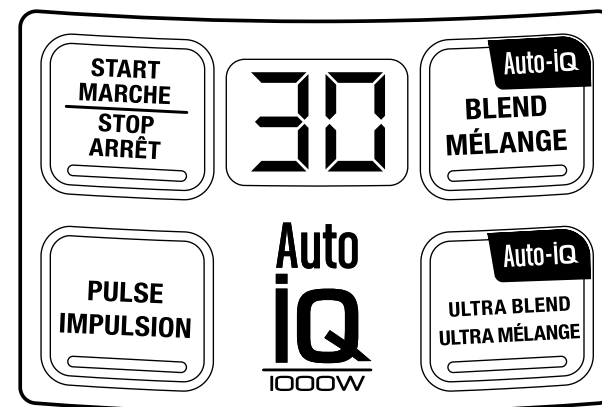

FEATURES:

- Extraction des nutriments et vitamines*
- Moteur de 1000-Watts
- Boissons et jus personnalisés et sains
- Couvercle à bec verseur pour les boissons à emporter
- Gobelets Nutri Ninja, sans BPA
- Rangement du cordon

*Obtenez une boisson contenant des vitamines et des nutriments extraits des fruits et des légumes.

INTERFACE UTILISATEUR :

START | STOP

Appuyez une fois pour commencer une utilisation en continu; appuyez à nouveau pour arrêter. La minuterie compte par secondes, jusqu'à 60 secondes.

PULSE

Ce bouton fonctionne seulement lorsqu'il est appuyé. Appuyez brièvement pour de courtes impulsions. La minuterie compte par secondes tant qu'il est enfoncé.

AUTO-IQ BLEND

Utilisez le mode impulsion et mélangez des ingrédients frais ou mous pour créer des résultats à consistance lisse et cohérente. La minuterie fait le compte à rebours.

AUTO-IQ ULTRA BLEND

Utilisez le mode impulsion et mélangez des ingrédients congelés, fibreux ou durs afin de créer des résultats à consistance lisse et cohérente. La minuterie fait le compte à rebours.

AVANT LA PREMIÈRE UTILISATION

VEUILLEZ TOUJOURS GARDER CES CONSIGNES IMPORTANTES À L'ESPRIT LORSQUE VOUS UTILISEZ L'APPAREIL :

IMPORTANT : Assurez-vous que le socle moteur est branché avant d'utiliser l'appareil.

IMPORTANT : NE TENTEZ PAS de faire fonctionner l'appareil sans couvercle.

IMPORTANT : Ne faites jamais fonctionner l'appareil à vide.

IMPORTANT : Les accessoires de l'appareil ne sont pas conçus pour toute utilisation dans le micro-ondes, car cela peut les endommager.

⚠ AVERTISSEMENT : N'immergez pas le socle moteur dans l'eau ou tout autre liquide.

- 1 Retirez tous les matériaux d'emballage et les étiquettes de l'appareil. Séparez et retirez toutes les pièces.
- 2 Lavez les couvercles, les gobelets Nutri NinjaMD et le jeu de lames Pro Extractor BladesMD à l'eau savonneuse tiède. Lavez le jeu de lames Pro Extractor Blades avec une brosse à vaisselle munie d'une poignée pour éviter tout contact direct avec les lames.


⚠ AVERTISSEMENT : Le jeu de lames Pro Extractor Blades est coupant; manipulez-le avec soin en le lavant.

- 3 Manipulez les jeux de lames avec précaution pour éviter de toucher les bords coupants. Rincez et faites bien sécher à l'air.
- 4 Les couvercles, les gobelets Nutri Ninja et le jeu de lames Pro Extractor Blades peut être mis au lave-vaisselle. Les couvercles et le jeu de lames Pro Extractor Blades peut être mis dans le panier supérieur du lave-vaisselle. Retirez le jeu de lames Pro Extractor Blades du gobelet avant de le mettre au lave-vaisselle.
- 5 Essuyez le socle moteur avec un chiffon humide.


UTILISATION

- 1 Placez le socle moteur sur une surface plane, propre et sèche comme un comptoir ou une table.
- 2 Assurez-vous que le socle moteur est branché avant d'utiliser l'appareil. L'affichage indique « -- ».
- 3 Mettez les ingrédients dans le gobelet Nutri Ninja®.

REMARQUE: NE PAS TROP REMPLIR. Pour éviter de renverser le gobelet, **NE PAS** ajouter d'ingrédients au-delà de la ligne de remplissage « MAX ».



- 4 Placez le jeu de lames Pro Extractor Blades dans le gobelet et vissez fermement celui-ci, jusqu'à ce qu'il soit bien serré.




- 5 Inversez le gobelet et placez-le sur le socle moteur en alignant les onglets du gobelet et ceux de la base moteur. Dès que le gobelet est bien placé sur le socle, l'affichage indiquera « 0 ».



- 6 Appuyez sur un des boutons pour l'activer.

REMARQUE: Lorsque vous utilisez les pré-réglages Auto-iQ, l'appareil fonctionne en utilisant des impulsions, des pauses, et des exécutions en continu. Les pauses permettent au contenu du gobelet de se déposer. Lorsque la minuterie atteint « 0 », elle s'arrête d'elle-même.



- 7 Pour enlever le gobelet de la base, veillez à ce que le moteur ne soit pas en marche, puis tirez vers le haut pour le retirer.



- 8 Redressez le gobelet et retirez le jeu de lames Pro Extractor Blades en le tournant dans le sens inverse des aiguilles d'une montre.
- 9 **N'ENTREPOSEZ PAS** les mélanges avec le jeu de lames Pro Extractor Blades fixé.
- 10 Tournez le couvercle à bec verseur sur le gobelet pour déguster votre boisson sur la route.
- 11 Pour l'entreposage des ingrédients dans le gobelet, utilisez seulement le couvercle à bec verseur.
- 12 Assurez-vous d'entreposer le jeu de lames Pro Extractor Blades fixé à un gobelet vide lorsqu'il n'est pas utilisé.

UTILISATION SUGGÉRÉE

⚠ AVERTISSEMENT : NE MÉLANGEZ PAS les ingrédients secs avant d'avoir ajouté des liquides dans le gobelet. Ce produit n'est pas fait pour les ingrédients secs.

OBJET/FONCTION	GOBELET PROPOSÉ	TYPE D'ALIMENTS
Hachage/Impulsion	18 oz. 24 oz. 32 oz.	Salsa Fines herbes feuillues
Mélange	24 oz. 32 oz.	Pâte à frire Trempettes
Sauces	24 oz. 32 oz.	Vinaigrettes Sauces pour salade Sauces*
Mélange d'ingrédients surgelés	18 oz. 24 oz. 32 oz.	Glace Fruits surgelés Crème glacée
Jus et boissons frappées nutritives	18 oz. 24 oz. 32 oz.	Fruits Légumes Légumes feuillus

*En mélangeant les sauces, assurez-vous qu'elles sont d'abord refroidies à la température ambiante; les contenants Ninja ne sont pas conçus pour mélanger des aliments chauds.



REMPLISSAGE DE VOTRE NUTRI NINJA®

Pour de meilleurs résultats, suivez toujours les indications des recettes lors du remplissage de vos gobelets Nutri Ninja. Lorsque vous n'utilisez pas de recette, utilisez les lignes directrices suivantes :

- 1 Commencez avec vos fruits ou légumes frais.
- 2 Puis ajouter des noix, des graines, ou de la poudre et terminez par des liquides comme du jus ou du lait.
- 3 Ajouter plus de liquide peut aider à intégrer la poudre.
- 4 Ensuite, ajoutez vos fruits surgelés et la glace.

N'oubliez pas de bien serrer le jeu de lames Pro Extractor Blades™ et de ne pas trop remplir le gobelet.

COMMENT NETTOYER L'APPAREIL

⚠ AVERTISSEMENT : Assurez-vous que le socle moteur est débranché de la source d'alimentation avant de fixer ou de retirer un accessoire et avant de nettoyer l'appareil.

⚠ AVERTISSEMENT : N'IMMERGEZ PAS le socle moteur dans l'eau ou tout autre liquide.

⚠ AVERTISSEMENT : Le jeu de lames Pro Extractor Blades est coupant; manipulez-le avec soin en le lavant. Le contact avec les lames peut causer des lacérations.

COMMENT NETTOYER L'APPAREIL

Séparez et retirez toutes les pièces.

Nettoyage à la main : Lavez les couvercles, les gobelets Nutri Ninja® et le jeu de lames Pro Extractor Blades® à l'eau savonneuse tiède. Lavez le jeu de lames Pro Extractor Blades avec une brosse à vaisselle munie d'une poignée pour éviter tout contact direct avec les lames. Manipulez le jeu de lames Pro Extractor Blades avec précaution pour éviter de toucher les bords coupants. Rincez et faites bien sécher à l'air.

Lave-vaisselle : Les couvercles, les gobelets Nutri Ninja et le jeu de lames Pro Extractor Blades peut être mis au lave-vaisselle. Les couvercles et le jeu de lames Pro Extractor Blades peut être mis dans le panier supérieur du lave-vaisselle. Retirez le jeu de lames Pro Extractor Blades du gobelet.

Essuyez le socle moteur avec un chiffon humide.

Si l'appareil a besoin d'être réparé, veuillez communiquer avec le service à la clientèle en composant le 1-877-646-5288.

COMMENT RANGER L'APPAREIL

Rangez le Nutri NinjaMD avec Auto-iQMD en position verticale avec le jeu de lames à l'intérieur du contenant correspondant avec son couvercle fixé dessus. **NE METTEZ RIEN** sur le dessus. Rangez le reste des accessoires dans un endroit sécuritaire où ils ne seront pas endommagés et ne causeront pas de blessures. Enroulez lâchement le cordon d'alimentation autour du socle moteur.

REMARQUE : NE CONSERVEZ PAS les ingrédients avant ou après le mélange dans le gobelet Nutri Ninja avec le jeu de lames qui y est attaché.

RÉINITIALISATION DU THERMOSTAT DU MOTEUR

Le Nutri Ninja avec Auto-iQ est doté d'un système de sécurité unique empêchant d'endommager le moteur de l'appareil et le système d'entraînement en cas de surcharge par inadvertance. En cas de surcharge de l'appareil, le moteur s'arrêtera. Pour le réinitialiser, suivez la procédure de réinitialisation ci-dessous :

- 1 Débranchez l'appareil de la prise électrique.
- 2 Retirez et videz le gobelet et veillez à ce qu'aucun aliment ne se coince dans le jeu de lames Pro Extractor Blades.
- 3 Laissez l'appareil refroidir pendant environ 15 minutes.
- 4 Réinstallez le gobelet sur le socle et rebranchez l'appareil dans la prise électrique.
- 5 Continuez à utiliser l'appareil comme auparavant en vous assurant de ne pas excéder les capacités maximales recommandées.

GUIDE DE DÉPANNAGE

⚠ AVERTISSEMENT : Pour réduire les risques d'électrocution et de mise en marche involontaire, éteignez et débranchez l'appareil avant tout dépannage.

L'appareil ne se met pas en marche.

- Assurez-vous qu'il est bien branché.
- Placez le gobelet Nutri Ninja® sur le socle moteur en alignant les languettes du gobelet et celles du socle moteur. L'écran doit s'allumer.

L'appareil ne s'éteint pas.

- Retirez le gobelet en le soulevant du socle. L'écran devrait s'éteindre. Débranchez le cordon d'alimentation de la prise.

Le couvercle et le jeu de lames Pro Extractor Blades sont difficiles à assembler.

- Déposez le gobelet sur une surface plane. Déposez le couvercle ou le jeu de lames Pro Extractor Blades® sur la partie supérieure du gobelet et alignez les filatures de sorte que le couvercle ou les lames reposent à plat sur le gobelet. Faites tourner le couvercle ou le jeu de lames dans le sens horaire de manière à les aligner uniformément au gobelet jusqu'à ce qu'ils soient bien scellés.

Les ingrédients ne sont pas hachés uniformément.

- Pour de meilleurs résultats lors du hachage, assurez-vous que tous les ingrédients sont aussi secs que possible. Coupez les morceaux uniformément en plus petite taille et réduisez la quantité d'aliments dans le gobelet. Utilisez des impulsions très courtes en appuyant rapidement sur le bouton « PULSE ».

Les ingrédients ne se mélangent pas bien, ils restent coincés.

- L'utilisation des programmes Auto-iQ® est la meilleure façon d'obtenir d'excellents résultats. Les modes impulsion et pause permettent aux ingrédients de se diriger vers la lame. Si les aliments se coincent régulièrement, l'ajout d'un peu de liquide aidera généralement.
- En remplissant les gobelets, commencez par des aliments frais, puis ajoutez des poudres et des noix. Finalement, ajoutez les liquides et les aliments surgelés ou de la glace.

L'appareil se déplace sur le comptoir pendant le mélange.

- Assurez-vous que le comptoir ainsi que les ventouses de l'appareil sont propres et sèches.

L'appareil est difficile à retirer du comptoir pour le rangement.

- Faites pencher l'appareil vers l'avant pour dégager les ventouses.

PIÈCES DE RECHANGE

Pour commander des pièces et des accessoires supplémentaires, veuillez visiter notre site Web au ninjaaccessories.com ou communiquer avec un représentant du service à la clientèle au 1-877-646-5288.

ENREGISTREMENT DU PRODUIT

Veuillez consulter le registryourninja.com ou composer le 1-877-646-5288 pour enregistrer votre nouveau produit Ninja® au plus tard dix (10) jours après l'achat. Le nom du magasin, la date d'achat, le numéro de modèle ainsi que votre nom et votre adresse vous seront demandés.

L'enregistrement nous permettra de vous joindre dans le cas peu probable d'un avis de sécurité touchant le produit. Lorsque vous enregistrez votre produit, vous reconnaissez avoir lu et compris les instructions et les avertissements présentés dans le guide d'utilisation.

Shark | NINJA

ONE (1) YEAR LIMITED WARRANTY

The One (1) Year Limited Warranty applies to purchases made from authorized retailers of **SharkNinja Operating LLC**. Warranty coverage applies to the original owner and to the original product only and is not transferable.

SharkNinja warrants that the unit shall be free from defects in material and workmanship for a period of one (1) year from the date of purchase when it is used under normal household conditions and maintained according to the requirements outlined in the Owner's Guide, subject to the following conditions and exclusions:

What is covered by this warranty?

1. The original unit and/or non-wearable components deemed defective, in SharkNinja's sole discretion, will be repaired or replaced up to one (1) year from the original purchase date.
2. In the event a replacement unit is issued, the warranty coverage ends six (6) months following the receipt date of the replacement unit or the remainder of the existing warranty, whichever is later. SharkNinja reserves the right to replace the unit with one of equal or greater value.

What is not covered by this warranty?

1. Normal wear and tear of wearable parts (such as blending vessels, lids, cups, blades, removable pots, racks, pans, and blender bases, etc.), which require regular maintenance and/or replacement to ensure the proper functioning of your unit, are not covered by this warranty. Replacement parts are available for purchase at ninjaaccessories.com.
2. Any unit that has been tampered with or used for commercial purposes
3. Damage caused by misuse, abuse, negligent handling, failure to perform required maintenance (e.g., failure to keep the well of the motor base clear of food spills and other debris), or damage due to mishandling in transit.
4. Consequential and incidental damages.
5. Defects caused by repair persons not authorized by SharkNinja. These defects include damages caused in the process of shipping, altering, or repairing the SharkNinja product (or any of its parts) when the repair is performed by a repair person not authorized by SharkNinja.
6. Products purchased, used, or operated outside North America.

How to get service

If your appliance fails to operate properly while in use under normal household conditions within the warranty period, visit ninjakitchen.com for product care and maintenance self-help. Our Customer Service Specialists are also available at 1-877-646-5288 to assist with product support and warranty service options, including the possibility of upgrading to our VIP warranty service options for select product categories.

SharkNinja will cover the cost for the customer to send in the unit to us for repair or replacement. A fee of \$19.95 (subject to change) will be charged when SharkNinja ships the repaired or replacement unit.

How to initiate a warranty claim

You must call 1-877-646-5288 to initiate a warranty claim. You will need the receipt as proof of purchase. A Customer Service Specialist will provide you with return and packing instruction information.

How state law applies

This warranty gives you specific legal rights, and you also may have other rights that vary from state to state. Some states do not permit the exclusion or limitation of incidental or consequential damages, so the above may not apply to you.

NOTES

[illegible]

NOTES

[illegible]

SharkNinja Operating LLC
US: Needham, MA 02494
1-877-646-5288
ninjakitchen.com

Illustrations may differ from actual product. We are constantly striving to improve our products, therefore the specifications contained herein are subject to change without notice.

AUTO-IQ, NINJA, NUTRI NINJA, and PRO EXTRACTOR BLADES are registered trademarks of SharkNinja Operating LLC.

For SharkNinja U.S. patent information, visit sharkninja.com/uspatents.

© 2019 SharkNinja Operating LLC

PRINTED IN CHINA

SharkNinja Operating LLC
US: Needham, MA 02494
1-877-646-5288
ninjakitchen.com

Illustrations may differ from actual product. We are constantly striving to improve our products, therefore the specifications contained herein are subject to change without notice.

AUTO-IQ, NINJA, NUTRI NINJA, and PRO EXTRACTOR BLADES are registered trademarks of SharkNinja Operating LLC.

For SharkNinja U.S. patent information, visit sharkninja.com/uspatents.

© 2019 SharkNinja Operating LLC

PRINTED IN CHINA

BL480C Series_IB_E_F_REV_Mv1