


CANVAS™ Kole Ceiling Pendant


MODEL NO. 052-1418-8

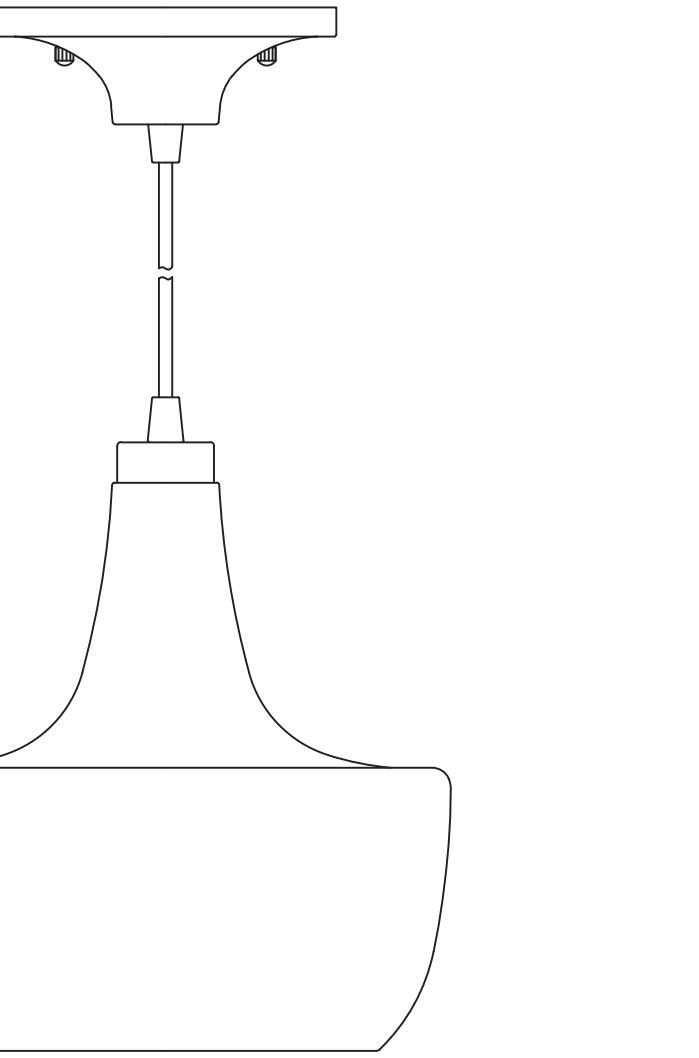

ASSEMBLY INSTRUCTIONS

IMPORTANT: Please read this manual carefully before beginning assembly of this product. Keep this manual for future reference.

Package Contents

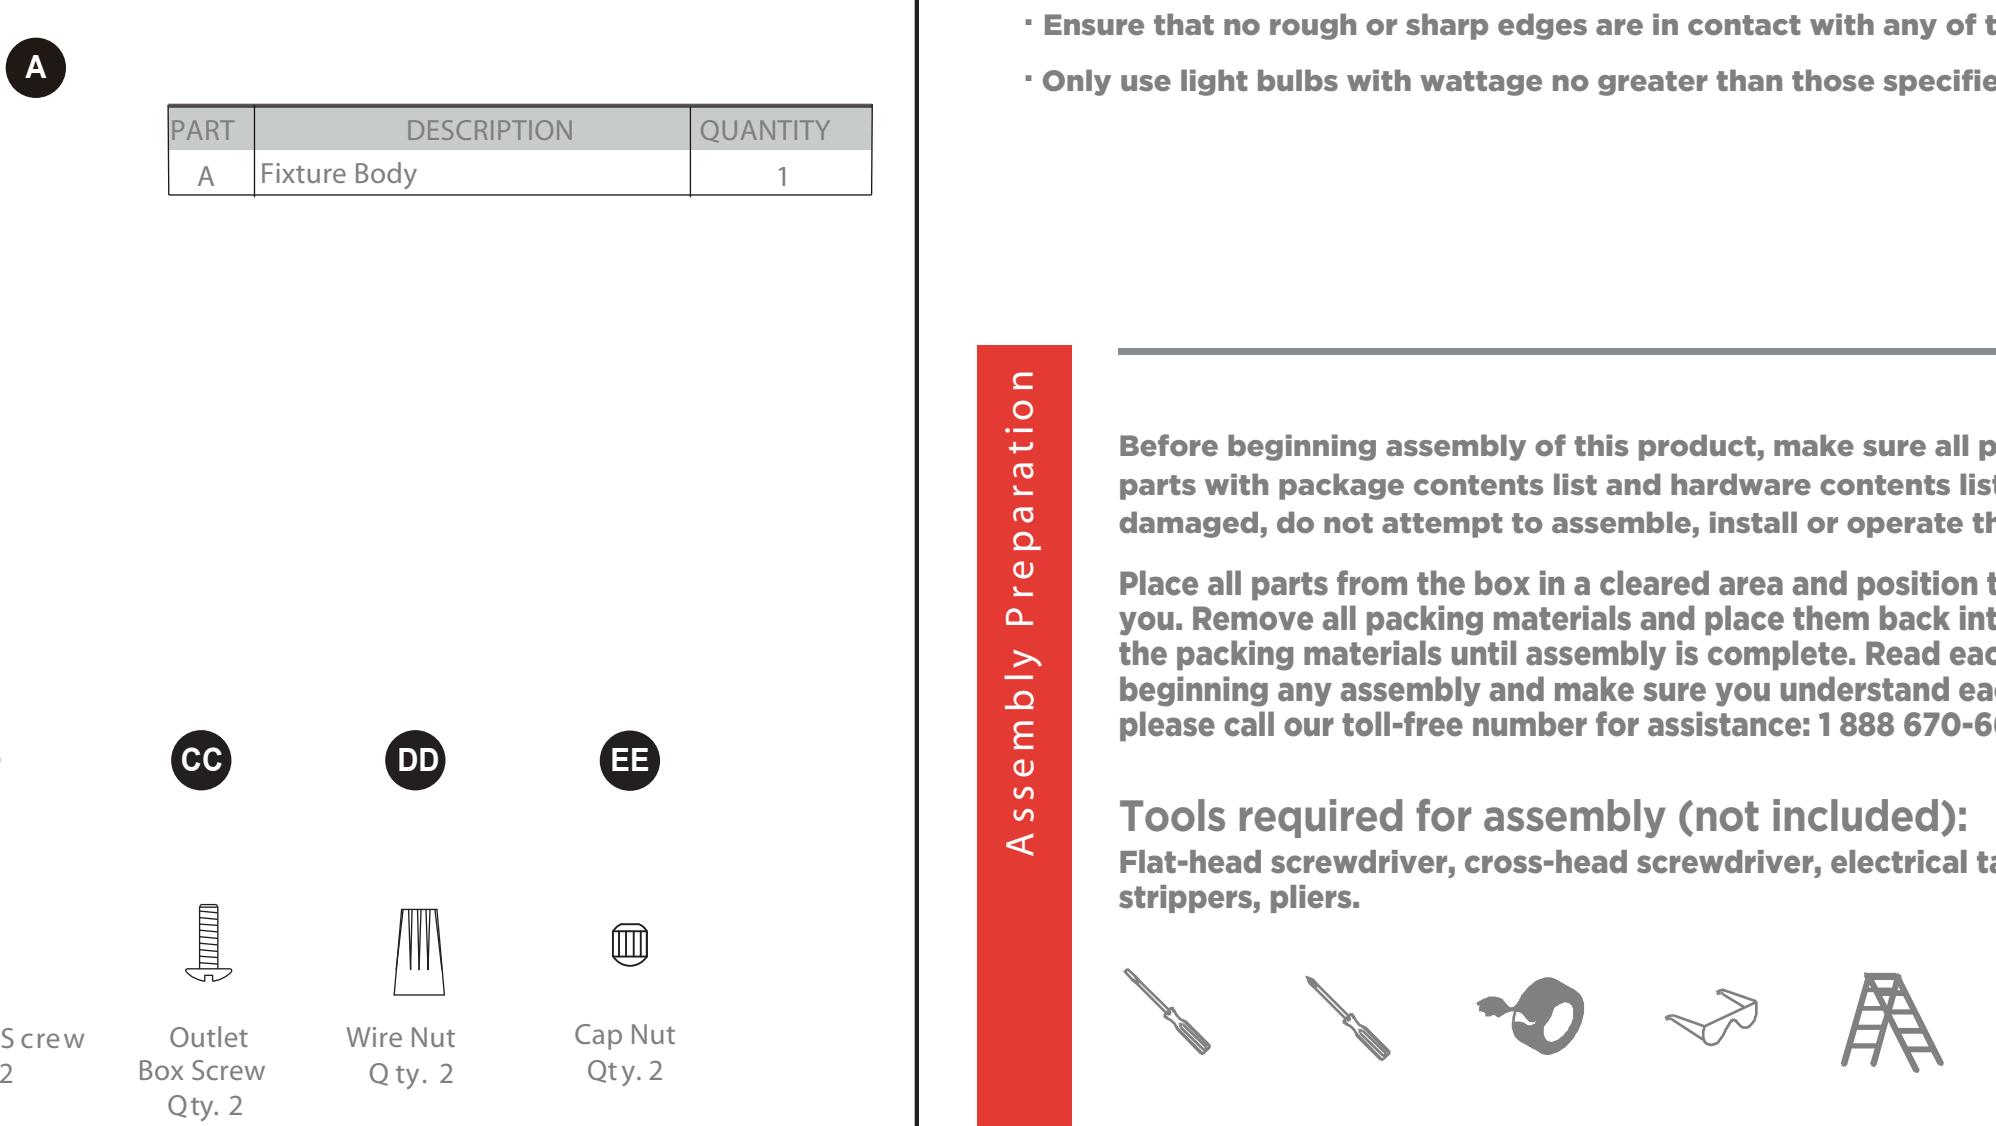

2

Table of Contents


Package Contents	2
Important Safety Instructions	3
Assembly Preparation	3
Assembly Instructions	4
Care and Maintenance/Troubleshooting	6
Warranty	6

Assembly Preparation

Before beginning assembly of this product, make sure all parts are present. Compare parts with package contents list and hardware contents list. If any part is missing or damaged, do not attempt to assemble, install or operate the product.

Place all parts from the box in a cleared area and position them on the floor in front of you. Remove all packing materials and place them back into the box. Do not dispose of the packing materials until assembly is complete. Read each step carefully before beginning any assembly and make sure you understand each step. If you are missing a part, please call our toll-free number for assistance: 1 888 670-6684.

Tools required for assembly (not included):
Flat-head screwdriver, cross-head screwdriver, electrical tape, safety glasses, ladder, wire strippers, pliers.

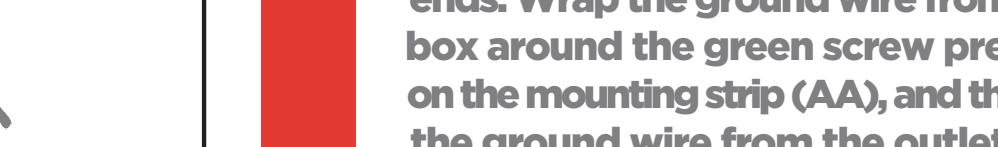

3

Important Safety Instructions



CAUTION
The following rules must be adhered to when assembling the product. If you have any doubts about how to install the product or if it fails to work properly, contact a local, licensed electrician. Failure to comply with these requirements could result in an electric shock or fire, which could cause serious injury or fatality.


- Some metal parts in the fixture may have sharp edges. To prevent cuts and scrapes, wear gloves when handling the parts.
- Account for small parts and discard packing materials after assembly is complete, as these may be hazardous to children.
- Use a flashlight or alternate light source to light work area during installation.
- Assistance may be required to support fixture during installation.
- Ensure that the insulation on any of the wires have not been damaged during installation.
- Ensure that no rough or sharp edges are in contact with any of the wires.
- Only use light bulbs with wattage no greater than those specified for the fixture.

4


MODEL NO. 052-1418-8

Assembly Instructions

1. Remove the preassembled cap nuts (EE) from the mounting screws (BB). Save for later use. Separate the mounting strip (AA) from the fixture body(A).

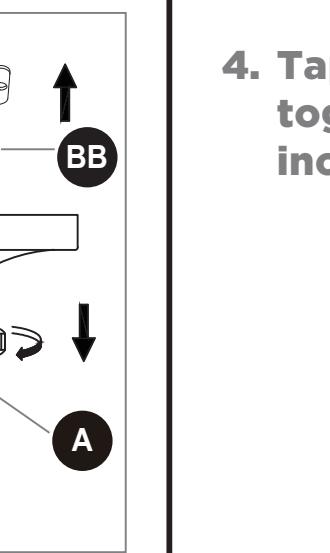

2. Attach the mounting strip (AA) to outlet box (not included) using the outlet box screws (CC).

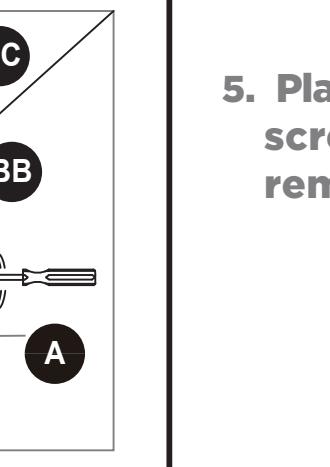

Note: The mounting screws (BB) should protrude out from the outlet box.


If height adjustment is required, loosen the screw that holds the wire inside of the canopy. Pull the wire until the light is at the desired height, then secure with the previously removed screw.

3.

Strip 3/4" (19 mm) of insulation from fixture wire ends. Twist stripped ends together with pliers (not included).


Place all parts from the box in a cleared area and position them on the floor in front of you. Remove all packing materials and place them back into the box. Do not dispose of the packing materials until assembly is complete. Read each step carefully before beginning any assembly and make sure you understand each step. If you are missing a part, please call our toll-free number for assistance: 1 888 670-6684.

Connect the white, ribbed or tinned wire without stripping from the fixture with the white wire from the outlet box. Connect the black, smooth, or un-tinned wire with stripping from the fixture to the black wire from the outlet box in same manner. Snip ends. Wrap the ground wire from the outlet box around the green screw preassembled on the mounting strip (AA), and then connect the ground wire from the fixture to the ground wire from the outlet box. Attach wire nuts (DD) to ends.

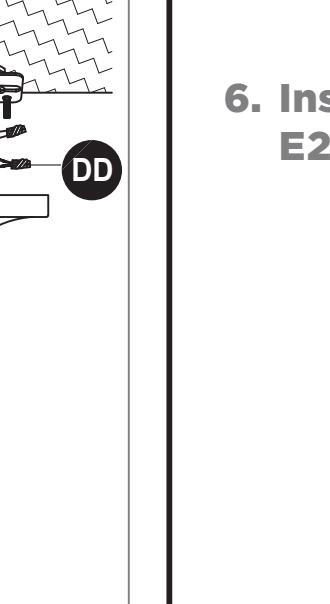


4.

4. Tape wire nuts (DD) and wires together with electrical tape (not included).

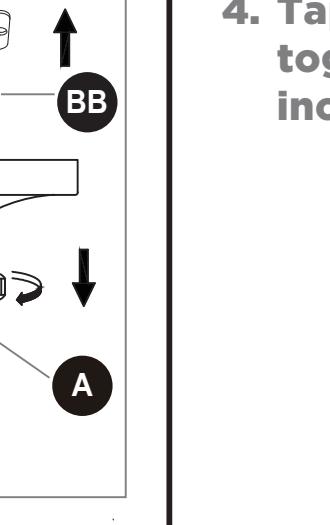


5.

5. Place fixture body (A) over the mounting screws (BB), securing with previously removed cap nuts (EE).

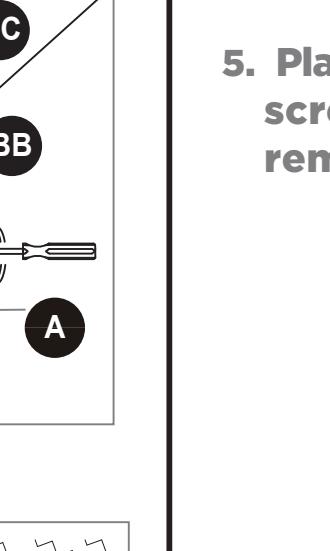

6.

6. Install the bulb. Use one 60 W (max.) E26 bulb (not included).

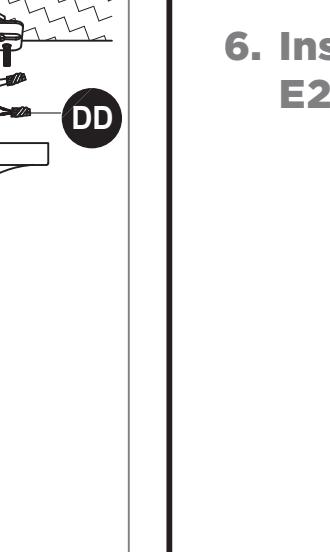

7

CARE AND MAINTENANCE

To clean, turn off the light and/or circuit breaker, wait until cool and wipe it with a damp, non-abrasive cloth.

8

TROUBLESHOOTING

PROBLEM	POSSIBLE CAUSE	CORRECTIVE ACTION
Bulb won't light.	1. Bulb is burned out. 2. Power is off. 3. Faulty wire connection. 4. Faulty switch.	1. Replace the bulb. 2. Check if power supply is on. 3. Check wiring. 4. Test or replace the switch.
Fuse blows or circuit breaker trips when light is turned on.	Crossed wires or power wire is grounding out.	1. Check the wiring connection. 2. Consult a qualified electrician.

9

Warranty

This CANVAS® product carries a one (1) year warranty against defects in workmanship.


Trileaf Distribution agrees to replace a defective product free of charge within the stated warranty period, when returned by the original purchaser with proof of purchase. This product is not guaranteed against wear or breakage due to misuse and/or abuse.

Made in China

Imported by
Trileaf Distribution Trifeuil Toronto, Canada M4S 2B8

CANVAS™ Suspension Kole

N° DE MODÈLE : 052-1418-8

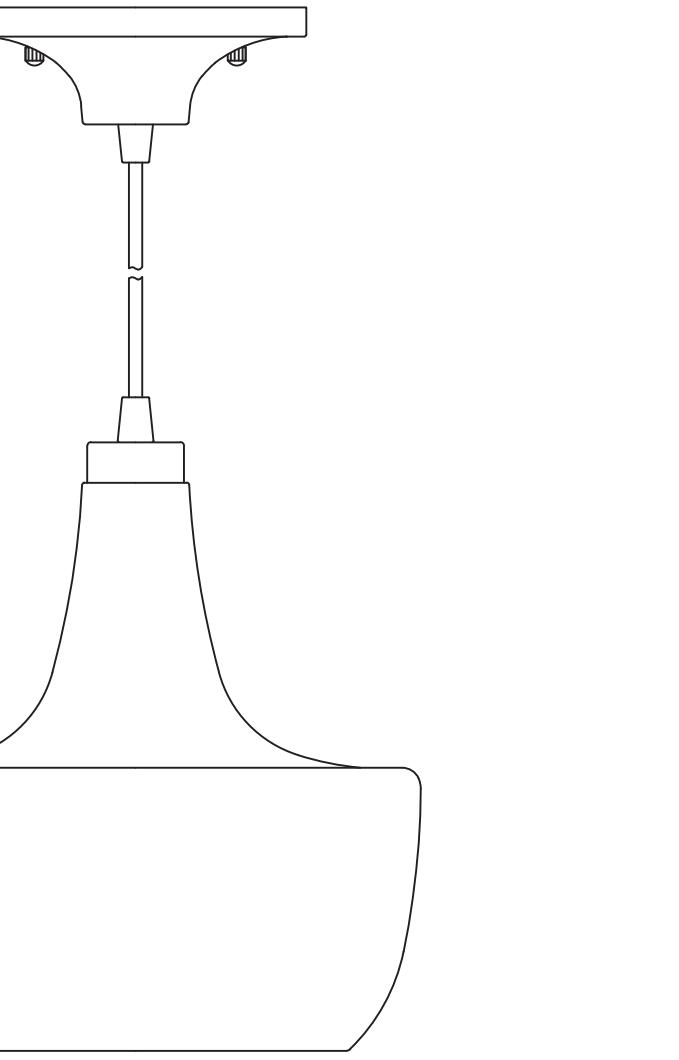

CONSIGNES D'ASSEMBLAGE

IMPORTANT : Veuillez lire attentivement ce guide avant de procéder à l'assemblage de cet article. Conservez ce guide à des fins de consultation ultérieure.

2 Table des matières

Contenu de la boîte	2
Consignes de sécurité importantes	3
Préparation à l'assemblage	3
Consignes d'assemblage	4
Nettoyage et entretien/Dépannage	6
Garantie	6

3 Consignes de sécurité importantes

ATTENTION

Il faut suivre les règles suivantes lors de l'assemblage du produit. En cas de doute sur l'installation du produit, ou si celui-ci ne fonctionne pas correctement, contactez un électricien agréé de votre localité. Le non-respect de ces exigences pourrait entraîner un choc électrique ou un incendie, ce qui peut causer des blessures graves ou la mort.

1. Retirez les écrous borgnes préassemblés (EE) des vis de montage (BB). Conservez-les pour une utilisation ultérieure. Séparez le support de montage (AA) du corps du luminaire (A).

2. Fixez le support de montage (AA) à la boîte de sortie (non comprise) au moyen des vis de la boîte de sortie (CC). Remarque : Les vis de montage (BB) devraient dépasser de la boîte de sortie. Si un réglage en hauteur est nécessaire, desserrez la vis qui retient le fil à l'intérieur du socle. Tirez le fil jusqu'à ce que le luminaire soit à la hauteur souhaitée, puis fixez-le au moyen de la vis retirée précédemment.

3. Dénudez 3/4 po (19 mm) d'isolation des bouts des fils du luminaire. Entrelacez ensemble les bouts dénudés à l'aide d'une pince (non comprise). Raccordez le fil de cuivre étamé, nervuré et blanc sans inscription du luminaire avec le fil blanc de la boîte de sortie. Raccordez le fil de cuivre non étamé, lisse et noir avec inscription du luminaire avec le fil noir de la boîte de sortie. Raccordez le fil de mise à la terre de la boîte de sortie autour de la vis verte préassemblée qui se trouve sur le support de montage (AA), puis raccordez le fil de mise à la terre de la boîte de sortie à celui du luminaire. Fixez les capuchons de connexion (DD) aux bouts.

4. Attachez ensemble les capuchons de connexion (DD) et les fils avec du ruban isolant (non compris).

5. Placez le corps du luminaire (A) sur les vis de montage (BB) au moyen des écrous borgnes retirés précédemment (EE).

6. Installez l'ampoule. Utilisez une ampoule de 60 W max. Ampoule E26 (non comprise).

4 N° DE MODÈLE : 052-1418-8

5 CANVAS™
Préparation de l'assemblage

6 N° DE MODÈLE : 052-1418-8

NETTOYAGE ET ENTRETIEN

Pour nettoyer, éteignez le luminaire et/ou mettez le disjoncteur en position d'arrêt, attendez que le luminaire refroidisse et essuyez-le avec un chiffon humide non abrasif.

DÉPANNAGE

PROBLÈME	CAUSE POSSIBLE	MESURE CORRECTIVE
L'ampoule ne s'allume pas.	1. L'ampoule est grillée. 2. L'alimentation est coupée. 3. La connexion des fils est mauvaise. 4. L'interrupteur est défectueux.	1. Remplacez l'ampoule. 2. Vérifiez si la source d'alimentation est sous tension. 3. Vérifiez le câblage. 4. Testez ou remplacez l'interrupteur.
Le fusible saute ou le disjoncteur se déclenche lorsque le luminaire est allumé.	Les fils se croisent ou le fil d'alimentation crée un court-circuit.	1. Vérifiez la connexion des fils. 2. Consultez un électricien qualifié.

6. Entretien/Dépannage

Garantie

Cet article CANVAS® comprend une garantie d'un (1) an contre les défauts de fabrication.

Distribution Trifeuil consent à remplacer l'article défectueux sans frais lorsqu'il est retourné, accompagné de la preuve d'achat, par l'acheteur original au cours de la période de garantie convenue. Cet article n'est pas garanti contre l'usure ou le bris causés par un usage abusif ou inapproprié.

Fabriqué en Chine

Importé par
Trileaf Distribution Trifeuil Toronto, Canada M4S 2B8